


OSW-800N_说明书

材质: 100g铜版纸 形式: 骑马钉成册 尺寸: 55x85mm (成品)

Internal Use (内部公开)



WELCOME GUIDE
oraimo Watch 3 Lite | OSW-800N |


* For safety issue, the product remains low capacity during shipping.
Please fully charge the product before initial use!

Product Overview



Setting Up Your Smart Watch


For the best experience we recommend using the updated oraimo Health App for iOS and Android.



iOS 12.0 or above
Android 6.0 or above

Pair With Your Phone


1. Get ready with the oraimo Health App, scan the QR code on your watch or find the oraimo Health App in one of these locations, depending on your device:

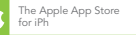 The Apple App Store for iPhone


 The Google Play Store for Android

EN 01

Scan the QR code to pair:

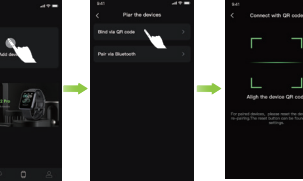

Use oraimo Health APP to scan QR code

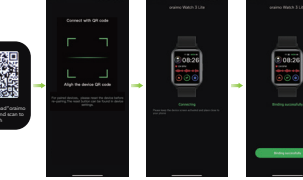

If you can't pair successfully, try the following methods:

1. Make sure that the Bluetooth permission is allowed for the app;
2. Make sure that the watch is not connected to another phone;
3. Disconnect the BT on your phone and reconnect after 20 seconds;
4. If none of these works, reboot your phone and the watch, and repeat the above steps.


After pairing with your phone, read through this guide to explore its various functions!

EN 02

Getting To Know Your Smart Watch


Wrist Placement

For all-day wear, your watch should usually rest a finger's width below your wrist bone and lay flat, as you would normally wear a watch.




Charge Your Watch

Connect the metal contacts of the USB cable with the charging dock on the back of the watch. Put the watch on a flat surface and connect the other end of the USB cable to a power supply.

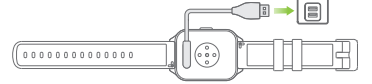

The device's screen will light up, showing the charging status.




EN 03

Power On/Off


- To turn on the watch, make sure that the device is fully charged and then long-press the Home button for 3 seconds.
- To turn off the watch, light up the device and then long-press the Home button for 3 seconds and confirm the shutdown. Then the watch will vibrate and power off. You can also turn off the watch from its Settings menu.
- If the watch malfunctions, connect it to a power supply and long-press the Home button for more than 12 seconds for a hard reboot.

Wake Up the Watch

Method 1: Press the Home button to light up the display.
Method 2: Turn your wrist. (This "Raise to Wake" function is active by default. You can turn it off by tapping the Raise to Wake icon.)




"Raise to Wake" On




"Raise to Wake" Off

Turn On Do-not-disturb (DND) Mode

For Android users, please make sure that the device is connected to your phone. Set up notifications permission for the oraimo Health app in the phone system as well as in oraimo Health app settings. Add the oraimo Health app to the trust list if any security software installed prevents its functioning. For iPhone users, please make sure that the device is connected to your phone. Reboot your phone and try to reconnect.



DND Mode On



DND Mode Off

EN 04

Explore Functions with Full-screen Gesture

- Swipe **Right** to enter the function menu.
- Swipe **Left** to explore Daily Activities, Heart Rate, Blood Oxygen, Sleep, Weather, and more.
- Swipe **Down** from the top to turn on/off Raise to Wake and DND Mode, and adjust Brightness. Tap to access the Settings menu.
- If the watch malfunctions, connect it to a power supply and long-press the Home button for more than 12 seconds for a hard reboot.

Troubleshooting & FAQ

Cannot connect via BT

1. Make sure that your device supports BT Version 5.0 and that your phone system is iOS 12.0 and above or Android 6.0 and above.
2. Make sure that you've set up the BT permission for the oraimo Health app;
3. Check if the watch is connected to another phone. If yes, please disconnect and retry.
4. Disconnect the BT on your phone and reconnect after 20 seconds;
5. Reboot the watch and your phone and repeat the above steps.

Cannot find the watch through BT

1. Make sure that your location services are enabled (GPS is working) and the device has sufficient power;
2. Keep the device screen activated and place it close to your phone;
3. Make sure that the watch is not connected to another phone;
4. Disconnect the Bluetooth on your phone and reconnect after 20 seconds.

Cannot monitor heart rate or blood oxygen

Make sure that the optical monitoring sensor is in direct contact with your skin. **Cannot receive notifications after enabling it**

For Android users, please make sure that the device is connected to your phone. Set up notifications permission for the oraimo Health app in the phone system as well as in oraimo Health app settings. Add the oraimo Health app to the trust list if any security software installed prevents its functioning. For iPhone users, please make sure that the device is connected to your phone. Reboot your phone and try to reconnect.

Is the watch waterproof?

This watch has IP68 rating. You can wear it while washing hands, having a cold shower, or washing a car. However, please do not wear it while diving. **Do I need to connect to the BT all the time? Will my health and sleep data be stored while BT is disconnected?**

The data will be kept on the watch for 7 days. When reconnected to the phone, your health and sleep data will be synced automatically. Please synchronize data in time to get maximized utility.

EN 05

Basic Product Specifications

Screen Size	1.49" TFT 240*280
BT Version	V5.0
Battery Capacity	200mAh
Battery Type	Lithium polymer
Charging Time	2 hours
Average Using Time	10 days for typical use, 6 days for heavy use
Standby Time	30 days
Watch Size	43.3*35.2*10mm (without strap)
Weight	35.5g (with strap)
Material	ABS/PC/Silica Gel
Waterproof	IP68

* oraimo Lab test result

Customer Service

365 DAYS WARRANTY

E-Mail

Nigeria: care.ng@oraimo.com
Kenya: care.ke@oraimo.com
Ghana: care.gh@oraimo.com
Morocco: care.ma@oraimo.com
Egypt: care.eg@oraimo.com
South Africa: care.za@oraimo.com
Cameroon: care.cm@oraimo.com
Tanzania: care.tz@oraimo.com
UAE: care.ae@oraimo.com
Ivory Coast: care.ci@oraimo.com
Brazil: care.br@oraimo.com
Colombia: care.co@oraimo.com
Others: service@caricare.com

EN 06

Warranty Certificate

Name :	
Address :	
Tel. No. :	
Date of purchase : (dd/mm/yy)	
Store name :	
Warranty period :	

Warranty Terms & Conditions

- * All quality-related defects on items sold directly by oraimo or oraimo's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
- * oraimo's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
- * This warranty covers only original oraimo products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
- * Warranty is for the primary product only not transferable. Any free additional product(s) are not covered in this warranty.
- * If the product fails regardless of usage in compliance with the instruction manual and other written precaution, replacement will be provided free of charge.
- * To receive replacement, bring the warranty certificate and the product itself to the store from where you have purchased the product.

EN 07

User Manual

Smart Watch
Model: OSW-800N
Hereby, ORAIMO TECHNOLOGY LIMITED
Declares that this Smart Watch is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EU.

CAUTION:

- 1. Risk of explosion if battery is replaced by an incorrect type, dispose of used batteries according to the instructions.
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

2. EUT Temperature: -20°C ~ +50°C (Standard); 0°C ~ +40°C (with adapter).
Operating Frequency: BT: 2400-2483.5MHz (TX/RX);
Modulation mode: GFSK (BLE) Max. Of Transmit power: BLE: 4.17dBm

FCC Caution:

Labeling requirements:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to user:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

EN 08

-- Consult the dealer or an experienced radio/TV technician for help.

Note: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter. RF Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

EU Declaration of Conformity

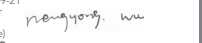Annex VI of Directive 2014/53/EU of the European Parliament and of the Council For the following Radio equipment:
Model: OSW-800N
Product: Smart Watch
Trade name or Brand: oraimo
Software / Hardware number: V0.0.9/ RH112T-V02
1. Name and address of the manufacturer or his authorized representative:
Manufacturer: ORAIMO TECHNOLOGY LIMITED
Address: PLAT N 16/F BLOCK B UNIVERSAL INDUSTRIAL CENTRE 19-25 SHAN MEI STREET FOTAN NT HONGKONG.
2. This declaration of conformity is issued under the sole responsibility of the Manufacturer.
3. Object of the declaration (Identification of the radio equipment allowing traceability: it may include a colour image of sufficient clarity where necessary for the identification of the radio equipment);
4. The object of the declaration described above is in conformity with the relevant Union harmonization legislation; Directive 2014/53/EU (RED).
5. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:
Article 3.1a Health: EN 62479-2010
Article 3.1a Electrical Safety: EN 62368-1:2014+A11:2017
EN IEC 62368-1:2020+A11:2020
ETSI EN 301 489-1 V2.2.2 (2019-11)
ETSI EN 301 489-17 V3.2.2 (2020-09)
ETSI EN 300 228 V2.2.2 (2019-07)
Article 3.1b:
Article 3.2:
6. Notified Body Name: Eurofins Electrical and Electronic Testing NA, Inc.
Notified Body Number: 0980
Module B/C on Article 3.1a, 3.1b and 3.2
Technical File Identification Number: N/A
7. Where applicable, description of accessories and components, including software, which allow the radio equipment to operate as intended and covered by the EU declaration of conformity. User instructions are provided in the User Manual. The Software and Hardware versions are specified above.
8. Additional information: Referring to Article 10.2 of the Directive, this equipment is so constructed that it can be operated in all Member States, without infringing applicable requirements on the use of radio spectrum.
Referring to Article 10.10 of the Directive, there are no restrictions on putting this equipment into service or of requirements for authorization of use. Please refer to the User Manual for details.
On behalf of:
Manufacturer: ORAIMO TECHNOLOGY LIMITED
Address: PLAT N 16/F BLOCK B UNIVERSAL INDUSTRIAL CENTRE 19-25 SHAN MEI STREET FOTAN NT HONGKONG.
Date and date of issue: Shenzhen, 2023-09-21
(name, function): Nengyong Wu / Manager
(signature): 
(Name and signature of person responsible)
EN 09

For more information, please visit:



www.oraimo.com



@oraimo accessories