



Hanshow Nebular Series Product Manual

V2.0.7

HS-ESL-EPDN001

Hanshow Confidential

STATEMENT

This document and all its contents contained remain the proprietary material of Hanshow Technology Co., Ltd. (Hanshow) and are protected by Chinese laws and applicable international conventions on copyrights. Any reproduction, transmission, disclosure, revision, modification or use otherwise of this document or the whole or part of its contents, in whatever form and by whatever means, is not permitted without prior express written authorization from Hanshow. Offenders will be liable for any and all damages caused by their offence hereof and will be subject to all remedies that Hanshow is entitled to seek under applicable laws.

ABOUT THE MANUAL

This document describes Nebular series, including features, specification, package, and precautions.

Please read this manual carefully before using the device in first, retain the manual for subsequent use or for the next owner. If the instructions contained in this manual are insufficient to resolve issues that occur during device operation or maintenance, please contact Hanshow Technical Customer Service Center (China: 400-0365-305; Netherlands: 0800-022-5037; Belgium: 0800-71-335; France: 0800-91-7602; Thailand: 1800-011-185) directly, we will provide you with multi-channel technical services.

TARGET USERS

This document provides engineers with necessary data and related guidelines of Nebular series. Users have to master the basic knowledge on communication and network and so on. This manual is applicable for the below engineers:

- Testing Engineer
- Technical Support Engineer
- After Sales Engineer
- Installation Engineer

SYMBOL DESCRIPTION

Icon	Description
	Information indicated with this icon should be paid special attention and attached great importance by the reader.
	Information indicated with this icon is the explanation on the formal text for the readers to comprehend the text better.
[X-X]	It means special noun definition is provided here.

EXPLANATION OF TERMS

Acronym	Expanded form	Description
PriSmart	PriSmart Smart Retail System	Manage all store product data and issue price update command, as well as support multi-store management.
ESL-Working	ESL-Working System	Manage all the APs and ESLs in store, and ESL-Working 3.0 and above supports multi-store management.
ESL Controller	ESL Controller	Also called AP that is used for data interaction between ESL-Working and ESL Controller.
ESL	Electronic Shelf Label	Used for displaying product information like promotion information, price, and grade.

Table of Contents

1 Overview	1
1.1 System architecture.....	1
1.2 Features	2
2 Product view.....	3
2.1 Product appearance	3
2.2 Dimensions.....	5
3 Hardware performance	10
3.1 Specifications	10
3.2 Identifying your ESLs.....	12
3.3 Product nameplate	12
4 Packaging and accessories	13
4.1 Packaging.....	13
4.2 Product accessories	14
5 Application scenarios	15
6 Precautions	16
6.1 Transportation considerations	16
6.2 Precautions for use.....	16
7 FCC ID warning.....	18
7.1 Warning for nameplate	18
7.2 Warning for product manual	18
8 IC statement.....	19
9 UKCA statement	20

1 Overview

The Nebular series is Hanshow's newest generation Electronic Shelf Labels (ESLs). They adopt E-ink screen to achieve page switching, light flashing, pricing and so on based on 2.4GHz wireless communication. With ultra-thin, extended life and high-definition visual effects, the Nebular series widely serves traditional retail, new retail, department stores and fashion, pharmacies, culture, and entertainment.

1.1 System architecture

Hanshow ESL system includes ESLs, ESL Controller, ESL-Working, PriSmart/ShopWeb, Database, Integration server, CloudMonitor and Handheld Terminal (PDA), as shown in *Figure 1-1*. Specifically, the ESLs are used for electronically displaying product information such as name and price, and services available for customers.

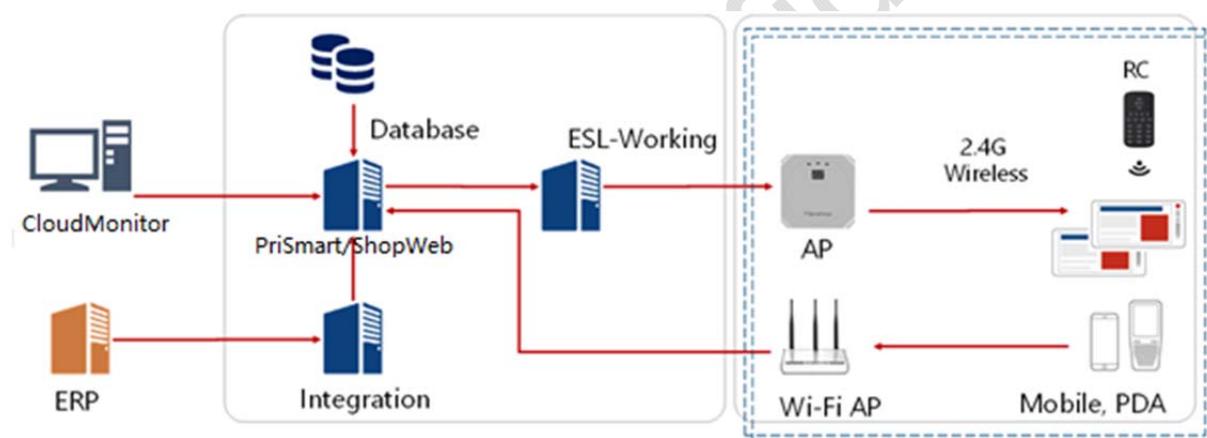


Figure 1-1 Hanshow ESL system architecture

1.2 Features

The features of Nebular series are as follows:

- Nebular ESLs come in 10 ESL sizes: 1.54", 2.0", 2.13", 2.66", 2.9", 3.46", 3.5", 4.2", 5.83" and 7.5".
- Display colors include: BWR (Black-White-Red) display (Only BW (Black-White) display for freezer ESLs).
- Operating frequency band: 2,402MHz ~ 2,480MHz.
- IP68 waterproof and dustproof design.
- Built-in LED indicator: 7-color display assists in product location, promotion reminder, out-of-stock reminder, and low power reminder.
- Embedded NFC chip: Supports NFC function. NFC response distance is 10mm.
- The freezer ESLs come in two sizes: 2.13", 2.66" and 3.5" that function in temperature -25°C ~ 0°C.
- Nebular ESLs support multiple functions, including binding/unbinding, updating, instant flashing, multi-page storage, page switching, geolocation, temperature collection, NFC function and so on.
- Supports AES-128 encryption.
- Supports OTA (Over-The-Air) upgrade.

2 Product view

This chapter describes Nebular series' appearance and composition.

2.1 Product appearance

Figure 2-1 shows Nebular family.



Figure 2-1 Nebular family

Each section of Nebular and its relative description is shown in *Figure 2-2* and *Table 2-1*.

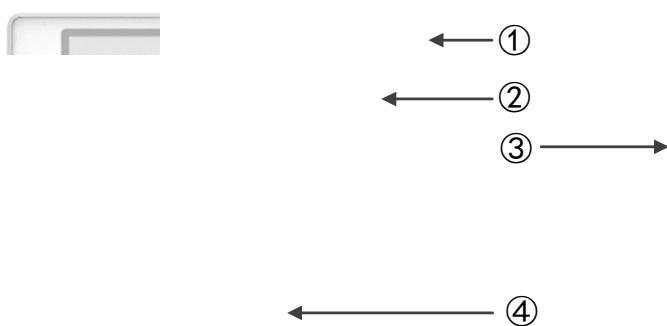


Figure 2-2 Key area of Nebular

Table 2-1 Each area description of Nebular

No.	Name	Description
1	LED indicator	Supports 7-color flashing.
2	Display area	<p>Supports BWR display on E-ink screen.</p> <ul style="list-style-type: none"> Display text, images, barcode, QR code and others. Product information display such as name, price, origin, unit, grade, phone number, barcode, and QR code. Supports customizable display position and font size. Supports 8-page storage and page switch functionality.
3	Nameplate	Product information mark, including model, S/N, and certifications such as CE and UKCA.
4	Barcode area	18-digit barcode used for product binding and maintenance.

2.2 Dimensions

This section covers the dimensions of Nebular series.

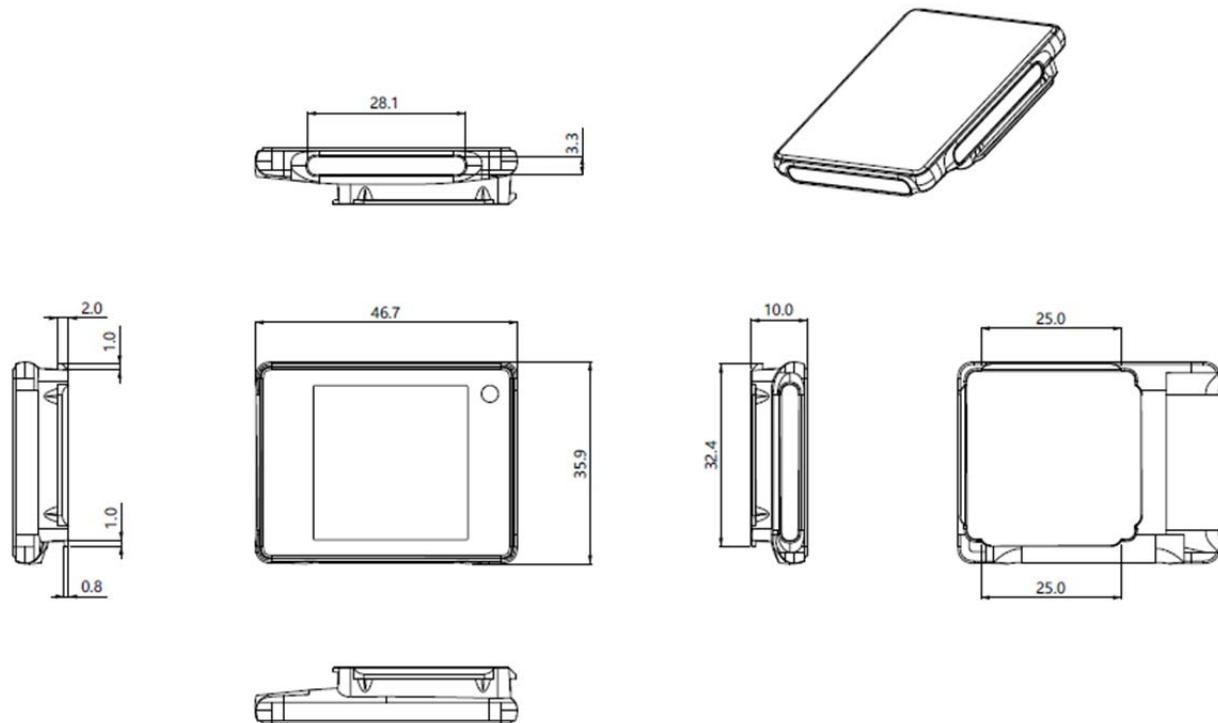


Figure 2-3 1.54" dimension

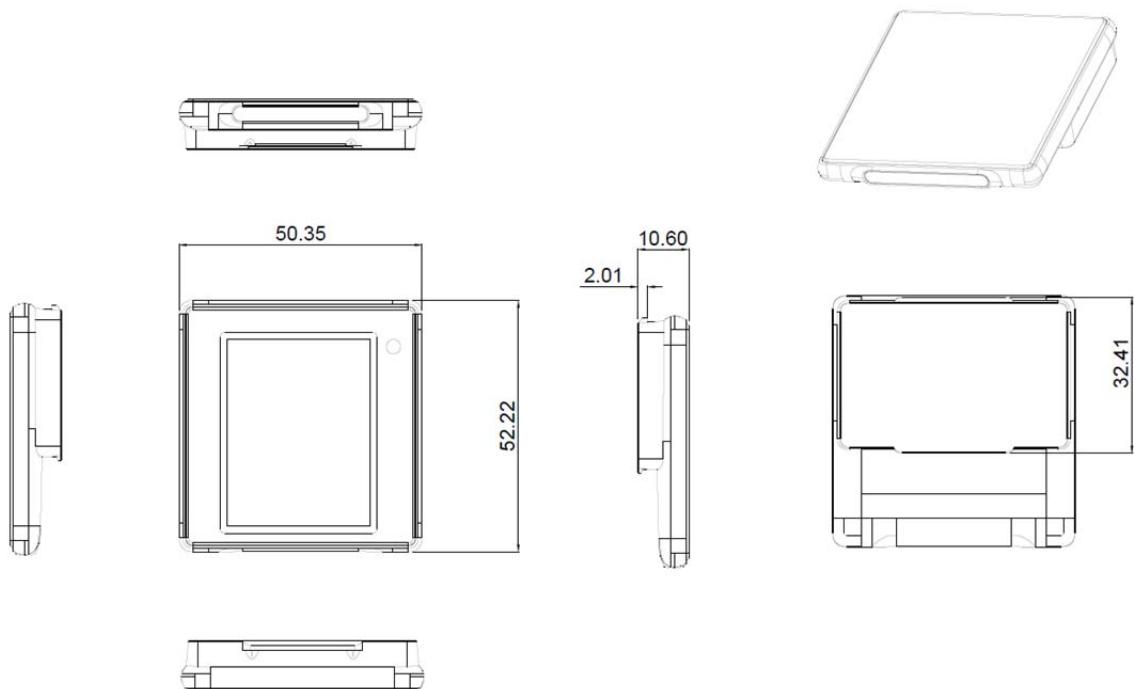


Figure 2-4 2.0" dimension

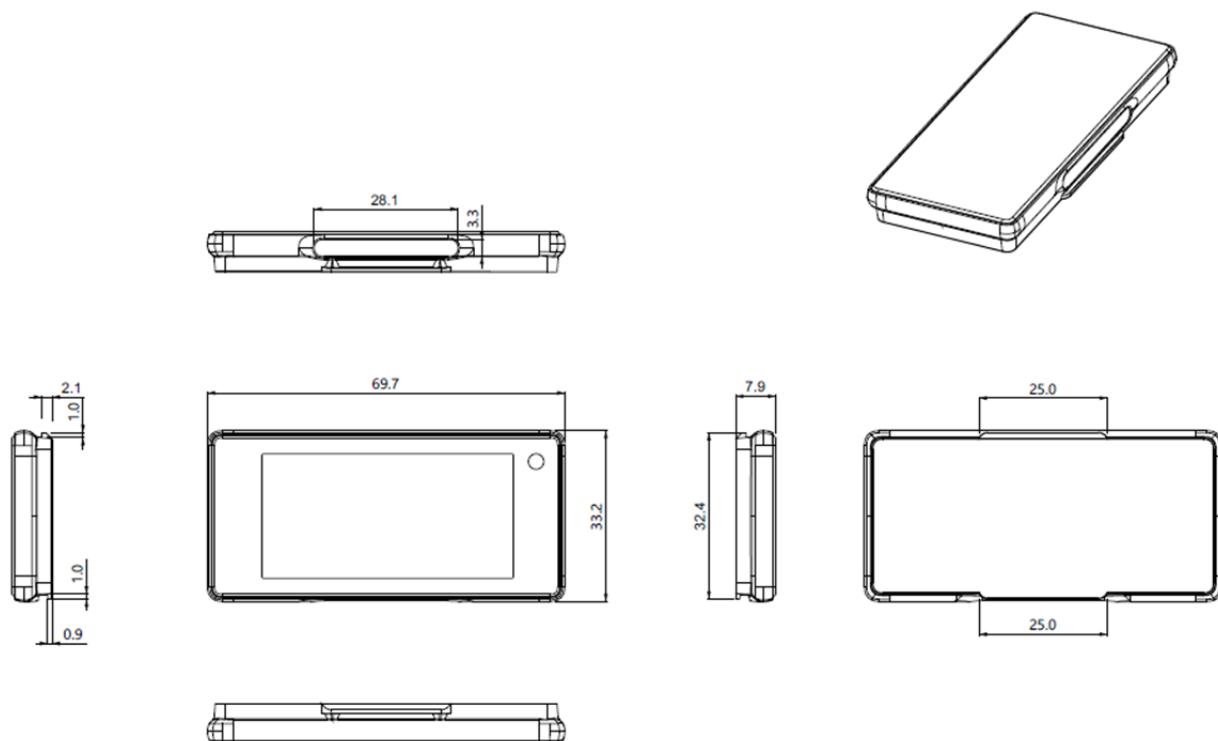


Figure 2-5 2.13" dimension

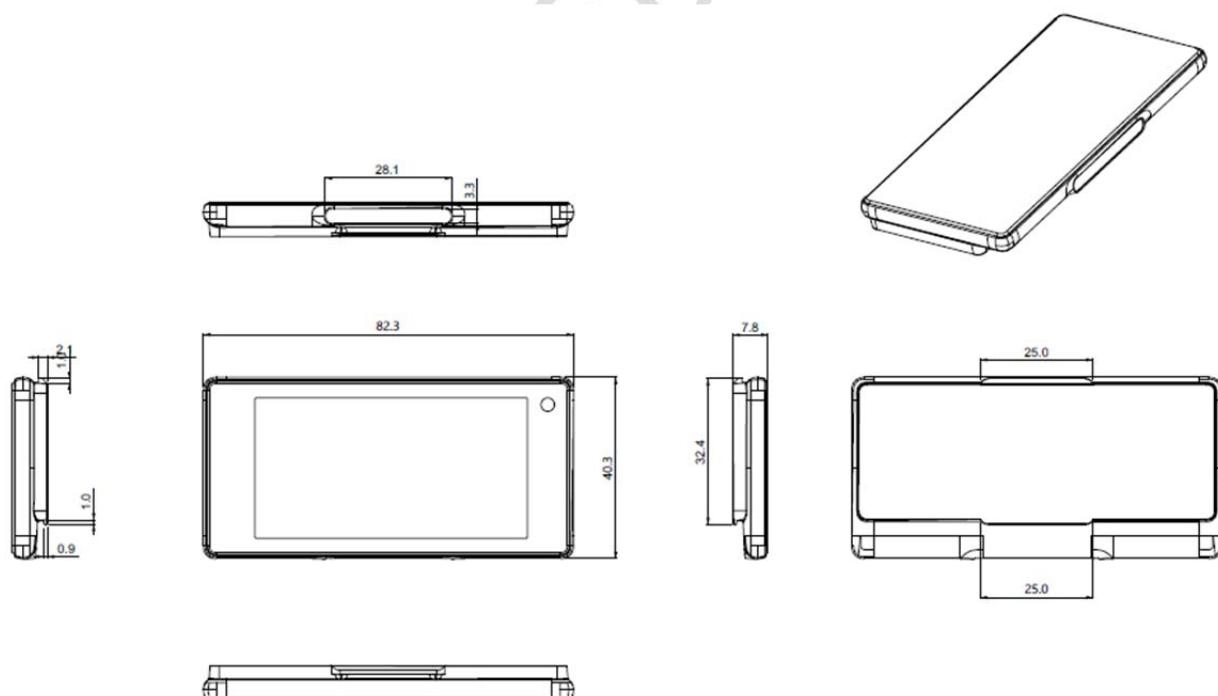


Figure 2-6 2.66" dimension

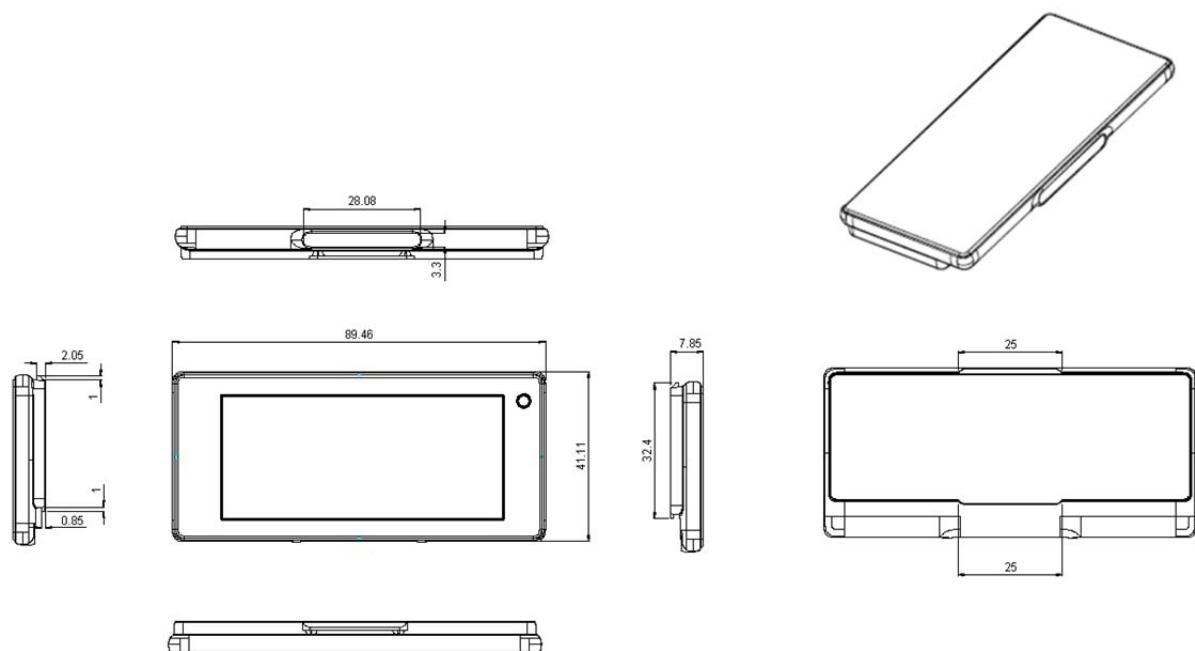


Figure 2-7 2.9" dimension

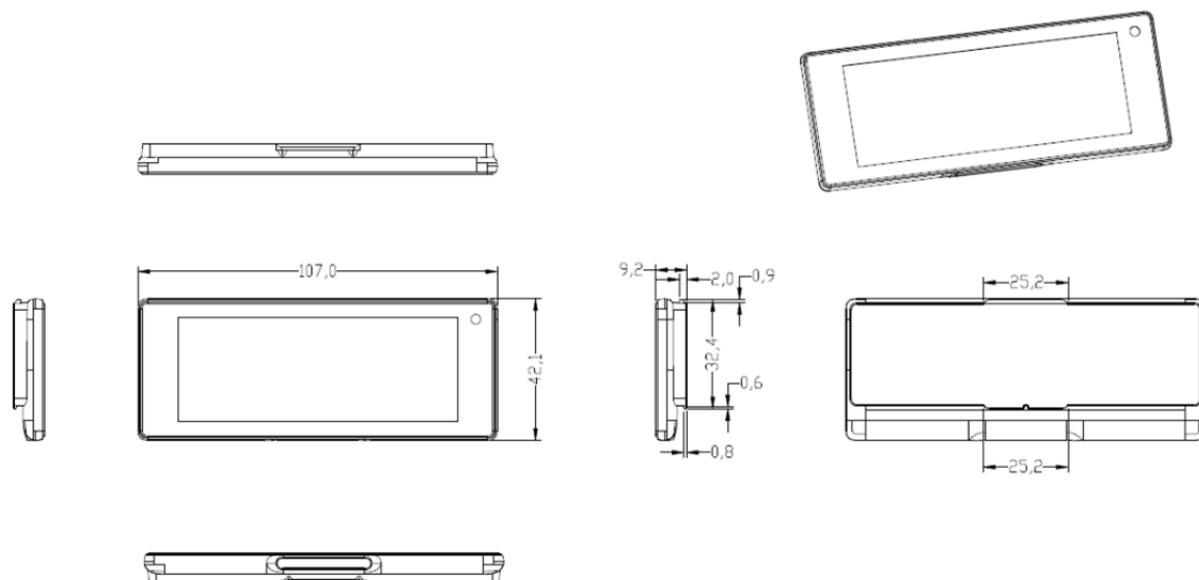


Figure 2-8 3.46" dimension

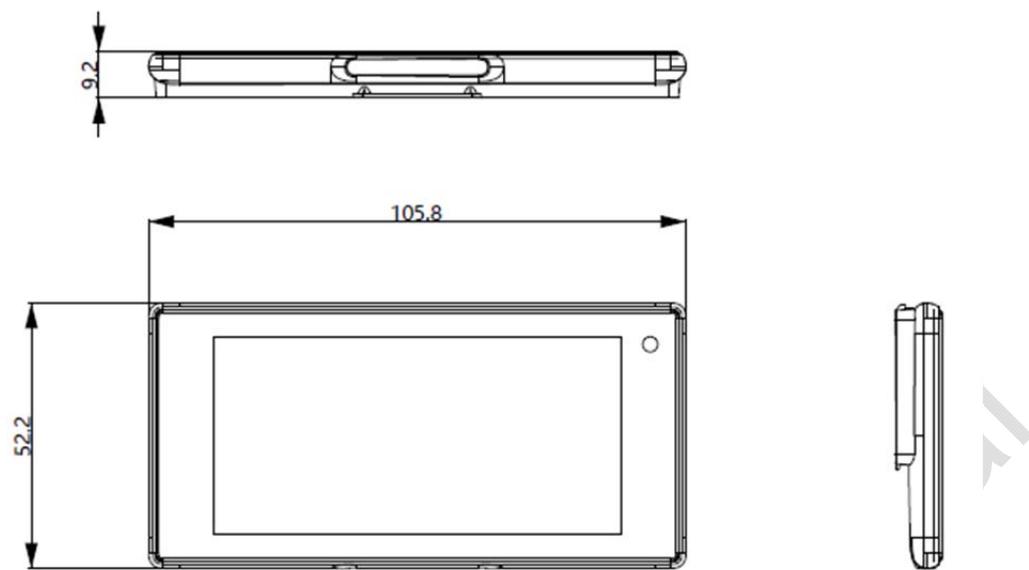


Figure 2-9 3.5" dimension

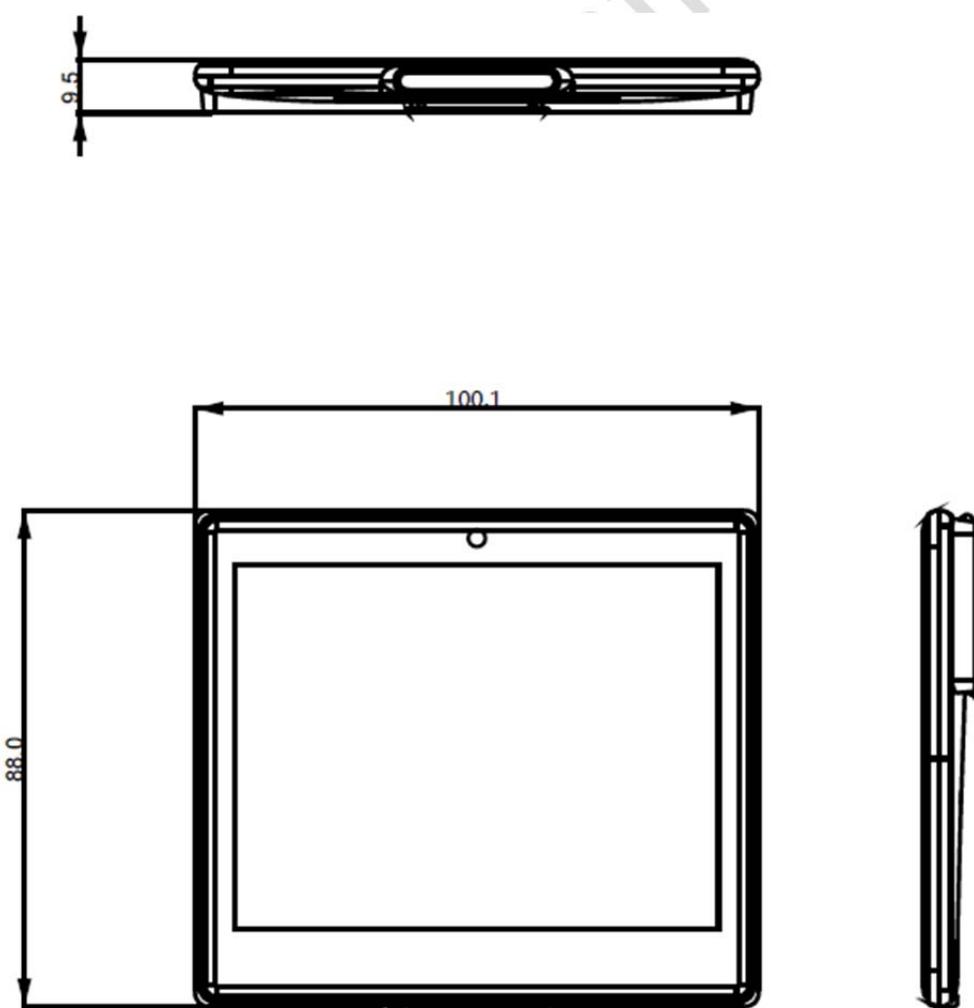


Figure 2-10 4.2" dimension

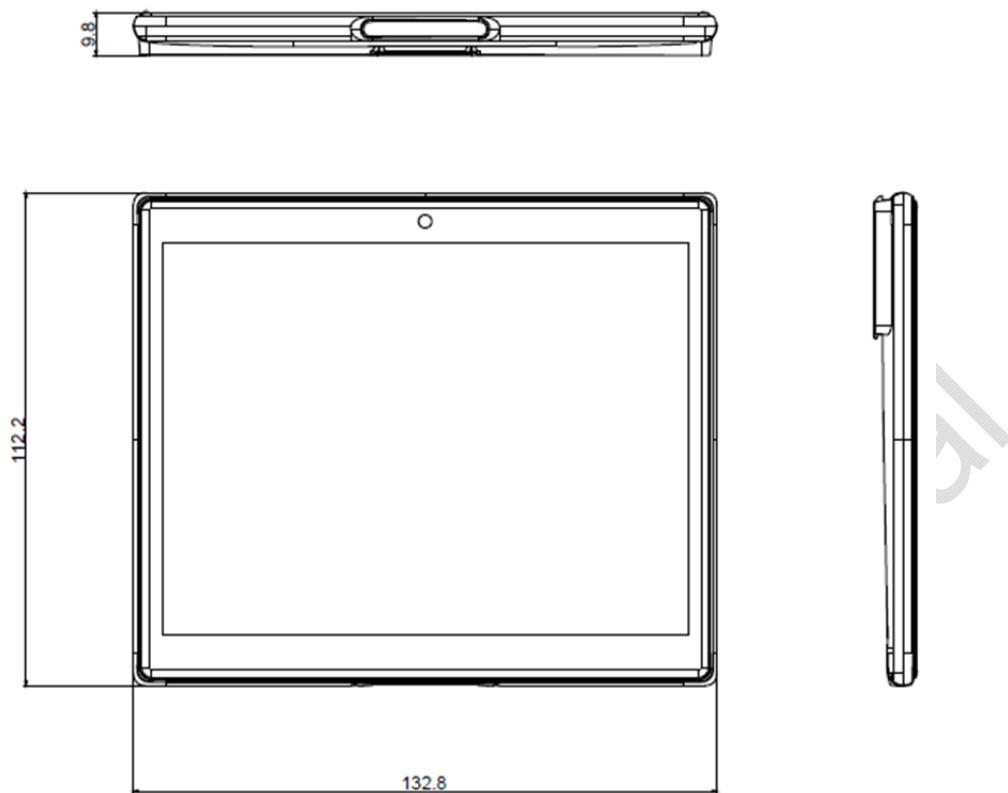


Figure 2-111 5.83" dimension

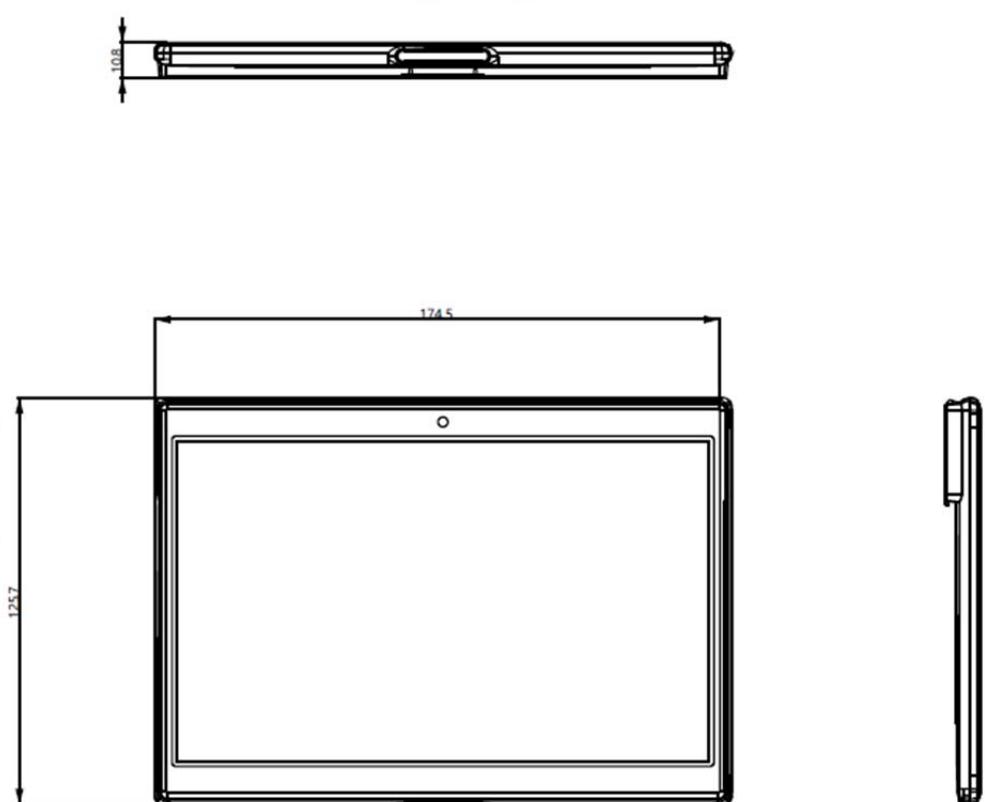


Figure 2-12 7.5" dimension

3 Hardware performance

This chapter consists of:

- *Specifications*
- *Identifying your ESLs*
- *Product nameplate*

3.1 Specifications

Table 3-1 lists the Nebular specifications.

Table 3-1 Nebular specifications

Name	1.54"	2.0"	2.13"	2.13" Freezer	2.66"	2.66" Freezer	2.9"	3.46"	3.5"	3.5" Freezer	4.2"	5.83"	7.5"	
Dimensions (mm*mm*mm)	46.7*35.8*10.0	50.35*52.22*10.6	69.7*33.2*7.8	69.7*33.2*7.8	82.3*40.3*7.8	82.3*40.3*7.8	89.5*41.1*7.8	107.0*42.2*9.2	105.8*52.0*9.2	105.8*52.0*9.2	100.1*88.0*9.5	132.8*112.2*9.8	178.1*125.7*10.8	
Active display area (mm*mm)	27.0*27.0	29.0*38.2	48.6*23.7	48.6*23.7	60.1*30.7	60.1*30.7	67.6*29.6	82.6*30.3	79.7*38.2	79.7*38.2	84.8*63.6	118.8*88.2	163.2*97.9	
Size (inch)	1.5	1.9	2.13	2.13	2.66	2.66	2.9	3.46	3.5	3.5	4.2	5.83	7.5	
Resolution (pixel) ^[3-1]	200*200	152*200	250*122	250*122	296*152	296*152	296*128	176*480	384*184	384*184	400*300	648*480	800*480	
DPI ^[3-1]	188	133	131	131	125	125	112	148	123	123	120	138	126	
Display color	BWR (only BW display for freezer ESLs)													
Viewing angle	Nearly 180 degrees													
Battery life ^[3-2]	Up to 10 or 15 years													
Page switch	8 pages													
Protection level	IP68													
Operating temperature ^[3-3]	0 ~ 40	0 ~ 40	0 ~ 40	-25 ~ 0	0 ~ 40	-25 ~ 0	0 ~ 40	0 ~ 40	0 ~ 40	-25 ~ 0	0 ~ 40	0 ~ 40	0 ~ 40	0 ~ 40
Storage temperature ^[3-3]	0 ~ 40	0 ~ 40	0 ~ 40	-25 ~ 30	0 ~ 40	-25 ~ 30	0 ~ 40	0 ~ 40	0 ~ 40	-25 ~ 30	0 ~ 40	0 ~ 40	0 ~ 40	0 ~ 40

Name	1.54"	2.0"	2.13"	2.13" Freezer	2.66"	2.66" Freezer	2.9"	3.46"	3.5"	3.5" Freezer	4.2"	5.83"	7.5"
Humidity (%RH)										45 ~ 65			

Note:

- [3-1]: The resolution and DPI might be subject to slight variations.
- [3-2]: Battery life is calculated based on the following scenarios: The battery life is up to 10 years if updated once a day for the following sizes: 1.54" /3.46"/3.5"/2.13" Freezer / 2.66" Freezer / 3.5" Freezer. The life is up to 15 years if updated twice a day for the following sizes: 2.0"/2.13"/2.66"/2.9"/ 4.2"/5.83"/7.5".
- [3-3]: Room-temperature ESLs operate within 0°C ~ 40°C, however temperatures below 10°C might impact the ESL lifespan. Freezer ESLs operate within -25°C ~ 0°C.

3.2 Identifying your ESLs

You can identify your ESLs from the following Nebular naming rules:

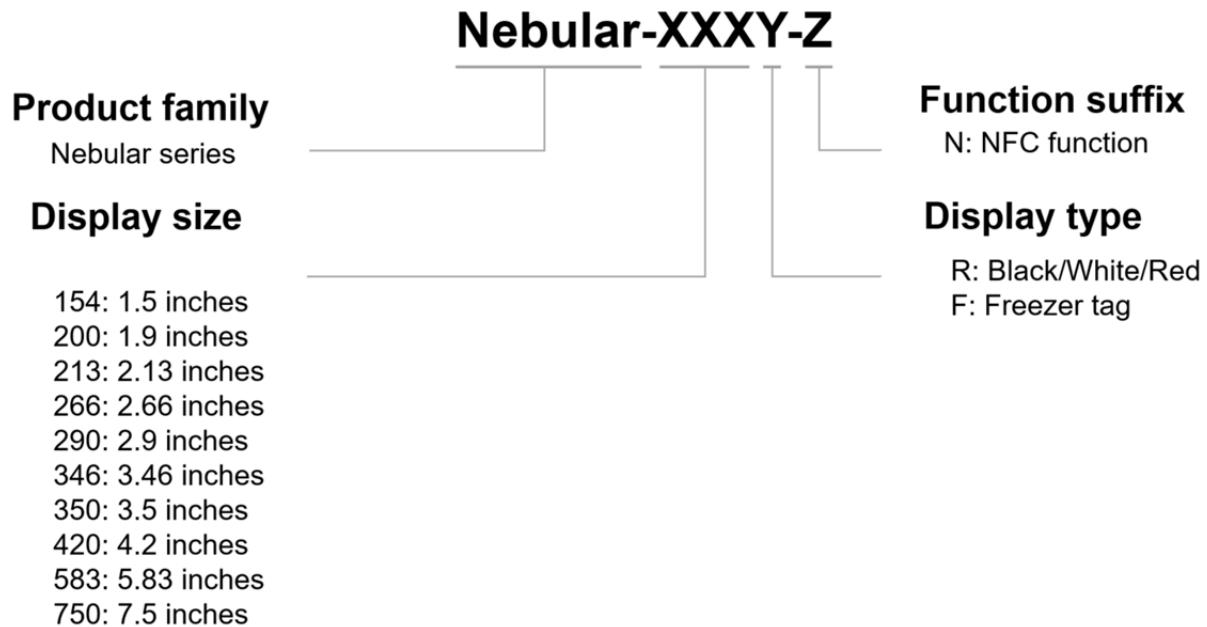


Figure 3-1 Naming rules for Nebular series

3.3 Product nameplate

Taking Nebular-266R-N as an example, [Figure 3-2](#) shows the nameplate of Nebular.



Figure 3-2 Nameplate of Nebular

Note: Each ESL has a unique S/N number. The above is for reference only, actual label information might vary.

4 Packaging and accessories

This chapter describes Nebular series' packaging and required accessories.

4.1 Packaging

Nebular family packaging and the specific ESL quantity is shown in *Figure 4-1*.

屏幕尺寸 (inch)	内箱价签数量M (pcs)	内箱数量N (Box)	整箱价签数量 (pcs)	内箱尺寸(mm)	外箱尺寸(mm)
1.54	30	10	300	354*57*46	383*247*131
2.0	30	12	360	372*60*60	389*378*155
2.13	35	8	280	333*80*44	367*193*177
2.66	35	8	280	333*93*51	367*389*119
2.9	35	8	280	333*100*51	367*221*217
3.46	20	7	140	228*117*51	371*245*151
3.5	20	6	120	228*116*61	378*245*150
4.2	20	5	100	372*127*118	404*680*160
5.83	20	5	100	381*159*146	840*410*185
7.5	2	5	10	-	270*216*165

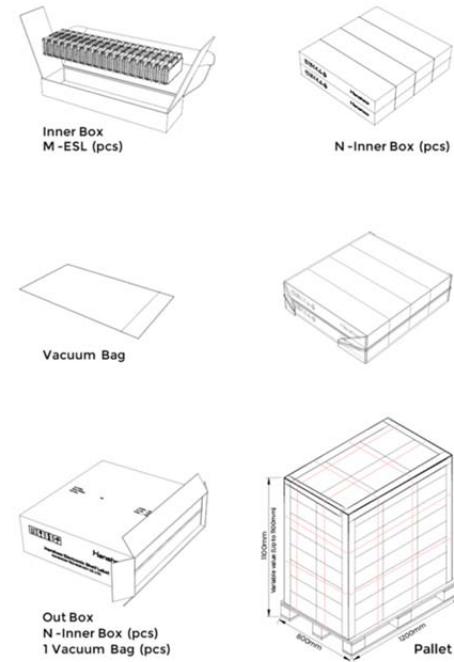


Figure 4-1 Nebular family packaging

4.2 Product accessories

Common accessories of Nebular series are shown in [Table 4-1](#).

Table 4-1 Common accessories of Nebular series

Rail	
Table stand	
T-hook	
Basket clip	

5 Application scenarios

Nebular series are available to various zones and shelves of hypermarket, supermarket and retail stores. The ESLs are applicable to areas with different fixtures:

- Shelves
- Hooks
- Fences
- Tables

Hanshow Confidential

6 Precautions

During transportation and usage of Nebular series, please note the following precautions.

6.1 Transportation considerations

Avoid the following considerations during transport:

- Water leakage or heavy moisture.
- Heavy stacking.
- High heat conditions above 40°C.

6.2 Precautions for use

Follow the precautions:

- The room-temperature ESLs operate best in normal operating and storage environment, 0°C ~ 40°C, 45% ~ 65%RH.
- The freezer ESLs operate best in normal operating, -25°C ~ 0°C, 45% ~ 65%RH and storage environment, -25°C ~ 30°C, 45% ~ 65%RH.
- Keep ESLs within the specified temperature range, otherwise ESL screens might be damaged and the battery life might be shortened.
- The output capacity will degrade at low temperature.
- Frequent communications or updates might shorten battery life during the use.
- Avoid dropping or tossing ESLs.
- Do not disassemble ESLs without permission.
- Do not disassemble ESL batteries.
- Do not scratch ESL bodies with sharp objects.
- Use Nebular dedicated disassembly tools when disassembling.
- The mineral substances in rainwater, moisture or liquids might corrode the electronic circuit. Avoid water on the product as much as possible.
- Regularly clean the screen.
- Promptly remove cosmetics, perfume and other dirty on ESLs to avoid screen, case, or lens damaged.
- Avoid direct contact with chemical detergent.

- Avoid direct sunlight or incandescent light on ESLs.
- Do not install ESLs in a strong magnetic environment.
- Do not place ESLs near or in a fire.
- Do not place ESLs near kitchen appliances such as a stove, a microwave oven.
- ESLs communications might be limited or affected by other wireless communication systems that share the 2.4GHz frequency-band, such as Wi-Fi, Bluetooth, or Zigbee.

7 FCC ID warning

7.1 Warning for nameplate

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

7.2 Warning for product manual

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

7.3 portable device statements

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

8 IC statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils

radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

9 UKCA statement

All products of the Nebular series comply with UK Conformity Assessed (UKCA) standards. Nebular products include 1.54", 2.0", 2.13", 2.66", 2.9", 3.46", 3.5", 4.2", 5.83", 7.5", 2.13" Freezer, 2.66" Freezer, and 3.5" Freezer.



Figure 9-1 UKCA marking