



Brief function buttons:


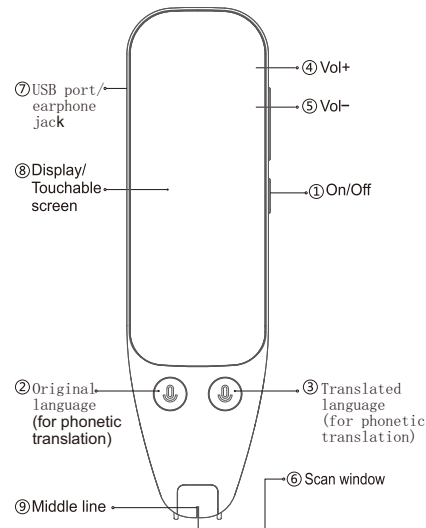


Right scan operations:

1. Let the pen a little slant, make the pen head interface coincident with the paper's.

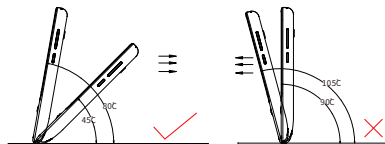

2. The middle line is coincident with the middle of the text line, and scanned with steady speed.

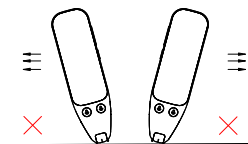

Power on/off

Long time press on/off button about 3secs.

Restart:

When the pen is on, long time press on/off button for 3secs, then choose the "reset" icon on the screen.

Screen operation:

1. Touchable and choose functions
2. Swiping up or down for full reading
3. Swiping left from right: exit
4. Swiping right from left: Menu for more functions

Scan Dictionary

The dictionary is mainly for English and Chinese.

Text translation

Sentences translation and pronunciation, this function is working with mor languages under networking.

Text scan and read

Text scan and pronunciation

Audio translation

1. This function is used under networking.
2. Keep pressing the target/source language button and speaking to it, loose it after speaking finished. It will speak out the source/target language accordingly.

WIFI connection

Setting - WLAN - on - choose the right WIFI and type in password for connection. After connecting successfully, there will be the WIFI icon at the top right corner.

Bluetooth connection

Setting - Bluetooth - Bluetooth switch on, then find the right Bluetooth to match with the pen. When Bluetooth is on, there will be the Bluetooth icon on the right corner of the pen screen. The pen Bluetooth name can be changed by choose the "Device name" and type in the name wanted.

USB charging

Please use the configured USB cable or other type C cable, connected to charging adaptor DC5V---1A-3A.

Warning

Please choose the 5V charging adaptor, and better certificated one to protect the pen.

Computer connecting

Connect the pen to the computer with configured USB cable, choose yes on the pen.

Remarks: for data transfer, the USB must be the pen configured, normal cable can be used only for charging.

System reset

Long time press on/off button for 10secs.

Upgrading

When net connecting, following the steps: setting - system upgrading - checking updating to download and upgrading.

Safety:

Please read the following safety information carefully before using the pen.

1. It is not permitted to use the power/adaptor/battery incompatible or without any certificate, or some dangers may occur, like file, explosion...

2. The pen can be cleaned by some wet soft cloth(or related stuffs). But it can not be cleaned by any stuff with corrosive materials. Water, oil or any other liquid can not be penetrated into the pen head, USB and earphone jack.

3. Don't use high volume for a long time to prevent possible hearing damage.

4. Don't use when driving or walking in order to avoid accidents.

5. Please use this device in the range of 0°C ~ 40°C, and store the equipment and accessories at a temperature range of -10°C ~ 60°C. When the ambient temperature is too high or too low, it may cause the device to malfunction.

6. Don't put the device and its battery around the high ambient temperature or heat-generating devices, such as sunlight, heaters, microwave, oven or water heater. Battery overheating may cause an explosion.

7. The power outlet should be installed near the equipment and shall be easily accessible when the device is charging.

8. Please disconnect the charger from the device and unplug the charger from the power outlet when fully charged or not charged.

9. Don't replace the battery yourself if the device has a non-removable battery, so as not to damage the battery or the device. Battery can only be replaced by an authorized service center.

10. Please dispose of the device, batteries and other accessories in accordance with local regulations,

11. Don't deal with them as household waste. If the battery is disposed of improperly can cause the battery to explode.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

Packing list

Name	Quantity
Scanner translator pen	1pcs
USB cable	1pcs
Manual	1pcs
earphone	1pcs

Configurations

Name	Scan Translator
Model	C501
Power input	DC 5V 1000mA
Storage temperature	-10~60°C
Working temperature	0~40°C
Battery capacity	1200mAh
Pen materials	Plastic
Pen size	44mm*155mm*14mm

Product performance failure

Failure	Solution
Not power on	Please charge
Not connecting to computer	Please use the configured USB cable
No pronunciation	Please set the TTS, or no TTS for the language
No audio translation	Please connect WIFI, or the language not supported
Screen not touchable	Please reset
Not recognizing with scan	Please operate the pen in right way or the language not supported
Others	Please contact the seller

Scan Translator

Manual