

Quick Guide

1 Quick Start Guide	1
1.1 Keys Function	1
1.2 Startup and Shutdown.....	1
1.3 Open and Close of the Screen	1
1.4 Visit Application Procedures.....	2
1.5 USB Connection	2
2 Basic Setting.....	3
2.1 Wireless and Internet	3
2.2 Bluetooth	4
2.3 Communication Function	5
2.4 Language and Input Method	5
3 Installation of Procedures.....	7
3.1 Installation	7
3.2 Uninstall	7
4 Troubles solve.....	7
1. The first startup of MID is slow	7
2. MID can't connect Wi-Fi.....	7
3. MID feels hot	8
4. Email can't be set or Registration of application procedure.	8
5. The system is abnormal and can't work.	8
6. The webpage can't be opened.....	8
7. MID works terribly slow sometimes	8

1 Quick Start Guide

1.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	display recently browsed history

1.2 Startup and Shutdown

Startup

- Long press **POWER key for three seconds**, you can enter into start up picture. The system enters into screen lock status, please unlock it.

Shutdown

- Long press POWER, it will populous shutdown window.
- Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
- Click Shutdown is the last step.

1.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

- Screen will be closed on its own if no operation happens for some time to save battery power

- When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

1.4 Visit Application Procedures

Click  in right top, enter into main interface, choose the application procedure you want to visit.

1.5 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

- Connect the MID and computer by USB cable, the reminder column will show the remind information.
- Open the reminder board; please view the MID status and reminder to learn how to open the board.
- In the reminder board, click the “USB Connected”, it will as below Picture 3.4, then click “open USB storage configuration”.
- Now the USB is connected successfully.

Copy the document into memory card

- Connect the MID to computer with USB cable.
- As MID storage configuration, it is connected with computer successfully.
- Open the “My computer” in your computer, check the items in “removable disc”.
- Copy the documents you need into “removable disc”.
- After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: *When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.*

2 Basic Setting

2.1 Wireless and Internet

1. Connect Wi-Fi

- In the main menu or interface, choose **setting** application procedure.
- Click WLAN, open Wi-Fi, MID will automatically search the available Wi-Fi wireless internet.
- Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

2. Add Network

- Click  icon in right top
- Input network SSID, the wireless network name, click save.
- Click user name already saved, click connect to use network

3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network

4. Keep WI-FI on during sleep..

Click  icon in right top, select **advanced**.
Click **Keep WI-FI on during sleep**

2.2 Bluetooth

Bluetooth function operation

- Click setting application in main menu interface
- Click Bluetooth and open it.
- If somebody open Bluetooth in your surroundings, click search device in right above, then MID will automatically search the Bluetooth device nearby.
- Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
- After match successfully, choose the operation you want to, click  to enter into

Bluetooth setting

- Rename tablet
Click  icon in right top, select rename tablet, you can rename it as you want
- Check visibility timeout
Select **visibility timeout setting**, choose the time you want to set, (Note: check overtime setting is the time setting when Bluetooth is checked)
- Display the file you received
Choose display the file you received, you can view download and upload files.
- Bluetooth advanced setting
Choose Bluetooth advanced setting

File transmission,

Open file transmission service, Connect Bluetooth FTP and customer device to visit and operate the file.

Bluetooth distance induction device

Open Bluetooth distance induction device, when two Bluetooth devices distance is quite far or connection is cut off, the Bluetooth will remind you with sound.

2.3 Communication Function


Phone

Click Phone application procedure, Operate as Picture




2.4 Language and Input Method

Click setting, select language and input method, choose language to switch language, as

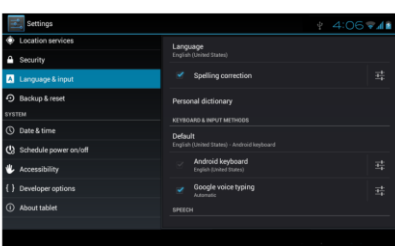

Click **setting**, choose **language and input**, choose **Android keyboard setting**, click input language
Choose the language you want to change in the language list

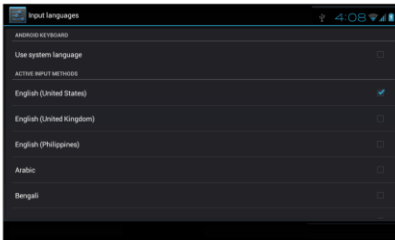

Return to **language and input method**, click **default**, select input method you want to use

3 Installation of Procedures

3.1 Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup **install**, click **install apk**.
4. Finish the installation as guide, it will operate.

Note: *The third party procedure searched from internet to use on the system are all suffixed with .apk.*

3.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures installed in the system.
3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many **convenient** methods to uninstall after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

4 Troubles solve

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can’t connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no

wall or other barrier between them.

- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can’t be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can’t work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can’t be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don’t need in advanced task management, or uninstall some third party application to release more system resource.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

15.105 Information to user.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This product meets the government’s requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical operations with the bottom of the device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user’s body and the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.