

ZENPH SMART AUDIO SUNGLASSES

Product Manual

ZF01

ZENPH


STATEMENT

First of all, thank you for using our products! Please read this manual before use and use this product correctly. In order to provide better service, the content of this user manual may be changed, and changes that occur due to product performance and functions will not be notified separately.

PRODUCT NUMBER

ZF01 open directional audio smart glasses, this product is a Bluetooth glasses with stereo function, simple operation, easy to carry

INSTRUCTIONS

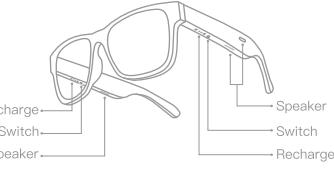

Recharge

The power cord is magnetically charged, and the glasses are turned off during the charging process



Connect

Automatic pairing of left and right ears after power on. Open the Bluetooth list in the phone's settings and search for the AJEYE02 Bluetooth name for pairing




Answer the phone

Click to answer the call
Click to hang up
Long press 2s to reject the call




Play music

Click to start playback
Click to pause playback
Double click to play the next song
Triple click to play the previous song

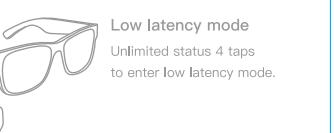


Voice assistant

Press and hold for 2s after hearing the prompt tone "di", then release the button to enter the voice assistant

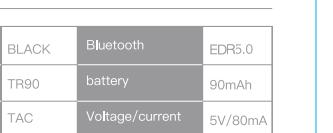


Low latency mode

Unlimited status 4 taps to enter low latency mode.

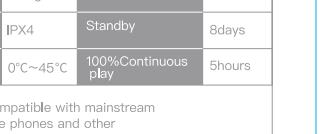

Restore factory settings/clear pairing records

5 taps in the power-on state, release the button with a beep, and clear the pairing record with the phone

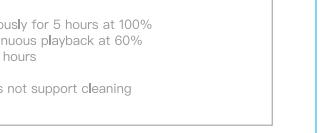

Low battery voice prompt

When the battery power of the glasses is lower than 3.4V, the low battery prompt will start, and the prompt will be once every 5 minutes



Instructions



Glassesx1 Charging Cablex1



Glasses clothx1 Manualx1

Tips

1. Please read the instructions carefully before using this product and keep the instructions
2. For the first use, please fully charge the product
3. If the product does not charge for a long time (more than 2 weeks), please charge it before use
4. Do not wipe the dirty lenses directly. Wet the lenses first, and then dry them with glasses cloth.

Precautions

1. Before using this product, please read all safety information to ensure correct and safe use
2. Using a power supply, charger or battery not approved by the manufacturer may cause fire, explosion and other dangers
3. Please use the accessories approved by the manufacturer and matched with this type of equipment
4. Please use the device within the temperature range of 0°C~35°C, and store the device and its accessories within the temperature range of -20°C~45°C. When the ambient temperature is too high or too low, it may cause equipment failure
5. If the charging is completed, please disconnect the charger from the device, and unplug the charger from the power socket. The continuous charging time should not exceed 12 hours
6. The battery is not allowed to be disassembled, hit, squeezed or thrown into the fire. If it is severely expanded, please do not continue to use it
7. Do not place the device in hospital operating rooms, emergency rooms, intensive care departments and other places (to avoid interference with the work of medical instruments, please stay away from pacemakers when using this device). Hearing aids, cochlear implants and other medical equipment, please keep a distance of more than 15 cm between this equipment and the pacemaker
8. Please keep the equipment dry

Precautions

9. If the equipment or any other parts are not working properly, please do not repair any products by yourself
10. When connecting other devices, please refer to the connection method in the user manual, and do not connect unmatched devices at will
11. To avoid hearing damage, please do not use high volume for a long time

Warning

Warning

1. The use of equipment is strictly prohibited in environments where flammable and explosive oil and gas or chemicals are stored near gas stations, oil depots, chemical warehouses, etc.
2. Do not use this device in hospital operating rooms, emergency rooms, intensive care departments and other places (to avoid interference with the work of medical instruments, please stay away from pacemakers when using this device). Hearing aids, cochlear implants and other medical equipment, please keep a distance of more than 15 cm between this equipment and the pacemaker

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Manufacturers: Shenzhen Zaofeng Technology Co., Ltd.
Service Email: support@zaofeng.cn