

Hello

Welcome to private voice communication and transcription

Privo can be used for noise cancellation and as a hand-held sound booth for voice silencing in situations where speech privacy and accuracy are required. Perfect for conducting private phone calls or discreetly using speech enabled technology and software.

Privo may also be used to record and listen to audio when connected to any Bluetooth enabled device.

Privo Essentials

The ergonomic design of Privo allows you to hold it naturally in either hand.

Place the facepiece snugly against your face and move it around slightly to find the most comfortable fit. You are now in the proper position to begin speaking into your mask.

The breathing port inside the mask allows the air you naturally expel while speaking to escape without permitting the sound of your voice to be heard.

It is very important that the air does not escape between your face and the facepiece. If air escapes, sound escapes!

To test: hold the mask snugly against your face and blow sharply. If you feel air escaping around your face, hold tighter to your face or re-position the facepiece.

Privo Essentials



Proper Breathing & Speaking

Breathing while speaking into the mask is done the same way as ordinary conversation. Inhale through nose and expel air through the mouth as you speak.


Do not try to hold your breath while speaking!

The correct speaking voice is a soft tone, as though speaking not to disturb a sleeping child. Quieter than a normal speaking voice but above a whisper.

The key to speaking in the proper voice lies in lowering the volume of your voice and maintaining the same voice level.

Power & Connecting

To Power **ON** Press and Hold the LED power button for 3 seconds. When powered on the LED button will remain green.

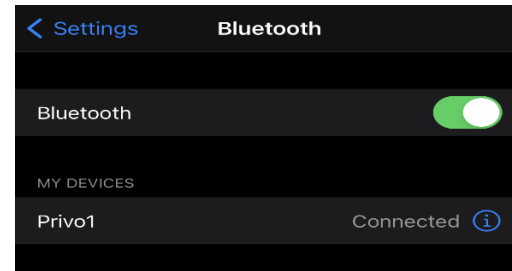

To **Connect** go to the Bluetooth settings on your device – search/select “**Privo1**” add and pair. Privo1 will remain on your Bluetooth device list until you delete it. To Power **OFF** Press and Hold the power button for three seconds, then release - the LED will turn and remain off.

Microphone & Headphones

Privo is sensitive enough that only as whisper is required but feel free to speak in a normal tone if you prefer. **Do not yell or scream into the microphone!**

The headphone jack is located on the bottom of the mask above the exhaust port. Any type of 3.5mm. (standard plug type) headphones will work when Privo is paired with your device. Use noise cancelling headphones for total privacy.

You will find it is easier to hear yourself speaking into the mask while wearing headphones.

Charging

Charge Privo when powered on or off.



While charging the LED will remain orange. Once fully charged the LED will turn off.

It takes 2 hours to reach full charge, but it is fine to leave Privo charging overnight.

Privo can be used normally while charging.

Care and Maintenance

Remove the rubber facepiece from the handle.

Inside is acoustic foam. Pinch the foam on both sides, rotate 90° and gently remove. The foam and facepiece can be washed regularly in warm soapy water.

While removed wipe interior walls of the mask to keep clean.

Reseal the facepiece on the handle.

CAUTION: Do not immerse the microphone in liquid. Moisture proof under normal conditions it may not function properly if saturated with liquid.

Help and Resources

We pride ourselves on having the best products, warranty and customer service in the industry.

Please do not hesitate to contact us with questions, comments, or suggestions.

Refer to our website for warranty information, FAQ's, and technical support.

Talk*Technologies*

www.talktech.com

info@talktech.com

1.888.811.9944

PRIVO

For Privacy



QUICK START GUIDE

Talk*Technologies* talktech.com

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.