


Eye massager

Quick start

Eye massager

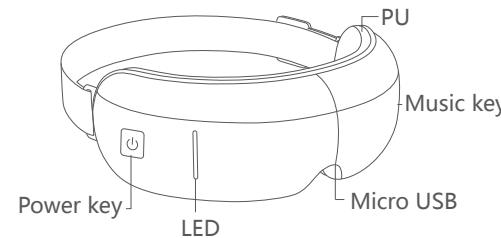

HUAWEI HILINK can realize the interconnection between intelligent devices.
Devices that support HUAWEI HILINK can live smart through HUAWEI APP for management and control.

Install Huawei Smart Life APP


Mobile phone scan QR code, or in the application market search Huawei Smart Life, the next Install the APP.

- If you have downloaded Huawei Smart Life APP on your mobile phone, please make sure that the APP version is up to date.



Charging

- Please use a mobile phone charger with an output of 5V≥600mA to charge. (This product is not included The power supply)
- Plug the USB plug of the USB data cable into the USB socket of the power adapter
- Plug the power adapter into the power socket
- Insert the Micro USB plug of the USB data cable into the Micro USB socket of the product

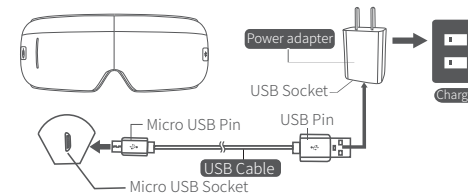

Warm prompt

The red indicator flashes during charging, and the green indicator is long on after charging.
The product cannot be turned on during the charging process.
The product will stop working automatically when it is charged during work.
Charging time 2-3 hours.
Disconnect the power adapter after charging.
At work, the red light blinks to indicate low battery power.

How to use

Turn on/off the product:

Power on: Long press the "⏻" button for 2 seconds, the green light will be long on, and the product will be powered on;
Shutdown: Long press the "⏻" button for 2 seconds to shut down the product.

Mode adjustment:

Short press the "⏻" key, and the mode will be switched in the following order

- DIY mode: set air pressure, hot compress and vibration by yourself, with memory function
- Eye protection mode: air pressure + heating, built-in music
- Sleep mode: Air pressure, turn off built-in music by default
- Beauty mode: heat, built-in music
- Bright eye mode: air pressure + vibration, built-in music



Warm Tips:
The default timing of the product is 15 minutes, and the product will automatically shut down after the time is reached.

Music adjustment:

Long press the music button for 2 seconds to play/pause the music;
Short press the music button to switch to the next music.

After the product is started, the massager can be bound according to the step of "add device"

Add equipment

- Connect your phone to your home wireless network.
- Open the Huawei Smart Life APP and use it for the first time according to the APP Guide to register/log in Huawei account.
- Enter "Home Furnishing" on the homepage of the APP, click "+" and select "Add Settings", the APP will scan the Kaisheng eye massager to be configured.



If the device is not scanned, please click "Add manually", according to the interface prompts Add the device manually.

- In the scanned device list, click the device to be added according to The interface prompts you to connect.



Only devices that support the HUAWEI HILINK protocol (packaging or specification)The book is marked "support HUAWEI HILINK" related words)Add it via the APP.

- Set the name and location of the device, and add the device to it after completion Work.



After the success of the addition, Kasheng Eye Massager will appear in Huawei Smart Life The home page of the APP is "Home Furnishing".Click on Device on the homepage of APP to enter Settings The standby control interface controls the device.


Warm prompt

- Not connected to Huawei Smart Life APP:
Run the host according to the default setting program, short press the power button for five modes Free choice;
- Connect Huawei Smart Life APP for use:
After entering the Huawei Smart Life APP interface, there are DIY mode, eye protection mode, You can choose five modes: sleep mode, beautiful eye mode and bright eye mode. Click DIY mode button to enter the DIY mode interface, select the various suitable for you Manual strength, the host will automatically remember your choice, the next time you use Run automatically according to your choice;After choosing, wear the product and use it.

Note when the product is abandoned

Note when the product is abandoned
Please give the product to be processed when it is discarded after use Rechargeable battery recycling treatment of professional institutions for processing, do not Handle it by yourself. The steps are as follows. When taking out the battery, the appliance must be powered off. Please follow the following steps until the lithium battery with the product is removed.

- Detach the right inner part;
- Unscrew the screws and remove the outer parts
- Remove the lithium battery

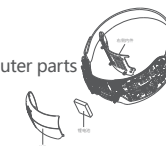

The basic parameters

Product name: Kaisheng eye massager

Product model: A3

Rated voltage: 5V

Rated power: 5W

Executive standard: GB 4706.1-2005 GB 4706.10-2008

This product is suitable for mobile phone charger charging:

Applicable power adapter standard:

Input: 100~240V~ 50/60Hz 0.2A

Output: 5V ≥ 600mA(both applicable, do not use non-5V power adapter)

Matters needing

Please read all the instructions carefully and operate according to the instructions.

Can not be used when there are symptoms of eye

disease, eye surgery, glaucoma, white

It is prohibited for patients with major eye diseases such as retinal detachment and handicapped eyes.

Do not wash the product with water. Clean with cotton soaked in alcohol.

Do not disassemble the product.

This product has a hot surface, people who are not

sensitive to heat should be careful when using it.

Minors, the disabled and the elderly should be under the supervision of an adult.

This product is a personal health massage product and cannot replace medicine and medical equipment.

Do not disassemble, bump, squeeze the internal lithium battery or throw it into the fire.If the

Please do not continue to use it because of severe swelling.

Do not use the battery after soaking in water.

Do not put in high temperature environment with lithium battery.

Sensitive skin, allergic dermatitis of the face, plastic

materials placed on the face,

Use this product under the guidance of your doctor.

Name and content of harmful substances

Part name	Harmful substance					
	Lead (Pb)	mercury (Hg)	cadmium (Cd)	hexavalent chromium (Cr)	polybrominated biphenyls (PBB)	Polybrominated diphenylethers (PBDE)
The shell	○	○	○	○	○	○
Circuit board assembly ※	×	○	○	○	○	○
Metal parts	×	○	○	○	○	○
Rubber parts	○	○	○	○	○	○
Power cord/adaptor	×	○	○	○	○	○
Internal signal cable	○	○	○	○	○	○
leather	○	○	○	○	○	○
<p>This form is prepared in accordance with SJ/T 11364</p> <p>※ : Circuit board assembly includes printed circuit board machine components, such as resistors, capacitors, integrated electricity Roads, connectors, etc.</p> <p>○ : Denotes that the content of the hazardous substance in all homogeneous materials of the component is in Gb /T 26572 The set limit requirements are below.</p> <p>× : Represents an excess of the hazardous substance in at least one homogeneous material of the component GB/T 26572 specified limit requirements.</p>						

Description of environmental protection life span

The environmental protection life of this electronic and electrical products is 10 years, and the internal circuit board components, metals and other components contain Harmful substances or elements will not leak out, will not cause pollution to the environment, will not be made to people, property and so on To damage.Please use the product according to the content described in the manual.



Warranty Card (optional)

Warranty policy of kasheng eye massager

1. Since the date of purchase 7 days, product quality problems, you can press

A one-time refund of the invoice price or replacement of the same product.

2. Within 15 days from the date of purchase, if there is any quality problem, you can ask for more Switch to the same product.

3. If there is any quality problem within 12 months from the date of purchase

You provide warranty service.

Kaisheng eye massager non warranty policy

1. There is no certificate of "Three Guarantees" or the validity period of "Three Guarantees" has exceeded.

2. Damage caused by failure to use, maintain and store the products according to the instructions.

3. Damage caused by demolition and repair without authorization of Casheng.

4. Damage caused by force majeure.

5. Products in the use of the process of normal decolorization and wear is not warranty

Within the range.

User stub

User information (please fill in the real information, Kai-Sheng promise users Information is for after sales service only)

The name_____ The phone_____

E-mail address _____ Zip code_____

Contact address _____

Product information

The name_____ the model _____

Color_____ Packing SN No _____

Need to service ○Return of goods ○ replacement ○repair

The fault phenomenon _____

Date of acceptance _____ Maintenance signature_____

Manufacturer's root

User information (please fill in the real information, Kai-Sheng promise users Information is for after sales service only)

The name_____ The phone_____

E-mail address _____ Zip code_____

Contact address _____

Product information

The name_____ the model _____

Color_____ Packing SN No _____

Need to service ○Return of goods ○ replacement ○repair

The fault phenomenon _____

Date of acceptance _____ Maintenance signature_____

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.