


104*147MM

ULTREAN


AI Nutriscale Curve Pro

MODEL NO.: K40H

SCALE PARTS REFERENCE

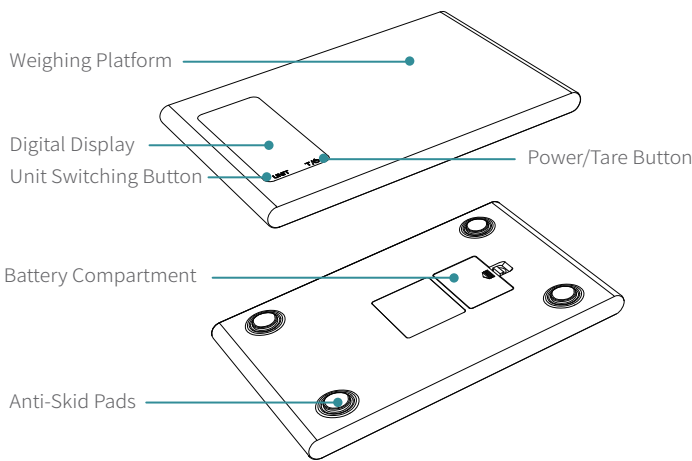

DIGITAL DISPLAY

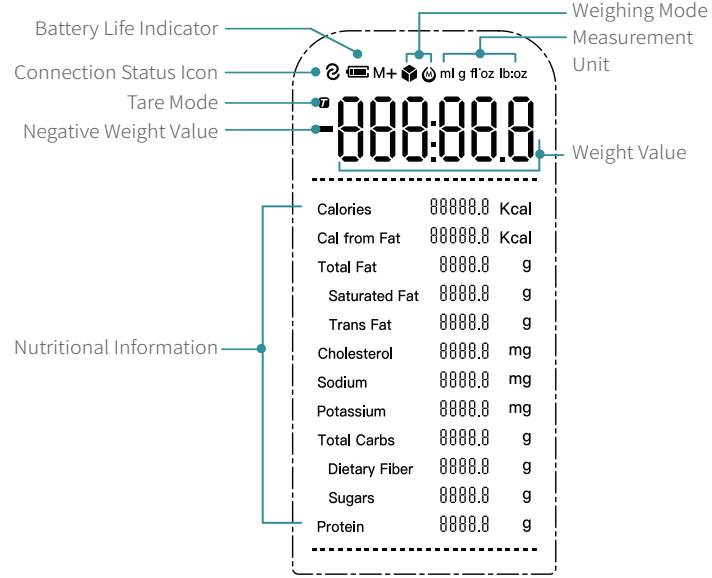


| Symbol | Illustration | Meaning |
|---------------|-----------------------|--|
| | Bluetooth symbol | Indicates the connection status |
| oz | Weight unit | ounces |
| lb: oz | Weight unit | lb:pounds oz:ounces 1lb=16oz |
| g | Weight unit | Gram |
| | Weight unit (water) | Indicates the weight of the weighted water |
| | Weight unit (water) | Indicates the weight of the weighted milk |
| | Tare | Indicates that tare function is activated |
| | Minus sign | Indicates a negative number |
| | Weight | Indicates that weighing is in progress |
| | Low battery indicator | Indicates that the battery is insufficient |
| | Over weight indicator | The object being weighted is too heavy |

HOW TO USE THE SCALE

- Press the **T/ON** button to turn the scale on and off. To turn off the scale, press and hold for 3 seconds.
- Press the **UNIT** button to switch between different measurement units.
- Press the **T/ON** button to zero the weight of the container.

Reminder:

- Before first use, remove the plastic strip from the battery compartment.
- Keep the scale away from moisture, liquids, or wet areas. If liquid is accidentally spilled on the scale, wipe it dry with a soft cloth immediately to avoid damage.

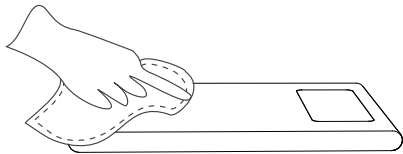

TROUBLESHOOTING

1. Display screen is off after pressing the power button.

- Replace the battery with a new one.
- Ensure the battery is installed correctly according to the polarity markings in the battery compartment.

2. The scale is unable to connect to the NutriScale app.

- Ensure your phone is within 30 feet of the scale.
- Make sure your phone's Bluetooth is turned on and that the scale is not connected to another phone. Only one phone can be connected at a time.

3. Display screen becomes dim or shows unusual characters LO

- The scale is in standby mode. Place an object on the scale to measure.
- If the issue persists, try using a new battery with more stored power.

4. Display screen shows unsual characters Err

- The object's weight exceeds 10.2 kg. Please consider using a kitchen scale with a higher weighing capacity.

ONLINE MANUAL



Scan the QR code to view the digital manual of the scale.

You can also enter the following link in your web browser:

<https://nutriscale.ultrean.com/h5/guide>

The contents of this manual may change without prior notice due to app updates and improvements. If there are any discrepancies, please refer to the guide within the app.

WARRANTY

We grant a 1-year warranty on the product commencing on the date of purchase. Within the guarantee period, we will eliminate any defects in the appliance resulting from faults in materials or workmanship.

CUSTOMER SERVICE

- If you have any product questions or concerns, please prepare your order details and contact us directly at **support@ultrean.com** or visit our website at: **www.ultrean.com**.
- We have a professional customer service team to provide satisfactory solutions to any issue you might have.
1775 Flight Way, Suite 150,
Tustin, CA 92782, USA

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

ISED Radio Frequency Exposure Statement:

This equipment complies with ISED exposure limits set forth for an uncontrolled environment.

This equipment can be used in portable exposure conditions.

Déclaration d'ISDE sur l'exposition aux radiofréquences :

Cet équipement est conforme aux limites d'exposition d'ISDE établies pour un environnement non contrôlé. Cet équipement peut être utilisé dans des conditions d'exposition portables.