



KOSPET PULSE

User Manual

Multilingual User Manual (in PDF)

Please scan the QR code below for the user manual in multiple languages




The supported languages include: English, French, Spanish, German, Italian, Russian, Turkish, Arabic, Vietnamese, Malay, Khmer, Traditional Chinese, Simplified Chinese, etc.

Packing List


Smartwatch (including silicone strap), Magnetic charging cable, User manual



Smartwatch



Magnetic charging cable




Strap



User manual

About the Watch

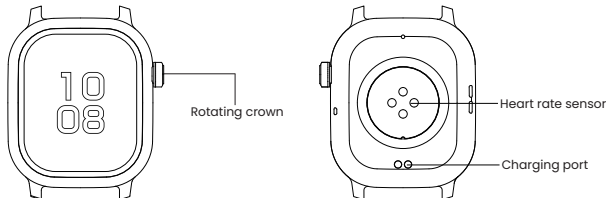


Watch Charging

- Please fully charge the watch before first use.
- The magnetic charging cable's USB connector needs to be plugged into a power adapter or a computer's USB port to function.
- The charging cable's magnetic connector automatically attaches to the back of the watch. When charging, please ensure that the metal contacts on the back of the watch are closely connected to the charger's magnetic connector.

Note:

- Please use the original KOSPET magnetic charging cable to charge the watch. Before charging, ensure that both the charging cable and the watch are dry and clean.
- Please use a power adapter with an output current of 500mA or higher and ensure that it is certified to meet safety standards.

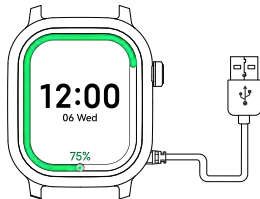

Watch Wear and Care Tips

Cleaning and Maintenance After Water Activities

After water activities (e.g., swimming, surfing), promptly shake the watch to remove residual water from holes in the watch case. Wipe the watch body and the strap with a soft cloth dampened with clean water. Allow them to dry completely before wearing the watch again to prevent salt deposits that may affect the normal use of the watch.

Cleaning Tips After Workouts

After intense activities (e.g., running, hiking, cycling), sweat and acidic residues may accumulate on the watch. Please rinse the watch with clean water and dry it promptly to minimize long-term corrosion.

Cleaning Precautions

Do not use soap, hand sanitizer, shampoo, or other harsh chemicals to clean the watch, in order to avoid skin irritation or component damage caused by residues.

Device defects or damage caused by improper cleaning or chemical exposure is not covered under warranty.

Usage Environment Precautions

Do not expose the watch to the following conditions to maintain its water resistance.

- High-temperature environments (e.g., saunas, hot showers)
- High-pressure water (e.g., diving, water skiing)
- Strong corrosive liquids or UV/radiation exposure

Note: Prolonged exposure to extreme conditions accelerates gasket deterioration, which may lead to water ingress.

App Download and Installation

Before using the smartwatch, please download the Apexmove App where you can access more health and fitness data insights and customize various settings, which helps you to embrace a healthier and more active lifestyle.

Method 1:

Scan the QR code below to download and install the App.



App QR code



Apexmove

Method 2:


Enter the keyword "Apexmove" in the Apple App Store or Google Play Store to download and install the App.



App Store



Google Play

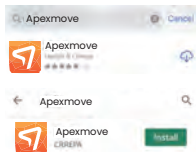

App Registration and Login

1. Once the installation is completed, open the App, allow it access BT and location, and grant other necessary permissions on the smartwatch.
2. To fully experience all the features of the smartwatch, please register and log into the App before use.



Pairing and Connection


Method 1:

- ① Press and hold the crown for 3 seconds to power on the watch and switch to the QR code interface.
- ② Open the App and go to My > My Device.
- ③ Select the scanning icon to pair the watch.



Method 2:

- ① Press and hold the crown for 3 seconds to power on the watch.
- ② Open the App and go to My > My Device.
- ③ Select the Add Device icon, find "KOSPET PULSE" from nearby devices, and tap to pair the device.

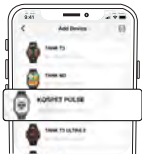


Gesture Operations



Swipe Down:
Swipe down on the home screen to access the Shortcut Menu. Tap the + icon to customize it.



Swipe Up:
Swipe up on the home screen to access the Notification Center. Tap the Edit icon below to customize it.

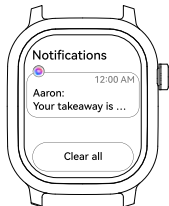


Swipe Right:
Swipe right on the home screen to view unread notifications.



Swipe Left:
Swipe left on the home screen to enter the App List.

Button Operations



1. Rotate the Crown:

- a. on the App List and other pages to scroll up/down through options.
- b. on the watch face editing page to switch between watch faces.
- c. during music playback/BT calls to adjust the volume.

2. Press the Crown once:

- a. to wake the watch screen when the screen is off.
- b. on the home screen to enter the App List.
- c. on other pages (except pop-up windows) to return to the home screen.
- d. during a workout to pause/start the workout
- e. in Stopwatch/Timers to pause/resume.


3. Press and hold the Crown:

- a. for 3 seconds when the watch is powered off to power it on.
- b. for 3 seconds when the watch is powered on to access the Power off/Restart page.
- c. for over 8 seconds when the watch is powered on to force a restart.
- d. for 5 seconds in the power saving mode to exit the mode.
- e. during a workout to end the workout and save workout details.

BT Calling Setup

(Compatible with both iPhones and Android phones)

Once the watch is connected to the App, tap 'Pair' in the App to enable BT calling.

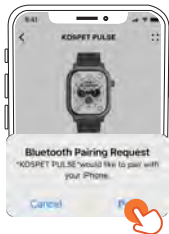

OTA Update

Open the App and go to My > My Device > Firmware Update to download the latest firmware version.



The E-label information

Access E-label information through the following steps.

Step 1:

Click Settings in the menu or Click Settings in the shortcut menu interface.



— or —



Step 2:

Enter the setting interface, as follows.



Step 3:

Select About, as shown in the following interface.



Technical Specifications

Frequency	2402-2480MHz
Power (EIRP)	BT: 5.14 dBm BLE :5.78 dBm

Warranty Policy

KOSPET provides a two-year warranty for products purchased from our official online store (<http://www.kospet.com>). For more details, please visit:

<https://kospet.com/pages/warranty-policy>

If you have any further questions, feel free to:

· Email: support@kospet.com

· Call: +1 (507) 668-8466 (Service hours: Monday to Friday, 09:00 am - 06:00 pm EST)

For purchases made on Amazon, please contact: smartwatch.amz@gmail.com

Safety Precautions

- Do not expose the watch to high temperatures or place it near heat sources, such as heaters, ovens, microwaves, or water heaters, as excessive heat may cause battery explosion and other safety hazards.
- This product uses a non-removable polymer battery. Disassembly by unauthorized personnel is strictly prohibited to prevent potential risks.
- While the watch passed waterproof testing before leaving the factory, wear and tear during daily use may affect its sealing performance. Please use the watch carefully while swimming or diving, and avoid wearing it in saunas or during hot showers.
- This product is not a professional medical device and cannot be used for medical purposes, or as basis for diagnosis of any medical condition. All detection results are provided for reference purposes only.

FCC Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Important Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Manufacturer:

Shenzhen Amazwear Technology CO., Ltd.

Address:

34/F, Changjiang Center, Intersection of Renmin Road and Jianshe Road
Jingxin Community, Longhua Subdistrict, Longhua District, Shenzhen, Guangdong, China.

MADE IN CHINA

This user manual is published by KOSPET. The company reserves the right of final interpretation and may make adjustments to this manual anytime if necessary. Feature descriptions on the foregoing pages are provided for reference only.


The E-label information

To access the e-label information, in the device

1.Go to the main interface as follows



2. Enter the setting interface, as follows

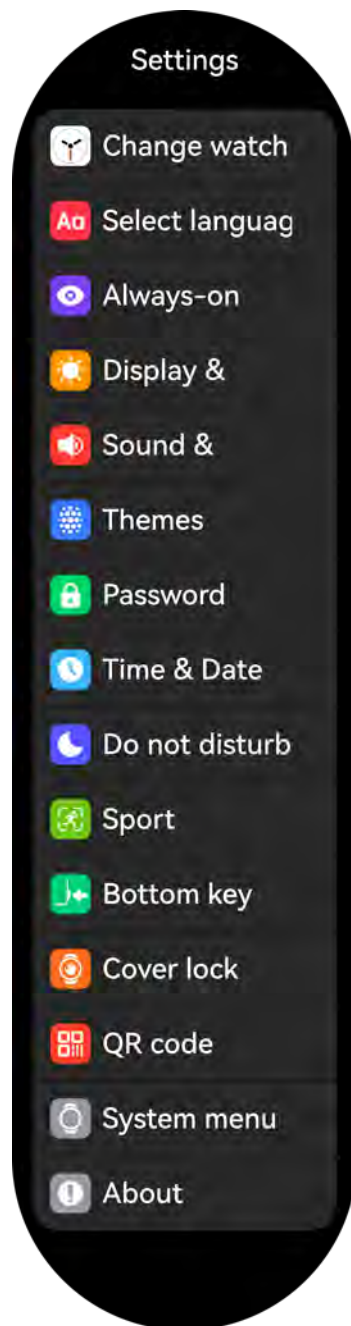

3. Select About, as shown in the following interface

