


Front

AR[®] / glasses




NRMYW

BY MY NEW WORLD

USER’S MANUAL

REVOLUTIONARY AR GLASSES!


www.nrmyw.com



Disconnect from power supply immediately if major failures occur.

Major failures include: Smoke, peculiar smell or abnormal sound is discharged from the product.


In the preceding scenarios, do not continue to use the product. Disconnect power supply immediately and contact professional staff for troubleshooting.



Do not place the product in high temperature environments.

Do not place the product near a heat source, such as a radiator, a heat reservoir, a stove or other heating products.

Do not expose the product to direct sunlight, which may cause high temperatures and subsequent faults in the product.




Do not damage the power cable.

Do not damage, change, bend, or forcibly drag the power cable.

Do not forcibly drag the cable when you pull out the power plug. If the power cable is damaged, please contact the local distributor to repair or replace it.

The power cable in the accessory box is for this product only. Do not use it on other products.




Keep away from the product when you use a radio.

The product complies with the international EMI standard to prevent radio interference. However, interference may still exist and causes noise in the radio. If noise occurs in the radio, try the following solutions.


Adjust the direction of the radio antenna to avoid the interference from the product.

Keep the radio away from the product.



Do not drop liquid, metal or anything combustible into the product.


If any liquid or metal is dropped into the product, power off the product and disconnect power supply, then contact professional staff for solutions.



Do not use the product in an improper place.


Do not use the product in humid placing, such as the bathroom, the shower room, or outdoor environments that experience rain, snow or other harsh weather. Avoid place near hot spring vapor. The preceding environments may cause faults in the product or electric shock under extreme conditions.

Do not put an exposed fire source, such as an ignited candle, on the product.




Do not open the cover or change the product on your own.

If inspection, adjustment, or maintenance is required, contact with local distributor for help.



Use the specified power supply.

To prevent the product from being damaged, do not use any type of power cables other than type provided with the product.




Additional advice:

Use the product in an environment with comfortable lighting. It is harmful to your eyes to watch in a too bright or too dark environment.


Relax your eyes after a period of time for watching.

Adjust the volume to an appropriate level, especially at night.


1Contents




MyW AR Glasses × 1




Sunglasses × 1




Nose pad × 2




Prescription lens frame × 1




Prescription lens line × 2




Remote control × 1




Type-C cable × 1



Screwdriver × 1



Cleaning cloth × 1




User manual × 1

2Installation and Use


Selecting the nose pad

There are three types of nose pads that come with the product as shown below: nose pad 1 (pre-installed on the glasses), nose pad 2, and nose pad 3.


Select and adjust a nose pad and adjust the wearing position of the glasses for improved comfort and visual experience.




1



2




3

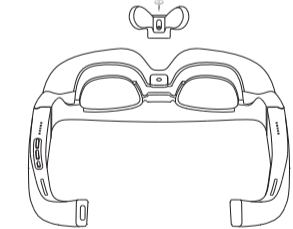

Installing the sunglasses

The sunglasses adopt a magnetic suction design, and simply align the magnetic suction position with the magnetic suction position on the front end of MyW to automatically adsorb them in place.




Installing the prescription lens frame (skip this step if not needed)

Customizing the Prescription Lenses: Take the prescription lens template from the accessories box to the local optical shops to customize your own prescription lenses (additional fees needed) if you wear glasses. Before customizing your prescription lenses, ask the optician to comprehensively evaluate the assembly method of the frame template to ensure that the thickness of the processed lenses and the width of the lens frame can meet the assembly requirements.


3Button Functions

The glasses have three buttons. The three buttons can be used for different functions by long or short press.

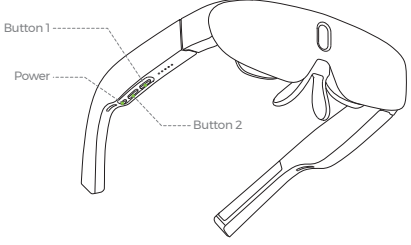


4.1 Pair to remote control

When you use MyW glasses for the first time, please put out the remote control from the glasses box, then turn on the glasses and remote control, and follow system guidelines to pair.







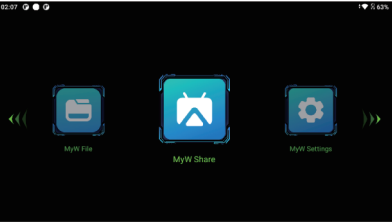

4.2 Start to use

When paired with remote control, the glasses will go to the home page, all applications can be viewed. The following figure shows applications that the system has.




Built-in apps

Name	Icon	Functions
MyW Camera		Enter MyW Camera application to take photo or video.
MyW Translation		Enter MyW Translation application to translate conversation timely. * Please make sure your glasses connected to Wi-Fi.
MyW Store		Enter MyW Store application to download applications you want or manage your applications.
YouTube		Enter YouTube application.
Instagram		Enter Instagram application.
Prime Video		Enter Prime Video application.


4.3 System Settings

Choose MyW Settings to enter system settings page.

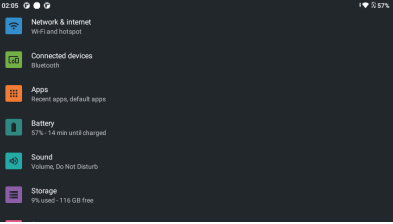

4.3.1 Network Settings

Enter the Network & Internet submenu to set Wi-Fi and hotspot.

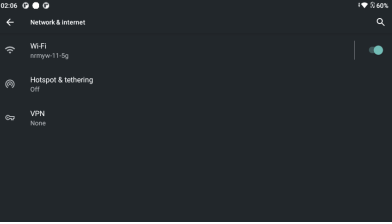

4.3.2 Connected devices Settings

Enter the Connected devices submenu to check connected devices or pair new device via Bluetooth.

4.3.3 Apps Settings

Enter the Apps submenu to check recently opened apps and enter permission manager to control app access to your data.

4.3.4 Battery

Enter the Battery submenu to check your battery status, set Battery Saver and Battery Manager.

4.3.5 Sound

Enter the Sound submenu to check your Sound status and change them.

4.3.6 Storage

Enter the Storage submenu to manage your glasses storage.

4.3.7 Accounts

Enter the Accounts submenu to add an account for your application and manage them.

5C

Navigation Keys (Up/Down/Left/Right)

Home

Volume +

Next

Play/Pause

Indicator

Previous

Volume -

Flips

Enter

Return

Menu

Power

Mouse On/Off

Short press to increase the brightness in loop for AR Glasses

Long press to turn on/off the backlight of remote control

Full Keyboard

Touch panel

Charging interface

ON / OFF

6FAQs&Troubleshooting

Symptom	Troubleshooting Methods
The Glasses cannot be powered on	Check whether the battery is too low, please use power cable to connect power to try.
The remote control is not causing a response	Please charge your remote control, in case the battery is used up. Align the remote control with connected device window.
Unable to use MyW Translation	Please check whether your Wi-Fi internet is normal, please connect to WLAN to use MyW Translation.


7Specification

Model	MyW AR Glasses	Speakers	2 × 0.1W, 8Ω
System	MyW OS	Ports	Type-C USB (Charging & Data transfer)
Configuration	8 Cores / 6+128GB	Storage Temperature / Humidity	-20℃ - 60℃ / 0% - 90% (no condensation)
Optics	Full Color & Binocular	Working Temperature / Humidity	0℃ - 40℃ / 20% - 80% (no condensation)
Brightness	1000nits (Typ.)		
Wi-Fi	24G & 5G Support 802.11 a / b / g / n		
Bluetooth	5.0		
Camera	1300W/13MP		

Back


3Button Functions

The glasses have three buttons. The three buttons can be used for different functions by long or short press.

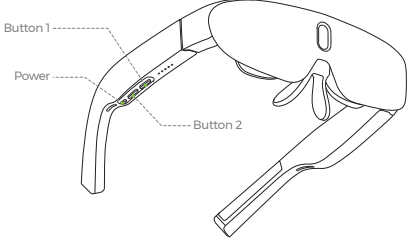


4.1 Pair to remote control

When you use MyW glasses for the first time, please put out the remote control from the glasses box, then turn on the glasses and remote control, and follow system guidelines to pair.







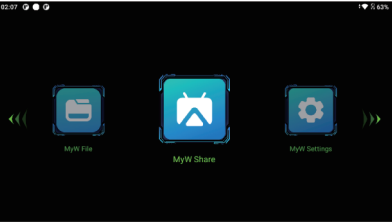

4.2 Start to use

When paired with remote control, the glasses will go to the home page, all applications can be viewed. The following figure shows applications that the system has.




Built-in apps

Name	Icon	Functions
MyW Camera		Enter MyW Camera application to take photo or video.
MyW Translation		Enter MyW Translation application to translate conversation timely. * Please make sure your glasses connected to Wi-Fi.
MyW Store		Enter MyW Store application to download applications you want or manage your applications.
YouTube		Enter YouTube application.
Instagram		Enter Instagram application.
Prime Video		Enter Prime Video application.


4.3 System Settings

Choose MyW Settings to enter system settings page.

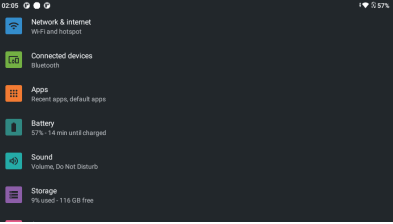

4.3.1 Network Settings

Enter the Network & Internet submenu to set Wi-Fi and hotspot.

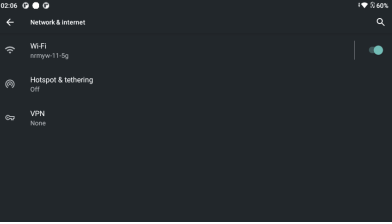

4.3.2 Connected devices Settings

Enter the Connected devices submenu to check connected devices or pair new device via Bluetooth.

4.3.3 Apps Settings

Enter the Apps submenu to check recently opened apps and enter permission manager to control app access to your data.

4.3.4 Battery

Enter the Battery submenu to check your battery status, set Battery Saver and Battery Manager.

4.3.5 Sound

Enter the Sound submenu to check your Sound status and change them.

4.3.6 Storage

Enter the Storage submenu to manage your glasses storage.

4.3.7 Accounts

Enter the Accounts submenu to add an account for your application and manage them.

5C

Navigation Keys (Up/Down/Left/Right)

Home

Volume +

Next

Play/Pause

Indicator

Previous

Volume -

Flips

Enter

Return

Menu

Power

Mouse On/Off

Short press to increase the brightness in loop for AR Glasses

Long press to turn on/off the backlight of remote control

Full Keyboard

Touch panel

Charging interface

ON / OFF

6FAQs&Troubleshooting

Symptom	Troubleshooting Methods
The Glasses cannot be powered on	Check whether the battery is too low, please use power cable to connect power to try.
The remote control is not causing a response	Please charge your remote control, in case the battery is used up. Align the remote control with connected device window.
Unable to use MyW Translation	Please check whether your Wi-Fi internet is normal, please connect to WLAN to use MyW Translation.

7Specification

Model	MyW AR Glasses	Speakers	2 × 0.1W, 8Ω
System	MyW OS	Ports	Type-C USB (Charging & Data transfer)
Configuration	8 Cores / 6+128GB	Storage Temperature / Humidity	-20℃ - 60℃ / 0% - 90% (no condensation)
Optics	Full Color & Binocular	Working Temperature / Humidity	0℃ - 40℃ / 20% - 80% (no condensation)
Brightness	1000nits (Typ.)		
Wi-Fi	24G & 5G Support 802.11 a / b / g / n		
Bluetooth	5.0		
Camera	1300W/13MP		

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.