


JARVIS ONE QUICK START GUIDE

Pairing and Activation


Scan the QR code with your smartphone, download **J1 by MATTER** App, and follow the prompts to pair and activate.

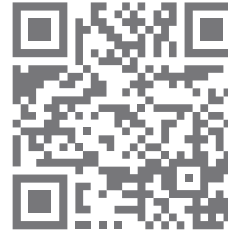

Scan the QR code download **J1 by MATTER**
www.matter.ai/pages/downloads


Setup Instructions

1. Connect JARVIS ONE to a power source or to your computer. It will automatically turn on and play a startup tone. If not, press and hold the power button until it vibrates.
2. Open **J1 by MATTER** and follow the prompts to pair and activate.
3. Press and hold the fingerprint sensor on JARVIS ONE to issue voice commands, or use **J1 by MATTER** to access AI features.

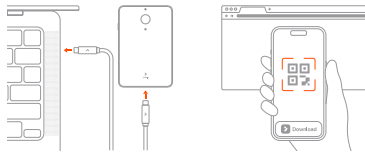

Buttons and Functions

1. Power On: Connect JARVIS ONE to a power source or press the power button until it vibrates and you hear the startup tone.
2. Bluetooth Pairing: Press and hold both the fingerprint sensor and the power button for at least 10 seconds until JARVIS ONE vibrates and plays the Bluetooth pairing tone.
3. Fingerprint Recognition Success: JARVIS ONE vibrates once.
4. Fingerprint Recognition Failure: JARVIS ONE vibrates twice.

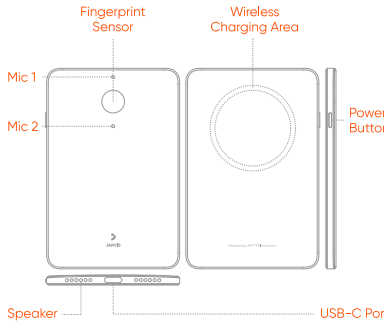

Getting Started Quickly



Issue voice commands through **J1 by MATTER**

Press and hold the fingerprint sensor



Issue voice commands through JARVIS ONE fingerprint sensor

Press and hold the touch control area



Issue voice commands through the earbud's touch control area (requires FIIL x JARVIS Earbuds).

Supported Applications and Services

Category	Applications	
Communication Apps	WhatsApp	Microsoft Teams
	Facebook Messenger	Google Chat
	Message	Slack
	More apps are coming soon.	
Email Services	Gmail	Outlook.com
	iCloud	yahoo!
	Microsoft Exchange	IMAP/SMTP Mail Services
	More apps are coming soon.	
Lifestyle Apps	Google Maps	Uber
	Uber Eats	
More apps are coming soon.		

*User authorization is required to run these applications. As they update and iterate, the supported apps and services may change. Please refer to the actual supported applications and services.
*The third-party application icons and names referenced in this guide are used solely for descriptive and illustrative purposes, with no commercial intent. These icons and names are the property of their respective owners.

ADDITIONAL ACCESSORIES

FIIL x JARVIS Earbuds

- Support long-pressing the touch control area for voice interaction with the device.
- Support connection to JARVIS ONE while simultaneously connecting to other devices. Feature active noise cancellation.

JARVIS ONE iPhone Case

- Compatible with iPhone 16/15/14 Series.
- Supports unlocking and wireless charging of the smartphone when used with JARVIS ONE.

JARVIS ONE Magnetic Case

- Magnetically attaches to your smartphone.
- Supports unlocking and wireless charging of the smartphone when used with JARVIS ONE.




MEMBERSHIP, DISCOUNT, AND SUPPORT



Scan the QR code or enter the URL to subscribe your membership.
www.matter.ai/pages/membership

Buy a 1-year subscription through this QR code and get 2 months free!

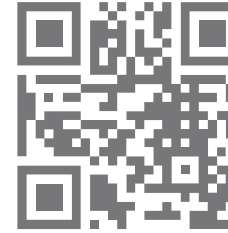

Scan the QR code or enter the URL to purchase accessories.
www.matter.ai



HQ62201007KH0

Please read this quick start guide carefully before using the product and keep it in a safe place. Specifications are subject to change without notice.
©2024 MATTER INNOVATION PTE. LTD. or MATTER Innovation Inc. All rights reserved. "JARVIS"™ and "J1"™ are trademarks of MATTER Innovation Inc.
By using this product, you agree to our Terms of Use and Privacy Policy. For more details, please visit: www.matter.ai/pages/legal.



Scan the QR code or enter the URL
to find product tips, check the FAQ,
and access customer service.

www.matter.ai/pages/support

PRODUCT PARAMETERS

Item	Specifications
Product	AI Device
Model	G001
Wireless Connectivity	Bluetooth® 5.1 Wi-Fi 802.11 a/b/g/n/ac
Battery Type	Lithium-ion Polymer Battery
Battery Capacity	900mAh
Input	9V=2A , 6V=3A
Wireless Charging Output	5W

CONTAINS

JARVIS ONE × 1, Quick Start Guide × 1, USB-C Cable × 1

PRECAUTIONS AND SUGGESTIONS

1. Keep the USB-C Cable out of the reach of children.
2. Prevent splashes of water or rain, and do not use the device in the shower, while swimming, or in a sauna.
3. Avoid intense vibrations or impacts.
4. Avoid using in environments with extreme temperatures or sudden temperature changes.
5. There are no user-serviceable parts in this device; contact a professional for repairs.
6. The radio equipment and magnetic devices contained in this product may interfere with pacemakers and other implanted medical devices. Users with such devices should keep this product at a safe distance to avoid interference.
7. This product contains a lithium-ion battery, which can cause personal injury if damaged. Do not replace the battery yourself; it should be recycled in accordance with local environmental laws and regulations.
8. This product can wirelessly charge other devices. The power supply function is enabled only when the product is connected to a charger via a USB-C cable. Refer to www.matter.ai/pages/support for detailed instructions.
9. This product supports recording. To ensure the best quality, do not place the product upside down on soft surfaces, such as a sofa, as this may affect the recording.

REGULATORY INFORMATION

To view the regulatory information on your J1 by MATTER, tap:
setting - legal information - regulatory information.

EU Declaration of Conformity

The following information is applicable to the device that carry a CE mark. Contact point: MATTER INNOVATION PTE. LTD., 1 KIM SENG PROMENADE, #17-04, GREAT WORLD CITY, SINGAPORE.

Hereby, MATTER INNOVATION PTE. LTD. declares that the radio equipment type G001 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
www.matter-innovation.ai/pages/legal.



UK Declaration of Conformity

Hereby, MATTER INNOVATION PTE. LTD. declares that the radio equipment type G001 is in compliance with Directive (SI 2017 No. 1206) and The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

The full text of the UK declaration of conformity is available at the following internet address:
www.matter-innovation.ai/pages/legal.



RF Exposure Information

The device complies with RF specifications when used at a distance of 5mm from your body.

The device operates at specific frequency band and power specifications. The information and limits are available at the following internet address:
www.matter-innovation.ai/pages/legal.

Restrictions in the Frequency Band

The 5150 to 5350 MHz frequency range is restricted to indoor use only in: AT, BE, BG, CH, CY, CZ, DE, DK, EE, EL, ES, FI, FR, HR, HU, IE, IS, IT, LI, LT, LU, LV, MT, NL, NO, PL, PT, RO, SE, SI, SK, TR, UK.

FCC Regulatory Conformance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

The full text of the FCC regulatory conformance is available at the following internet address:
www.matter-innovation.ai/pages/legal.

FCC ID: 2BGOW-G001



This marking on the product, accessories or literature and without the bar on batteries indicates that the product, battery and its electronic accessories (e.g. charger, headset, USB-C cable) should not be disposed of with other household waste.



Exposure to loud noise from any source for extended periods of time may damage your hearing. The louder the sound, the less time is required before your hearing could be damaged.

AFTER-SALES SERVICE POLICY

The full terms of our one year Limited Warranty and detailed information on obtaining service are available at www.matter.ai/pages/support.

We do not offer international warranty service. Our warranty service is only available in the country/region where the Product was purchased.

Limited Warranty

Your JARVIS ONE ("Product") is warranted against defects in functional failure or quality problem for a period of one (1) year from the date of original retail purchase ("Warranty Period") when used in accordance with the guidelines provided at www.matter.ai/pages/support.

If you do not agree with these terms, please do not use the Product and return it within the Return Period specified in the Return Policy. The use of your Product indicates your acceptance of being bound by these terms.

QUICK START GUIDE