



User's Guide



Swimming in happiness starts here.

In a few moments, Flipr AnalysR will be swimming in your pool or spa. We're delighted to count you among our users.

At Flipr, we believe that pool maintenance should be as simple as possible. We're working hard to pursue this ambition. Flipr AnalysR is the first step towards this dream. We hope you enjoy it as much as we enjoyed designing it.

We've written this manual to help you discover the main features of Flipr AnalysR and understand how it works.

We are looking forward
swimming with you

Flipr



PS: If you have any questions, please don't hesitate to contact our support team: we'll do our best to get back to you as soon as possible.

Contents

- 4 **User Guide:** Box Contents / Getting Started with Flipr AnalysR
- 8 **What You Need to Know About Your Flipr AnalysR:** Probe Notes / Storing the Flipr AnalysR
- 10 **The app iOS Android : Dashboard Flipr AnalysR**
- 12 **Features to discover with Flipr AnalysR**
- 14 **How to Properly Use Your Flipr AnalysR Analyzer**
- 15 **Questions about how Flipr AnalysR works**
- 16 **FCC Statement and how to contact us**

User's Guide

Box contents.

1 - Flipr AnalysR





2 - Protective cap

3 - 2x pH buffer bottles

4 - 1 Testing strip

5 - Wifi Gateway

6 - Flipr case (to be kept for device storage)

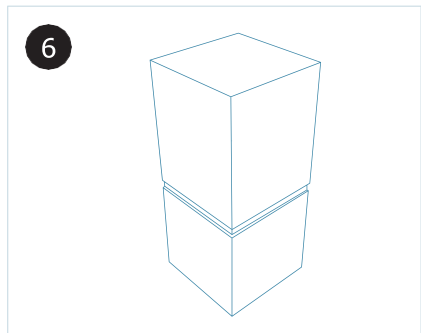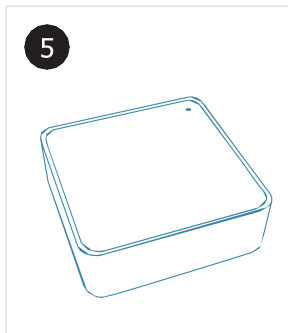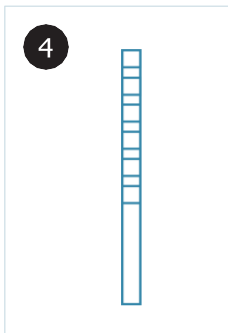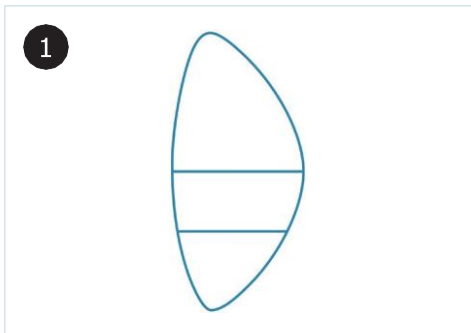

FLIPR ANALYSR START-UP

Flipr AnalysR takes just a few minutes to install. Before you start, make sure that Bluetooth is activated on your phone AND that your phone is correctly connected to the cellular network or Wi-Fi. Also check that geolocation is enabled on your smartphone. You'll need to stay close to the device and the pool throughout the installation phase.

1 Setting up Flipr AnalysR

First thing to do: download the application from the Apple AppStore or Google PlayStore. Create a user account, and let yourself be guided: everything is mentioned in the application.

There's no need to set up the Bluetooth connection: it's done automatically, when the device is configured.



- i** After creating your account, the application will ask you to create your pool or Spa profile. Click on "Add Place" and follow the instructions.

2 Add equipment


Now follow the instructions to configure your device. Make sure your phone's Bluetooth is activated, then click on the "AnalysR" button. Follow the application's instructions. The Wifi Gateway requires a 2.4 GHz Wifi.

3 Probe Calibration

This ensures reliable measurements. In some cases, the application may skip this step, in whole or in part. In this case, the device will judge that calibration is not necessary, and that it should be carried out at a later date (the application will alert you).


Calibration takes place in 2 stages. Follow the instructions below, **ONLY** when prompted by the application:

1




1. Unscrew the lower part of the unit. **ATTENTION:** a liquid(1) is present inside the cover. This liquid is used to transport and store the probes. This liquid can be disposed of.

2

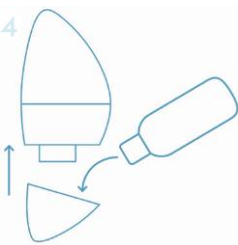

2. Pour the bottle (2) into the cover as indicated by the application.

3

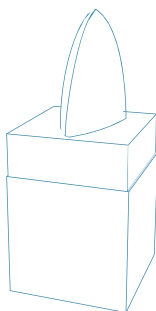

3. Screw the cover back on, position the device vertically, then click on the "Initialize" button in the application.

Suite - Calibrage des sondes

4. Once you've completed the first step, unscrew the bottom part and store the liquid in a clean container. When prompted by the application, do the same with the second bottle.

5. When the calibration operation is complete, you can discard the 2 liquids.



4 Using the test strip

When prompted by the application, perform the strip test, holding the strip so that the colors face upwards.

5 Further configuration and launch

The application will then prompt you to continue with the setup. Follow the on-screen instructions carefully. Place Flipr AnalysR in water ONLY when prompted.

6 To connect Flipr AnalysR

Last step: we now invite you to configure the remote connection using the Wifi connection box. Follow the on-screen instructions.


(1) Preservative KCL2M (potassium chloride).

(2) Liquids are pH4 and pH7 calibration solutions.

DO NOT INGEST If swallowed, contact a doctor or Poison Control Center immediately.

En cas d'ingestion, veuillez contacter rapidement un médecin et lui présenter la notice.

What you need to know about your Flipr AnalysR

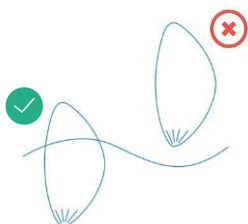

✔ Flipr AnalysR must remain in the water

Away from water, the probes dry out and deteriorate very quickly, rendering the device unusable.




✔ Flipr AnalysR must not be kept in water that is too cold or too warm. *

It is imperative to remove the unit from your pool if the water temperature is below 5°C or above 50°C. In this case, store your unit according to our recommendations.



✔ Regular calibration

To extend sensor life, we recommend calibrating the device once a year at the start of the season (twice a year if you use your pool for more than 6 months of the year).

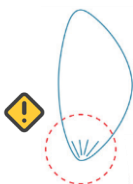

✔ Beware of shocks *

Flipr AnalysR is a robust device designed to swim alongside you. However, beware of violent blows that could damage the probes.



✔ Do not disassemble *

Any technical intervention on the device must be approved by technical support. Any technical intervention without the approval of technical support will result in a breach of warranty.

*Le non respect de ces recommandations peut entraîner une suspension de la garantie.




NOTES ON PROBES

Flipr AnalysR is a measuring device that uses Redox, pH and temperature probes. These probes are not suitable for certain uses, such as water analysis not recommended by Flipr, nor for pools affected by leakage current. When used correctly, the device is guaranteed for a tolerance threshold of $\pm 1.5^\circ$, ± 0.2 pH, ± 100 mv RX. Below this threshold, the warranty is void.

committed. As a user, we invite you to read the warranty leaflet included in the device packaging (usually under the cushioning). We would also like to draw your attention to the fact that over-concentration of stabilizer in a pond can interfere with the redox reading, and thus distort the information provided by the device. You should also be aware that over-concentration of stabilizer can impair the effectiveness of chlorine in the water.

FLIPR STORAGE

You may need to take Flipr out of the water during winter or on your pool or during a cold spell. In this case, follow the instructions below:

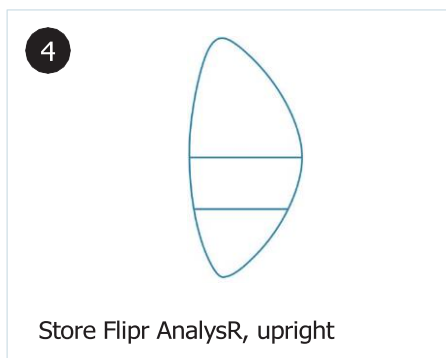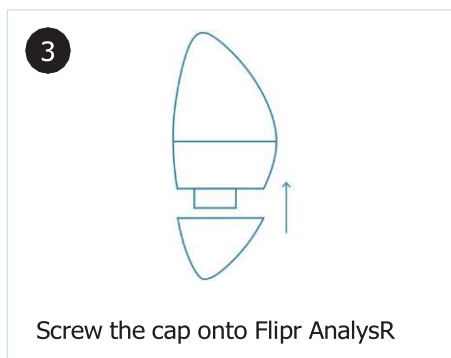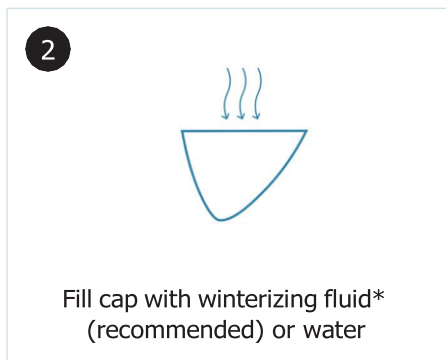

*Refills available at www.goflpr.com



Dashboard Flipr AnalysR

This is the applications home screen. It lets you monitor the status of your pool at a glance.



ALERT MEANINGS AND QUICK INFO SLIDER DETAILS



Risk of ice formation



TAC, hardness or stabilizer



Flipr out of the water



Winterization recommended



High water temperature



Pool restart recommended



Algae / Green water risks



Hub / ControlR state



Température de l'eau sur les 7 derniers jours

24° → 24° ↗ 25° ↗ 27° ↗ 28° → 28° ↗ 29°
24/08 25/08 26/08 27/08 28/08 29/08 30/08

Temperature trend

Probabilité dans les 5h
20%



Lun Mar Mer Jeu
25-30° 26-30° 23-28° 22-28°

Weather forecast

Taux de Redox sur les 7 derniers jours

2.3 → 2.3 ↗ 1.5 ↗ 0.5 → 0.5 ↗ 0.7 ↗ 1.4
24/08 25/08 26/08 27/08 28/08 29/08 30/08

Redox evolution

Taux de pH sur les 7 derniers jours

7.2 ↗ 5.8 ↗ 6.4 ↗ 7.1 → 7.3 ↗ 8.4 ↗ 7.2
24/08 25/08 26/08 27/08 28/08 29/08 30/08

Evolution of pH levels

♥ Tout est parfait, bravo !

No action required

👁 Vigilance en cours

Flipr AnalysR is monitoring the situation and may alert you soon.

⚠ Alerte en cours : suivez nos conseils

Flipr AnalysR asks you to act

👍 Correction de l'eau en cours

Following your action, Flipr AnalysR is waiting to see how the situation develops.

🕒 Mesure ancienne [En savoir plus](#)

Flipr AnalysR has not received any measurements recently. Follow the instructions on the screen

Features to discover



FLIPR PREDICT

Track variations in water temperature, pH and redox over the last 30 days.




MAINTENANCE LOG

A true historical record, the maintenance log contains all the alerts received and allows you to indicate all the events affecting your pool.






Flipr ControlR Dashboard

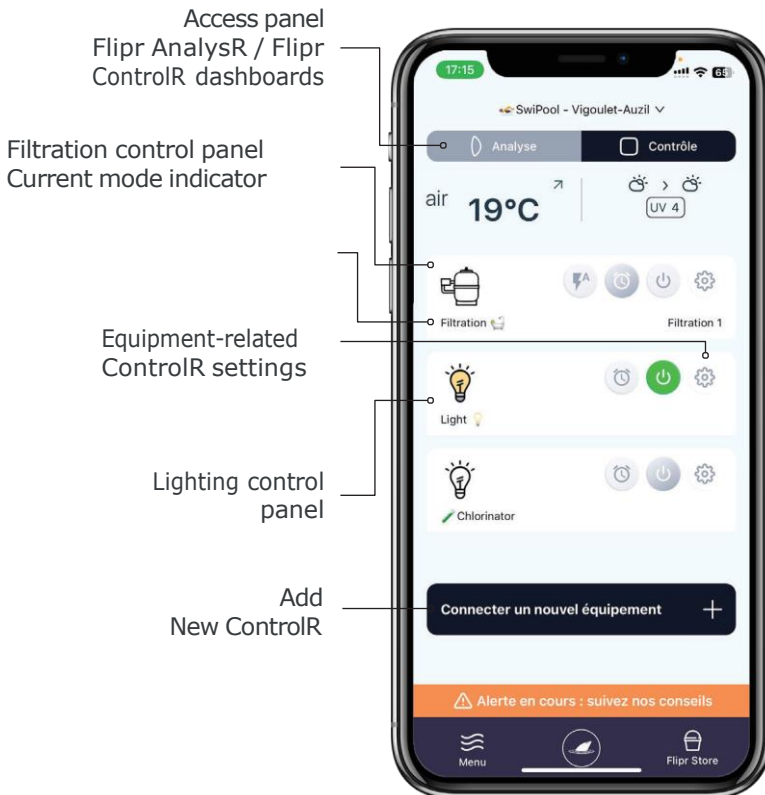


Connect Flipr ControlR to Flipr AnalysR and enjoy enhanced functionalities on the dedicated dashboard.



Signification des modes

-  Manual Mode (ON/OFF)
-  Planning Mode
-  SmartControl Mode

Indicator status :

-  Not activated
-  Activated and not running
-  Activated and running



Find out more by scanning the QR code!

How to use Flipr AnalysR?

Flipr AnalysR is very simple to use: just leave it in the water. In the event of poor analyses, the application will alert you and tell you what to do. Here are the main questions about using Flipr AnalysR.



1 **I've just put Flipr AnalysR in water, and the measurements seem to be wrong!**

Don't panic! Flipr AnalysR needs a few hours in your pond to display correct measurements. If you still don't see the correct readings 12 hours after launching, please contact our customer support team.

2 **The Flipr app shows me alerts, but I don't have the dosages displayed!**

Flipr AnalysR needs to know which products you're using to give you the right dosages. To do this, go to Menu / Pool House / Products, and register the products you use by scanning the barcode on your maintenance product packaging.

3 **pH or disinfectant is wrong, but the Flipr app doesn't alert me!**

Flipr AnalysR takes measurements several times a day. Water quality alerts, on the other hand, are sent a maximum of 2 times a day, in the morning and/or evening, and only if the condition of the water requires it. So keep in mind that Flipr AnalysR will only alert you if the water has a defect AND only if it's necessary.

For example, you may have a high pH level, or a low chlorine level, without the Flipr application triggering any alerts or advice.

This is normal: the application either considers that these poor values are temporary and do not reflect the quality of the water, or that they can resolve themselves naturally.

4 **I'm noticing measurement differences between Flipr AnalysR and another analysis system**

Flipr AnalysR uses probes made by one of the world's leading manufacturers. These probes are renowned for their quality and are regularly used in public swimming pools. They are therefore particularly reliable.

If you observe any discrepancies, please ensure that the other control method complies with the following points:

- ✓ Measurement times are exactly the same with Flipr AnalysR.
- ✓ The measurement location is exactly the same as with Flipr AnalysR.
- ✓ Your other probe was recalibrated less than 6 months ago OR the expiration date of your analysis kit has not been reached.

If the difference observed concerns chlorine, Flipr AnalysR measures active chlorine. Make sure that the other measurement tool is analyzing the same parameter. You can find more information on this subject on our website and from our teams.

Any other questions?
Check out our frequently asked questions about using Flipr AnalysR by scanning the QR code!



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.



How to contact us ?



Flashez ce QR Code



Have a question or concern?

**Access all our solutions, FAQs,
and user manuals.**



Flashez ce QR Code

Can't find your answer?
Want to share feedback?

Contact our team.