

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Massage Chair

Operation Manual

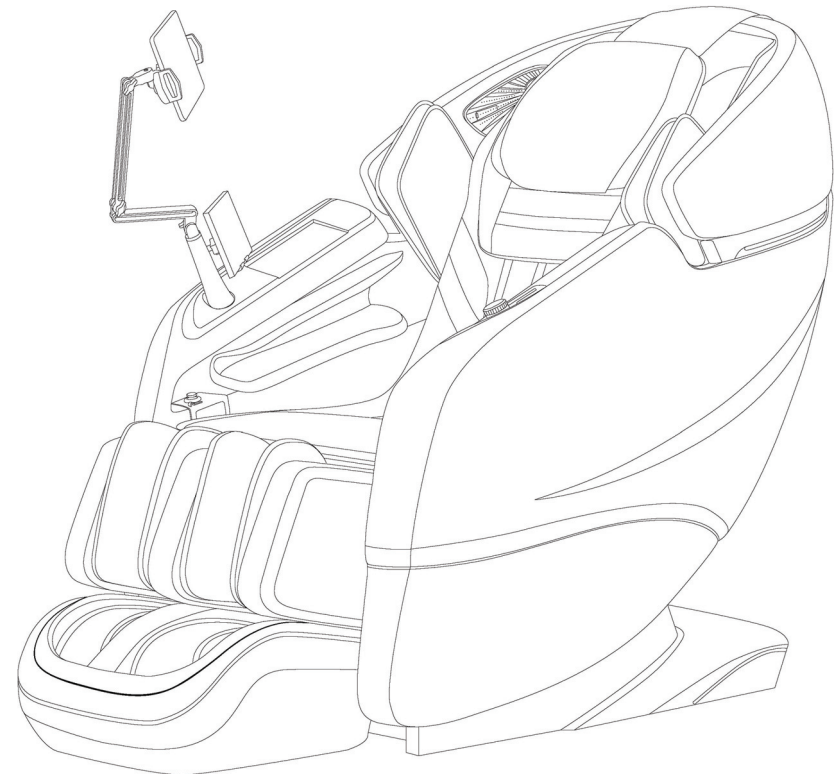

Product warranty card

Dear users:

Thank you for using our products. We will provide you with the following services with this warranty card in accordance with the relevant provisions of the consumer protection law:

1. During the warranty period, if the fault is caused by the quality problem of the product itself, please bring the filled warranty card to the repair center authorized by our company.
2. Once the warranty card is altered, the warranty will be invalid immediately.
3. Keep the warranty card as the warranty certificate of this machine. Please keep it properly.

Maintenance service guarantee

Please contact our customer service center if there is any problem with this product.

This product is guaranteed for one year.

One of the following conditions is not covered by the warranty:

1. Damage caused by improper use, storage and maintenance of consumers.
2. Damage caused by assembling, disassembling and repairing by the company's designated maintenance department.
3. Damage caused by force majeure.
4. Leather cover, manual controller and consumable accessories are not covered by the warranty.
5. Our company is not responsible for the quality accident caused by using our non-standard gifts.
6. This product is used for non home use and will not be covered by warranty.
7. Failure caused by human or improper use is not covered by warranty.
8. The machine failure caused by the parts that do not conform to the product parameters purchased without permission is not within the scope of warranty, and the accidents caused are not within the scope of our company's responsibility.
9. For products not covered by warranty, our customer service center will still serve you warmly.

This volume has been carefully checked, but it does not exclude possible printing errors or misunderstandings. We reserve the right of interpretation, please understand.

User warranty certificate

(saved by the user and presented to the maintenance site during maintenance)

Product name:
m o d e l :
Place of Origin:
Warranty period:
Purchase date:

Maintenance records:

Date of repair:	
Failure, maintenance and treatment:	
Maintenance unit:	Signature of maintenance personnel:

catalog

One、catalog	1
Two、Safety precautions	2
1、Usage environment	2
2、Not suitable for use	2
3、Moving method of massage chair	3
4、Placement of massage chair	3
5、Power on	4
Three、Introduction of control panel function	5
Four、Daily maintenance	11
Five、technical parameter	11

Warm tips: our company reserves the right to improve the products and instructions. We are subject to change without notice. The appearance of the products shall be subject to the actual products. If there is any difference between the products and the real products due to product upgrading or other reasons, please refer to the real products

Two、Safety precautions

1、Use environment

- (1) Do not use or keep this machine in particularly humid environments such as bathrooms, saunas, hot springs, etc, to avoid mold, electric shock, fire or mechanical failure.
- (2) Do not use in an environment where the room temperature is above 40 degrees Celsius.
- (3) Do not use this machine outdoors.
- (4) Do not place the machine in an environment with too much dust, oil, or lack of oxygen.
- (5) Do not place the machine in a hot air stove, stove or a place exposed to direct sunlight. This will cause the parts in the massage chair to overheat and cause fire.
- (6) Do not use this machine on uneven places. Please place the bracket on a level place such as the floor.
- (7) To prevent electric shock, please confirm whether the socket is grounded. Please consult the sales store when installing the ground wire in the socket.
- (8) Do not use when smoking.
- (9) When the airbag is inflated, do not pull out the limbs such as arms and legs, which will cause the airbag to fall off and need to return by itself.
- (10) Do not step on the sole rollers or airbags, please pay attention to getting in and out of the massage chair! If it falls off, you need to fix it back.



2、Those who are not suitable to use this appliance

The following people please consult a doctor before using (may cause physical discomfort or even accidents and cause danger)

- (1) Patients with malignant tumors or malignant tumors.
- (2) Patients with severe heart disease.
- (3) Patients with severe skin diseases.
- (4) Patients with severe bone hyperplasia.
- (5) Those who are pregnant.
- (6) Being recuperating under the instructions of a doctor, especially those who feel abnormalities in their body.
- (7) Those who have abnormal spine or curved back due to accident or disease.
- (8) Those who need silence.
- (9) Those with joint deformities.
- (10) Those with medical devices such as pacemakers.
- (11) Those with acute symptoms such as visceral diseases (such as gastritis, enteritis, dysentery, hepatitis, etc).
- (12) Those with severe blood circulation disorders in the legs.
- (13) People with sensory impairments, the surface of the hot air piece becomes hot, and people who are not sensitive to heat must be careful when using it.
- (14) Those with high fever symptoms.
- (15) This product is not recommended to be used by people (including children) who are physically impaired, sensory or mentally impaired, or lack relevant experience and knowledge, unless someone responsible for their safety supervises and guides their use of this product.
- (16) Children should be taken care of and ensure that they do not play with this product.
- (17) If the power cord is damaged, it must be replaced with a special cord or special component obtained from the manufacturer or its maintenance department.



WARNING

Don't let people under 18 years old and those who can't control their behavior (such as: mental patients, mentally retarded people, paralyzed patients, etc) are alone Operate massage chair or touch all parts of massage chair. It's possible Causing electric shock or injury to users or machine failure.

Shortcut key operation instructions

On/Off key: press and hold for 3 seconds to turn on/off, turn left and right to recline the body angle of the chair

Zero Gravity Key: Press this key to turn on or off zero gravity mode

Heating button: turn on or off the heating massage

Up key: press this key to control the upper back massage of the movement

Down key: Press this key to control the movement's lower back massage

Health detection: Touch your finger for 1 minute to detect blood oxygen, heart rate, blood pressure, microcirculation, and the value will be displayed in the lower left corner of the LCD screen

Four、daily maintenance

- (1) The massage chair should be kept clean and dust-free at all times and placed in a non-damp place.
- (2) If you will not use it for a long time, please cover it with a cloth.
- (3) Do not place the massage chair in the sun or in a place with high temperature, which will cause the leather of the massage chair to fade and accelerate aging.
- (4) To clean the massage chair, please turn off the main power switch and pull out the power plug.
- (5) Do not use detergents containing organic solvents, such as benzene, to clean the massage chair, otherwise it will cause the leather to discolor, age, or crack.
- (6) If the power cord is damaged, it must be replaced with a special cord or special components purchased from its manufacturer or maintenance department.

Five、Technical parameters

Product name: Luxury massage chair

Rated voltage: 110V-240V

Rated frequency: 50/60Hz


Rated power: 120W

Rated working time: 15-30min


Executive standard: GB4706.10-2008

GB4706.1-2005

Product safety design: I

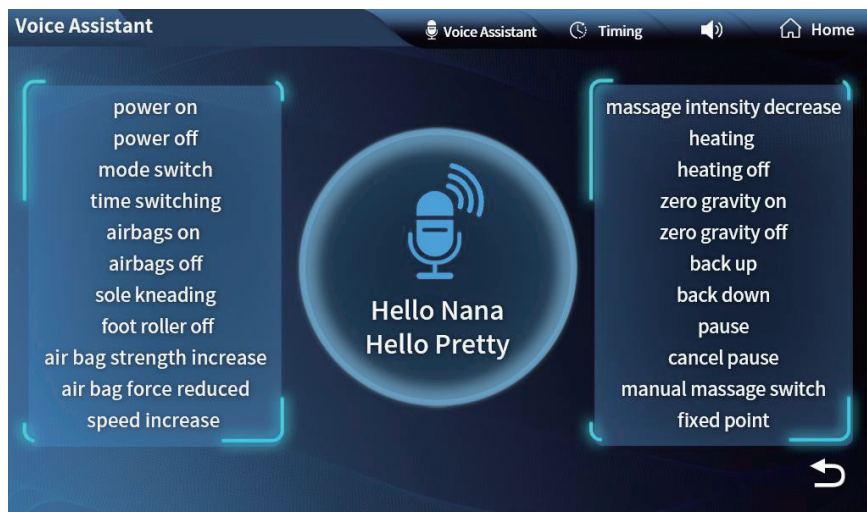

Voice assistant: You can call the wake-up words "Hello Nana ", "Hello Pretty", and then call the command words in the left and right columns of the screen to control the massage accordingly chair function.

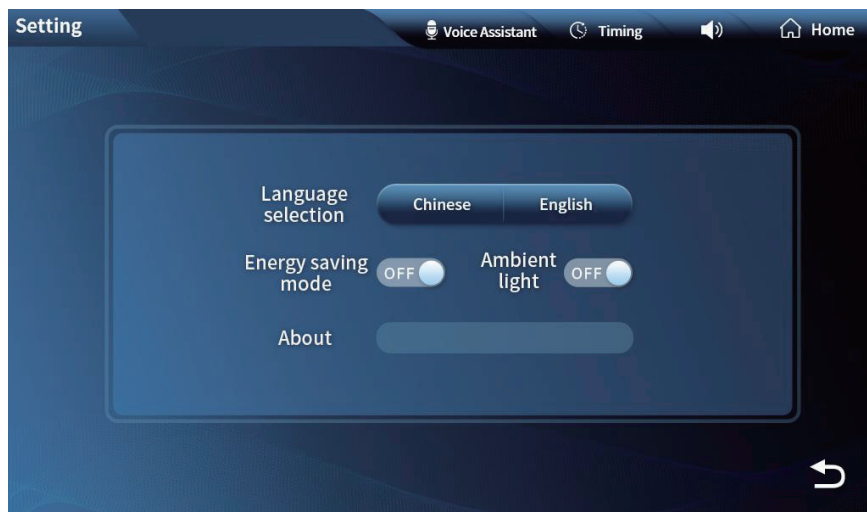

Voice selection: switchable manual interface language (Chinese, Vietnamese)

Energy saving mode: Can adjust the brightness of the screen.

Ambient light button: Can control the massage chair ambient light on/off.

3. Moving method of massage chair

When moving, lift the armrest on both sides and move it.

be careful! Don't move people.
Don't use small pulleys to move
on easily damaged floors.

4. Placement of massage chair

Please leave space around the massage chair when you are preparing for massage



- (1) There should be enough space for the massage chair to lie on the back and lift the foot rest.
- (2) Make sure there is at least 80 cm in the back and 50 cm in front of the chair.
- (3) Make sure there are no obstacles in front of and behind the massage chair.
- (4) In order to prevent the ground from being damaged, please place a carpet under the massage chair to avoid damaging the floor.

5.Power on

Insert the plug into the power socket and turn on the power switch.


! be careful

- ①.Please check whether the power cord is pressed under the massage chair.
- ②.Whether the ground wire is well connected.
- ③.Before inserting the plug, make sure that all operation buttons (including the main power switch) are turned off.

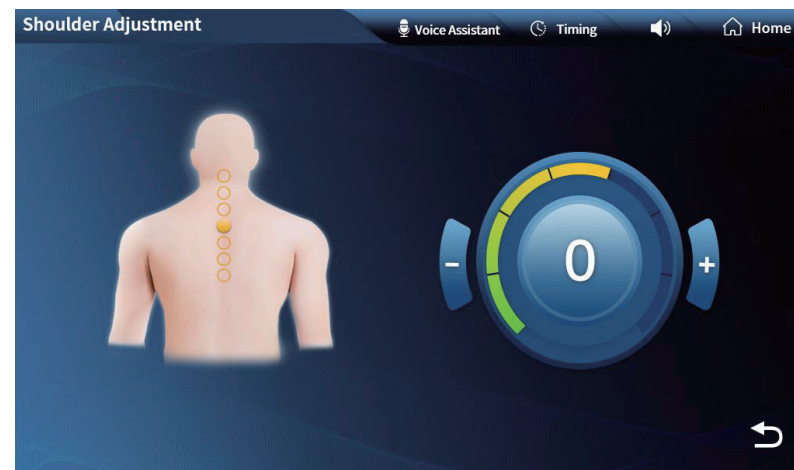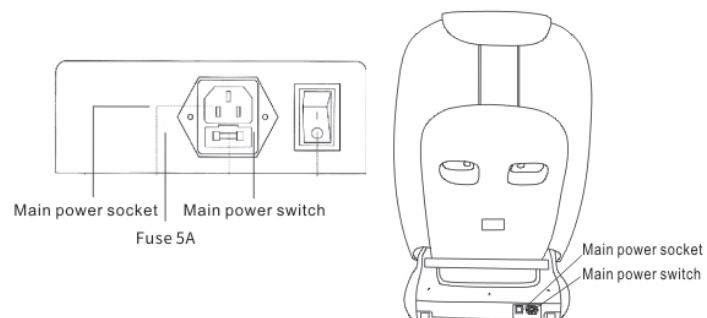


Shoulder adjustment +: In the automatic mode , the shoulder massage position is too low. Can press the "Shoulder adjustment +" button to upper the shoulder position. The adjustable range is from 1-3 levels.


Shoulder adjustment -: In the automatic mode , the shoulder massage position is high, Can press the "Shoulder adjustment -" button to lower the shoulder position, The adjustable range is from 1-3 levels.

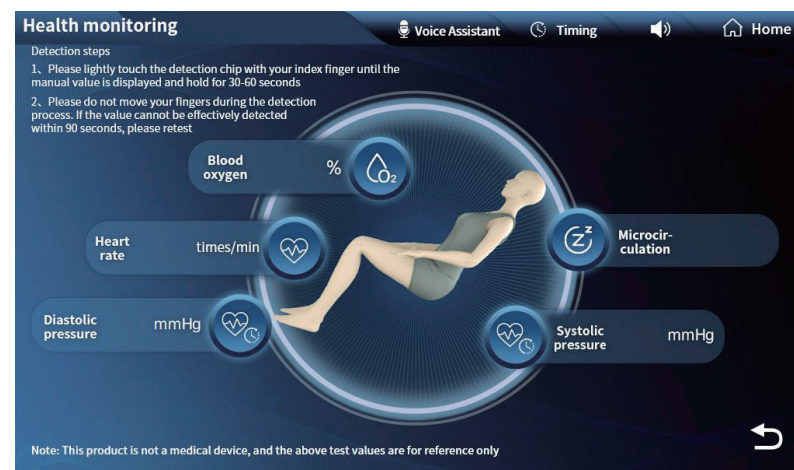

Health monitoring: Blood oxygen, heart rate, diastolic blood pressure, systolic pressure, and microcirculation datas are detected by putting finger slightly on the massage chair health detection sensor. (This product is not a medical device, and the above detection datas are for reference only)

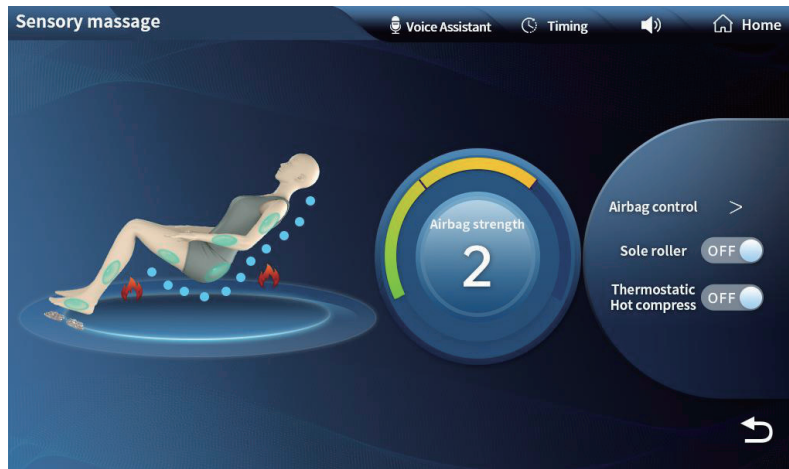



Air bag control button: can adjust the air bag massage of the whole body
 Airbag strength button; can adjust the massage pressure of all airbags (first, second and third levels)
 Sole roller button: can control the foot massage roller to turn on/off
 Thermostatic hot compress button: can control the heating massage part on/off

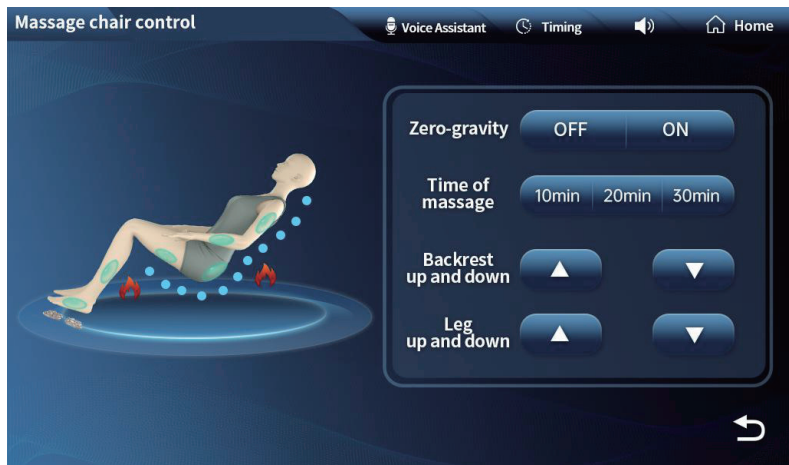

Zero gravity button: can control the massage chair to lie down to zero gravity status/power on status
 Time of massage button: Can choose the massage time (10 minutes, 20 minutes, 30 minutes)
 Backrest up and down button: Backrest up button (click the backrest to raise and then click the backrest to stop), backrest down button (click the backrest to go down and then click the backrest to stop)
 Leg up and down button: leg up massage button (click the leg massage to rise and then click the leg massage to stop), leg down massage button (click the leg massage to go down and then click the leg massage to stop)


Three、Brief introduction of control panel function

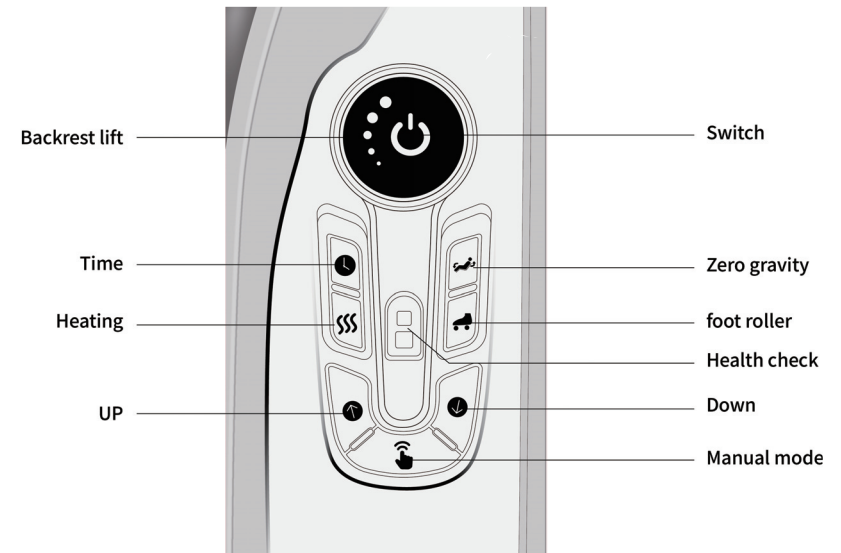

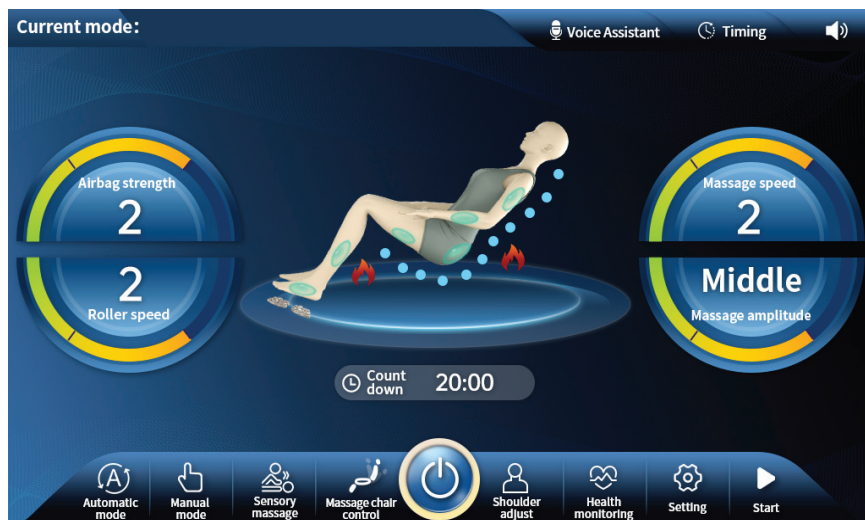


Press the button to turn on/off the massage function.

When the power is on, press this button and the massage chair will lie down to the initial angle and automatically do body detection. After body detection, it will run by default mode (president health). The default working time is 20 minutes.

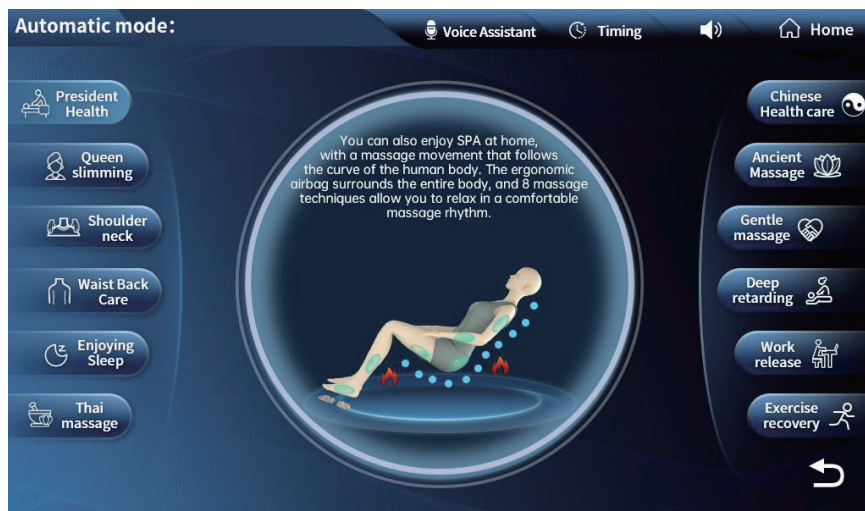

Automatic mode button: Base on your physical condition and massage time, you can choose any of the 12 massage modes to massage: "President Health", "Queen's Slimming", "Shoulder Neck", "Waist Back Care", "Enjoying Sleep", "Thai Massage", "Chinese Health care", "Ancient Massage", "Gentle Massage", "Deep retarding", "Work rrelease" and "Exercise recovery".

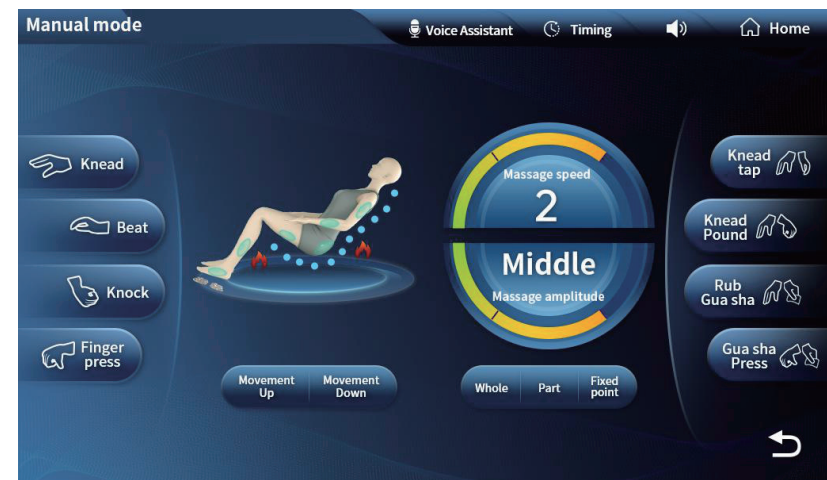

Manual massage button: According to your physical condition, you can choose different massage methods "knead", "beat", "knock", "finger press", "knead tap", "knead pound", "rub gua sha", and "guasha press"

Massage speed button: In manual massage mode, the massage speed can be adjusted (low, middle, high)

Massage amplitude button: In manual massage mode, under modes (beat, knock, finger press, gua sha press), the massage amplitude can be adjusted between (wide, medium, narrow)

Whole & part button: In manual massage mode, fixed-point, part and whole massage can be adjusted.

Movement up button: In manual mode, fix massage, long press the movement up button to control the massage movement to move upward.

Movement down button: In manual mode fix massage, long press the movement down button to control the massage movement to move downwards.