


Eye massager

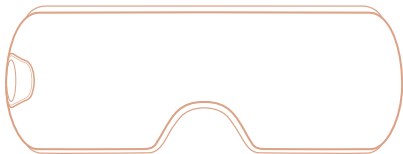

>>>>> **Product description**

Product Highlights



3D visualisation with
eye contour grooves



Multi-zone massage
Double layered
structure + 8 zone
airbag massage



Thermostatic compress
Relieve eye fatigue



Built-in music
Bluetooth connects
to a mobile phone
to play music




Voice instructions+ one
button operation
Easy control
Voice instructions



Foldable body for
on-the-go use
Easy to store Folding

Product construction

Thank you for using our products. Before use, please read the manual carefully to make sure that the machine, charging cable and other accessories are complete and undamaged. If there is any damage, please contact us immediately. Please fully charge the device before using it for the first time

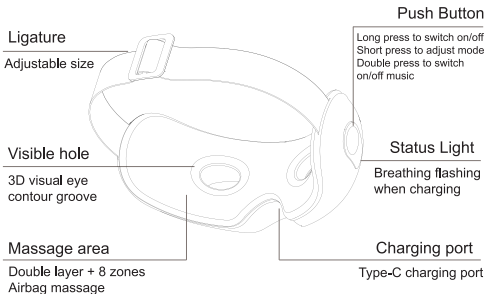

Type-C charging cable

How to use

When wearing the product, please remove the contact lens hairpin etc. to avoid discomfort during the massage. After putting it on, adjust the elastic band to a comfortable position and then move the device up and down to align the eye with the visible hole on the back of the product; please put the product on your eyes before turning it on to avoid overpressure of the airbag.

Switching on/off

- Press and hold the button for 2 seconds to switch on the main unit, and turn on the default vibrant mode
- Press and hold the button for 2 seconds to switch off.

Mode Switching.

- Short press the button for 1 second to switch modes;
- press [Vitality mode/Relaxation mode/Sleep mode] to switch in sequence.

Music

- Double click the button to turn off/on the built-in relaxation music;
- Turn on your mobile phone Bluetooth and search for [Eye Massager] to connect to the product and play music from your mobile phone.

Smart reminder

- Power outage reminder
When the remaining power is about 10 minutes, the status light will flash continuously to remind you to recharge; at the same time, the battery will be automatically switched off when the battery is exhausted.
- Charging reminder
When charging, the status light is flashing, the button function is invalid and the machine is not available; when fully charged, the status light is always on.
- Automatic switch-off
Automatic switch-off after 15 minutes by default after switching on.

Points to note

- Children or people with disabilities should only use the device under special supervision; If you experience any physical abnormalities during use, please stop using the device immediately and consult a doctor.
- Do not use if the device, charger or charging cable is damaged;
- Make sure that the charger and the charging socket of the product are dry before charging;
- Do not charge the product or the charger if it is likely to be submerged in water.
- Do not use this device in conjunction with other therapeutic devices.
- It is recommended that you use the product for 15 minutes at a time;
- Do not use if you have eye problems, or if you have had eye surgery, glaucoma, cataract, retinal detachment or other major eye diseases.
- Do not use if you have injuries around the eyes or if you need to rest quietly.
- The appliance has a heat-generating surface, so people who are not sensitive to heat must be careful when using it.
- Do not damage, break, excessively bend, pull, twist, or knot the power cord. If the power cord of the charger is broken, do not dismantle it and replace it yourself, but contact your dealer or a qualified professional for replacement and repair.

Safety Note

Attention: This device is designed for private use, not intended for medical or commercial purpose. Children should be supervised to ensure that they do not use this device as a toy.

1, Suggest to Adjust elastic suitable and Sitleaning against the sofa or chair when using. That will be more comfortable to use.

2, Please cleaning surface of this device with wet towel or Cotton ball with 75% medical alcohol.

3, Do not put this device close fire, corrosive liquid and other adverse environments.

Product Specifications

Name: Eye Massager

Input: DC5V/1A

Rated Power: 5W

Battery : Built-in Li-ion battery
3.7V 1200MAH

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.