




USER MANUAL

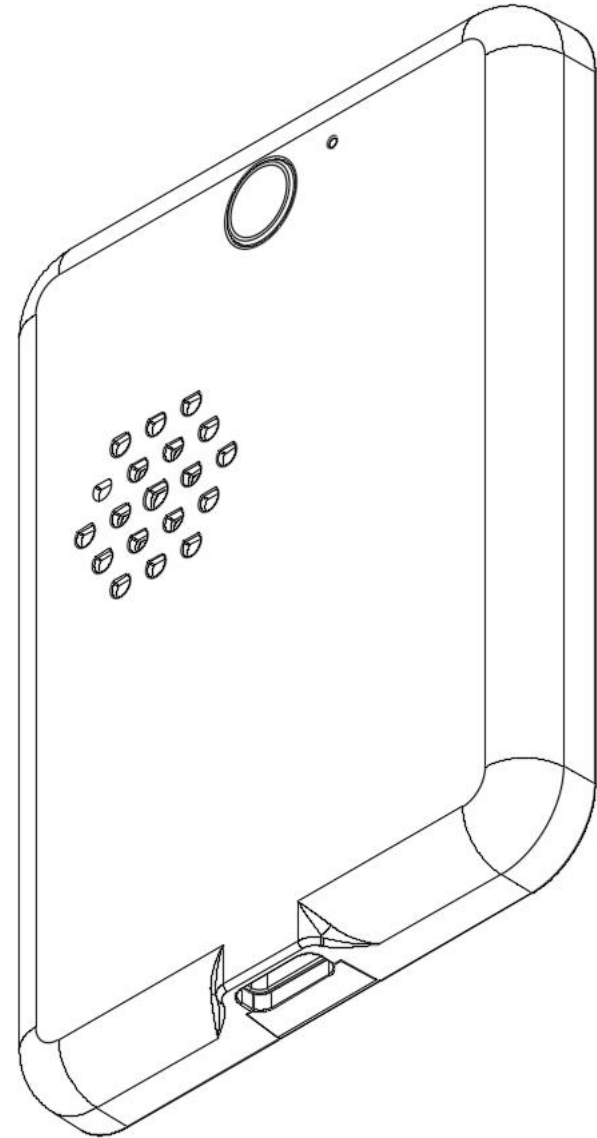

Hi. Thank you for purchasing the SAFEE. Please read this user manual carefully. If you need any assistance, please contact our support team with your order number.

READ AND SAVE THESE INSTRUCTIONS

1. When servicing or replacement of a component in an appliance requires the removal or disconnection of a safety device, the safety device is to be reinstalled or renounced as previously installed.
2. Do not immerse air purifier in water or liquids, as it may result in damage to the appliance.

SPECIFICATION

Brand	SAFEE
Product dimensions (L x W x H)	83,8 x 57,7 x 7,2mm
Item weight	40-50 g
Color	White
Material	ABS
Noise level	105 dB (Maximum)
Power source	Rechargeable Li-ion Battery 370 mAh / 3.7V
Lifetime	1 month (depending on use)

Total Charging Time	90 min
Compatibility	IOS ; Android
Connectivity	Bluetooth 5 (LE)
Warranty	2-year warranty
Certifications	CE ; RoHS ; MSDS ; UN38.3 ; IEC62133 ; FCC ; TSCA ; CA65 ; IC ; RCM ; IEC



PACKAGE CONTENTS

- 1x Safee
- 1x USB C cable
- 1x Magsafe Magnet Sticker
- 1x Warranty Card

SAFETY INSTRUCTIONS

01. DO NOT immerse air purifier in water or liquids, as it may result in damage to the appliance.
02. DO NOT clean the appliance with water or any other liquid.
03. DO NOT plug the appliance if the plug, the power cord, the power adapter or the appliance itself is damaged.
04. Avoid hitting the Safee with hard objects.
05. This appliance should only be used in environments with temperatures between 14°F and 140°F (-10°C and 40°C).
06. DO NOT attempt to repair this device in any way or use any replacement components or parts to modify the Safee. Doing so will void your warranty. Contact customer service immediately if your appliance is no longer working.

PRODUCT INTRODUCTION

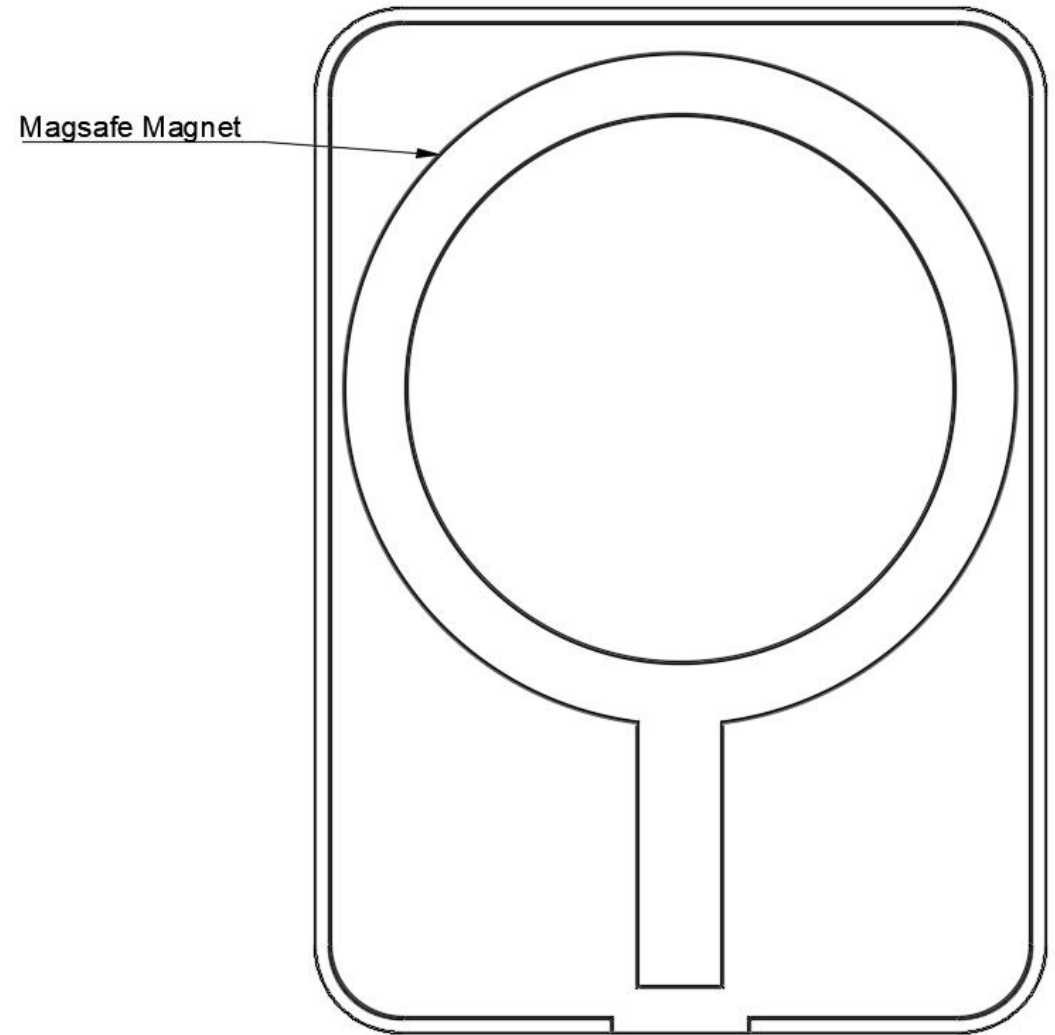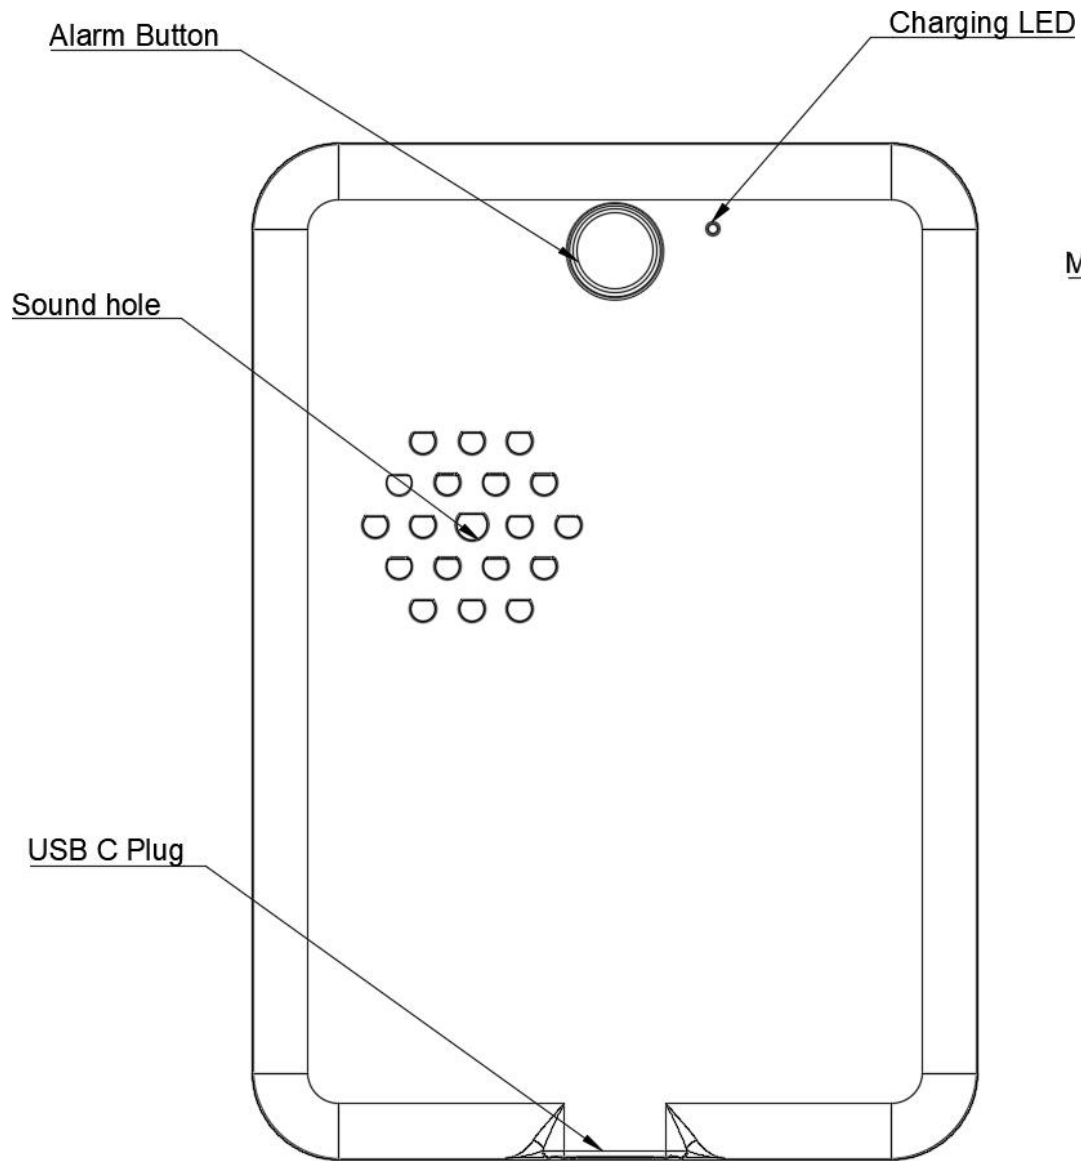

PRE-OPERATING INSTRUCTIONS

- **Safee magnetic mounting**

- Safee magnetically attaches to supported models (iPhone 12 models or later)
- For any other model, use the Magsafe Magnet Sticker included with Safee and attach it to the center of the back of your phone.
- Attach Safee to the back of your phone. Safee can also be used without being attached to the phone at an acceptable distance for a Bluetooth connection.

- **Safee mobile application installing**

- Make sure your Safee is charged.
- Download the Safee app onto your phone from the App Store or Google Play.
- Open the app and create an account by following the on-screen instructions.
- For Safee to work properly, you must accept access requests.

- **Bluetooth pairing**

- Open the app
- Make sure your phone's Bluetooth is activated.
- Switch on your Safee by pressing the button on the module once.
- Accept the pairing request with your Safee. (If it doesn't appear: press for at least 10s).
- From now on, Safee will automatically connect to your phone.

OPERATION

Alarm On/Off Button:

- Use this button to turn on or turn off the Safee alarm;
- **To turn on the alarm, press the button at least 3 times in succession (default value).**
- After the turned on, the buzzer sounds and an emergency notification is sent to your emergencies contacts registered;
- To start the recording and transmit your position and video stream, press the Safee notification that appears on your phone's screen. For greater responsiveness, use your phone's facial recognition unlock feature. (This works if your Safee is correctly configured, your Bluetooth is activated, and the Safee app is running in the background)
- **Press and hold this button for 3 seconds (default value) to shut down.**
- To stop the buzzer and the live stream press the stop button on your phone's display.
- To save the recording on your phone press the save button on your phone's display.

FEATURES

- **Add Emergency Contact**

- In the Safee application, select the 2nd tab of the app
- Select "Add Emergency Contact"
- Fill in the required information
- Confirm by selecting "Create this contact"
- Your contact will then have to install the application and create an account to receive your alerts and live stream.

- **Start a Safe Journey**

- In the Safee application, go to the main tab (1st tab), enter the destination address in the search bar at the top of your screen.
- Confirm by selecting "Start your journey"
- Select emergency contacts who can view your journey and position, press confirm button.
- Stop your journey by selecting stop button.

- **View/Download Recordings**

- In the Safee application, select the 3rd tab of the app
- Select the recording you wish to view
- To download the recording press download button
- Your contact will then have to install the application and create an account to receive your alerts and live stream.

- **Screen Lock Mode**

- If this mode is turn on, your phone's screen won't lock.
- In the Safee application, go to the main tab (1st tab), slide the left cursor to activate/deactivate the mode.

- **Silent Mode**

- If this mode is turn on, the buzzer will not sound when the alarm button is triggered
- Make sure your Safee is charged.
- Make sure your phone's Bluetooth is activated.
- Switch on the module by pressing the module button once.
- In the Safee application, go to the main tab (1st tab), slide the right cursor to activate/deactivate the mode.

- **Buzzer Settings**

- Make sure your Safee is charged.
- Make sure your phone's Bluetooth is activated.
- Switch on the module by pressing the module button once.
- In the Safee application, go to settings (4th tab) and select "setup my device"
- You can modify the number of presses to start an alert, the duration of the press to stop it, and the siren tone and speed.

- **Battery Level Display**

- Make sure your Safee is charged.
- Make sure your phone's Bluetooth is activated.
- Switch on the module by pressing the module button once.
- In the Safee application, go to the main tab (1st tab), the battery level is displayed at the top of your screen.
- If the charge level does not appear, Safee has run out of battery power or the Bluetooth connection has not been established correctly.

BATTERY RECHARGE

- Connect the USB-C cable to USB C plug.
- Connect the USB-C charging cable to a USB power adapter and plug it into a mains socket. You can also connect the charging cable to a USB port. When Safee recharges, LED lights up.
- Wait until your Safee is fully charged. LED goes out when Safee is fully charged.

CARE & MAINTENANCE

- Before cleaning, unplug the cable.
- You can use a soft, clean damp cloth to wipe the surface of the Safee.

TROUBLESHOOTING

Problem	Cause	Solution
The Bluetooth pairing doesn't work	Bluetooth pairing was not done correctly.	Close the Safee app completely. Charge your device (the LED will light up if charging successfully). Press the alarm button for at least 10s. Reopen your app. Accept the pairing request.
	The battery is completely discharged	Charge your device (the LED lights up if charging successfully)
Paired a new phone	You want to use Safee with a different phone.	Make sure your Safee is charged. Press the alarm button for at least 10s. Follow the pre operating instructions (p.6)

Problem	Cause	Solution
The charging LED does not light up when the USB C cable is plugged in	The cable is not properly plugged in	Check that the cable is plugged in properly
	The cable and/or adapter is defective	Change Cable and/or Adapter
	The device is defective	Contact our customer service

WARRANTY

SAFEE will provide **24 months** warranty, which starts from the date of original purchase and is valid for problems which were caused by the manufacturer. If you need any assistance or have any question about its usage, please don't hesitate to contact our store. We will reply within 24 hours. It's suggested to leave details of your order number and question, and we will help you to solve it as soon as possible.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

- (1) Cet appareil ne doit pas provoquer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

L'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Safee

11 rue du plat, 69002 Lyon

