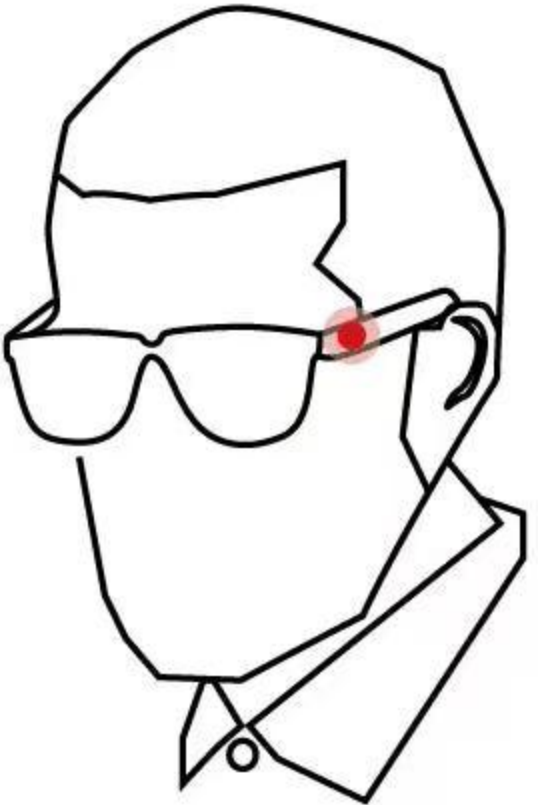
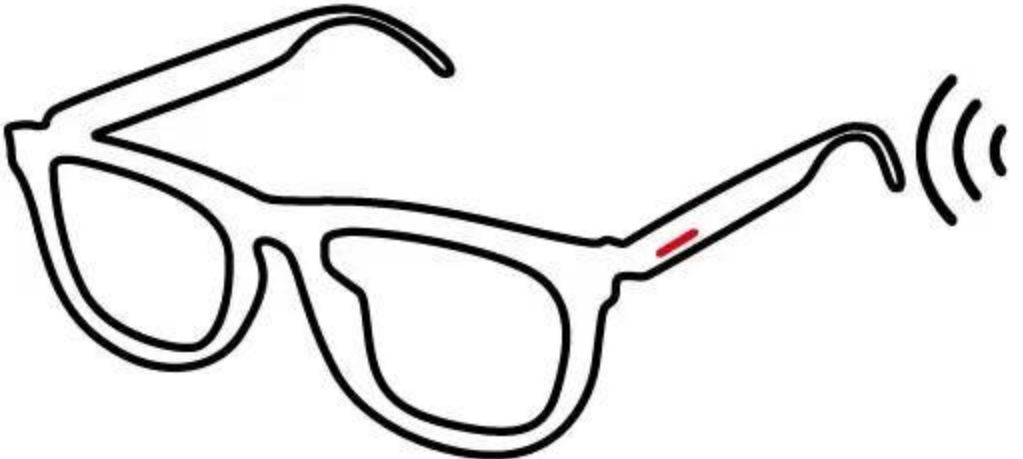
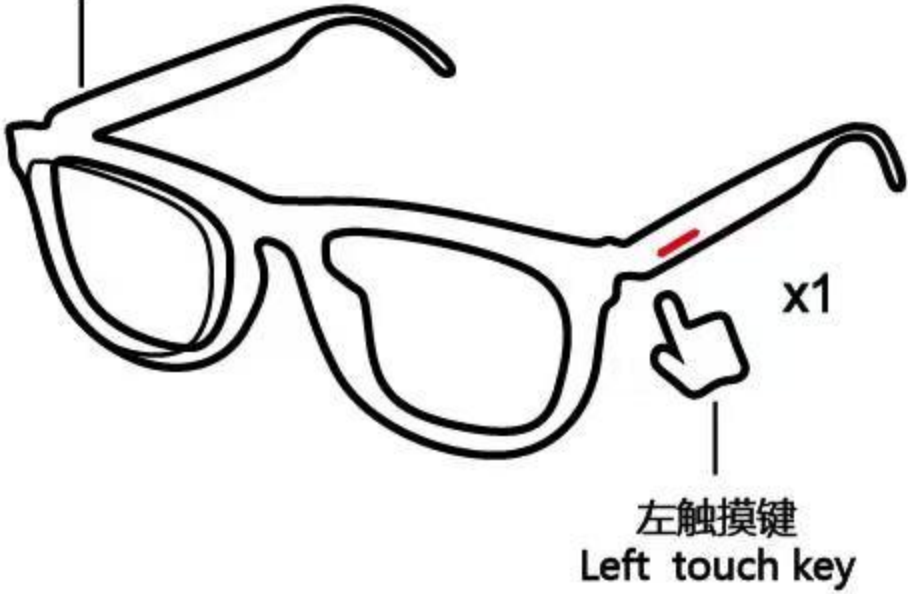
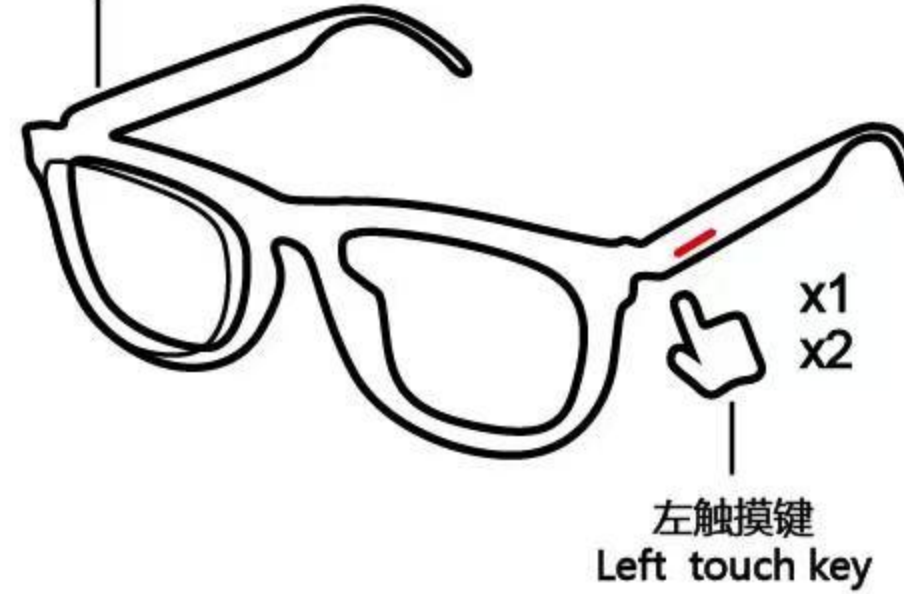
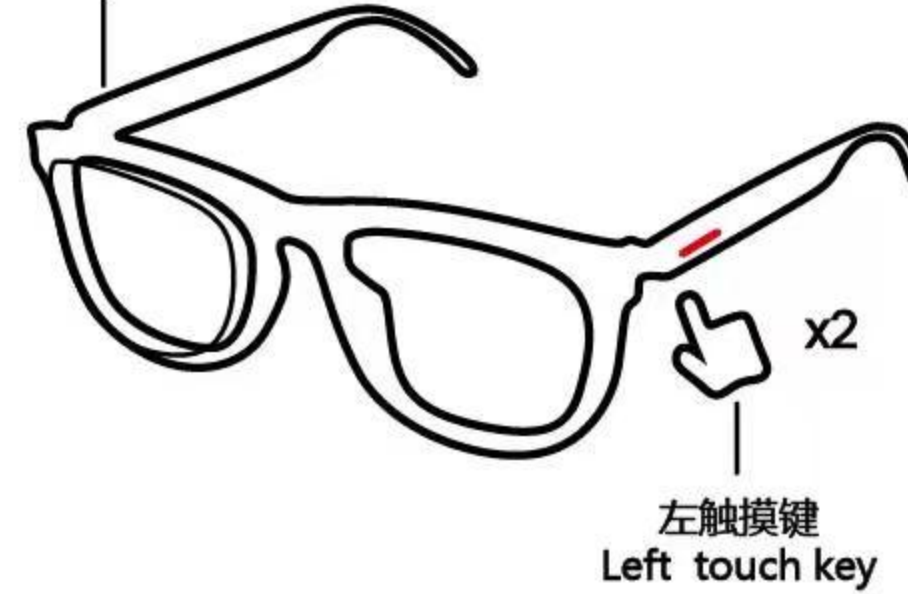
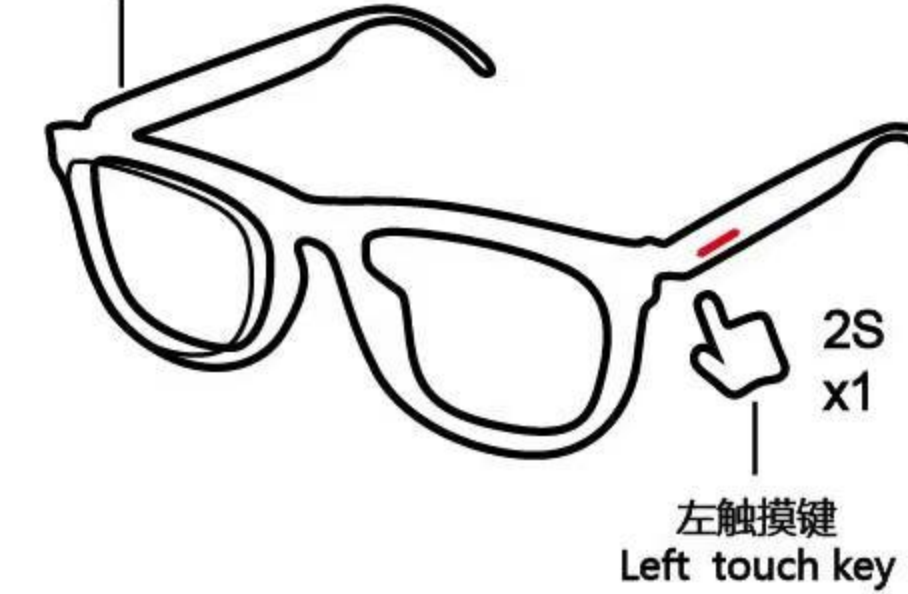
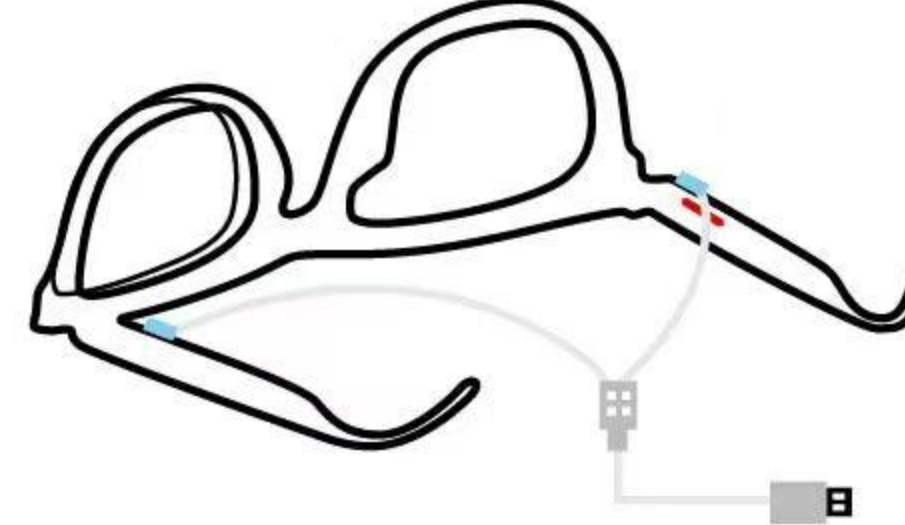


157克铜亚膜双面 5折 49x150mm 展开 245x150mm

智能眼镜 SMART GLASSES 使用指南 User Manual	🔌 开关机 Switch machine  开机: 长按两侧红线5秒开机 关机: 长按两侧红线5秒关机 (注: 如果眼镜上有汗水会影响开关机效果, 请注意清洁干净) Power on: Press and hold the red line on both sides for 5 seconds to power on Shutdown: Long press the red line on both sides for 5 seconds to shut down (Note: If there is sweat on the glasses, it will affect the switching effect, please pay attention to clean it)	🔗 双镜腿配对 Paired temples  开机后双镜腿自动进行配对 After the boot two mirror legs automatically paired	🔗 配对 Pairing  智能眼镜开机后打开手机蓝牙, 连接设备。 (注: 左右两边独立开关机, 需同时触摸开机。也可只开机一边使用。) Afterthe smart glasses are tumedon tum onthe Bluetooth ofthe mobile phone, search and connect. Note: The left and right sides switch independenty andyou needto touch and tum it on at the same time. Youcan alsouse it while just tumingit on)	📞 电话 Phone  来电接听/挂断: 触摸点击(左或右) 1下 拒接电话: 长按触摸键(左或右) 2秒 (注: 通话音量大小在手机上调节) Incoming call answer/end call: touch (left or right) 1 times Reject a call: long press the touch key (left or right) for 2 seconds (Note: the volume of the call can be adjusted on the phone)	🎵 音乐 Music  音乐暂停/播放: 触摸点击(左或右) 1下 音乐切换: 触摸点击左2下切换上一首 触摸点击右2下切换下一首 Music pause/play touch left or right) 1 times Music switch: touch andclick left 2 down to switch to the previous song Touch and click right 2 down to switch to the next song	📷 遥控拍照 Remote camera  遥控拍照:先在手机打开照相机, 然后触摸眼镜(左或右) 按键2次进行遥控拍照 Remote control photo: First openthe camera on the mobile phone, then touch the glasses left or right) button twice to take a remote photo	🎤 唤醒语音助手 Voice assistance  唤语音助手:长按两侧红线2秒(左或右) 关闭语音助手:触摸点击(左或右) 1下 Turn on voice assistant: Long touch the red lines on both sides for 2 seconds (left or right) Turn off voice assistant: touch and tap (left or right) 1 time	🌐 中英文语言切换 Chinese and English switching  中英文语言切换: 触摸点击(左或右) 4下 Chinese andEnglish switching: touch (left or right) 4 times	🔌 充电 Recharge  磁吸式充电:充电时显示红灯常亮 充满时显示蓝灯常亮(需90分钟充满) Magnetic charging: the red light is always on when charging The blue light is always on when fully charged (it takes 90 minutes to fully charge)
---	---	--	---	--	---	--	---	--	--

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.