

Translation Headphones

Usage Guidelines

Please read this manual carefully before use. The company reserves the right to interpret the manual. The product appearance is subject to the actual product. The manual is mainly based on the "World Freetak" function.


Dear user, first of all, thank you for your trust! The following is an introduction to the product usage process, I hope it can help you understand more about how to use the product. After purchasing this product, you need to download the "World Freetak" application to use the translation function. Please follow the steps below to experience and use our translation function. The translation headset currently supports ten translation modes.

1. Preparation before use

1.1. Download and install the APP (Apple phone)

Download the APP by scanning the QR code via WeChat or browser

1. Open WeChat, click + "Scan" in the upper right corner, and scan the QR code below.

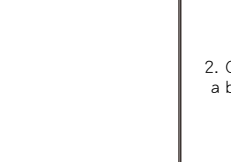

2. Click App Store to go directly to the "World Freetak" download page in the App Store.
3. Click "Get" to download and install the App.


1.2. Download and install the APP (Android phone)

Note: For Huawei, Xiaomi, OPPO, Honor, and VIVO versions,


you can search for "World Freetak" in the app store to download and install it. The method for downloading and installing "World Freetak" on other brands of Android phones is the same, but the prompt information on the interface of each brand of Android phone when installing this App is slightly different. The following steps are for reference only.

- Scan the QR code to download the APP via WeChat or browser

1. Open WeChat, click + "Scan" in the upper right corner, and scan the QR code below.

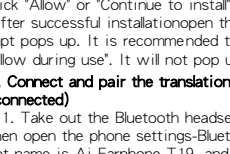

2. Click "Open in browser" in the upper right corner and select a browser.

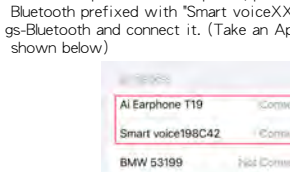


3. After the browser opens the page, click "Android" to start downloading the APP software installation package.

3. Ten major translation modes, multi-scenario applications

3.1. One-click translation

- 3.1.1 After opening the "World Freetak" application, enter the one-click translation function, you can choose the translation mode, whether to broadcast, automatic language recognition, translation only, pronunciation, and cross-application, as shown in the following figure:


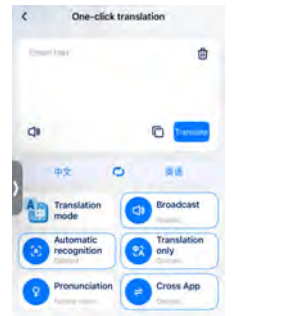


After selecting the translation mode, click the "Chinese" button on the left to select and set the recognition language, and click the "English (US)" button on the right to set the target language for translation. Currently, there are more than 130 languages to choose from. After setting the language, press and hold the control key next to the Ai Earphone headset compartment and speak the text

you want to translate. The text you say and the translated text will appear in the text box at the same time (the translation is in front, and the original text is in brackets. Note: If you choose to open only the translation, the original text will not appear).

3.1.2 Cross-application input

After turning on the cross-application switch, exit the "World Freetak" application and enter a third-party application, such as: Facebook, YouTube, WhatsApp, Instagram, SMS, WeChat, QQ, Mail, Memo, etc. Click the text input box and press and hold the control key of the headset compartment, aim at the phone and say what you want to enter, release it after speaking, and the text will appear immediately. The WeChat effect is as shown below:

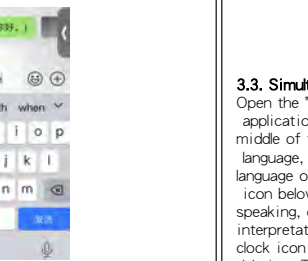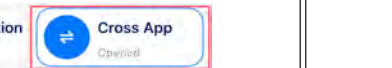

3.2. Video call & Voice call

Open the "Video call" function of the "World Freetak" app, set your own language, the other party's language and call type, then click to invite friends to call, send the invitation link to your friends, ask them to open the link and join the call, and after the call is connected, each speak their native language. The app will translate the sound in real time and display bilingual subtitles.



3.3. Simultaneous interpretation

Open the "Simultaneous interpretation" function of the "World Freetak" application, click on the two languages on the left and right in the middle of the screen to set it. The language on the left is the source language, that is, the language the machine wants to hear, and the language on the right is the translated language. Click the microphone icon below to start simultaneous interpretation and translate. After speaking, click the sound wave to end the simultaneous interpretation. After the end, you can choose to save or cancel. The clock icon in the lower left corner can be used to set the archive deletion. The interface is shown as follows:


3.4. Photo Translation

Open the "Photo Translation" function of the "World Freetak" app, set the source language of the photo, select the language to be translated, click the camera icon to take a photo, and after taking the photo, click the center circle icon below to translate. Click the A translation icon in the lower right corner to enter the bilingual comparison mode, and you can directly click the lower right corner to copy and paste, as shown below:



3.5. Face-to-face translation

Open the "Face-to-face translation" function of the "World Freetak" app, click on the language name to set the desired language. Press and hold the corresponding microphone icon and speak the corresponding language. After speaking, release the microphone to instantly translate the result and broadcast it in the foreign language. As shown in the figure below

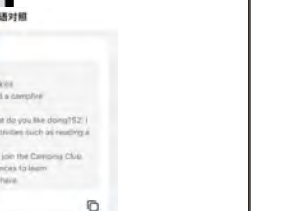


3.6. Meeting Minutes

Open the "Meeting Minutes" function of the "World Freetak" application, select the language and click the record button below to record the voice and transcribe it into text. After recording, click the record button again to end and choose whether to save. The saved content can be viewed by clicking the information icon in the upper right corner. As shown below.




3.7. Touch Mode

Open the "Touch Mode" function of the "World Freetak" app, and two people can wear a headset for real-time translation (touch the headset to start real-time translation, and both parties take turns to touch and switch to speak, and the translation results are broadcast to the headset simultaneously, which is suitable for daily communication, travel and business talks.)

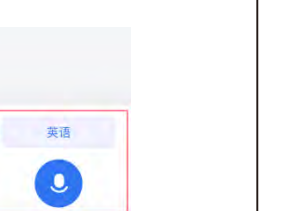

3.8. Speaker Mode

Open the "Speaker Mode" function of the "World Freetak" app, one person wears headphones, the other holds a mobile phone, and the conversation is translated in real time (one person wears headphones, the other uses a mobile phone, the headphone user can touch to start recognition and the mobile phone will broadcast; the mobile phone user can record and the translation result will be broadcast through the headphones, easily realizing two-way translation communication.)

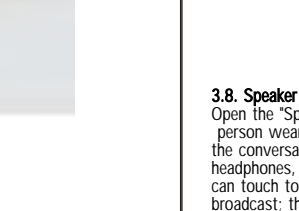

3.9. Free Talk Mode


Open the "Free Talk Mode" function of the "World Freetak" app, and two people wear headphones, translate in real time, and communicate easily, but the mobile phones must be kept at a distance (one person wears one earphone, tap the voice button to start recording, and translate in real time and broadcast to the earphone.)



4. Troubleshooting


Android phones:

1. This Bluetooth device is compatible with mobile phone models of major manufacturers, and functions are realized through Bluetooth connection control. If the built-in input method of the mobile phone conflicts with the function of this product, it is recommended to download and install "Baidu Input Method" for use, which will be smoother.
2. Xiaomi, OPPO, VIVO and other brand mobile phones, take VIVO mobile phone as an example: first open settings - find system settings - click to enter input method - select Baidu input method and set it to open, as shown below

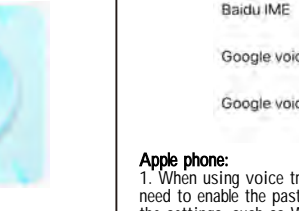

Apple phone:

1. When using voice translation in the corresponding app, you need to enable the paste permission in the corresponding app in the settings, such as WeChat: first find WeChat permissions in Apple settings and turn it on - Paste from other apps - Allow) The steps are as shown in the figure below:

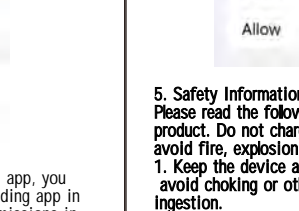

5. Safety Information

Please read the following safety information before using this product. Do not charge with a damaged or untested charger to avoid fire, explosion or other hazards.

1. Keep the device and all accessories out of reach of children to avoid choking or other risks caused by their accidental ingestion.

2. The device is not waterproof, please keep away from any liquid.

3. Avoid dropping, burning or squeezing the product to avoid damage to the device.

4. Do not expose the product to high temperatures or around heating devices such as ovens and microwaves.

Our company is not responsible for quality problems, equipment failures and safety accidents caused by the use of unofficial accessories.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.