

80mm

120mm




AI translation
跨平台即時譯



Product manual
— 產品使用手冊 —

1 外觀示意圖

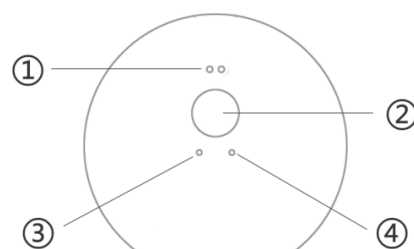

① 磁吸充電口

② 按鍵

③ 指示燈

④ 複位鍵

2 包裝清單

設備*1、充電線*1、引磁片*1、使用手冊*1

3 快速入門

引磁片

蘋果手機：
iPhone12及以上機型的背面帶有磁吸功能（MagSafe），可直接將設備吸附在手機背面。如佩戴手機殼後磁性不足，可將引磁片粘貼在手機殼背面，再吸附設備。
安卓手機：
請將引磁片粘貼在手機或手機殼上，再將設備吸附在引磁片上。

開機

單擊按鍵，設備指示燈閃爍藍燈，表示設備已開機，進入待連接狀態。

連接

- 請掃描二維碼下載應用並完成安裝。
- 初次使用請按APP運行必要的許可權，以確保設備正常使用。

3. 打開APP，點擊左上角的“連接設備”按鈕，進入藍牙搜索界面，找到藍牙名為“Ai-xxxxxx”的設備並點擊連接，連接成功後指示燈藍燈快速閃爍三次後熄滅。

註：如未連接成功，請檢查以下事項：
1. 手機藍牙是否開啟，設備是否與手機並處於待連接狀態，設備是否被其他手機連接。
2. 設備是否已充電，設備是否已開機。

待機

設備無需開機，開機後2分鐘內未連接成功則進入休眠狀態，指示燈熄滅，再次單擊按鍵即可喚醒設備。

通話翻譯

打開APP，點擊“視頻通話”選項，進入功能界面，選擇好雙方的語言，點擊“邀請好友通話”，系統自動生成聊天室鏈接，通過任意第三方社交軟體（如微信、WhatsApp、Line等）將鏈接發送好友，並通知好友點擊鏈接加入通話，通話完成後APP進行通話，通話過程中，雙方使用各自的母語交流，系統會自動將聽到的語音翻譯為對方的語言，實現無障礙即時溝通。

註：僅需一方擁有翻譯設備即可實現功能，另一方無需設備，請確保網路連接穩定，以獲得最佳通話體驗。

AI總結

打開APP，點擊“AI總結”選項，進入功能界面，選擇要錄製的語言，點擊麥克風按鈕開始錄音，系統將聽到的聲音即時轉成文字，結束錄音後，支持保存會議內容、查看歷史記錄，還支持生成AI總結、思維導圖、分享。



Origins應用程式

同聲傳譯

打開APP，點擊“同聲傳譯”選項，進入功能界面，選擇好雙方的語言，點擊麥克風按鈕開始錄音，系統將聽到的聲音即時轉成文字，並翻譯成目標語言，結束錄音後，支持保存同傳內容，查看歷史記錄、分享。

對話翻譯

打開APP，點擊“對話”選項，進入功能界面，選擇好雙方的語言，長按對應麥克風按鈕錄音，系統會自動翻譯成對方的語言，該功能還支持離線模式，首次使用需下載對應語言的離線包。在功能頁面的右上角開啟離線模式，進入離線語言界面，選擇要使用的語言即可使用。

拍照翻譯

打開APP，點擊“文本”選項，進入功能界面，點擊“相機”按鈕，選擇目標語言，點擊拍攝或選擇照片，系統將自動識別照片文字並翻譯，支持保存圖片、雙語對照、複製文字內容。

一鍵翻譯

1. 打開APP，點擊“文本”選項，進入功能界面，可在此進行功能設置，設置識別語言和目標語言、只顯示譯文、顯示懸浮窗。

(Android)/跨應用開關(iOS)、播報選項與發音性別等等。
2. 保持設備與APP正常連接後，無需進入APP，只需確保APP處於後臺運行狀態，即可通過長按設備按鍵，隨時錄入語言一鍵翻譯。

文本翻譯

打開APP，點擊“文本”選項，進入功能界面，設置識別語言和目標語言，點擊輸入框，進入文字編輯模式，輸入需要翻譯的內容，點擊輸入法鍵盤的發送鍵，即可獲取翻譯結果和播報。

4 高級功能

文字聊天翻譯

· 發送文字給外國朋友
保持設備與APP正常連接後，選擇好雙方的語言，開啟顯示懸浮窗(Android)/跨應用開關(iOS)功能，點擊任意聊天軟體或其他應用的輸入框，進入文字編輯模式，長按設備按鍵開始一鍵翻譯並播報，同時翻譯結果會自動填充至選中的聊天框中。

翻譯外國朋友的文字消息

保持設備與APP正常連接後，選擇好雙方的語言，長按複製外文消息，返回APP，系統會自動粘貼外文，並翻譯為您的語言。

5 常見問題

發送翻譯後內容

保持設備與APP正常連接後，選擇好雙方的語言，開啟顯示懸浮窗(Android)/跨應用開關(iOS)功能，長按設備按鍵進入一鍵翻譯，錄製完成後發開按鍵，此時按住發信的【按住說話】按鈕，1-2秒後手機將播報翻譯結果，微信收到語音內容，複製完成後即可發送。

翻譯對方內容

保持設備與APP正常連接後，選擇好雙方的語言，開啟顯示懸浮窗(Android)/跨應用開關(iOS)功能，當收到對方語音時，點擊外放播報語音內容的同時，長按設備按鍵進入一鍵翻譯，即可實現翻譯播報對方內容。

註：已相容其他社交聊天軟體（如微信、WhatsApp、Line等），可按照同樣操作方式實現。

手機播放翻譯

保持設備與APP正常連接後，開啟顯示浮窗，將APP切至後臺運行，打開第三方播放軟體（如抖音、YouTube等），長按設備按鍵接收手機發出的聲音進行一鍵翻譯並播報，翻譯結果將顯示在顯示浮窗中。

6 安全資訊

蘋果手機關閉粘貼提示教程

蘋果手機使用時應用一鍵翻譯時，可能彈出詢問是否允許複製粘貼的彈窗，關閉彈窗教程如下：
步驟一：打開設置。
步驟二：在設置中滑動到底部，找到對應的APP，在這裏我們以微信為例。
步驟三：進入微信設置詳情，找到【從其他APP粘貼】進入。
步驟四：把詢問改成允許狀態，提示彈窗就不會再出現。

註：如果其他應用也有此情況，可按照同樣操作方式去解決。

不同安卓手機內置輸入法與本產品可能有衝突，推薦在應用商店中下載安裝正式版“百度輸入法”配合使用，使用會更加流暢。如遇輸入框裏面看不見輸入法鍵盤，無法編輯輸入框裏面的內容，在設置中開啟使用魯寧鍵盤即可恢復。

小米手機

打開設置——更多設置——語言與輸入法——鍵盤、滑鼠和觸控板——開啟使用魯寧鍵盤

OPPO手機

打開設置——語言和時間——實體鍵盤——找到【Ai-xxxxxx】——開啟使用魯寧鍵盤

華為手機

點擊螢幕上鍵盤懸浮窗啟動鍵盤

註：其他手機，可按照同樣操作方式去解決。

產品保固卡


尊敬的用戶：
感謝您選購本公司產品。為了方便提供您保固服務，請認真填寫此卡以便日後憑此卡維修。本憑證為商品三包的重要依據，請妥善保管。

姓名：_____
電話：_____
產品型號：_____
購買日期：_____
購買通路：_____
設備MAC：_____

保固說明

- 請妥善保管此卡，保修時需出示此卡及購買憑證。
- 產品自購買之日起，凡按照產品說明書正常使用，一年內出現故障可免費維修。
- 下列情況不屬於免費服務範圍，但可實行收費維修服務：
(1)不能出示保修卡及發票。
(2)發票塗改。
(3)意外因素或使用不當造成損壞。
(4)未經我司許可，自行修理造成的損壞。
(5)超過三包有效期，經修復仍可繼續使用。
(6)對於超過保修期的產品，本公司將繼續為您提供有償服務。

1 Appearance diagram

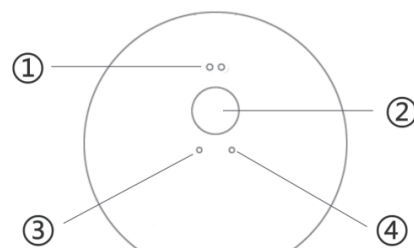

① Magnetic charging port

② Button

③ Indicator light

④ Reset button

2 Packing List

Device*1, charging cable*1, magnetic sheet*1, product manual*1

3 Quick Start

Magnetic sheet

Apple phones:
iPhone 12 and above have a magnetic suction function (MagSafe) on the back, which allows you to directly attach the device to the back of the phone. If the magnetism is insufficient after wearing the phone case, you can stick the magnetic sheet on the back of the phone case and then attach the device.

Android phones:
Please stick the magnetic sheet on the phone or phone case, and then attach the device to the magnetic sheet.

Power on

Click the button and the device indicator light flashes blue, indicating that the device has been turned on and is ready to be connected.

Connect

- Please scan the QR code to download the app and complete the installation.
- Please grant the necessary permissions for the APP to run for the first time to ensure the normal use of the device.

3. Open the APP, click the "Connect Device" button in the upper left corner, enter the Bluetooth search interface, find the device named "Ai-xxxxxx" and click to connect. After the connection is successful, the blue light of the indicator light flashes three times quickly and then goes out.

Notes: If the connection is not successful, please check the following items: whether the mobile phone Bluetooth is turned on, whether the device is turned on and in the waiting state, and whether the device is connected by other mobile phones.

Standby mode

The device does not need to be turned off. If the connection is not successful within 2 minutes after powering on, it will enter sleep mode and the indicator light will go out. Click the button again to wake up the device.

Call translation

Open the APP, click the "Video Call" option, enter the function page, select the language of both parties, click "Invite Friends to Call", the system automatically generates a chat room link, send the link to friends through any third-party social software (such as WeChat, WhatsApp, Line, etc.), and notify friends to click the link to join the call. After the notification, please return to the APP to make the call. During the call, both parties communicate in their own native language, and the system will automatically translate the voice heard into the other party's language to achieve barrier-free real-time communication.

Notes: Only one party needs to have a translation device to realize the function, and the other party does not need a device. Please ensure that the network connection is stable for the best call experience.

AI Summary

Open the APP, click the "AI Summary" option, enter the function page, select the language to be recorded, click the microphone button to start



Origins APP

recording, and the system will convert the sound into text in real time. After the recording ends, it supports saving the meeting content, viewing the history, and also supports generating AI summaries, mind maps, and sharing.

Simultaneous interpretation

Open the app, click the "Simultaneous Interpretation" option, enter the function page, select the languages of both parties, click the microphone button to start recording, and the system will transcribe the sound it hears into text in real time and translate it into the target language. After the recording is finished, it supports saving the simultaneous interpretation content, viewing the history, and sharing.

Dialogue translation

Open the app, click the "Dialogue" option, enter the function page, select the language of both parties, long press the corresponding microphone button to record, and the system will automatically translate into the other party's language. This function also supports offline mode. For the first use, you need to download the offline package of the corresponding language. Turn on the offline mode in the upper right corner of the function page, enter the offline language interface, select the language you want to use, and you can use it.

Photo translation

Open the app, click the "Text" option, enter the function interface, click the "Camera" button, select the target language, click to shoot or select a photo, and the system will automatically recognize and translate the text. It supports saving pictures, bilingual comparison, and copying text content.

One-click translation

Open the APP, click the "Text" option, enter the function interface, and set the language settings here, such as recognition language and target language, display only translated text, display floating window

(Android)/cross-application switch (iOS), broadcast options and pronunciation gender, etc.
2. After keeping the device and APP connected normally, you don't need to enter the APP. Just make sure the APP is running in the background, and you can long press the device button to record voice at any time for one-click translation.

Text translation

Open the app, click the "Text" option to enter the function interface, set the recognition language and target language, click the input box to enter the text editing mode, enter the content to be translated, and click the send button on the input keyboard to obtain the translation results and broadcast.

4 Advanced Features

Translate text chat messages

· Send text to foreign friends:
After keeping the device and APP connected normally, select the language of both parties, turn on the display floating window (Android)/cross-application switch (iOS) function, click on the input box of any chat software or other application, enter the text editing mode, long press the device button to start one-key translation and broadcast, and the translation result will be automatically filled in the selected chat box.

Translate text messages from foreign friends

After keeping the device and APP connected normally, select the language of both parties, long press to copy the foreign message, return to the APP, the system will automatically paste the foreign text and translate it into your language.

5 Translate voice chat messages

Send translated content:

After the device and APP are connected normally, select the language of both parties, turn on the display floating window (Android)/cross-application switch (iOS) function, long press the device button to enter one-key translation, release the button after recording is completed, and then press and hold the WeChat (Press and Speak) button. After 1-2 seconds, the phone will broadcast the translation result, and WeChat will record the voice content. After recording is completed, it can be sent.

Translate the other party's content:

After the device and APP are connected normally, select the language of both parties, turn on the display floating window (Android)/cross-application switch (iOS) function, and when receiving the other party's voice, click the external speaker to broadcast the voice content while long pressing the device button to enter one-key translation, and you can translate and broadcast the other party's content.

Notes: It is compatible with other social chat software (such as WeChat, WhatsApp, Line, etc.), which can be achieved in the same way.

6 Play audio on phone for translation

After keeping the device and APP connected normally, turn on the floating window function, switch the APP to the background, open a third-party playback software (such as Tik Tok, YouTube, etc.), long press the device button to receive the sound from the mobile phone for one-click translation and broadcast, and the translation result will be displayed in the floating window.

7 FAQ

8 Tutorial on how to turn off the paste prompt on an iPhone

When using cross-app one-click translation on an iPhone, a pop-up window may pop up asking whether to allow copy and paste. The tutorial on how to turn off the pop-up window is as follows:
Step 1: Open Settings.
Step 2: Slide to the bottom in Settings and find the corresponding APP. Here we take WeChat as an example.
Step 3: Enter WeChat Settings Details and find "Paste from Other APPs" to enter.
Step 4: Change the query to allow, and the pop-up window will no longer appear.

Notes: If other apps also have this problem, you can solve it in the same way.

The built-in input methods of different Android phones may conflict with this product. It is recommended to download and install the official version of "Baidu Input Method" in the App Store for use, which will be smoother. If you cannot see the input method keyboard in the input box and cannot edit the content in the input box, turn on the screen keyboard in the settings to restore it.

9 Xiaomi phone

Open Settings -> More Settings -> Language and Input Method -> Keyboard, Mouse and Touchpad -> Turn on the screen keyboard

10 OPPO phone

Open Settings -> Language and Time -> Physical Keyboard -> Find [Ai-xxxxxx] -> Turn on the screen keyboard

11 Huawei phone

Click the keyboard floating window on the screen to start the keyboard

9 Safety information

Before using this product, please read the following safety tips carefully to ensure correct use and avoid possible safety hazards.
1. Do not use damaged or untested chargers to prevent fire, explosion or other hazards.
2. Keep the device and all accessories out of reach of children to avoid accidental ingestion, suffocation or other safety risks.
3. This device is not waterproof. Please avoid contact with water to avoid damage to the device.
4. Do not drop, burn, squeeze or otherwise damage the device to avoid affecting normal use or causing danger.
5. Do not expose the product to high temperatures or around heating devices such as ovens, microwave ovens, etc.
6. The user shall be responsible for quality problems, equipment failures and safety accidents caused by the use of unofficial accessories, and our company shall not be responsible.

The built-in input methods of different Android phones may conflict with this product. It is recommended to download and install the official version of "Baidu Input Method" in the App Store for use, which will be smoother. If you cannot see the input method keyboard in the input box and cannot edit the content in the input box, turn on the screen keyboard in the settings to restore it.

12 Xiaomi phone

Open Settings -> More Settings -> Language and Input Method -> Keyboard, Mouse and Touchpad -> Turn on the screen keyboard

13 OPPO phone

Open Settings -> Language and Time -> Physical Keyboard -> Find [Ai-xxxxxx] -> Turn on the screen keyboard

14 Huawei phone

Click the keyboard floating window on the screen to start the keyboard

Product Name: AI translation
Battery Capacity: 65mAh
Bluetooth version: 5.2

Product Code: AI-101
Supporting Languages: 136+
Production area: Shenzhen, China

Usage: See Instructions
Execution standards: GB 4943.1-2022
Quality inspection certificate: qualified

Address: Add: No. 48, Weili Road, Beilan District, Ningbo
Tel: +86 755 86978812

The "OTOP" trademark and related copyrights printed on this product and related documents belong to Ningbo Beifu Culture Ltd.; any use and reproduction without legal authorization will be subject to legal liability.

Product warranty card

Dear user:
Thank you for purchasing our products. In order to provide you with warranty service, please fill in this card carefully so that you can use it for repairs in the future. This certificate is an important basis for the three guarantees of the product, please keep it properly.

Name: _____
Phone number: _____
Product model: _____
Purchase date: _____
Purchase channel: _____
Device MAC: _____

Warranty instructions

- Please keep this card properly. You must present this card and the purchase receipt when you want to repair the product.
- From the date of purchase, as long as the product is used normally according to the product instructions, it will be repaired free of charge if it breaks down within one year.
- The following situations are not within the scope of free service, but paid repair services can be implemented:
(1) The warranty card and invoice cannot be presented.
(2) The invoice is altered.
(3) Damage caused by accidental factors or improper use.
(4) Damage caused by self-repair without our permission.
(5) After the warranty period has expired, the product can still be used after repair.
- For products that have expired, our company will continue to provide you with paid services.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.