成品尺寸: 195*80mm 风琴4折页 正反印刷-四色印刷

195 mm Lawaken **Smart Al Glasses User Guide** Please read the guide carefully before use and store it properly 01 Component Description Right temple magnetic charging port Detachable sunglasses (Optional Configuration) 02 Operating Instructions First time of using Initial Pairing Please connect the charger to activate the glasses After the glasses are activated by connecting to the charger, It will enter the Bluetooth pairing state automatically, and at the same time, the glasses will play the prompt tone repeatly. Connect both temple arms magnetic charging port with the standard charging cable for charging How to enter the pairing state? How to play music? The operations for pairing required during the charging You need to manually click the music playing software first. state and when wearing are different. Double click Play/Pause Charging state Slide (right side) Increase/Decrease the volume Press the touch area for 3 seconds on either side of the temple arm Slide (left side) Previous/Next song How to operate when there is an incoming call?


It doesn't support to make outgoing calls actively. Only answer, hang up and reject incoming calls are supported

Long touch

Pick up/Hang up

While wearing

Press the touch area for 3 seconds on both side of the temple arm

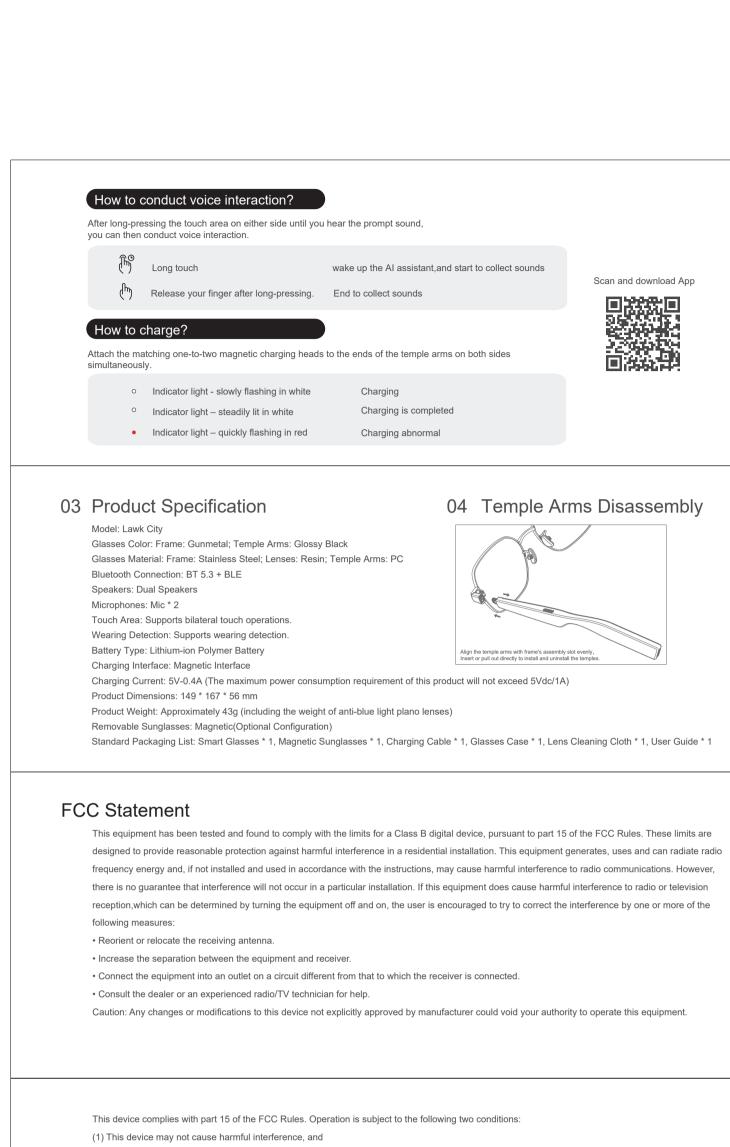

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.