


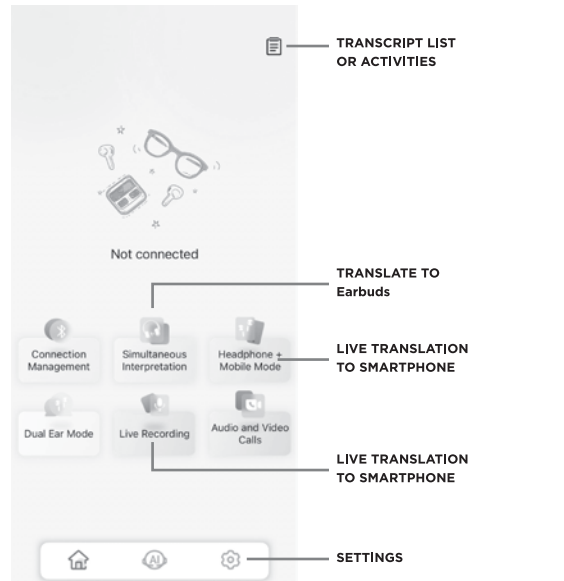
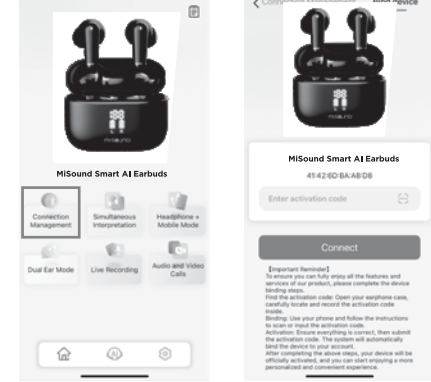

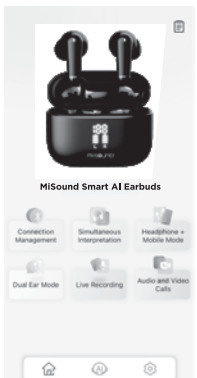
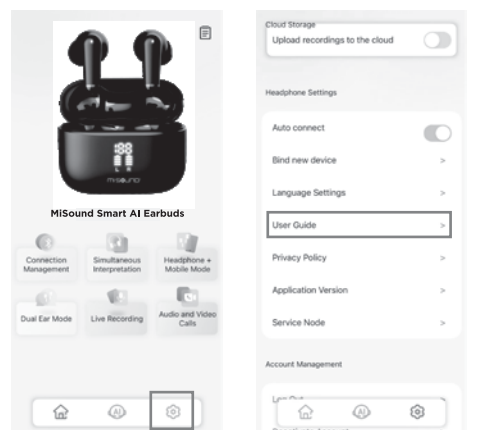

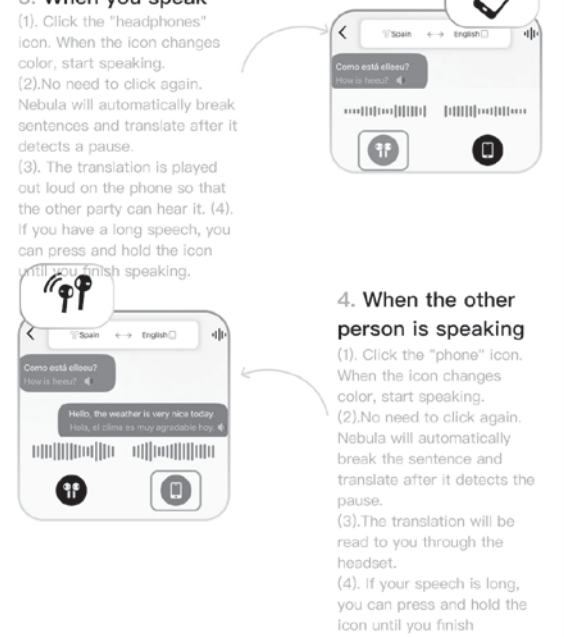
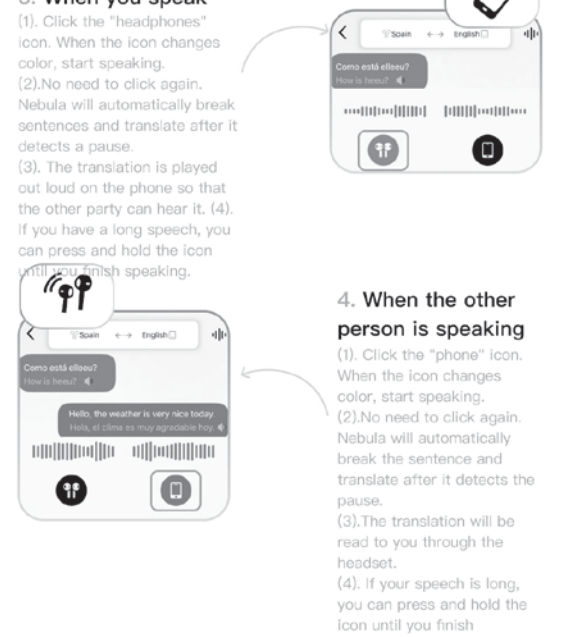
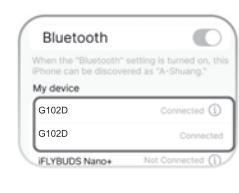
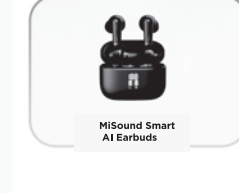
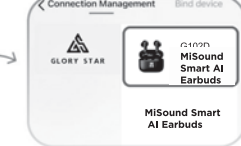
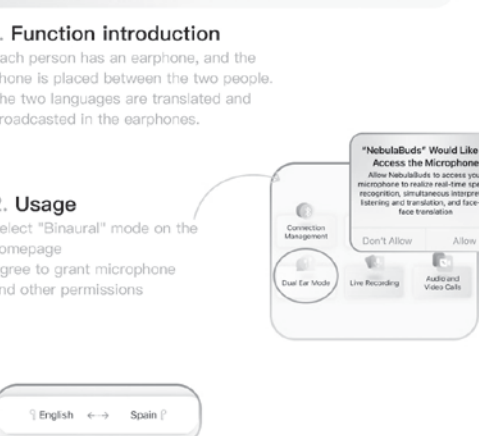
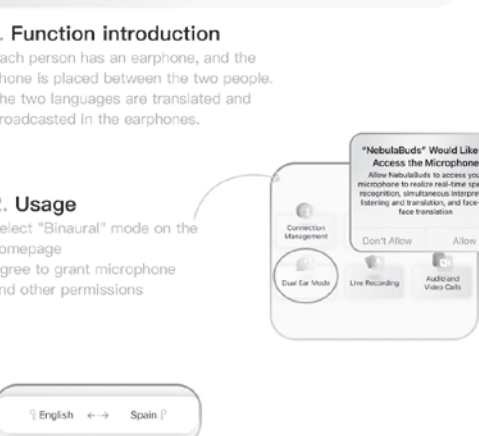


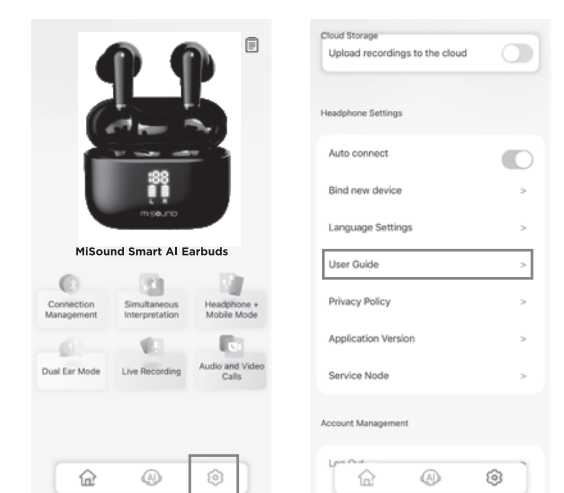


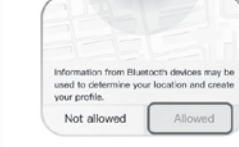
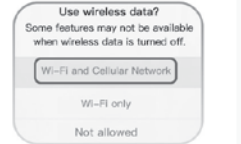

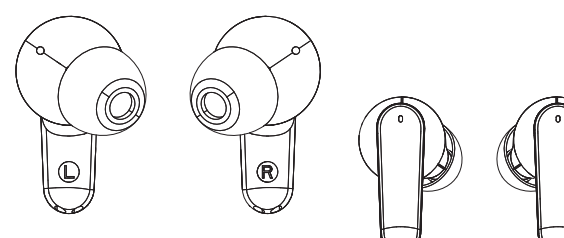







USER MANUAL

2SIDED ACCORDION DOUBLE SIDED FOLD SIDE 1 ENGLISH

LAY IT OUT LIKE THE IMAGE YOU SENT ME

| | | | | |
|---|--|---|---|---|
| <div><div>mi sound™</div><div><div>150 Languages & Accents</div></div><div></div><div><div>SMART AI TRANSLATOR EARBUDS</div><div>ACTIVE NOISE CANCELING</div><div>QUICK START GUIDE</div></div></div> | <div><div>REAL-TIME TRANSLATOR APP</div><div>Real-time translation while traveling, during conversations or for a client meeting.</div><div><div>Simultaneous Interpretation</div><div>Translate a language communicated to yourself in a chosen language through your Earbuds. (Example: Discussion in Chinese translates to English to your Earbuds)</div></div><div><div>Earbuds+Mobile Mode</div><div>Translate live conversation by using Earbuds and Smartphone.</div></div><div><div>Dual Ear Mode</div><div>Translate live conversation with the other person either using Earbuds and Smartphone or giving 1 earphone to the person you are having a conversation with while using the other in your ear to Live-Translate to each other.</div></div><div><div>Live Recording</div><div>Record a conversation in another language and have it translated to a language you understand.</div></div><div><div>Audio and Video Calls</div><div>Online audio and video call, real-time translation.</div></div><div><div>SCAN QR CODE TO DOWNLOAD APP</div><div>Download</div><div>NEBULA BUDS</div></div></div> | <div><div>NEBULA APP DASHBOARD</div><div>CONNECT Earbuds DIRECTLY TO YOUR SMARTPHONE FIRST BEFORE OPENING THE APP</div><div></div><div>TRANSCRIPT LIST OR ACTIVITIES</div><div>TRANSLATE TO Earbuds</div><div>LIVE TRANSLATION TO SMARTPHONE</div><div>LIVE TRANSLATION TO SMARTPHONE</div><div>SETTINGS</div></div> | <div><div>HOW TO USE APP AND BIND DEVICE FOR TRANSLATE FUNCTION</div><div>1. Open APP, go to "Settings", log in with mobile phone numbers.</div><div>2. Click first function "connect management", choose "Bind device", you will see below page.</div><div></div></div> | <div><div>3. Now you can enter the activation code, or scan the code.</div><div>QR code to scan</div><div>XXXXXX Activation code</div><div>4. After connect successfully, you will see below page, now you can use translate function freely.</div><div></div></div> |
| <div><div>5. For more function, please go to "Settings - User Guide" for more instructions.</div><div></div></div> | <div><div>Headphones + mobile phone mode --- face-to-face translation</div><div><div>1. Function Introduction</div><div>You wear headphones and place the phone between the two parties. The speech of both parties will be translated and voice broadcasted.</div></div><div><div>2. Use</div><div>Select "Headphones + Phone" mode on the home page. Agree to grant microphone and other permissions.</div><div></div><div>Click the language area above to select a language. Left: Your language. Right: The other party's language. Middle arrow: Quickly swap languages.</div></div></div> | <div><div>3. When you speak</div><div>(1). Click the "headphones" icon. When the icon changes color, start speaking. (2). No need to click again. Nebula will automatically break sentences and translate after it detects a pause. (3). The translation is played out loud on the phone so that the other party can hear it. (4). If you have a long speech, you can press and hold the icon with speaking.</div><div></div><div>4. When the other person is speaking</div><div>(1). Click the "phone" icon. When the icon changes color, start speaking. (2). No need to click again. Nebula will automatically break the sentence and translate after it detects the pause. (3). The translation will be read to you through the headset. (4). If your speech is long, you can press and hold the icon until you finish.</div><div></div></div> | <div><div>Click the return button in the upper left corner to end the translation and jump to the "Summary and Replay" page.</div><div><div>Activate the headphones - Activation code card</div><div>Before activating the device, please check if the activation code card is inside the box. Some screen-equipped headphones and other devices do not require a card and can automatically connect to the app.</div><div>--- No Card:</div><div><div>1. Auto Connect</div><div>Turn on the device, then connect and pair it in your phone's Bluetooth settings.</div><div></div></div></div></div> | <div><div>2. Manual connection</div><div>If the device does not connect automatically, click on "Connection Management" and select the corresponding brand and Bluetooth name to connect.</div><div></div><div>Once the connection is successful, the app will automatically return to the home page and display the device image.</div><div></div></div> |
| <div><div>Face-to-face translation --- binaural</div><div><div>1. Function Introduction</div><div>Each person has an earphone, and the phone is placed between the two people. The two languages are translated and broadcasted in the earphones.</div></div><div><div>2. Usage</div><div>Select "Binaural" mode on the homepage. Agree to grant microphone and other permissions.</div><div></div></div><div><div>3. Language selection</div><div>Click the language area above to select a language. Left: Your language. Right: The other party's language. Middle arrow: Quickly swap languages.</div><div></div></div></div> | <div><div>4. Recording</div><div>Click the red dot to start the translation. Both parties can speak at the same time. The translation results will be broadcasted through the left and right ears respectively. There is no need to click the record button again after the speech.</div><div></div></div> <div><div>5. End</div><div>Click the red dot again to end the translation and jump to the "Summary and Replay" page.</div><div></div></div> | <div><div>5. For more function, please go to "Settings - User Guide" for more instructions.</div><div></div></div> | <div><div>Download</div><div>Use your camera or browser to scan the QR code to access the NebulaBuds download page.</div><div></div><div>Scan the QR code using your phone's camera, WeChat, or browser to download.</div><div></div><div>Select the appropriate channel to download.</div><div>When you open Nebulabuds for the first time, please allow Nebula to access the necessary permissions:</div></div> | <div><div>The following applies to both iOS and Android.</div><div></div><div>Information from Bluetooth devices may be used to determine your location and device. Not allowed. Allowed.</div><div>Allow Nebula to find Bluetooth devices and connect accessories..</div><div></div><div>Use wireless data? Some features may not be available when wireless data is turned off. Wi-Fi and Cellular Network. Wi-Fi only. Not allowed.</div><div>And allow Nebula to use wireless data - Wi-Fi and cellular data.</div></div> |
| <div><div>mi sound™</div><div><div>150 Languages & Accents</div></div><div></div><div><div>SMART AI TRANSLATOR EARBUDS</div><div>ACTIVE NOISE CANCELING</div><div>User Manual</div></div></div> | <div><div>ANCETB ANC TWS Translator Earphone - User Manual</div><div><div>⚠ Safety Warnings</div><div>Before using the earphones, please read the safety information below and keep this manual for future reference. Following these precautions helps prevent injury or fire:</div><div>Keep batteries away from children.</div><div>Do not heat, open, or throw the battery into fire.</div><div>Avoid contact between the battery and metal objects.</div><div>Do not expose the battery to high temperatures.</div><div>Do not use a high-power charger--this can damage the charging cable.</div></div><div><div>Only charge using a 5V DC adapter (not included).</div></div><div><div>Product Specifications</div><div>Model: MiSound Smart AI Earbuds</div><div>Bluetooth Version: 6.0</div><div>Chipset: AC7006F4</div><div>Audio Codecs: SBC, AAC</div><div>Noise Cancellation Depth: Up to -27dB</div><div>Frequency Range: 20Hz-20KHz</div><div>Speaker Size: 10mm</div><div>Speaker Sensitivity: 122±3dB</div><div>Speaker Impedance: 32Ω ±15%</div><div>Bluetooth Range: 10 meters (without obstacles)</div><div>Earbud Battery: 30mAh</div></div></div> | <div><div>Charging Case Battery: 200mAh</div><div>Play Time: 4 hours per charge, up to 15 hours total</div><div>Talk Time: 4 hours per charge, up to 15 hours total</div><div>Earbud Charging Time: 1.5 hours</div><div>Case can recharge earbuds approx. 2 times</div><div>Note: Playing music at high volume or high quality will use more battery.</div><div></div><div><div>Pairing the Earphones</div><div>Automatic Pairing:</div><div>Take the earbuds out of the case. They will turn on, sync with each other, and enter pairing mode automatically.</div></div><div><div>If Earbuds Don't Sync</div><div>Turn off both earbuds, then turn them back on. If that doesn't work, put them back in the case, close the lid, then reopen it.</div></div></div> | <div><div>Still not working? Press and hold both earbuds for 3 seconds while they're out of the case to force sync.</div><div><div>Connect to Device:</div><div>Open Bluetooth settings on your phone / device and select MiSound Smart AI Earbuds</div></div><div><div>How to Use</div><div>1. Power On / Off Auto: Take out of case = ON. Put back in case = OFF. Manual: Press and hold 3 seconds = ON. Press and hold 5 seconds = OFF.</div><div>2. Play / Pause Music Tap either earbud once.</div><div>3. Previous / Next Track Double-tap left earbud = Previous song Double-tap right earbud = Next song</div><div>4. ANC (Noise Control) Modes Transparent Mode → Noise Cancellation Mode → Normal Mode (repeat to cycle)</div><div>Press and hold right earbud for 2 seconds to switch modes.</div><div>5. Game Mode</div></div></div> | <div><div>Press and hold left earbud for 2 seconds to switch between:</div><div><div>Game Mode & Music Mode</div><div>6. Answer / End Calls Tap either earbud once to answer or end a call.</div><div>7. Reject Calls Double-tap either earbud to reject a call.</div><div>8. Voice Assistant Triple-tap either earbud to activate your device's voice assistant.</div></div><div><div>Charging Instructions</div><div>1. Charging the Case Use the included USB-C cable to connect the case to a power source. The LED display will blink and show the battery level. When fully charged, it shows 100%.</div><div>2. Charging the Earbuds When the battery is low, you'll hear a warning tone and see a white light flash every 5 seconds.</div><div>Place the earbuds into the case.</div><div>A white light will turn on while charging, and turn off when complete. The case will also show "L" and "R" on the screen with water-like flickering lights.</div><div>The display turns off once fully charged.</div></div></div> |
| <div><div>What's in the Box</div><div>2 x Earbuds</div><div>1 x User Manual</div><div>1 x USB-C Charging Cable</div><div>1 AI USAGE QUICK START Guide Card</div><div></div><div></div><div>SCAN QR CODE TO DOWNLOAD APP</div><div></div><div>NEBULA BUDS</div></div> | <div><div>FCC STATEMENT</div><div><div>FCC ID: 2BPA1827</div><div>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div><div>Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.</div></div><div><div>Notice</div><div>This symbol means the product must not be discarded as house hold waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of household products and rechargeable batteries helps prevent negative consequences for the environment and human health.</div><div></div></div></div> | <div><div>Disclaimer</div><div>All information, design and specifications contained in this manual were correct at the time of this publication. As the product goes under certain differences. The contents of this manual are subject to change without prior notice, and Emerson will not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing performance or use of this manual.</div><div>MiSound® COPYRIGHT ©2025 ALL RIGHTS RESERVED. MiSound® is a registered trademark of viscount LLC. Used under license. OTHER TRADEMARKS AND TRADE NAMES ARE THOSE OF THEIR RESPECTIVE OWNERS. info@viscount.com The BLUETOOTH® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by MiSound® is under license. Other trademarks and trade names are property of their respective owners.</div><div></div><div>⚠ WARNING: CANCER AND REPRODUCTIVE HARM - WWW.P65WARNINGS-CA.GOV.</div><div><div>CUSTOMER SERVICE</div><div>info@viscount.com</div><div>VISCO- 11 VREELAND RD. FLORHAM PARK, NJ 07932</div></div></div> | <div><div>mi sound™</div></div> | |