


Omni Speak

AI Phone Case

Instruction Manual

1. Bluetooth device appearance and function indication diagram

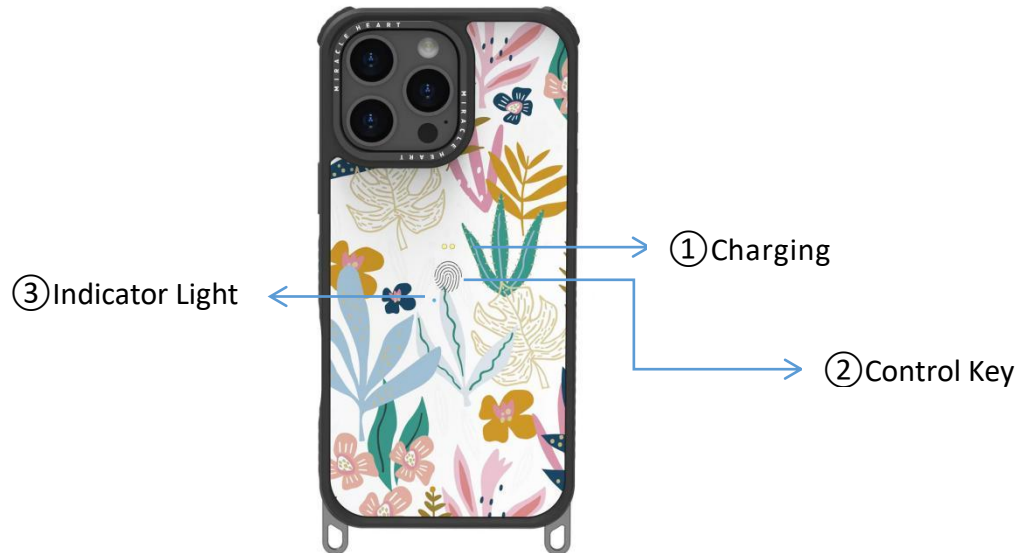

① Magnetic Charging

- Magnetic charging function, pay attention to the direction of magnetic attraction when charging

② Control Key

- When the device sleeps, press the Control Key to wake up the device
- When the device is connected to Bluetooth, press and hold to start recording, release the automatic translation and text conversion

③ Indicator Light

- Sleep/Standby: no light
- Bluetooth not connected: blue light flashes
- Bluetooth connection successful: the blue light flashes three times

- During charging, the red light is always on; when fully charged, the light is off


Reminder: The device will go to sleep after 10 minutes of inactivity, press the Control Key once to wake up the device, and the device will automatically connect to the previous mobile phone

2. Product use process

2.1 Connect Bluetooth devices:

Bluetooth devices work with the "OmniSpeak" APP.

If the Bluetooth device is in sleep mode, you need to press the Control Key to wake it up, and the blue light will flash at this time; turn on the Bluetooth of the mobile phone, enter the Bluetooth device list interface, find "OmniSpeak " and click to pair and connect Bluetooth, and the blue light will flash continuously after connecting Three times, the phone will display that the Bluetooth device is connected.

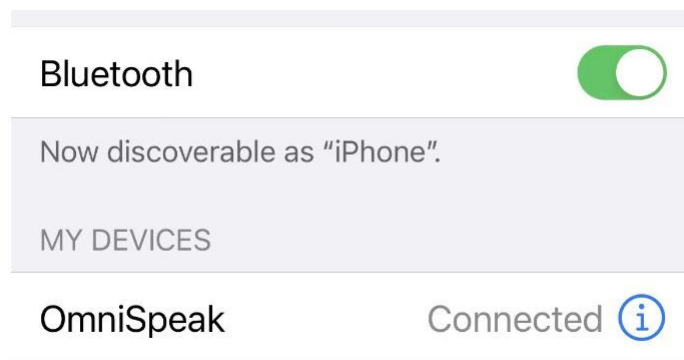

2.2 Download and install APP:


Scan the QR code to download and install the
"OmniSpeak" APP



Omnispeak
IOS



2.3 Language Settings:

Open the "OmniSpeak" application installed on the mobile phone, click the left button "**Mandarin**" to select and set the Identify Language, click the right button "**English (US)**" to set the Target Language for translation, there are currently more than 100 languages available for selection.

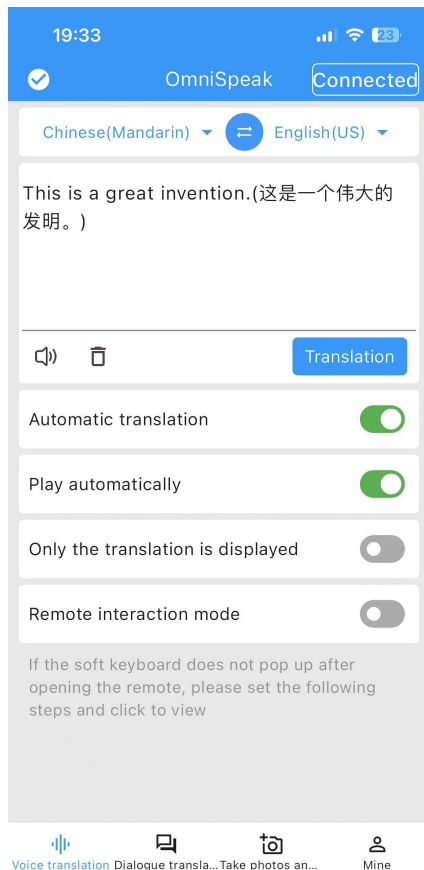


2.4 Voice input:

Press and hold the Control Key of the Bluetooth device, speak to the phone what you want to input, release it after speaking, and the text will appear immediately.

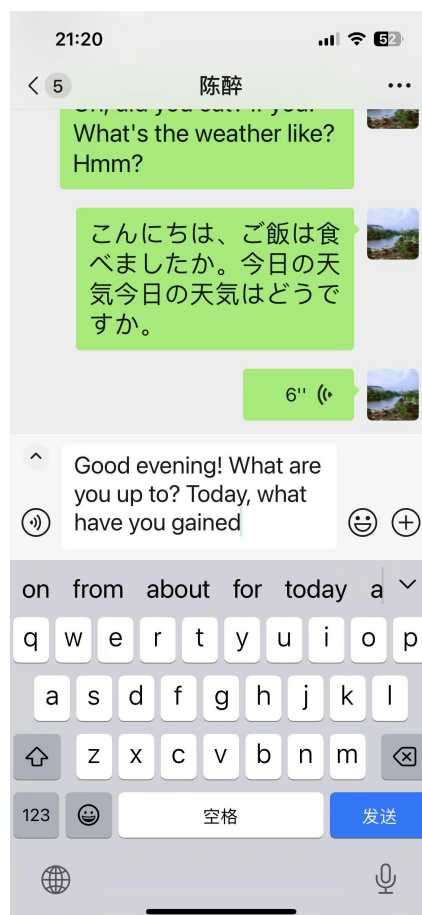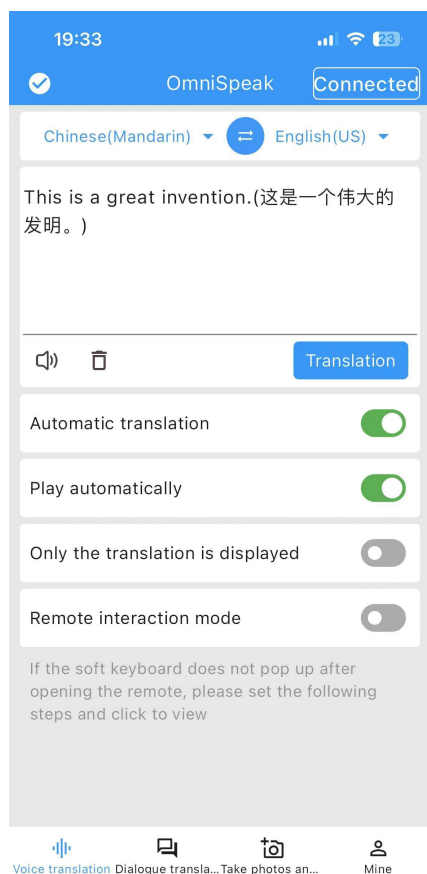

At the same time, it supports switching to third-party applications when the "Speak Freely Pro" application is running in the background, such as: SMS, WeChat, QQ, Mail, Memo, WhatsApp, Facebook, Skype, Telegram, Line, etc.


Click the text input box, then press and hold the Control Key of the Bluetooth device, speak the content you want to input to the mobile phone, release it after speaking, and the text will appear immediately (The effect is shown in the picture above).

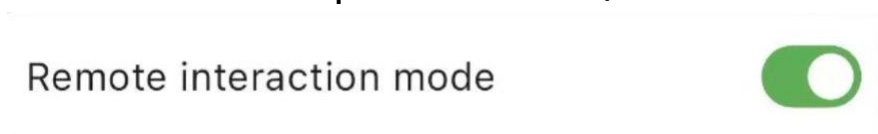

Note: The "Auto Paste" function must be turned on on the Apple phone to automatically paste the translated content into the text box of the third-party application.

2.5 Voice Translation:

Turn on the "Translation" function, as shown below

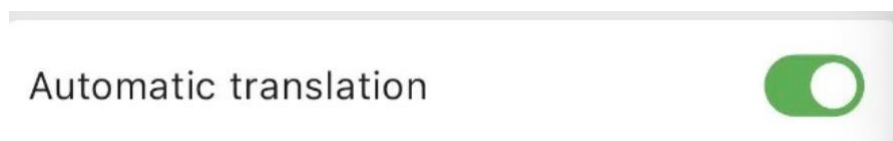

Press and hold the Control Key of the Bluetooth device, and after saying what you want to express, the text you speak and the text of the other party's language will appear in the text box at the same time (the translation is in front, and the original text is in brackets).



2.6 Device sleep state:

The device will go into sleep mode without operation within 10 minutes, press the Control Key once to wake up the device, the device will automatically connect to the previous mobile phone, and the "OmniSpeak" application can automatically resume work.

(If the "OmniSpeak" application cannot resume normal work, you need to restart the APP again).

2.7 Read aloud:


Turn on the "Read aloud" function, as shown in the following figure:



Press and hold the Control Key of the Bluetooth device, say what you want to express, and the phone will automatically broadcast the translated content

2.8 Only display translations:

Turn on the "Only display translation" function, as shown in the following figure

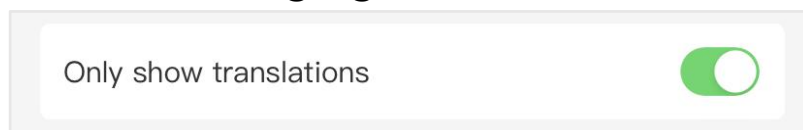


When the mobile phone translates the spoken content, the display effect is that the translation is first, and the original words are in brackets. Turn on "Only show translation" to display only the translated content.


Note: You need to turn on the translation to enable the "Only show translation" function

2.9 Show floating window:


Turn on the "Show floating window" function, as shown below:

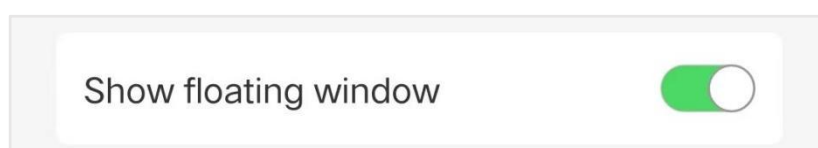

Only request the floating window permission for the first time, then return to the "OmniSpeak" app,

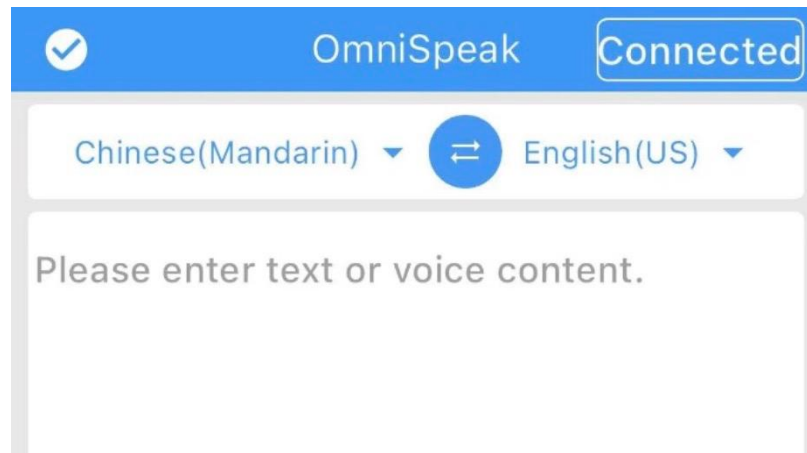


At this point, a floating window pops up on the screen of the mobile phone and is placed on top of any third-party application. **Press and hold the Control Key to speak, and the original text and translation will be displayed in the floating window in text form. The effect is as follows:**

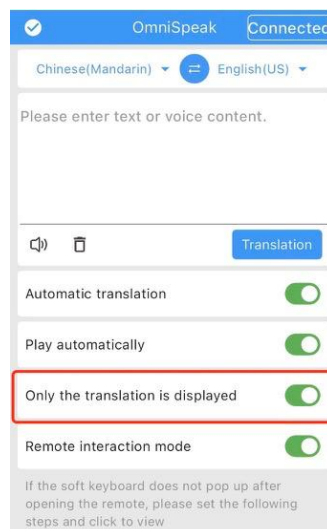

At the same time, you can choose to open or close the **Read** or **Translation** on the floating window interface. If you don't want to display the floating window, click the upper right corner to close it. (This function is only available for Android phones, not Apple phones)


2.10 Text automatic translation function:

Open the "OmniSpeak" application home page interface, set the **Source language** as your own language, and switch the **Target language** to the other party's language

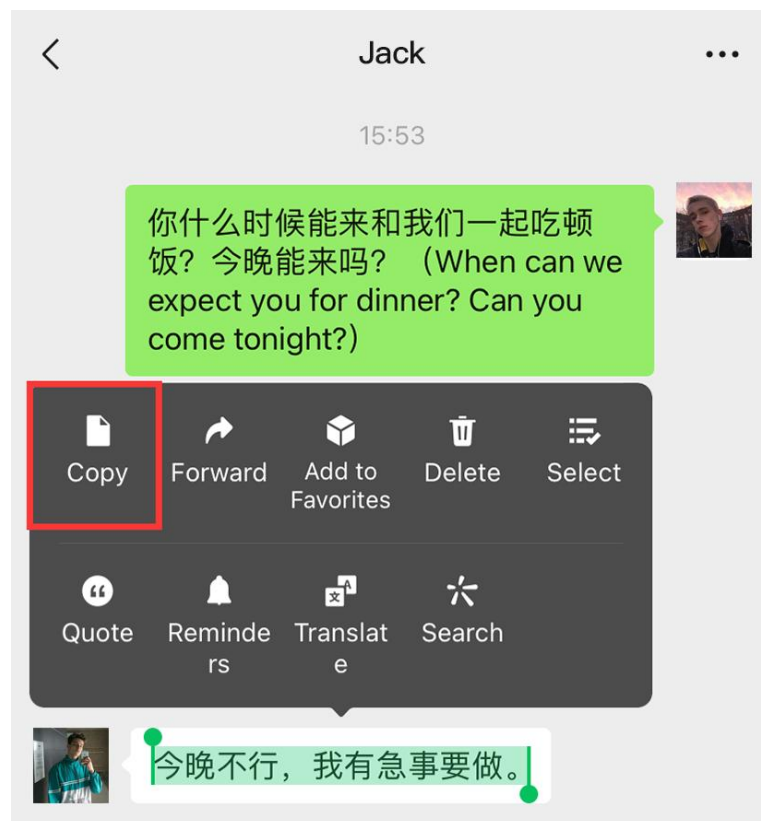

When a foreign friend or customer sends a message in English or other languages, press and hold to copy the content, and then switch to the "OmniSpeak" application

home page interface, the copied content will be automatically entered into the text box, and the content will be automatically translated into the **Source language**.

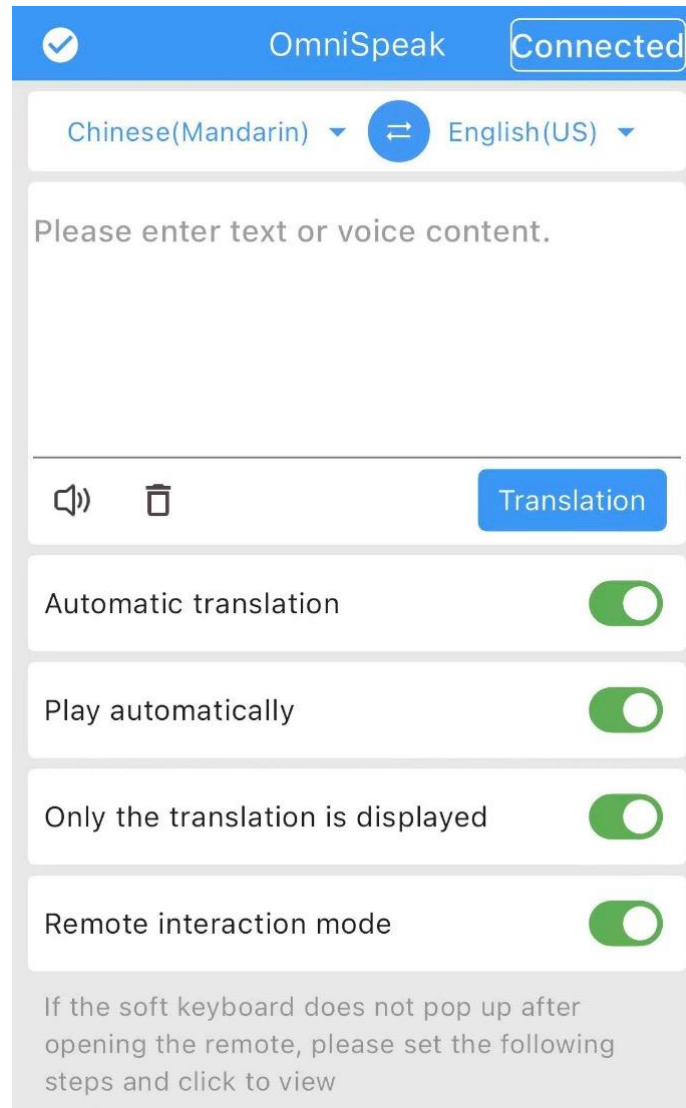


2.11 Voice automatic translation:

Open the "OmniSpeak" application home page interface, set the **Source language** as your own language, and

switch the **Target language** to the other party's language,

Press and hold the Control Key of the Bluetooth device, then click to play the voice message, and then release the Control Key until the playback is complete, and the voice translation result will be broadcast immediately.

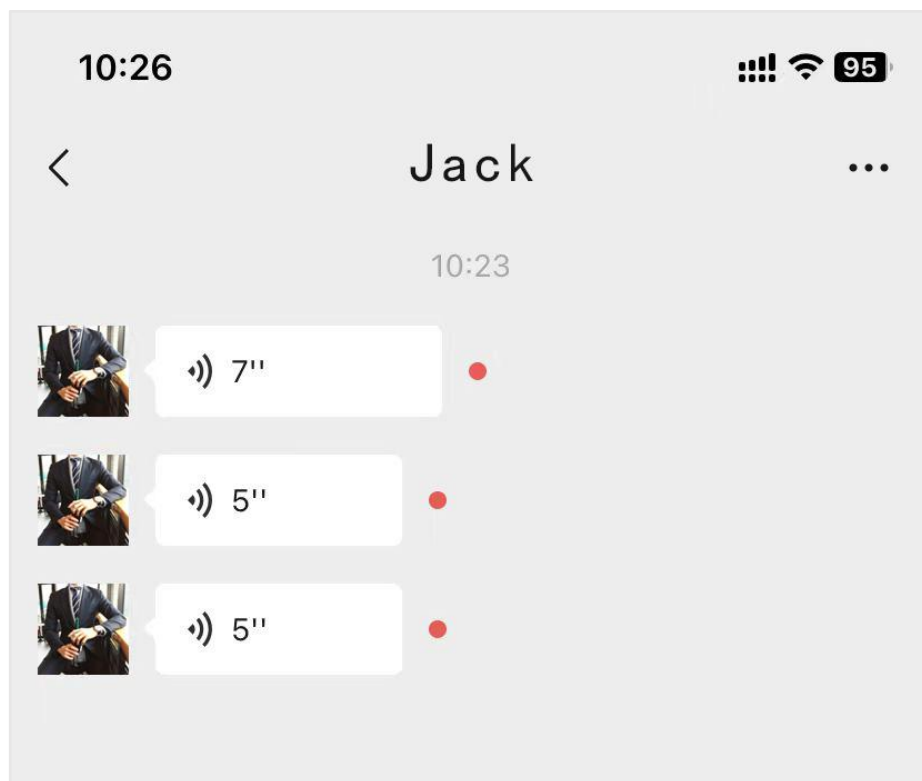

2.12 Dialogue translation:

When talking face-to-face with foreign friends or customers, open the "OmniSpeak" app **dialogue translation** interface, set your own language and the

other party's language, then press and hold **the microphone** button on the screen, speak to the phone, release it after speaking, Immediately the translation will appear and be broadcast.




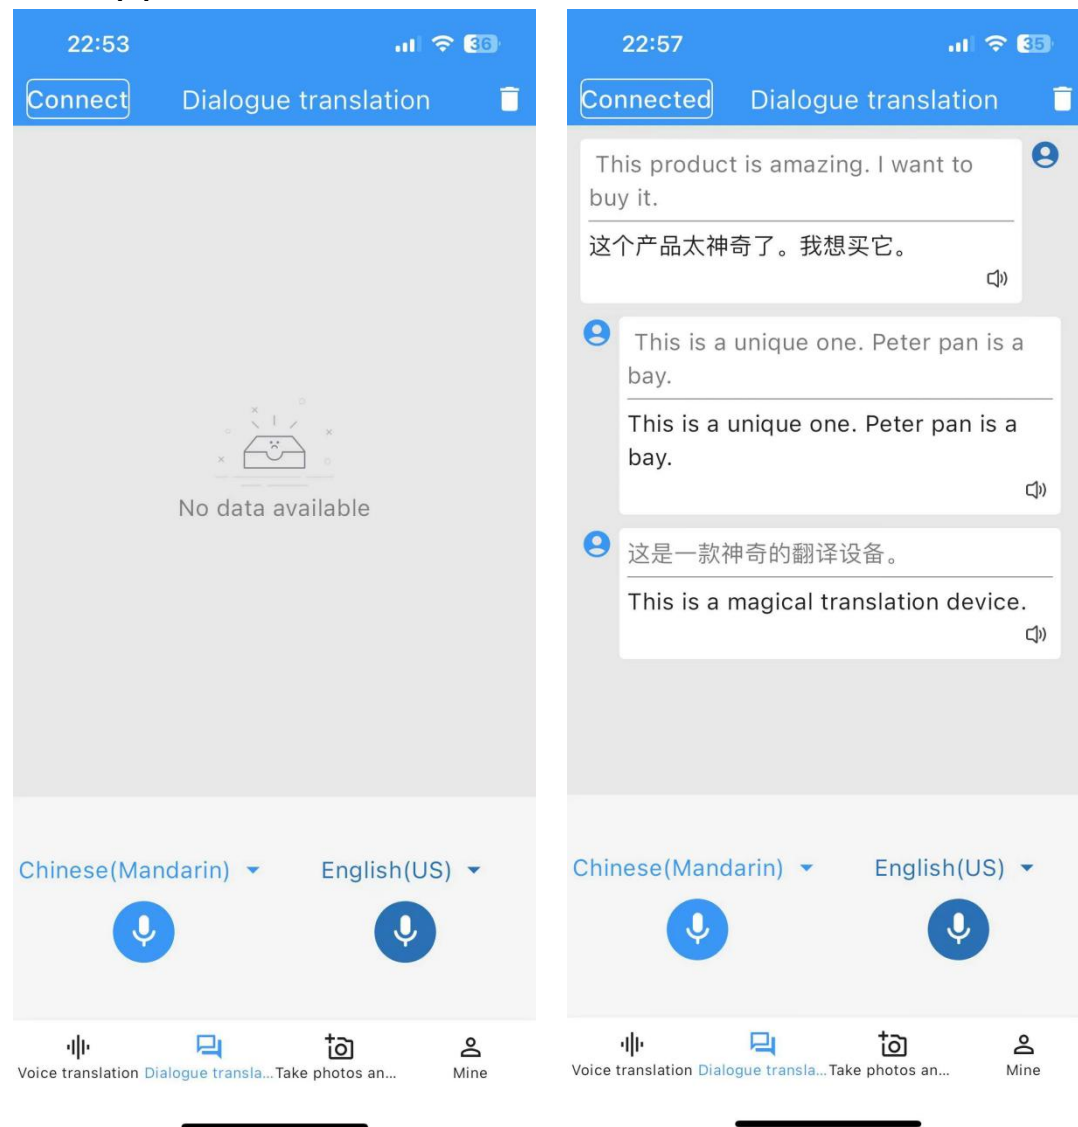


photo translation function

2 13 When you encounter unknown foreign language manuals, notices, books, posters, newspapers, and street signs, just turn on the photo function, take a photo of the content to be translated, and then it can be translated into the language you want.

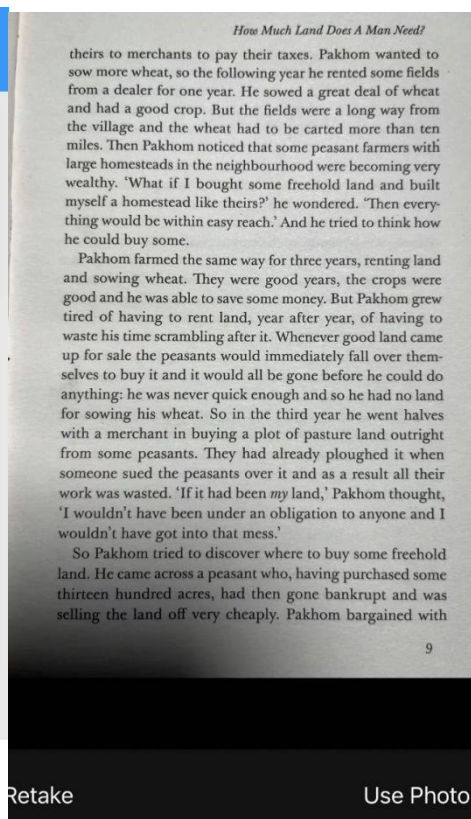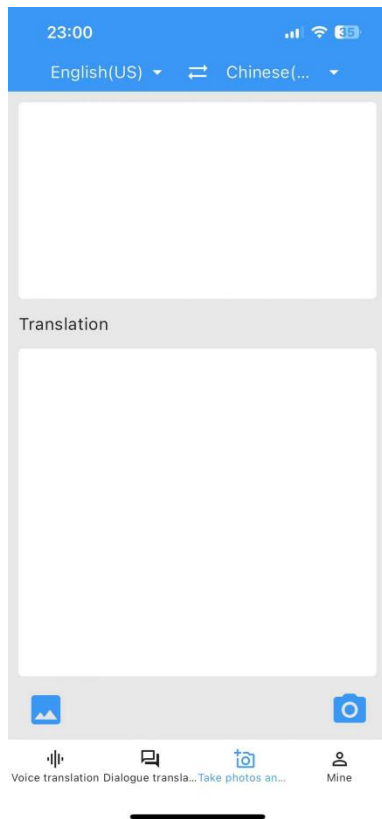

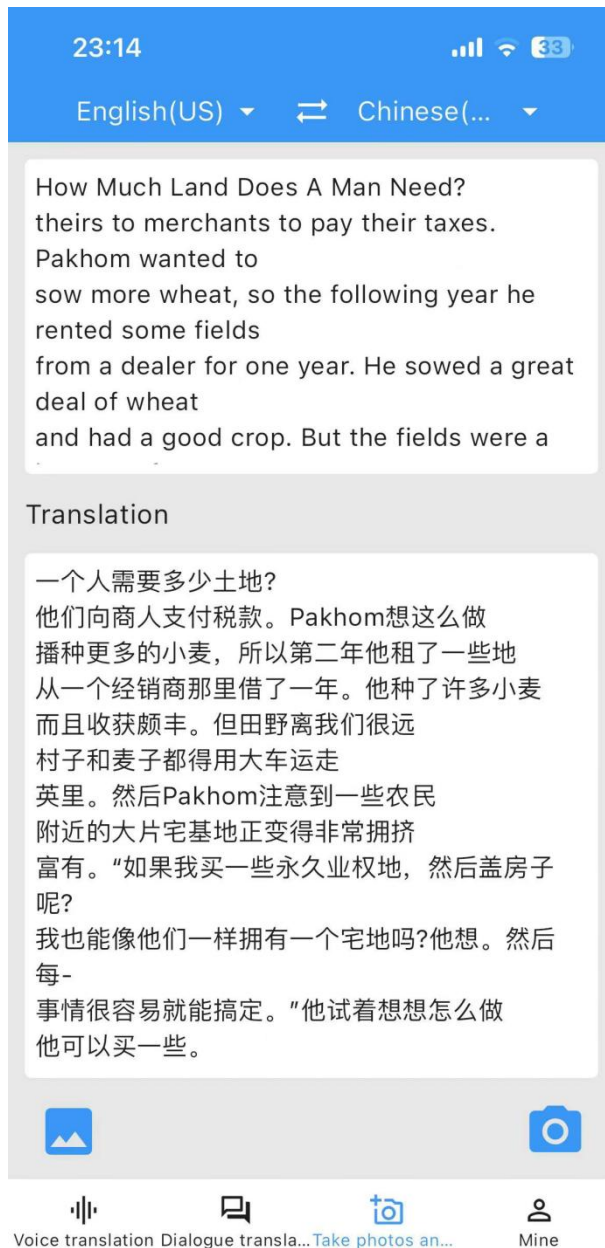


3. FAQ

3.1 This Bluetooth device is compatible with the mobile phone models of major manufacturers, and realizes the function through Bluetooth connection control. If the built-in input method of the mobile phone conflicts with


the function of this product, it is recommended to download and install "Baidu input method" to use it together, and the use will be more smooth .

3.2 If there is a conflict between the built-in input method and the function of this product on Android phones of different manufacturers, turn on "Use the on-screen keyboard" to recover (the steps are as follows),

Take Xiaomi mobile phone as an example: **First open the settings:**

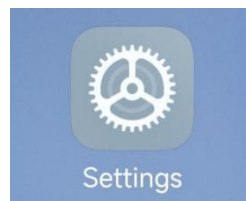


Find and click

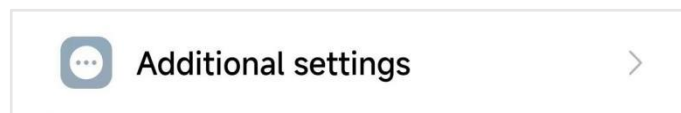


Click into



Replace the input method with: Baidu Input Method

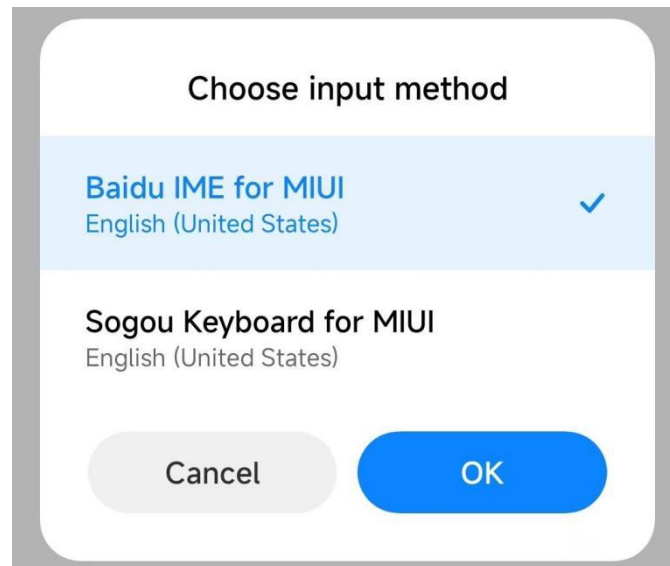


3.3 Some Android phones can't see the input method keyboard in the input box after installing the APP, because some phones turn off the on-screen keyboard by default, and **Enable "Use the on-screen keyboard"** to restore it (the steps are as follows)

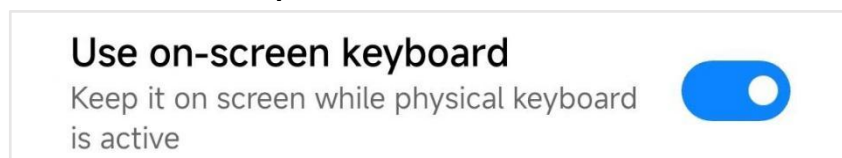

Take Xiaomi mobile phone as an example:

Open **Settings** → **Additional setting** → Languages & Input → Keyboard, Mouse... → Enable "**Use On-Screen Keyboard**" (as shown in the figure below)

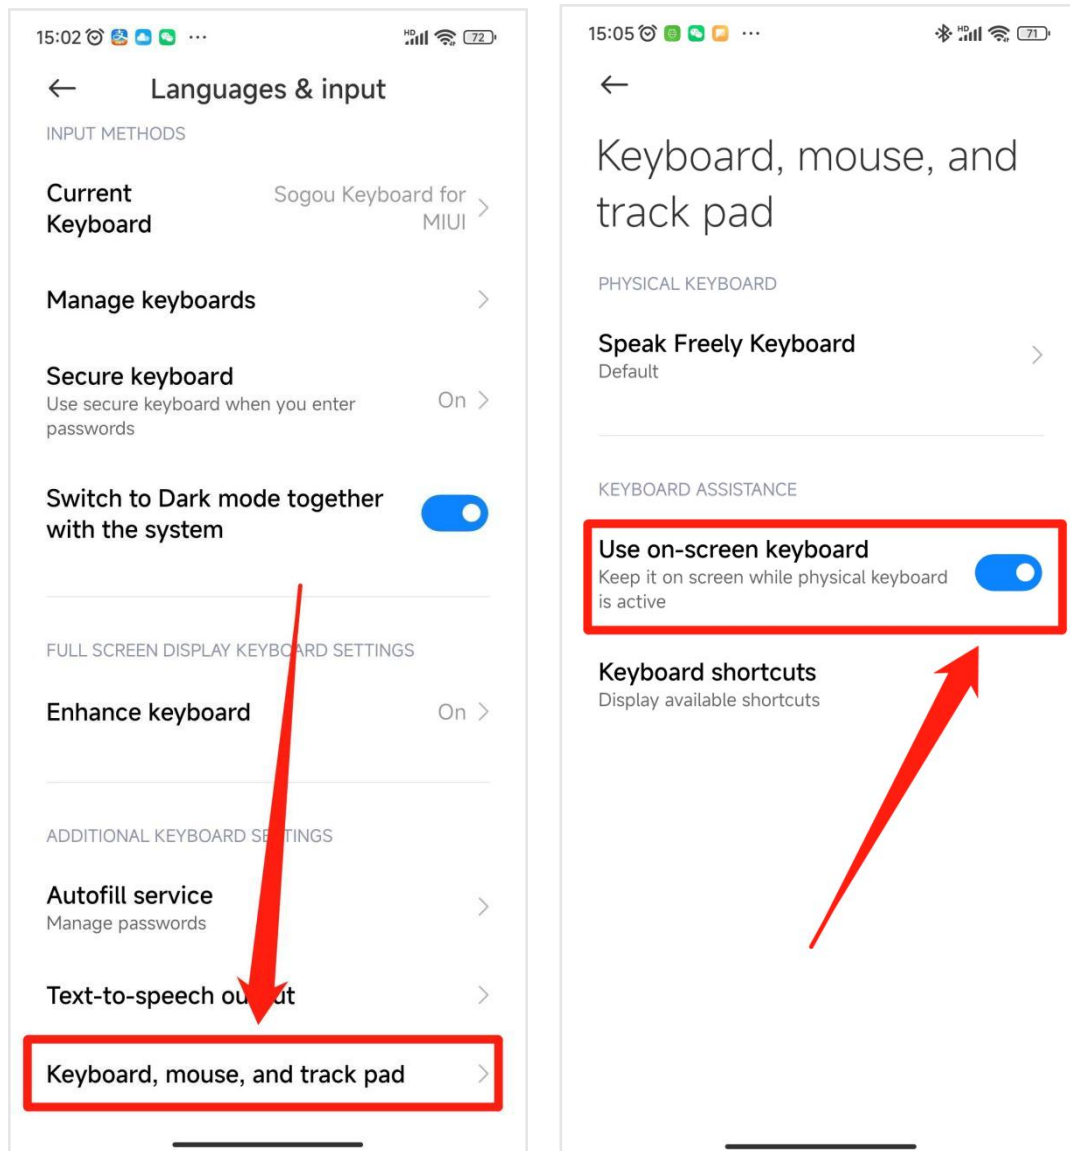

Other Android brand mobile phones follow similar steps, and you can also find and **enable "Use the on-screen keyboard"** in the **Languages & Input** to restore it.

4.4 The response speed is slow, please check whether the 4G/WiFi network is good.

4.5 Repeated sentences appear when voice input is converted to text. Solution: Install and use the

recommended "Baidu Input Method" together, and the use will be smoother.

4.6 When the "OmniSpeak" app is running in the background on some Android phones, there is no response when pressing and holding the voice control button, because some phones default to turning off the background self-starting, and you need to **turn on the "OmniSpeak" Auto launch in background** to restore it (the steps are as follows)


Steps: Settings→Applications & Permissions→Privilege Management → **Auto launch** → Allow "OmniSpeak" to Auto launch in background

4. Installation method



5. Tips

5.1 In order to open and use the "OmniSpeak" application more conveniently and quickly, after the application is installed, long press the "OmniSpeak" icon, and then pull down to the shortcut navigation bar at the bottom of the phone.

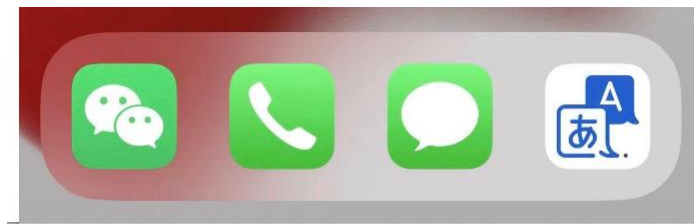

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure condition without restriction