

WHAT'S IN THE BOX

IMPORTANT SAFETY INSTRUCTIONS

The applied numpkin is located at the bottom of the battery base.

Only use your equipment, basic safety precautions should be followed to ensure your safety and the life of the electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. All setup is required.

38. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified areas may expose you to dangerous voltages or other risks. When not reassembled, can cause electric shock.

voltage points or create a short circuit. Never spill liquid

- [illegible]

5. Never place the baby unit(s) inside the baby's crib.

7. **Plugging into a wall outlet.** Do not plug the power cord into a wall outlet. The power cord is not designed to be plugged into a wall outlet. It is designed to be plugged into a power adapter. Other electronic products may cause interference with anything such as a towel or a blanket.
8. **Plugging into a power adapter.** Do not plug the power cord into a power adapter. The power cord is not designed to be plugged into a power adapter. It is designed to be plugged into a power adapter. Other electronic products may cause interference with anything such as a towel or a blanket.
9. **Plugging into a power adapter.** Do not plug the power cord into a power adapter. The power cord is not designed to be plugged into a power adapter. It is designed to be plugged into a power adapter. Other electronic products may cause interference with anything such as a towel or a blanket.

Precautions for users of implanted cardiac pacemakers

Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.

11. Do not plug the power adapter to replace them with another power adapter, use a surge protector.

12. Do not allow anything to rest on the power cords. Do not install the product where the cords may be walked on or crimped.

13. This product should be operated only from the type of power source indicated on the marking label. If you

- Should keep wife pacemaker.

13. Do not place this product directly over a fire or flame. Do not use this product in a closed space, with a limited ON.

14. WTRs evaluation does not identify any risks to bystanders with examinations from other persons using this device.

15. **Magnetomagnetic fields (MMF)**
All products regarding magnetomagnetic fields (MMF) if intended for people according to the instructions in this use manual, the evidence should be used as such based on scientific evidence available today.

16. The product should not be placed in any area where proper ventilation is provided. Staff and operators should be trained in the correct use of the product. To protect them from overexposing, these openings must not be blocked by placing the product in a closed space. A block of any kind of product should never be placed over a ventilation or register.

 BASIC OPERATION - PARENT UNIT

Adjust speaker volume

Press **vol** / **vol** to adjust your parent unit speaker volume. Press **Q** to zoom in or out.

The sound sensitivity setting also affects the speaker volume. For details, refer to **Sound sensitivity and sound activation**.



Talk to your baby unit

Press and hold **TALK** and speak to your parent unit. Your voice is transmitted to the baby unit.

Press and hold **LCD ON/OFF** to switch off the screen. You can still hear sound from the baby unit.






TIP

- Press any keys on the parent unit to turn on the screen.




3 POSITIONING THE BABY MONITOR



⚠ CAUTION

- The default volume of your parent unit is level 4, and the maximum volume is level 7. If you experience high-pitched screaming noise from your baby monitor while positioning:
 - Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart, OR
 - Lower the volume of your parent unit.



NOTE

- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones, and computers.


4 STATUS CHECK

Once you power on both your baby unit and parent unit, your parent unit displays images from the baby unit, and the **LINK LED** turns on.




2 POWER ON OR OFF THE BABY MONITOR


- 1 Slide the **ON/OFF** switch to power on or off your baby unit.

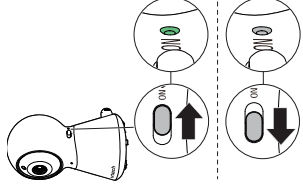


- 2 Press and hold POWER to power on or off your parent unit.

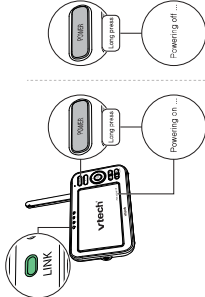

OVERVIEW - BABY UNIT

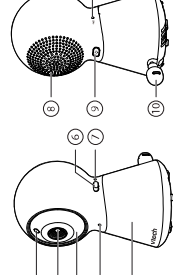

- | | | |
|---------------|----|-------------------------|
| Light sensor | 8 | Speaker |
| Camera | 9 | Night light on/off key |
| Gloss lens | 10 | Temperature sensor |
| Microphone | 11 | Pair key |
| Night light | 12 | Power jack |
| On/Off switch | 13 | Slots for wall mounting |



GET HELP WITH THE ONLINE TOPICS

For operations and guides to help you using your video monitor, and for latest information and supports, go and check the [online help topics](#) and [online FAQs](#).

Use your smartphone or mobile device to access our online help


- Go to <https://help.vtrichphones.com/vm5254>. Or
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.
- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.



11

Adjust sound detection sensitivity


With sound sensitivity setting, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level.



Parent unit setting	What happens?	You may experience...	What you could do...
Speaker volume: Low	Hear all background sounds.	Difficulty in hearing your baby's sounds. Background sounds are louder.	• Increase parent unit's high and lower sound. • If you are using a mobile or sound machine, set it to a lower volume (ideally to three decibels below the sound).
Sensitivity: Default	Only hear expected sounds at any level.	No sounds or cut in at the baby's expected sound level.	Increase the sound volume level if necessary.
Speaker volume: Max	Hear all background sounds.	No sounds or cut in at the baby's expected sound level.	
Sensitivity: Medium	Only hear expected sounds at any level.	No sounds or cut in at the baby's expected sound level.	

For details, please see **Adjust the sound sensitivity of the baby unit** in the User's manual.

NIGHT VISION

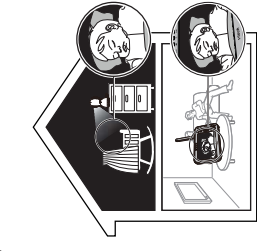


 NOTE

- It is normal if you see a short white **glare** on your parent unit screen as the baby unit is adapting to the dark environment. When the infrared LEDs are on, the images are in black and white. This is normal.

FOR VM5254-2 ONLY


Status check - Two baby units

If you are viewing baby unit , the **POWER LED** light of baby unit  turns on. As baby unit  is not being viewed, its **POWER LED** light flashes.




Change different views - Single CAM

In **Single CAM** or **Patrol** mode, press **VIEW** to switch between the image of baby units 01 and 02.




Change different views - Patrol

Select **Patrol** as your monitoring mode to alternately view the image from baby unit and every 10 seconds.




Change different views - Split

Select **Split** as your monitoring mode to view the images from both baby units at once.




Sound activated screen

When sound activation is on, the parent unit screen stays off to save power when the baby unit detects no sound. Once the baby unit detects sounds that are louder than the chosen sound sensitivity level, the parent unit screen then turn off again after 50 seconds of

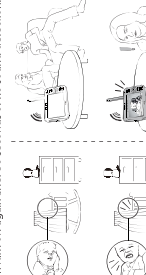 DIM MODE

With dim mode preset to on, your parent unit display will dim to conserve energy after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

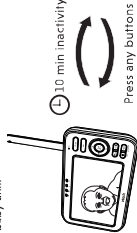

- If you do not want LCD to dim automatically, turn off the Dim Mode

THE RBRC® SEAL

[illegible]

FCC AND IC REGULATIONS

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the FCC Part 15.

Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may interfere with radio communications. If this equipment does cause harmful interference to radio communications, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada
This device contains ~~science-exempt~~ transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development

This term "C:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 19 (7.91 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

CALIFORNIA ENERGY COMMISSION BATTERY
CHARGING TESTING MODE

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor set up is set to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the CEC battery charging mode is activated while it is powered off and charging.