


Cooleye


1、Preparation

Type	Name	Quantity
Hardware	Mini USB cable	1
	Opto-electrical writing pen	1
	Cooleye	1
Software	Software named SmartPointer4.3.4.10	1
	Dbgview.exe	1

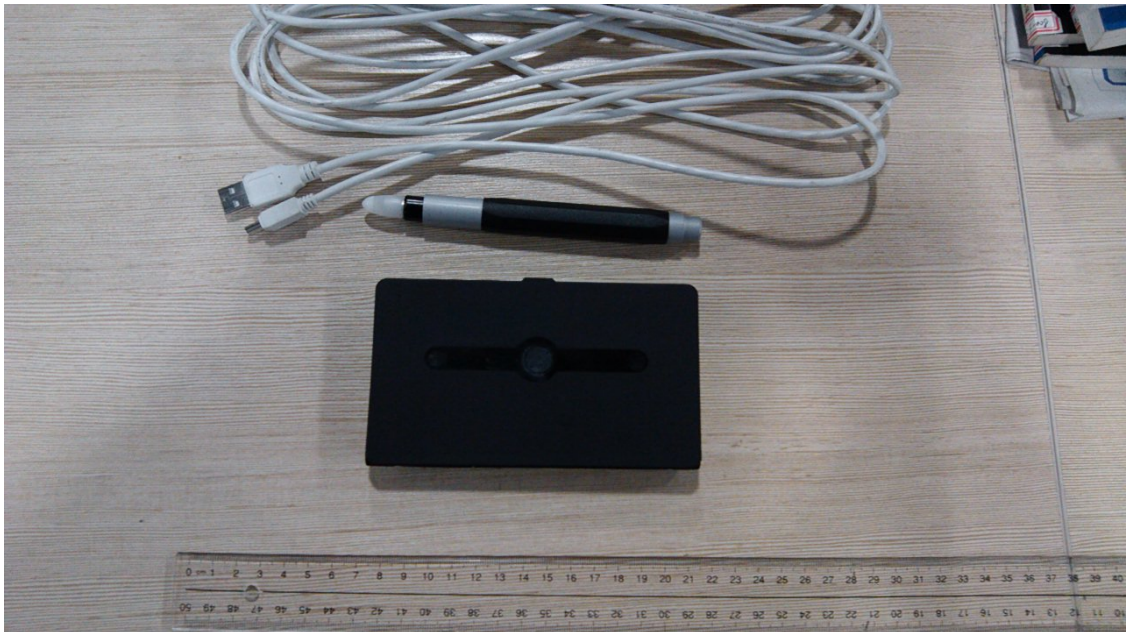

2、Connect device

Use one Mini USB cable to connect USB port of PC and the mini USB port of the device.

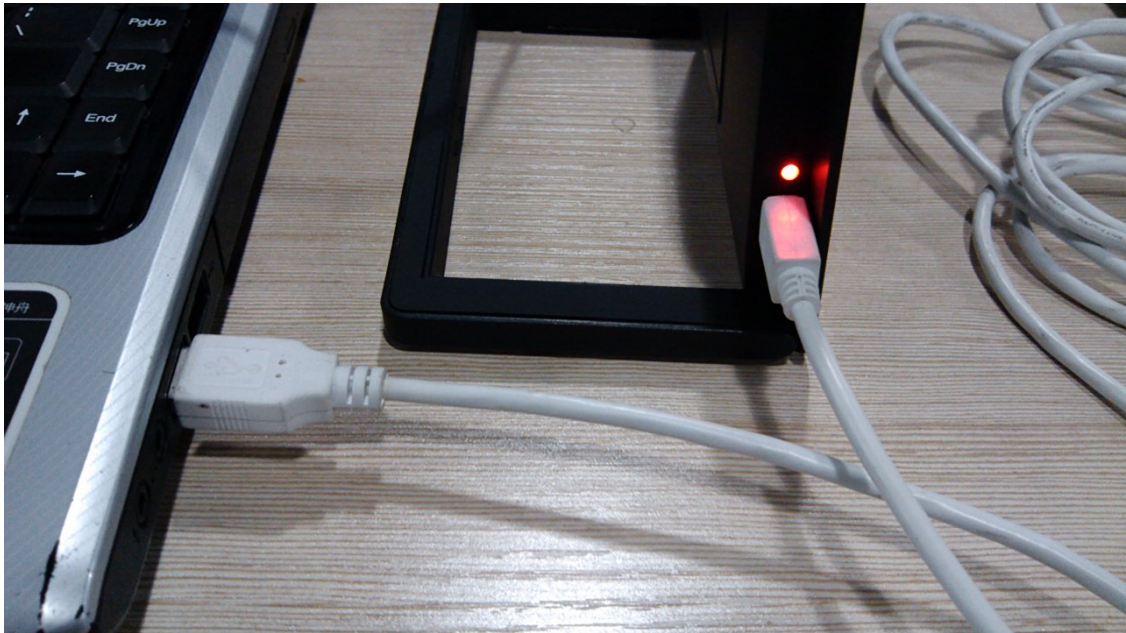

3、operate device

3.1 run SmartPointer software (see 3.1.1), it'll show a green icon in the taskbar tray icon (see 3.1.2)

	
Figure 3.1.1	Figure 3.1.2

3.2 Run the Dbgview.exe software, use your hand to press the pen point while the light pen is straight toward the equipment lens. When the pen emits infrared light, there'll be some related data output, which indicates that equipment is working properly.



DebugView on \\WWW-0205ACBF971 (local)			
File Edit Capture Options Computer Help			
#	Time	Debug Print	
92	288.446...	[3164]	Device Data: X=2760,Y=3240
93	291.670...	[3164]	Device Data: X=2760,Y=3240
94	298.493...	[3164]	Device Data: X=2760,Y=3248
95	306.295...	[3164]	Device Data: X=2760,Y=3240
96	307.186...	[3164]	Device Data: X=2760,Y=3248
97	307.769...	[3164]	Device Data: X=2760,Y=3240
98	307.906...	[3164]	Device Data: X=2760,Y=3240
99	308.302...	[3164]	Device Data: X=2760,Y=3240
100	308.489...	[3164]	Device Data: X=2760,Y=3240
101	308.678...	[3164]	Device Data: X=2760,Y=3240
102	308.866...	[3164]	Device Data: X=2760,Y=3240
103	309.227...	[3164]	Device Data: X=2760,Y=3240
104	309.518...	[3164]	Device Data: X=2760,Y=3248
105	309.655...	[3164]	Device Data: X=2760,Y=3240
106	310.718...	[3164]	Device Data: X=2760,Y=3240
107	310.771...	[3164]	Device Data: X=2760,Y=3240
108	311.541...	[3164]	Device Data: X=2760,Y=3240
109	311.542...	[3164]	Mouse Event: X= 760,Y= 393
110	311.562...	[3164]	Mouse Event: X= 760,Y= 393
111	311.628...	[3164]	Mouse Event: X= 760,Y= 393
112	314.148...	[3164]	Device Data: X=2760,Y=3240
113	315.760...	[3164]	Device Data: X=2760,Y=3240
114	315.932...	[3164]	Device Data: X=2760,Y=3240
115	322.104...	[3164]	Device Data: X=2760,Y=3240

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

