

AH-101 Wireless Hands-Free Kit USER MANUAL

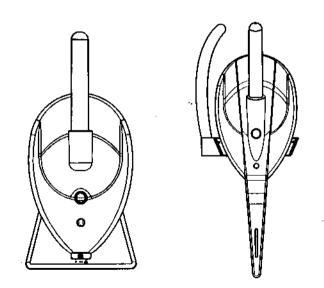


COMPLETE SETS


1. BASE

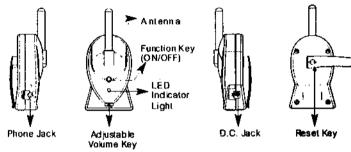

2. HEADSET

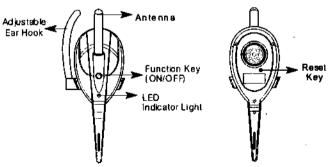

- 3. Adapter
- 4. Connection Cable
- 5. Converter (Option)
- 6. Adjustable Ear Hook

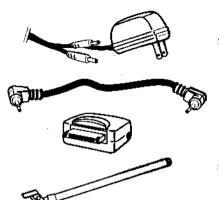

OPERATION

1.Charging the Base & Headset:

[A] We recommend that you charge the Base & Headset simultaneously before using it for the first time. [B] During charging the indicator light shows a red light until the indicator light put out when the battery is fully charged. (The battery must proceed charging more than 8 hours for the first time.)

2.Setting the Link Code: (Before using this product for the first time.) [A]

Simultaneous press & hold the function keys of Base and

Headset 4 seconds more then release the buttons. the indicator flashes green light change to green light when the link code has completed a setting. [B] Press the

function key of Headset again, to turn-off the indicator green light; the indicator green light change to flash green light on the Base. The Base enter into standby mode.

3.Setting the Mobile Phone:

[A] Please set-up Mobile-phone in "Auto. reception" status. (Please refer to your user manual of Mobile-phone.)

[B] The connection cable (Item 4.) links between the phone jacks of Mobile-phone and Base. If you can not find out phone jack on your Mobile-phone, first of all, please install the converter (Item 5.) on the end of Mobilephone and the connection cable links between jacks of converter and Base.

4.Setting the Headset:

[A] If you want to wear the Headset on your right or left ear, you have to change the orientation of the ear hook. Please gently pull the ear hook (item 6.) from the right or left of the Headset.

5.Starting use: [A] Receiving calls - press "function key" of the Headset,

time.

times.

the indicator light shows a green light, you will receive & answer immediately. [B] Making calls - press "functionkey" of the Headset, the indicator light shows a greenlight, after dial as you normally would. [C] End the calls press "function key" of the Headset and end off your Mobile-phone, the indicator light will be put out and return to standby status. [D] Adjusting the volume - Please adjust the Headset talking volume for the other side during a call and adjust a volume key on Base. (• • medium volume ; . increase volume ; . decrease volume.) [E] Battery low warning - Under the following status, you will soon need to recharge the battery. □ "Beep, Beep" voice will remind you to recharge the battery on Base. □ "Doo, Doo" voice will remind you to recharge the battery on Headset. [F] Turning the Base On/Off On - Press the function key of the Base then release the button, turn-on after the indicator light flashes one (1)

Off - Press the function key of the Base then release the button, turn-off after the indicator light flashes three (3)

THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTER-

THIS DEVICE COMPLIES WITH PART 15 OF

FERENCE RECEIVED, INCLUDING INTER-FERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAUTION

1. Do not use any other power adapter than "AH-101 original". Failure to do so may result in no tally of specification, damage to this product.

2. When the product can not combine the link code of the Base with the link code of the Headset, please repeat the step (2). [A].