


Using your scale

Your 35 lb. scale can be used with both the Stamps.com software and the Stamps.com website. Click the "Weigh" or "Read Digital Scale" button to transfer the weight from the scale once, or select the "Auto" checkbox to transfer the weight from the scale to Stamps.com whenever the weight on the scale changes.

software:

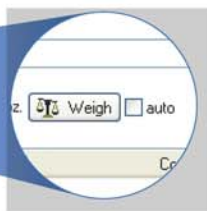

website:



My scale is not powering on.

Make sure that the USB cable is properly plugged into your scale and computer and press the ON/OFF/TARE button again. If this doesn't work, try using a different USB port on your computer.

The weight is not being transferred from the scale to Stamps.com.

Make sure the USB cable is properly plugged into your scale and computer, then press the ON/OFF/TARE button again. Click the "Weigh" or "Read Digital Scale" button in the Stamps.com software or website. If prompted, download the required plug-in.

How do I tare or zero the scale?

Place the box, envelope, or any other object you want to tare on the scale, then simply press the ON/OFF/TARE button on the front of the scale.

How do I hold the weight on the display?

Simply press the HOLD button on the front of the scale.

Need additional support?

Call 1-800-434-0055, M-F, 6 am-6 pm PT or visit www.stamps.com/support.

Warranty

Your Stamps.com Digital Scale has a one (1) year limited warranty against faulty workmanship and/or materials. Warranty period shall be defined as the earlier of: one (1) year from the date listed on your proof of purchase or bill of sale (or) one (1) year from the date on which your trial period ends. Should your product prove defective during the warranty period, please visit www.stamps.com/returns for more information and instructions on how to return or exchange your scale. This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, or modification of, or to, any part of the product. This warranty does not cover damage due to improper operation or maintenance, or attempted repair by anyone other than a facility authorized by Stamps.com to service the product. This warranty is valid only in the United States. This warranty is invalid if the factory-applied serial number has been altered or removed from the product. Except for the express warranty set forth above, Stamps.com disclaims all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Stamps.com shall not be liable for any incidental, special, punitive, economic or consequential damages for breach of any express or implied warranty on this product. To the extent exclusions of implied warranties are prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to one (1) year. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

stamps.com



Stamps.com Stainless Steel
35 lb. Digital Postal Scale

1

Place on flat surface.



The scale may display inaccurate weight if the surface is not flat.

2

Connect to computer.



Plug one end of the USB cable into your scale and the other into your computer, which will provide power for the scale and transfer the weight to the Stamps.com software or website automatically. If you do not want to plug the USB cable into your computer you may also use the supplied USB power adapter.

3

Turn it on.



The LCD display will illuminate if the scale is connected correctly.



FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- 