

WorldPenScan

AI Reader

MSE12

Tutorial

English

To know how to get started, please scan the QR code below, or access the URL.

Français

Pour savoir comment commencer, veuillez numériser le code QR ci-dessous ou accéder à l'URL.

Deutsch

Um zu erfahren, wie Sie loslegen können, scannen Sie bitte den unten stehenden QR-Code oder rufen Sie die URL auf.

Italiano

Per sapere come iniziare, scansiona il codice QR di seguito o accedi all'URL.

Español

Para saber cómo empezar, escanee el código QR a continuación o acceda a la URL.

<https://d.penpower.net/wpsair>



1. Product Description

WorldPenScan AI Reader is a portable scanning translation pen that is easy to carry.



This intelligent device combines technologies such as scanning, OCR (Optical Character Recognition), word lookup, translation, and text-to-speech. Paired with the dedicated ScanNote cloud-based learning platform, it enables effortless and effective learning by simply scanning over printed text in books.

◎ Package Contents

- Pen scanner x1
- Type-C USB cable x1
- Quick guide and warranty card x1

◎ Product Specifications

- Product Name: WorldPenScan AI Reader
- Screen: 3.69 inches (resolution 640*172)
- Capacity: 8GB
- Wi-Fi: 2.4GHz and 5GHz
- Lens: 2 mega pixels
- Use environment: 0° C ~ 45° C
- Product size: 151.7*31.5*14.5mm
- Speaker: 8 ohm 1 watt single speaker
- Transmission and charging cable: USB Type-C
- Battery: 1200mAh rechargeable lithium polymer battery
- Earphone: Bluetooth earphones and USB Type-C earphones can be supported. (May not be compatible with a very few models of USB Type-C earphones)
- Memory Card: TF memory card (micro SD), supports up to 32GB

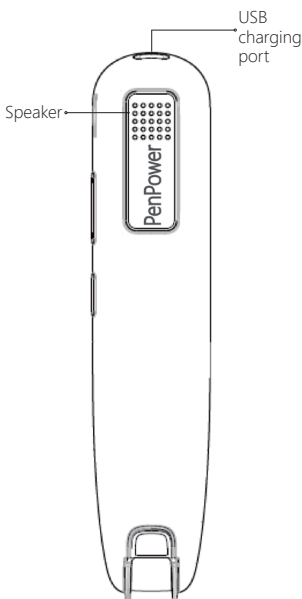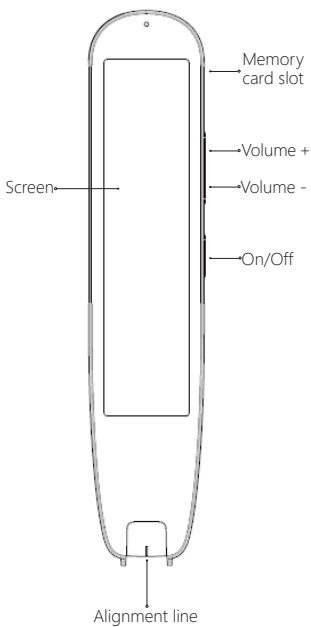

2. Function Introduction

◎ Power On/Off

Long press the 【On/Off】 button for about 3 seconds.

◎ WiFi Connection


Tap 【Settings】 icon , find the 【Wi-Fi】 option, and tap to enter. Turn on the Wi-Fi switch and select the Wi-Fi hotspot you want to connect to. Once the Network icon appears in the top right corner of the screen, the Wi-Fi connection is successful.

When using this product outdoors, you can choose to use the mobile hotspot for Wi-Fi connection.


Note: This product only supports Wi-Fi connection for transmission and does not support Bluetooth connection for transmission.

◎ How to Scan

Hold the pen, aim the alignment line on the pen tip to the middle of the text, gently press down the pen tip to let the light bright up, then drag the pen to the right at a steady and constant speed, and lift the pen at the end of the text to finish scanning.



Note: Please tilt the pen tip slightly to let it touches the paper surface.

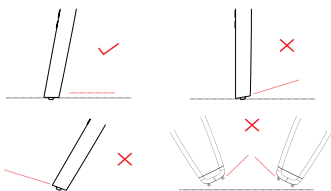

© **Instant Translation**

Tap **【Instant Translation】** icon to enter and scan sentences on the book, then the translations will show up. You can tap the speaker icon button in front of the sentence to pronounce it.

Swipe from the right side of the screen to the left to open the menu, where you can customize settings such as recognition language, translation language, pronunciation settings, and scanned content editing.

© **Read to Me**

Tap **【Read to Me】** icon to enter.

After scanning the sentences from a book, it displays and automatically reads the scanned content aloud.

Swipe from the right side of the screen to the left to open the menu, where you can customize settings such as recognition language, pronunciation settings, and scanned content editing.

© **ScanNote**

This product can be used on iOS/Android smartphones and Windows/

Mac computers, paired with the exclusive web app (ScanNote).

It offers features such as Text capture, Immersive reader mode, Instant translation, and Dictionary lookup, etc. Users can operate the functions based on their needs.


- **iOS / Android Smartphones**


After setting up the Wi-Fi network connection for WorldPenScan AI Reader, tap 【ScanNote】 icon to enter. Scan the QR code on the pen scanner with your smartphone's camera to open the web app (ScanNote). After the connection is completed, you can proceed with text scanning.

- **Windows / Mac Computers**

After setting up the Wi-Fi network connection for WorldPenScan AI Reader, tap 【ScanNote】 icon to enter. Follow the instruction to open the web app (ScanNote) (URL : <https://wps.evolaclass.com>) on a desktop browser. Enter the pen scanner ID on the web app and click 【Connect】 to complete connection, and then you can proceed with text scanning.

- **ScanNote function introduction**

Text capture : Click the  (Text capture) button for using the 【Text capture】 function and start scanning texts to extract the content.

Note: If you need to directly scan text to MS Word /Outlook and other application software, please click the  (download software) button to download and install an exclusive desktop software (Windows/Mac). Once



Warranty Card

Thank you for purchasing PenPower product.

Please register your product on www.penpower.net/reg.html to ensure warranty service:

- **1 Year Warranty**
- **Software Updates**
- **Technical Support**

Note:

- The warranty period begins on the purchase date, standard warranty period ends 12 months after the purchase date.

- Product warranty is limited to the origin of purchase. Users might pay a service fee when requesting warranty service in different country.

- A copy of the official invoice must be submitted as proof of purchase for warranty service.



PenPower

Warranty Card



Product Name: _____



Purchase Date: _____


Dealers Signature


PenPower Technology Ltd.


www.penpower.net

the installment and connection are completed as instructed, you could start scanning directly to MS Word.

Immersive reader mode : Click the  (Immersive reader mode) button for using the 【Immersive reader mode】 function, which provides functions such as automatic read-aloud following, line focus, reading mode setting, and full-screen display to enhance your concentration and comprehension while reading.
Note: On a smartphone, please tap  (More) to navigate to 【Immersive reader mode】 function.

Instant translation : Click the  (Instant translation) button, you can scan the entire sentence or a paragraph to get the translation.

Dictionary lookup : Click the  (Dictionary lookup) button, you can scan the word to look up the definition of the word after selecting the dictionary you want to use.

Vocabulary Book : Click the  (Vocabulary Book) button to access a collection of preloaded English vocabulary books designed for exam preparation. You can review your learning progress through vocabulary quiz mini-games or create your own vocabulary book to add words that need extra practice.

- For more detailed information about ScanNote's features, please scan the QR code below, or access the URL:
<https://d.penpower.net/wpsairfaq>



◎ Settings


Tap 【Settings】 icon to access options for configuring Wi-Fi, Bluetooth, volume, brightness, date and time, standby time, automatic shutdown, interface language, pen-holding method, and system updates.

◎ MP3

Tap the 【MP3】 icon to enter and play MP3 music files. You need to manually copy MP3 files to the Music folder on the device or the memory card.

◎ USB Charging

When the system prompts that the battery is low, please charge it in time. It takes 2-3 hours to charge the pen.

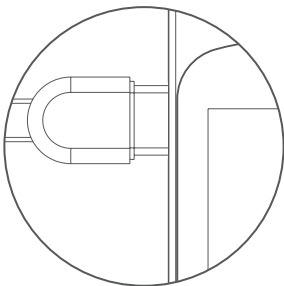

Please use the specific USB Type-C cable with the certified DC5V---1A adaptor to charge.

◎ Volume Adjustment

Press 【Volume+】 / 【Volume -】 buttons to adjust the volume.

◎ Force Shutdown

Long press the 【On/Off】 button for at least 10 seconds, the system will force shutdown, then you can turn the device on again after then.

◎ System Update

Tap the 【Settings】 icon, find the 【System Update】 option , and tap to enter to check the system version. Select the 【App Update】 icon to check if an update is needed. If a new version is available, the files will be downloaded, and the system update will proceed once the download is complete.

(Note: Before the system update, make sure that the pen scanner is connected to a Wi-Fi network and has sufficient power (more than 50%, and the USB cable is connected to keep charging), please do not do any operation during the system installation to avoid system installation interruption and upgrade failure, and lead to the pen cannot be used normally!)

3. Usage Notice

◎ Safety

- This product is strictly prohibited from being exposed to direct sunlight or extreme environments such as high temperature and heat.

- This product is not a toy. It is not suitable for children under 4 years old to use alone. Children should use this product with their parents.
- Do not soak this product and its accessories in liquid.
- Before using the charger, you must check whether the wires, plugs, shells and other parts are damaged. If damage is found, stop using it until the repair is complete.
- This product can only be used with the recommended power supply (recommended power supply specification: 5V-1A), and the power supply that compliance with certification specifications and meets the standard requirements should be used.
- Built-in 1200mAh lithium polymer battery cannot be removed or replaced. If damaged, please contact after-sales service and repair it.
- The charger is used by or under adult supervision.
- For the safety of you and your children, we have made charging protection and cannot be used while charging.

Cautions

1. Non-professionals are not allowed to replace the battery. If the battery is replaced incorrectly, there will be a safety hazard.
2. Only use the same type or equivalent type of battery to replace.
3. For your safety, please do not expose the battery in the product to overheating environments such as the sun or fire.

© Troubleshooting

Error	Solution
Boot failed	Charge the pen
Computer can't detect the pen	Use the specific USB cable
Touch screen doesn't respond	Long press the power button for 10 seconds to force shutdown and boot again
No scan results	Scan with the correct pen holding posture
Others	Contact customer service


For more detailed answers to frequently asked questions, please scan the QR code below, or access the URL:

<https://d.penpower.net/wpsairfaq>



WorldPenScan AI Reader

User Manual

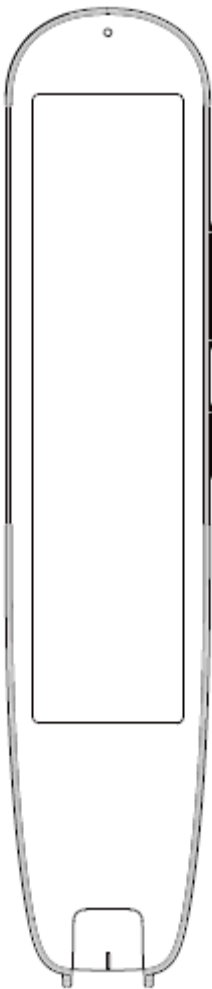

This manual contains important information, please keep it for future use.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against

harmful interference in

a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no

guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to

which the

receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the

following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party

responsible for compliance

could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

IC Statement

The device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;

2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

- RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Déclaration d'exposition RF:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.