



BLUESPOON™ JOINING USER

NEXT) LINK.TO

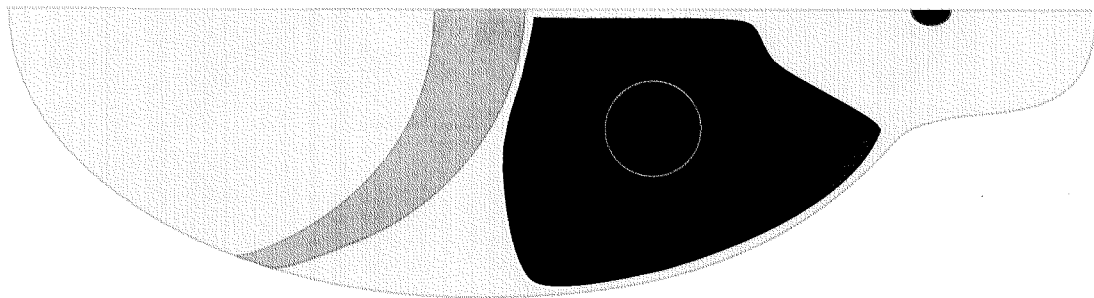

Contents :

Safety and General Information.....	4
Introduction.....	7
Bluespoon™ Basics.....	9
Using Your Headset	14

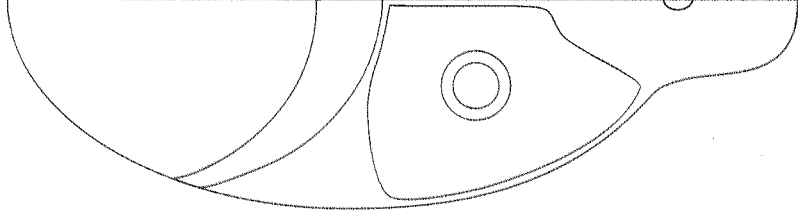

Safety & General info.

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

Electromagnetic Interference/compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your headset in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Safety & General info.

Aircraft

When instructed to do so, turn off your headset when on board an aircraft. Any use of the headset must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless device and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone and Bluetooth™ headset more than 15 centimetres (six inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone and Bluetooth™ headset in the breast pocket.
- turn OFF the phone and headset immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

Simultaneous use of a CIC- hearing aid and the Bluespoon™ headset is not possible due to lack of space in the ear.

Safety & General info.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

FCC Notice to Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Introduction

What Is Bluetooth™ Wireless Technology?

Bluetooth™ wireless technology propels you into a new dimension in connectivity, Bluetooth™ devices communicate without wires, using built-in radio transceivers that operate on a globally available radio frequency to ensure worldwide compatibility. Your Bluetooth™ Wireless Headset can communicate with other Bluetooth™ devices within a range of approximately 10 meters (33 feet).

How Can I Use My Bluetooth™ Wireless Headset?

The Bluetooth™ Wireless Headset lets you connect with another Bluetooth™ device supporting the headset profile.

- Use your phone hands-free.
- Handle incoming and outgoing calls with the headset multifunction control buttons.
- Use voice activation to make calls.

What Is Included in This Kit?


This package includes the following:

- Bluetooth™ headset - Bluespoon™
- Bluespoon™ charger
- Bluespoon™ user's guide
- Bluespoon™ mini-cd support
- Alternative soft spring

Introduction

Headset Features

- | | |
|-------------------------------------|---|
| 1 - Headset Indicator lights | Provides visual cue about headset status. |
| 2 - Multifunction Buttons | Controls all headset functions. |
| 3 - Boom | Contains microphone |
| 4 - Microphone | Picks up your voice input. |
| 5 - Soft spring | Attaches headset to ear. |
| 6 - Speaker | Plays the sound you receive on the call. |
| 7 - Charging Port | Receives the plug for your battery charger. |

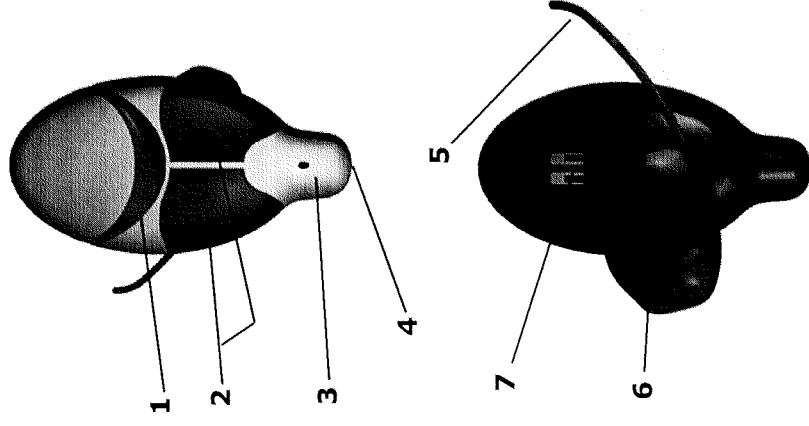


Bluespoon™ Basics

Turn headset ON

Hold down both buttons for 2 seconds

The user will hear a sequence of beeps going from low to high tones.

The blue headset indicator will start lighting every 20 seconds, indicating that the headset is ON.

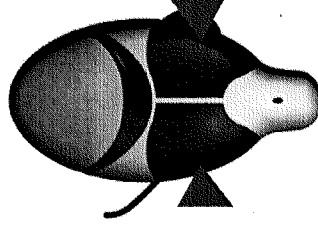

(The first time you turn the headset ON, it will automatically go into pairing mode, see page 12.)

Turn headset OFF

Hold down both buttons for 2 seconds

The user will hear a sequence of beeps going from high to low tones when the headset is turned OFF. Both the blue and red headset indicator will show a quick flash of light.

Bluespoon™ Basics

Only with headset turned ON

Answer a call

Push any of the two buttons

When the phone receives a call, the headset generates a ring tone, and the blue headset indicator starts blinking fast.

During conversation the blue headset indicator lights every 10 seconds.

Initiate a call with phone

Activate call from phone

As placing a call normally. The phone will transfer the call to the headset automatically.

Initiate a call with the headset (voice dial)

Hold down one of the buttons for 1 second

When the headset and the phone are ready for voice-dialling, the user receives a beep from the headset. The user can now say the name stored in his or her phone - the Voice Tag. If the voice tag is recognized by the phone a call is activated, otherwise the headset will again go into ON mode.

BATTERY STATUS **Low battery indicator**

Red headset indicator flashing every 20 seconds.

Bluespoon™ Basics

Only during an active call

Answer a call waiting

While having first call initiated, push both buttons simultaneously to shift to second call. The user will hear two beeps when another call is received.

Return to first call

Push both buttons simultaneously to return to first call. Returning to first call will terminate second call. Another option will be to switch between calls on the phone.

End a call

Push both buttons simultaneously. This will send the headset into ON mode and the headset is again ready to receive a call.

VOLUME

Increase headset speaker volume

Push right button

(when maximum volume level is reached you will hear a beep)

Decrease headset speaker volume

Push left button

(when minimum volume level is reached you will hear a beep)

BATTERY STATUS

Low battery indicator

Red headset indicator flashing every 10 seconds

(during conversation 2 beeps will be heard every 30 seconds)

Bluespoon™ Basics

Only during charging

LED on charger

Headset correctly placed in cradle

Red indicator on charger lights

Battery fully charged

Red indicator on charger turns off

Only with headset turned off

PAIRING MODE

Get headset ready to pair with phone

Hold down both buttons for approx. 7 seconds

Both the blue and the red headset indicator will start blinking.
The passkey for pairing the headset with the phone is 3333.

First the user will hear a sequence of tones identical to the tones generated when turning the headset on.

This is followed by a long sequence of tones. If the pairing is successful the red and blue headset indicator sequence will stop and the headset will be in ON mode ready to receive calls.

Bluespoon™ Basics

Total power OFF

1. Place the headset correctly in the charging cradle.
2. Unplug the charging cradle from the adapter.
3. Remove the headset from the charging cradle.

Total power ON

1. Place the headset correctly in the charging cradle.
2. Make sure the charger wall adapter is plugged in the wall socket.
3. Remove the headset from the charging cradle.

Please refer to the Bluespoon™ mini cd-rom for further information.

Using Your headset

Charging Your headset

WHEN TO CHARGE :

First-Time Use - Before you can use your headset, you need to charge its self-contained battery for eight hours.

Recharging - When the red indicator on the headset starts flashing the headset battery needs to be recharged (during conversation two beeps will be heard every 30 seconds).

During charging the red indicator on the cradle shows a steady light.

When the battery is fully charged the red indicator on the cradle turns off.

