


ry
PCS new AA alkaline batteries
the mouse upper cover and pull the
(Please see the reference picture)
es correctly according to the polarity
oves.

rs forward, when you hear "crack"
s the battery cover is locked

or, please use the USB to PS/2 adaptor
nector before your computer start-up.
nect the receiver directly with the USB

ere is a little far between the case and
s suggest you use an extended USB
case and the receiver, so you can place
orking surface conveniently.

Press the button to

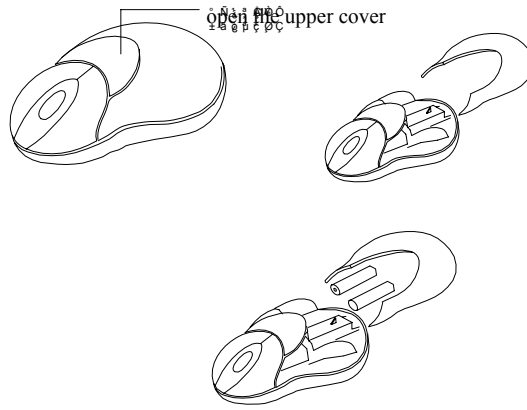

Then press the button of the

ID Setup

1. Please move the mouse near to the receiver
2. Press the ID button of the receiver by your hand, the receiver light begin to flash
3. Press the ID button of the mouse bottom with some hard and acute object within 10 seconds, the receiver light will flash very fast, a few seconds later it will be on which shows it is successfully to finish the digital transmission between the mouse and the receiver. You may start to use it.
4. Working distance: within 1-2 meters.

Attention Please

1. Please don't make the mouse work more smoothly.
2. You'd better use the mouse batteries can be used longer the mouse will not be used for
3. This mouse with save power key or scroll the wheel to wak
4. If you want to take off the m the ID switch of the mouse take on the power,please clic
5. The optical mouse will not v any reflecting surface, 3D m
6. No need to check the digital change the batteries, if mor above way to re-operate.

Caution

Any changes or modificatio