

A5 3D Air Mouse IM



FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




Item No: **A5**

This is a multi-function mouse special design for the businessman and home entertainment, with 3D technology, it is make you fully enjoy the happiness bring from the high-tech.

This Mouse no need any longer connection cable and no need to again to the code. Meanwhile, it' makes using multi-2.425-2.475GHz Air mouse in the same space come true.


This mouse not only can use in the desktop, but also can freely use in a 360 degrees in the air, like you can use freely in the Speech, in the classroom, in home and so on.

Packing List

 <p>Wireless Mouse</p>	 <p>receiver</p>	 <p>Two AAA alkaline batteries</p>		
---	---	---	--	--

Mini reciver connector

- 1, Push away the battery cover according the arrow show in the right picture;
- 2, Take out the receiver show as the right picture;
- 3, Insert the receiver in the computer USB port;

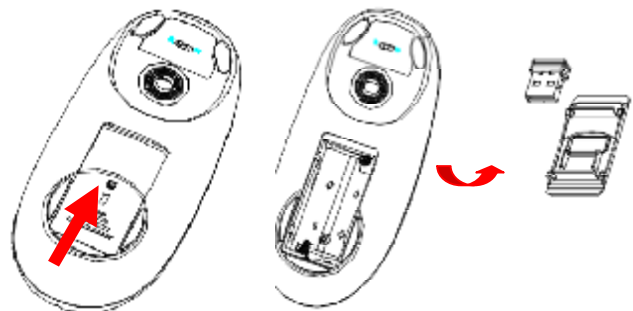


When the receiver inserted in the USB port will show below information which mean the receiver have Connected with your computer;



Insert battery

This A5 use two AAA alkaline batteries。

1. Open the battery cover;
2. Put the two batteries, show as the picture;
- 3, Please attention that the battery belt show in the below of the batteries,

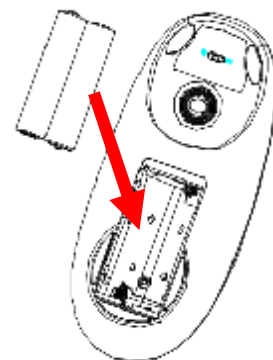

which is convenience for take out the batteries when in necessary;

4, Recommend to use the AAA alkaline battery.

Connection of the receiver and launcher

1, Switch on the Power on/off button, the Green status means switch on, red status mean shut off.

2, The low battery led on the top of the scrolling wheel will flick 3 seconds then goes out, this show the receiver connected successfully with the launcher.

3, Staring the mouse, then you can enjoy the convenience and fast wireless technology within 10 meters.



Software Setup

Compatible with all WIN 2000/XP/VISTA/WIN7system. No need driver .

Mouse Using

Totally 8 keys ; Left button Right button

full screen Exit Full screen with PPT

Touch scrolling wheel, **A** : Air Mode Play/Pause



: Air Mode Volume up/down



1, Take touching technology for page up and page down, just touching forward and back, the page will turn, but please controlling the touching frequency;

2, The fault DPI is 1000; setting up the low power indicator in the front end of the touching scrolling wheel. This indicator

have two effects (1) signal indicate: When switch on will shining and finding the receiver (2) Low power indicate (when the battery is goes out, then the led will shining which indicate the low power)

3, Mouse will goes into sleep mode after 8 minutes, you need to press R/L button to wake up the mouse and rework, need about 3 seconds for rework.

4, This Air Mouse can controlling freely in the air in a 360 degree.

Checking The Battery Power

When the low power indicator shining slowly, means need change the battery. (only the led will shining when switch on and the power is lower, in normal working, will not shining).

Causes For No Mouse Connection

- 1, Check is the battery is full of power;
- 2, The Distance for using the mouse is within 10 meter between the mouse and the display;
- 3, Reset the receiver.

Function attention

- ! Please do not using in reflective surface or serious uneven Surface, this may effect the function of the Mouse.
- ! Please do not put together the Nano receiver with the Bluetooth receiver.
- ! Please do not dismantle the mouse and receiver yourself.
- ! Please use clearly and soft cotton cleaning the mouse.

Instructions for “Wireless”

This wireless products transmitting frequency is 2.425-2.475GHz, satisfied with EU R&TTE Directive1999/5/EC request, it's radiation effect is more smaller than the mobile phone, will not harms to human body. Wireless transmitting will lead to electromagnetic signal, so please be caution when using some physiotherapeutic instruments.

Instructions for battery

Please do not throw the battery into fire; Please put the old battery in the recycling bins when no using.

Warning

- 1, In order to avoiding conflict with the electronics equipment on the air, please do not using the wireless platform when in the air and insure has take out the battery from the mouse.
- 2, Please do not use the wireless platform when in danger circumstances, like gas station.



COMAT ELECTROICS(SHENZHEN)Co., LTD

Tel:86-755-81768335 Fax: 86-755-81768638

Website: www.comater.com

