



vaayu™

personal wirefree device
for net access
V140905

User manual and trouble shooting guide

First Edition (Oct 2005)

This manual is published by Innoviti Embedded Solutions, Bangalore, India, without any warranty. Changes and modifications to this, as required to correct typographical errors, inaccurate information or to incorporate improvements in the product, may be made by Innoviti at any time and without any prior notice. Such changes will be incorporated in the new editions of the manual. For the latest edition of the manual, please refer to www.innoviti.com.

All rights reserved

Copyright @ 2005, Innoviti Embedded Solutions, Bangalore, India.

Please contact your Internet Service Provider (ISP) to get required dial-up Internet service for using this product. This is not a part of this package.

vaayu™, DynaRF™ and ALE™ are trademarks or applied trademarks of Innoviti Embedded Solutions.

What do you get?

One Mobile Unit (MU)

One Base Unit (BU)


One Telephone cable

One Power Adaptor

One USB cable

One User manual


Get to know your vaayu TM

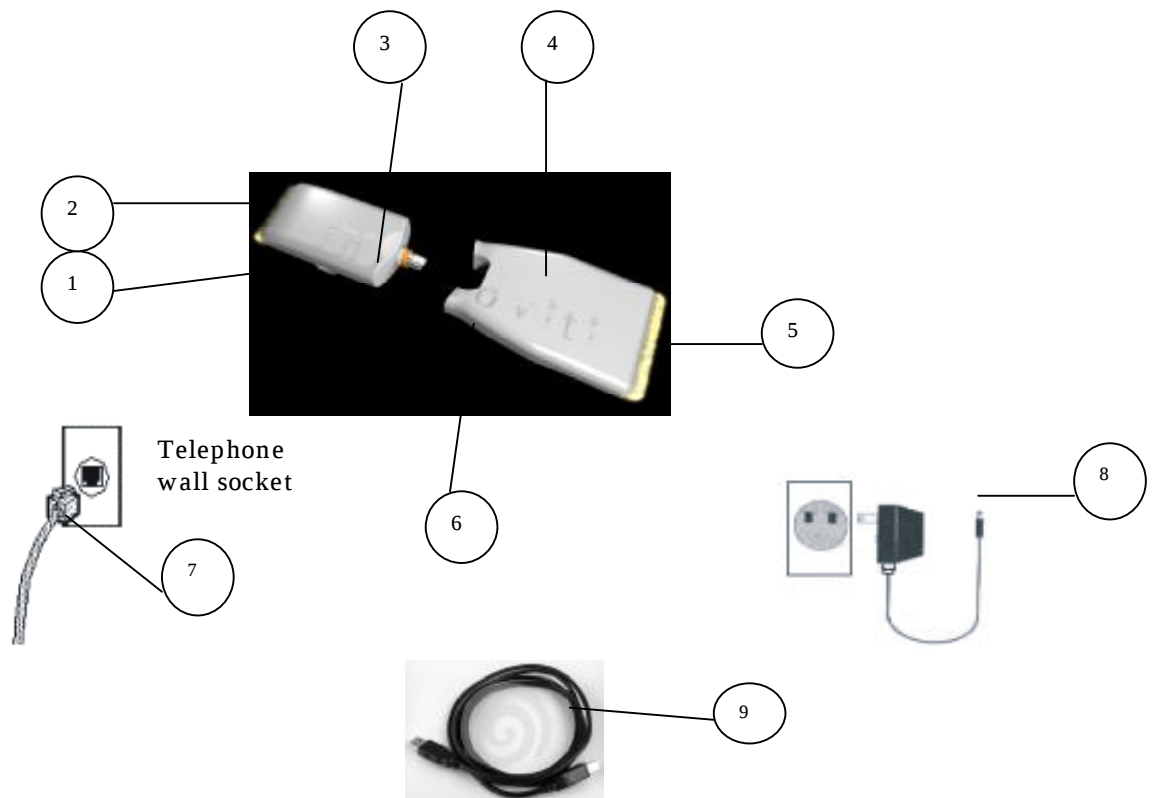

Product Details

1. Mini USB socket
Connects the USB cable's mini jack to this socket
2. MU power on indicator
Indicates MU is switched ON
3. MU RJ11 jack
Connects to Modem port (RJ11 port) on the laptop
4. BU power socket
Power adaptor jack connects to this socket
5. BU power indicator
Indicates BU ON status
6. BU telephone socket
Telephone cable from the wall connects to this socket
7. Telephone cable
Connects BU to the telephone wall socket
8. Power adaptor
Supplies power to the BU
9. USB cable
Supplies power to the MU

How vaayu TM works

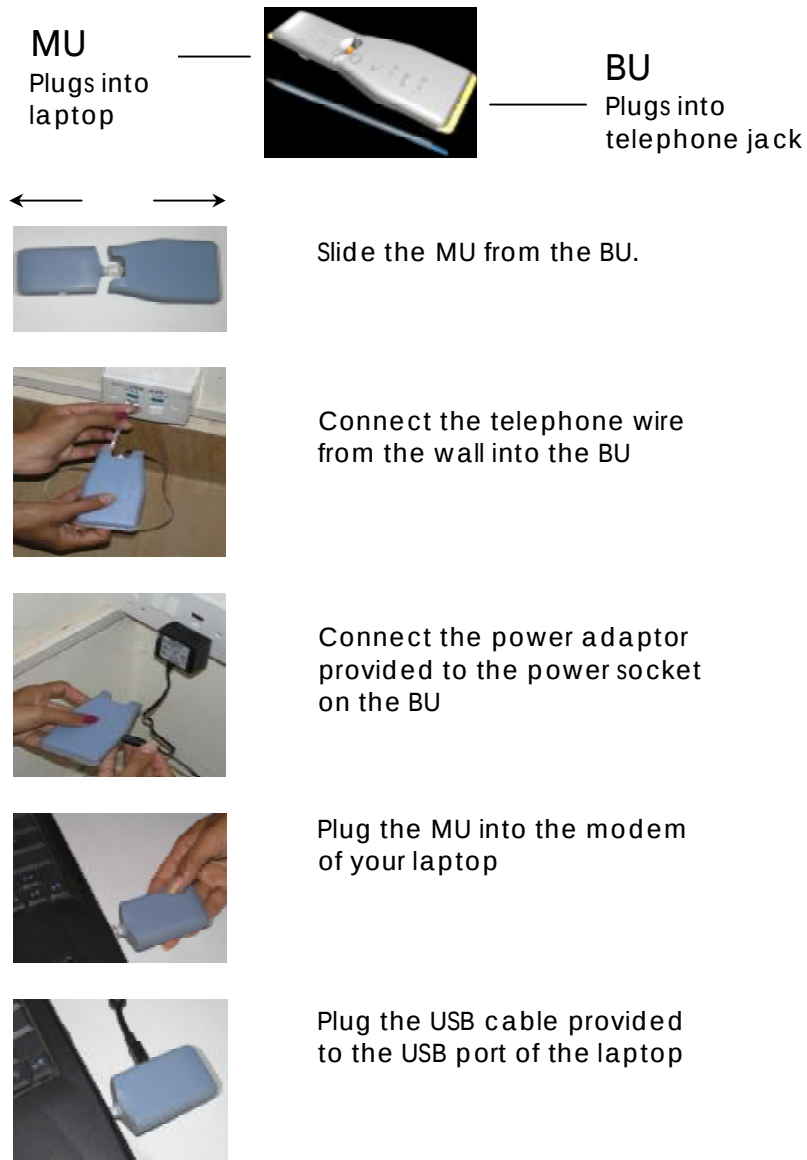

Do's and don'ts

1. Do not put the MU into wall socket
2. Keep away from strong magnetic fields
3. Handle all moving parts with care
4. Avoid sudden changes in temperature
5. Keep the unit away from liquid, moisture and humidity
6. Do not drop the unit
7. Please read the guidelines for safe use before using vaayu TM

Troubleshooting guide

No dial tone

1. Ensure MU and BU are powered ON
2. Ensure the telephone cable is connected to the BU and the wall socket
3. Ensure that no parallel phone is being used (active)
4. Bring MU closer to BU

Modem not able to dial out

1. Ensure the modem is in tone dialing mode

BU power indicator is not ON

1. Check whether adaptor is connected to BU
2. Check if the power switch on the wall is switched ON

If problem persists, contact Support (see contact details)

Specifications

Carrier frequency	903.5 – 926.5 MHz
Radiated output power	< 1mW
Technology	DynaRF TM with ALE TM
Power supply (BU)	230V, 20mA, 50Hz adaptor (+/- 10%)
Power supply (MU)	Through the USB port of the system
Input sensitivity	-95 dBm

Guidelines for safe use

Please read this information before using your vaayu TM hereinafter referred to as “Product”

Recommendations

1. Always treat your product with care and keep it in a clean and dust free place
2. Do not expose your product to liquid or moisture or humidity
3. Do not expose your product to extreme high or low temperatures
4. Do not expose your product to open flames or lit tobacco products
5. Do not drop, throw or try to bend your product
6. Do not paint your product
7. Do not use your product near medical equipment without requesting permission

Guidelines for safe use (Cont'd)

8. Do not place your product or install wireless equipment in the area above your car's air bag
9. Do not attempt to disassemble your product. Only Innoviti authorized personnel should perform service
10. Use power adaptor provided by Innoviti only

Disposing the product

Your vaayu™ should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

Children

Do not allow children to play with vaayu™ or its accessories. They could hurt others or themselves or could damage the product or its accessories. The product may contain small parts that could be detached and can create a choking hazard for children. Keep the product away from children.

Power supply

Connect the AC power supply adaptor only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adaptor must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug will not fit into the power outlet, have a proper outlet installed by a qualified electrician.

Limited warranty

Innoviti provides this limited warranty for your product vaayu™ and any original (Innoviti) accessory delivered with the Product at the time of purchase.

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Innoviti Service Center or visit www.innoviti.com.

Warranty

Subject to the conditions of this limited warranty, Innoviti warrants this Product to be free from manufacturing defects at the time of its original purchase by a user and for a subsequent period of ninety (90) days.

If, during the warranty period, the Product fails to operate under normal use and service, due to defects in manufacturing, Innoviti authorized distributors or partners will at their opinion, either repair or replace the Product in accordance with the terms and conditions mentioned on the website. Innoviti and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty as per the conditions cited in the warranty terms at www.innoviti.com.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



Support

Innoviti Communications LLC
3050 N Horseshoe Drive
Suite 198
Naples
Florida 34104

Tel: +1-239-430-8073
E-mail: support@innoviti.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

Specifications, product features subject to change without prior notice