

R-F MESSAGE PLUG SYSTEM

Users Manual

MODEL: BM11

Section #1

Unpacking & Assembling Your Base:


1. Remove the plastic covering from the batteries. Place the (4) AAA batteries in the remote. Verify batteries are properly installed. Push any button on the remote and the background will illuminate when working properly.



2. To synchronize your remote to the control box mounted on the base. Press the “CODE” button on the control-box, “LED” light will be on for 30 seconds, within the allotted time, press the “SET” button on the remote until the “LED” light goes off, this means code-setting between the remote and the controller box was successful.



3. Depress <Head> Up Button on your remote to verify the base operates and the remote is communicating with the control box. If base does NOT operate reference “Synchronizing Your Remote to the Controller Box” in Section 5.
4. Depress ON/OFF “Massage” buttons to turn massage motors on. Depress “Head” Up and “Foot” Up Buttons to verify massage motors are operating properly.

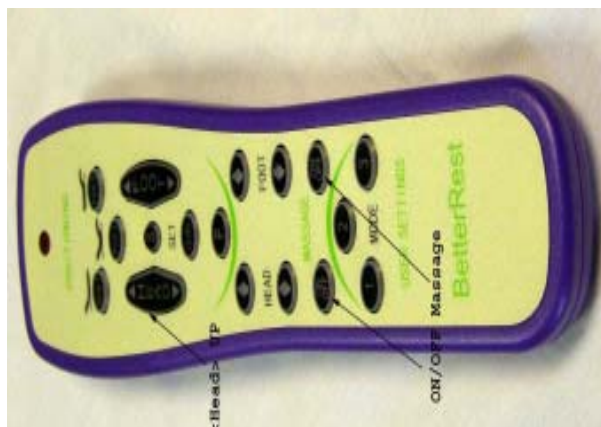

Section #2

ADVISORY

IMPORTANT INFORMATION

READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT

This BetterRest™ Adjustable Powered Sleep System has been designed with features to assure comfort and safety when operated properly.

FCC Regulation

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this Device may not cause harmful interference, and (2) this device Must accept any interference received, including interference that May cause undesired operation..

ELECTRICAL GROUNDING

This product is equipped with a polarized, grounded electrical power cord. The power cord will only fit into a grounded, electrical outlet.

WARRANTY WARNING

Do not open any control boxes, motors or hand control devices (with the exception of the hand control). The product warranty will be void if these components are tampered with. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Any repair or replacement of adjustable bed parts must be performed by authorized personnel.

LUBRICATION

This product is designed to be maintenance free. The lift motors are permanently lubricated and sealed-no additional lubrication is required. Do not apply lubricant to lift motor.

PRODUCT RATINGS

The bed lift motors are not designed for continuous use. Reliable operation and full life expectancy will be realized as long as the lift motors do not operate any more than three (3) minutes over a thirty (30) minute period, or approximately 18% duty cycle.

NOTE: Massage equipped beds are not designed for continuous, extended massage operation. Massage systems are rated for a maximum of 2 hours of use within any 6 hour period. Any attempt to circumvent or exceed product ratings will shorten the life expectancy of the product and may void the warranty.

WARNING

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

Section #2

ADVISORY

IMPORTANT INFORMATION

For best performance, consumers should enter and exit the adjustable bed with the bed in the flat (horizontal) position. **DO NOT SIT ON THE HEAD OR FOOT SECTIONS WHILE IN THE RAISED POSITION.**

ELECTRICAL COMPONENTS

BetterRest™ Adjustable Powered Sleep System electrical components are rated for 110/120 voltage, 50-60 Hz.

SMALL CHILDREN/ PETS WARNING

After the foundation is unboxed, immediately dispose of packaging material as it can smother small children and pets. To avoid injury, children or pets should not be allowed to play under or on the bed. Children should not operate this bed without adult supervision.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which it found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet other than the receiver's
- Consult the dealer or an experienced radio/TV technician for assistance.

Section #3


PRODUCT SPECIFICATIONS

MAIN POWER SUPPLY	110/120v A/C, 50-60 HZ
MOTOR OPERATING VOLTAGE	24 v D/C with 50 VA transformer with 30 minute cut off
MOTOR DUTY CYCLE	18% maximum operation 3 minutes
MASSAGE MOTORS	Two 24v, 2 variable DC motors, with 30 minute auto shut off
REMOTE CONTROL	4 x AAA 1.5v batteries
BATTERY BACKUP	1 x 9v battery

Section #4

Remote Control Operation:

Front View of Hand Control

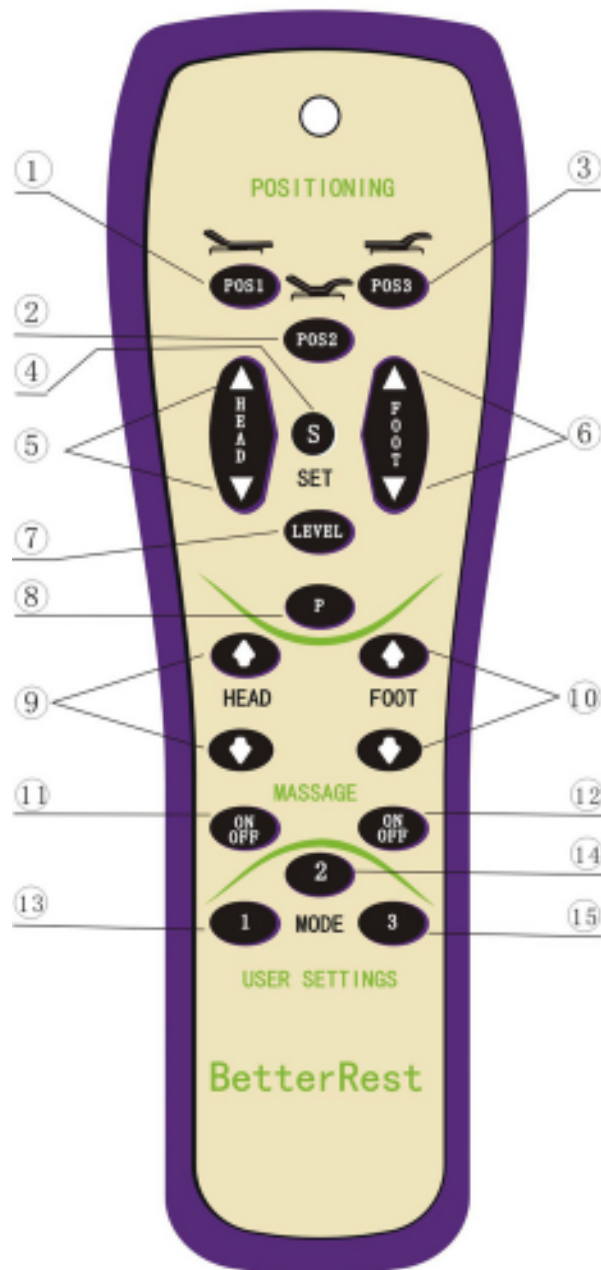

1. Pos 1 button
2. Pos 2 button
3. Pos 3 button
4. Set start-up code or hold pressing for two seconds to save preferences
5. Head portion obliquity adjusting
6. Foot portion obliquity adjusting
7. All portions level
8. Use preferences last saved
9. Head message intensity
10. Leg message intensity
11. Head message mode on/off
12. Leg message mode on/off
13. Mode 1 message
14. Mode 2 message
15. Mode 3 message

Section #4

Remote Control Operation Cont'd:

Pos 1 (Key 1): is a Pre Set Position for 'Back only'.

Pos 2 (Key 2): is a Pre Set Position for 'Back and Foot only'.

Pos 3 (Key 3): is a Pre Set Position for 'Foot only'.

The **Set Button (Key 4)** has Two main functions. It is used to program Any Remote Hand control to the Black Box by pressing the '**Key S (Key 4)**' and simultaneously pressing the **CODE** button (Explained in detail "Synchronizing Your Remote") on the controller box till the LED light on the box goes out. The user can **PRESS ONE** Hand control's **S** button and have **TWO 'CODE'** buttons simultaneously pressed on **TWO Black Boxes** (Wait till the **LED LIGHTS** go **OUT**) and the user can **Now** use **One hand control** to '**operate**' **2 BetterRest™ beds** simultaneously (no extra cords are needed for 2 Bed Base to operate with **ONE** hand control).

The remote control is now set to operate **ONE** or **TWO** beds and massage.

The **Set Button** is also used to memorize or save your favorite position or massage intensity. After finding your favorite setting using the 'Back and Foot' angle, press the **Set Button** until you hear 2 Beeps.

Then press the '**LEVEL (Key 7)**' and the bed goes to its flat position and the **On/Off** key of both massage.

To find your chosen position with or without massage, simply press the **PROGRAM Key P (Key 8)** and your favorite position with or without massage will be attained.

Key 5 (HEAD) and **Key 6 (FOOT)** are for independent adjusting to your chosen angle or degree.

The **Key 9 and 10** are for independent massage intensity by pressing the 'upper part' of the **Key 9 and 10** the massage becomes more intense and by pressing the 'lowerpart' of the keys the massage becomes less intense.

The massage motors are **TURNED ON/OFF** by pressing the buttons **ON/OFF (Keys 11 and 12)**.

User Defined Settings:

Keys 13, 14 and 15 are three 'Pre-Set' massage programs with different' massage wave motion'.


Massage Mode	Program 1
Massage Mode	Program 2
Massage Mode	Program 3

Note: If massage is utilized in '**FLAT**' position and '**MEMORY**' button utilized to save settings then the bed also memorizes the '**FLAT**' position. TO **UNLOCK** it press '**LEVEL**' button.

Section #5

Synchronizing Your Remote To The Controller Box:

Press the “CODE” button on the control-box, “LED” light will be on for 30 seconds, within the allotted time, press the “SET” button on the remote until the “LED” light goes off, this means code-setting between the remote and the controller box was successful.

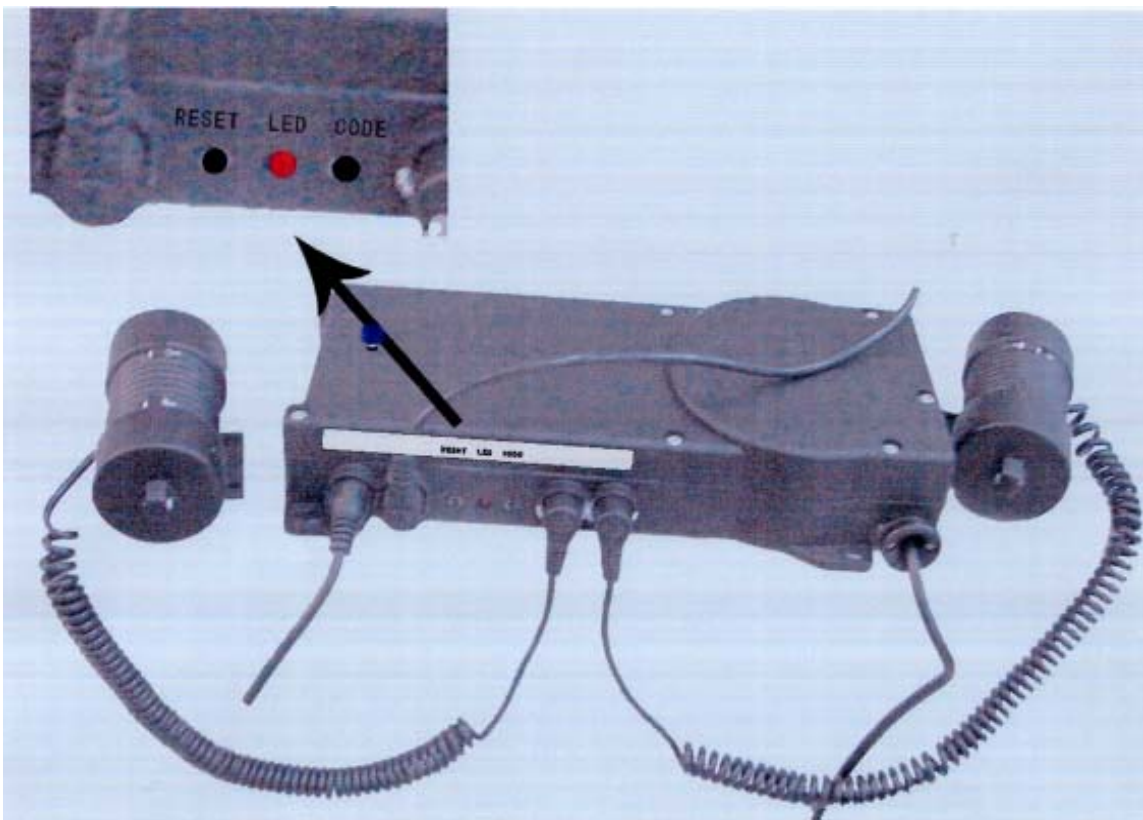

Section #6

Warranty Claims

In the event of a warranty issue, please call (800) 432-2225

FOR YOUR RECORDS

Jobri, LLC strongly recommends that you register your product and keep your receipt in a safe place with this manual.

DATE OF PURCHASE _____

SERIAL NUMBER _____

PLACE OF PURCHASE _____