

P268



CRYSTAL FOCUS™
COMMUNICATION DEVICES

Quick Start Guide

Welcome to
The New Generation of
Safety & Health

① Charge

Charge your **Crystal Focus P268**
for no less than 5 hours

② PAIR

- Switch on your mobile phone's Bluetooth® setting
- Long press the '**ON/OFF**' key for 5 seconds
- Red and Blue LED flash alternately
- Phone: 'Search for New Devices'
- Select "**Crystal Focus P268**", enter passkey "0000"

③ ENJOY

Say "Goodbye" to Electromagnetic Waves
and start enjoying your conversations

49MM

102MM

color : 1C

Menu

P268

77MM

48MM

48MM


48MM

48MM

48MM

P268 Overview


- Ⓐ Microphone ▶
- Ⓑ Non-electromagnetic bone conduction device is made in Japan by MMIT ▶
- Ⓒ Volume Control ▶
- Ⓓ Answer/end key ▶
- Ⓔ Multi-function micro **USB** plug ▶

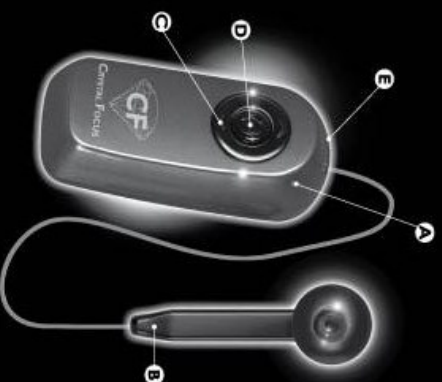

Inside the package

- | | |
|--|----------------|
| 1 Crystal Focus P268
(filled with the Out hanging type ear holder and ear piece) | x1 |
| 2 AC Charger | x1 |
| 3 In ear canal type ear holder | x2 |
| 4 In ear canal type ear pieces
(S)
(M)
(L) | x2
x2
x2 |
| 5 Out hanging type ear holder | x2 |
| 6 Out hanging type ear piece | x2 |
| 7 User Manual | x1 |
| 8 Warranty Card | x1 |

1 Charging

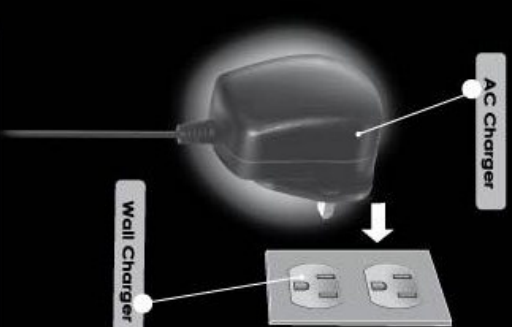

- Connect the **USB** charging connection to the Multi-function micro **USB** plug.
- Plug the **AC Charger** to the **wall charger**.

Charge the battery fully on first use.
Charge time: **5 hours** for the first time.
Red LED is lighted while charging.
Red LED is off when the headset is fully charged.
Red LED flash twice for every 30 seconds when battery is low.

48MM

48MM

48MM

48MM

48MM

Pairing

- In pairing mode, the **Red** and **Blue LED** flash alternately

TO PAIR

- Turn on your mobile phone's **Bluetooth**® setting
- Long press the **'ON/OFF'** key for **5 seconds** until the **Red** and **Blue LED** flash alternately (headset must be switched off to initiate)
- Select 'Search for New Devices'
- Select **'Crystal Focus P268'**
- Enter passkey **'0000'**
- Pairing mode lasts for **90 seconds**, or until successful pairing.

Talk

- Turn the **P268** headset on by pressing the **'ON/OFF'** key for **2 seconds**.
- Turn the **P268** headset off by pressing the **'ON/OFF'** key for 5 seconds.
- **TO ANSWER A CALL**, press the **'ON/OFF'** key.
- **TO REJECT A CALL**, press the **'ON/OFF'** key twice.
- **TO END/CANCEL A CALL**, press the **'ON/OFF'** key.
- **TO CHANGE THE VOLUME**, short press the **"VOL+" / "VOL-"** key when connected.

More

- **TO INITIATE VOICE DIALING**, short press the **"ON/OFF"** key when connected to the Handsfree function, then speak a command.
- **TO REDIAL THE LAST NUMBER**, press the **"ON/OFF"** key when connected to the Handsfree function
- **TO TRANSFER A CALL**, press the **'ON/OFF'** key twice when in conversation.
- **TO PLAY THE LAST SONG**, long press **"VOL-"** key when playing music

- **TO PLAY THE NEXT SONG**, long press **"VOL+"** key when playing music
- **TO ESTABLISH A CONNECTION**, short press **"ON/OFF"** key when not connected to Handsfree function
- **TO AUTO RE-CONNECT**, long press **"ON/OFF"** key for **2 seconds** when switched off

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying FCC exposure compliance. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

Functions and specifications subject to change without prior notice

For more information please visit www.mtechm.com

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

© 2009 M TECH MFG LTD. All Rights Reserved.

