

Federal Communication Commission Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

DT Research Rugged Tablet



BASIC OPERATION GUIDE

301SY

INTRODUCTION

Thank you for acquiring the 301SY, part of DT Research's line of Rugged Tablets. Featuring a slim yet robust enclosure, the 301SY with 10.1" TFT display is powered by the Intel® Core™ i or Qualcomm octa-core processor, offering optimal combinations of performance and power savings. The 301SY is available with Microsoft® Windows® or Android operating system. The software operating system features web browser, client/ server computing software, media player, accessories, and applications support.

PACKAGE CONTENTS

- One 301SY with Battery Pack and Handstrap
- AC-DC Power Adapter with Power Cord
- Basic Operation Guide

* If your 301SY contains camera or barcode scanner, please refer to the Tablet Modules Basic Operation Guide for detailed operation.



Input/ Output Ports

A	Headphone Jack	D	USB Type-C Port (power input)
B	LAN Port	E	Smart Card Reader (DT301Y only)
C	USB 3.0 Port		

Button Functions

BUTTON	ACTION
1	Power Button
2	Programmable Buttons
3	Battery Latch *Push the switch up to unlock the latch, then slide the latch left to remove the battery.

PRECAUTIONS

- Always exercise care when operating and handling the 301SY.
- Do NOT apply excessive pressure to the display screen.
- We recommend using the Digital Pen (optional) to keep the screen clean.
- Avoid prolonged exposure of the display panel to any strong heat source. Wherever possible, the 301SY should face away from direct light to reduce glare.
- If the AC-DC power adapter is used to recharge or power the tablet, do NOT use any AC-DC adapter other than the one provided or acquired from the manufacturer or its partners.
- In the unlikely event that smoke, abnormal noise, or strange odor is present, immediately power off the 301SY and disconnect all power sources. Report the problem to your device provider immediately.
- Never attempt to disassemble the 301SY, as this will void the warranty.

NOTE:

To obtain protection consistent with any IP rating for the device, the I/O (audio, power, USB, card reader, etc.) port doors must be closed. If the IP protection is compromised by mishandling or misuse, such as by leaving port doors open or improperly closed, any resulting product damage will not be covered under any DT Research warranty.

BASIC FEATURES

The 301SY rugged tablet integrates a bright display, USB ports, and embedded networking elements such as wireless LAN and Bluetooth or optional 4G.

A 301SY typically integrates an 802.11ac wireless LAN (WLAN) adapter that may connect to other wireless devices or access points. If your 301SY does not come with such a network adapter, please consult your device provider to establish the desired network connectivity.

OPERATION

Powering ON and OFF

To activate the 301SY, push and quickly release the Power Button. The display will come on in a few seconds. To put the 301SY in Standby mode, push and quickly release the Power Button. To turn the 301SY off for extended storage, power off safely using any software function that “shuts down computer” provided in the software operating system.

NOTE:

The battery pack shipped with your tablet may be low in power—please use the AC-DC adapter with the 301SY when setting up for the first time to fully charge the battery pack, or use the optional battery charger kit.

NOTE:

When the battery pack is charging, the blue-colored Battery LED should blink slowly. If plugging in the AC-DC adapter does not trigger this blinking activity and the LED stays dark, the battery pack(s) may have been drained substantially. Try unplugging/ replugging the AC-DC adapter to the 301SY a few times to activate the charging process.

NOTE:

To conserve power, use (push and quick release) the Power Button to put the tablet in “Standby” mode while not in use. Pushing briefly on the same button will wake up the system within seconds.

NOTE:

For DT301Y, avoid using the Power Button (“hold 4+ seconds” feature) to turn off the tablet—this form of hardware shutdown is intended to be a means of recovery from lockups, and not as normal operation.

Start Up

If the power up (from Standby mode or otherwise) is successful, the appropriate interface will be displayed after a launch sequence of several seconds. The wireless LAN connection may take 10-15 seconds to be established.

Configuring the Mobile Tablet

The 301SY may be configured using the utilities and methods dictated by the software operating system. The 301SY should be configurable for various properties such as user profiles, network features, and several system elements.

Wireless Networking

Wireless LAN

The 301SY is often delivered with an embedded (user-inaccessible) 802.11ac WLAN adapter equipped with a hidden custom antenna.

- Through the support of typical WLAN adapters, the 301SY should be able to detect all 802.11 access points in the vicinity for you to select the access point of your choice for connection.
- The SSID and WEP/WPA/WPA2 (if enabled) parameters on the 301SY and the access points have to match. The SSID is case-sensitive and it is recommended that you enable WEP/WPA/WPA2 encryption (or advanced alternatives) for secure access.
- When WEP/WPA/WPA2 is enabled, you may need to consult your network administrator or your networking equipment literature to properly configure associated settings such as Authentication mode, etc.
- Refer to the access point operating manuals for setting up the 802.11 access points.

Bluetooth

The Bluetooth configuration application is enabled from the Windows System Tray or from the Android Settings APP. Follow the instructions and options provided within the application to configure and invoke Bluetooth connectivity with the corresponding peripherals.


USING THE MOBILE TABLET

Peripherals Support

Through its USB 3.0 port, the 301SY supports a wide range of USB-based peripherals. These peripherals are applicable for software installation, applications storage, data storage, and system software recovery and updates.

Replacing the Battery Pack

1. Slide the battery latch to the unlocked position.
2. Lift the battery pack off the compartment.

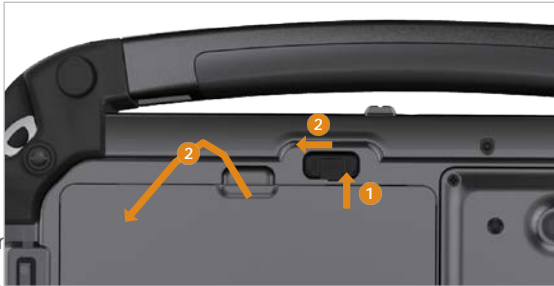

3. Fit another battery pack into the compartment.
4. Slide the latch to the locked position.



5. If you want to purchase extra battery packs, please contact your dealers, or visit our Support page: <https://www.dtresearch.com/en/Support/contact.html>

CAUTION:

There is danger of explosion if the battery is incorrectly replaced. Replace the battery only with the Tablet manufacturer's battery. Discard used batteries according to the dealer's instructions.

CAUTION:

Do not attempt to disassemble the battery pack.

For More Support

Users can download the Tablet Modules Basic Operation Guides from the DT Research website.

To Hold the Tablet



Left hand: grip the left back side of the tablet with your left hand four index fingers, with thumb resting on the top of the back side of the tablet and palm securely against the back.

Right hand: grip the right back side of the tablet with your right hand four index fingers, with thumb resting on the top of the back side of the tablet and palm securely against the back.

RF Exposure Compliance

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

The band 5150-5350 MHz for this device are restricted to indoor use only.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier Trade Name:

Model No.: 301SY



Responsible Party – U.S. Contact Information

DT Research, Inc.

2000 Concourse Drive, San Jose, CA 95131

<http://www.dtresearch.com>

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Regulatory Compliance

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Exposure Compliance

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the ISED. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body.

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. L'utilisateur final doit suivre les instructions spécifiques pour satisfaire les normes. Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur.

Le dispositif portatif est conçu pour répondre aux exigences d'exposition aux ondes radio établie par le développement énergétique DURABLE. Ces exigences un SAR limite de 1,6 W/kg en moyenne pour un gramme de tissu. La valeur SAR la plus élevée signalée en vertu de cette norme lors de la certification de produit à utiliser lorsqu'il est correctement porté sur le corps.