

## MP85

Portable Bluetooth Speaker

Manual



## EN Important safety instruction

- Please read the instructions carefully. Keep it in safe place for future reference.
- Use only accessories approved by the manufacturer.
- Install the instrument properly by following the instructions in the device connection section.
- Using the product in a 0-35°C environment is recommended. Shipping and storing the product in a 0-35°C environment is recommended.
- To minimize the risk of fire and electric shock, do not expose the product to rain or moisture.
- Do not use this product near water. Do not immerse the product into any liquid or have it exposed to dripping or splashing.
- Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that generate heat).
- Do not place any object filled with liquids, such as vases, on the product; neither should any open fire, such as lighted candles be placed on the product.
- Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric shock.
- Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is recommended).
- Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the plug matches the jack and is oriented to the right direction.
- Keep the provided accessories and parts (such as screws) away from children to prevent from being swallowed by mistake.
- Do not open or remove the housing yourself. It may expose you to dangerous voltage or other hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional immediately.

1 English

- Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug first.
- Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface. Use only neutral solvent or clear water for cleaning.
- The product must be used at an altitude of lower than 2000m.

Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

- For wireless product:
  - Wireless product may generate shortwave radio frequencies and interfere with the normal use of other electronic devices or medical equipment.
  - Turn off the product when it's disallowed. Do not use the product in medical facilities, on airplane, at gas stations, near automatic gates, automatic alarm system or other automated devices.
  - Do not use the product in the vicinity of a pacemaker within a 20cm range. The radio waves may affect the normal operation of the pacemaker or other medical devices.

2 English

## WARNING!

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire.
- Do not expose batteries in conductive materials, liquid, fire or heat.
- Do not let metal object contact two battery poles. If the battery looks swollen, deformed or leaking, or has an abnormal appearance, stop using it.
- Do not use the battery after immersed in water.
- Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.
- The battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

3 English

## ■ What's in the Box?



MP85 speaker



USB-A to USB-C charging cable



Lanyard




User manual

Note: Images are for illustrative purposes only and may differ from the actual product.

4 English


## ■ Functional Operation

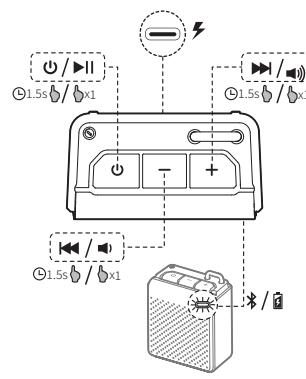


5 English

## ■ Operating Instructions


## • Bluetooth connection and playback

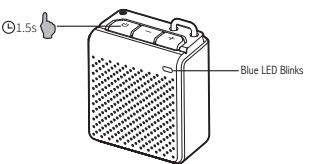

## • Bluetooth disconnection

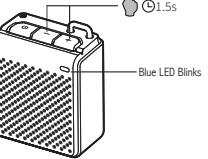


## • Reset

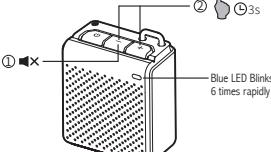

6 English

## • Indicator status

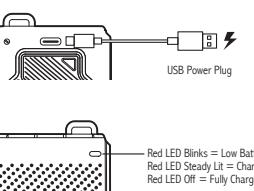

Red LED Blinks = Low Battery  
Red LED Steady Lit = Charging  
Red LED Off = Fully Charged

## ■ Specifications

Power output: 2.2W  
Frequency response: 230Hz-17kHz  
Input: 5V --- 300mA  
Declaration for EU  
Frequency Band: 2.402GHz ~ 2.480GHz  
RF Power Output: < 10 dBm (EIRP)  
There is no restriction of use.

7 English

## ■ Edifier Connect app

## • Download Edifier Connect app



1. Scan the QR code for the app.
2. Install Edifier Connect app from Apple App Store or Google Play.

8 English

## ■ Troubleshooting

## No sound

- Check if the speaker is ON.
- Try to turn up the volume using the volume control.
- Check if there is a signal output from the audio source.

## Cannot connect via Bluetooth

- Disconnect from any Bluetooth device by simultaneously pressing and holding the "+/-" buttons for 1.5s, then try again.
- Turn the volume down to the minimum level and simultaneously press and hold the "+/-" buttons for 3s to Reset.
- Effective Bluetooth transmission range is 10 meters; please ensure that operation is within that range.
- Try another Bluetooth device for connection.

To learn more about EDIFIER, please visit [www.edifier.com](http://www.edifier.com)

For EDIFIER warranty queries, please visit the relevant country page on [www.edifier.com](http://www.edifier.com) and review the section titled **Warranty Terms**.

USA and Canada: [service@edifier.ca](mailto:service@edifier.ca)

South America: Please visit [www.edifier.com](http://www.edifier.com) (English) or [www.edifierla.com](http://www.edifierla.com) (Spanish/Portuguese) for local contact information.

Manual Edition 1.0, December 2022

For more information, please visit our website:

[www.edifier.com](http://www.edifier.com)



Holder, Edifier International Limited declares that the radio equipment type EDF-MP85 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [https://www.edifier.com/int-eu-doc.html](http://www.edifier.com/int-eu-doc.html)

Model: EDF-00965  
FCC ID: 2A96-EDF199  
IC: 10004A-EDF199

Edifier International Limited  
P.O. Box 6264  
General Post Office  
Hong Kong  
Tel: +852 2522 6989  
Fax: +852 2522 1989  
[www.edifier.com](http://www.edifier.com)

© 2022 Edifier International Limited. All rights reserved.  
Printed in China.

NOTICE:  
For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.  
Products of EDIFIER will be customized for different applications. Pictures and illustrations shown in this manual may be different from actual product.  
If any difference is found, the actual product prevails.