



Feb. 09



Castra Without Zigbee Embedded Development Kit User Guide

80-A6517-1 Rev B

Qualcomm Confidential and Proprietary

Restricted Distribution. Not to be distributed to anyone who is not an employee of either Qualcomm or a subsidiary of Qualcomm without the express approval of Qualcomm's Configuration Management.

Not to be used, copied, reproduced in whole or in part, nor its contents revealed in any manner to others without the express written permission of Qualcomm.

QUALCOMM is a registered trademark of QUALCOMM Incorporated in the United States and may be registered in other countries. Other product and brand names may be trademarks or registered trademarks of their respective owners. CDMA2000 is a registered certification mark of the Telecommunications Industry Association, used under license. ARM is a registered trademark of ARM Limited. QDSP is a registered trademark of QUALCOMM Incorporated in the United States and other countries.

This technical data may be subject to U.S. and international export, re-export, or transfer ("export") laws. Diversion contrary to U.S. and international law is strictly prohibited.

QUALCOMM Israel

Omega Center

MATAM Post Office

Haifa 31905

Israel

Copyright © 2009 QUALCOMM Incorporated.


All rights reserved.

•Terms and Conditions of Usage

This document contains descriptions of parts whose manufacture, use, sale, offer for sale, or importation into the United States is limited or prohibited by the February 5th, 2008 injunction against QUALCOMM Incorporated. This document should not be construed as an offer to sell such parts for use or importation into the U.S., nor should it be construed as assistance in making, using, selling, offering to sell, or the importation of any product in the U.S. containing such parts. This document is intended solely to provide information for those products that are outside the scope of the injunction. Recipient's download and/or use of the information in this document constitutes agreement with these terms

Table of Contents


#	Section	Page
1	Introduction	5
2	Getting Started	6
3	Jumpers and Switches	7
4	Cables Connections	8
5	Power Supply Connection	9
6	Module Powering Up/Down	10
7	Ground Pin	11
8	Standards	12
9	Regulatory Compliance	13

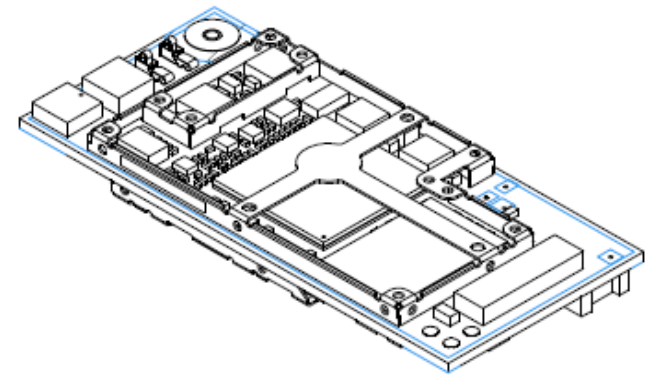


Introduction

- Castra with out Zigbee EDK enables 3rd party users to build and perform on-target development and testing
- The EDK kit includes:
 - Castra without Zigbee module
 - Module fixture
 - Accessories
 - μUSB cable
 - Battery emulator cable


Castra without Zigbee Module

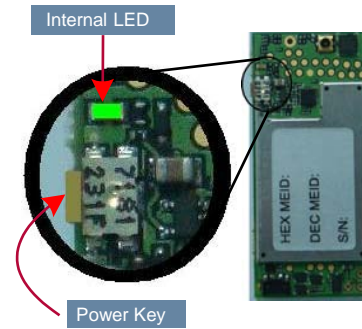

Module Fixture

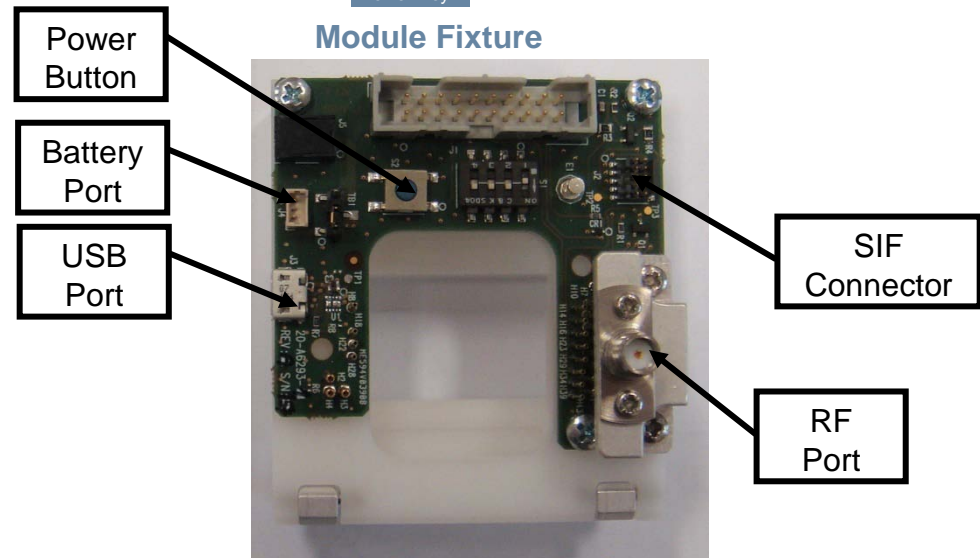

Accessories

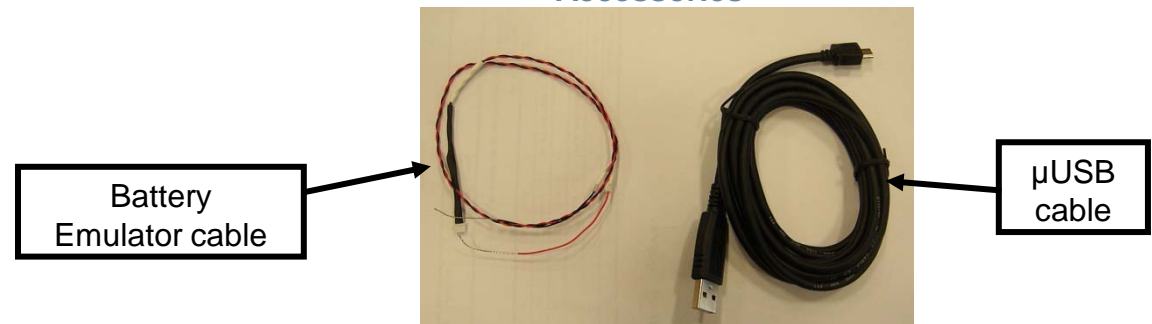


Getting Started

1. Insert the module to the fixture with the JTAG test points pointing upward (as seen in the pictures below)
2. Close the fixture and secure the top cover with the two hinges




JTAG test points

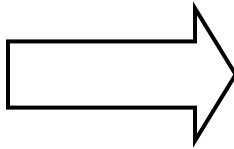


Jumpers and Switches

3. Make sure the jumper is connected and the dipswitch is positioned as seen at the picture below

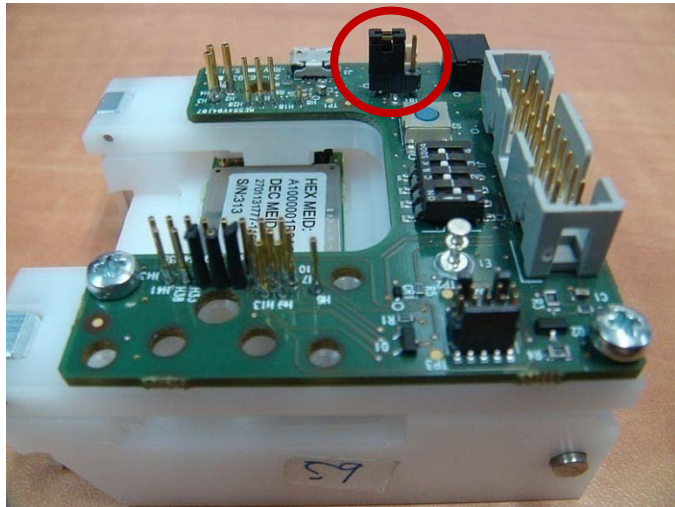

Jumper position:
Pins 1 and 2 are shorted

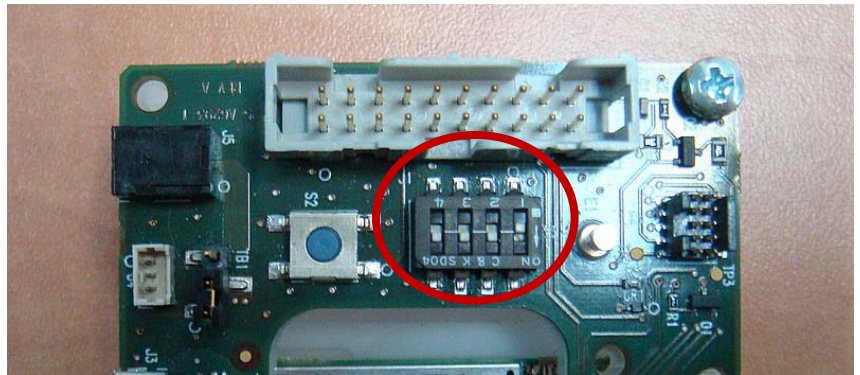


Dip switch position:
1 – OFF, 2,3,4 – ON

Cables Connections

4. Connect the external interfaces according to the following picture

Battery emulator
cable (required)

μUSB cable
(optional, for charging
/configuration)

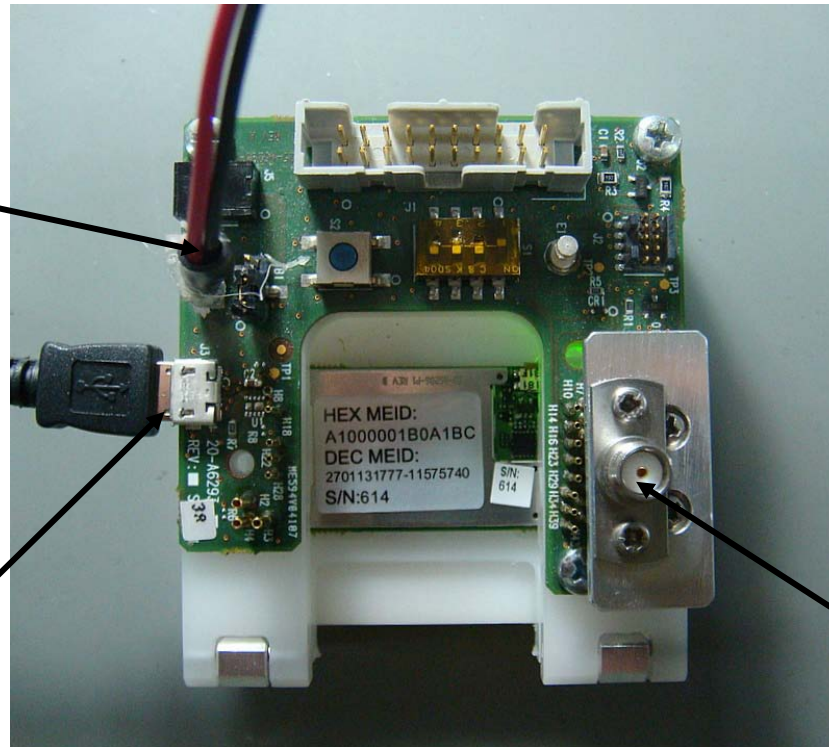


RF antenna /
Coax cable
(required)

Power Supply Connection

5. Battery Emulator Cable (MCN: 45-A6453-C50) (connected to a power supply)

- Allows reproducible testing results (since the voltage doesn't change)
- Allows endless operation for long tests
- When a battery cable is used set the power supply for 3.75V / 1A for typical operation
- Use a power supply with reverse current abilities to support charging operation when the USB cable is connected

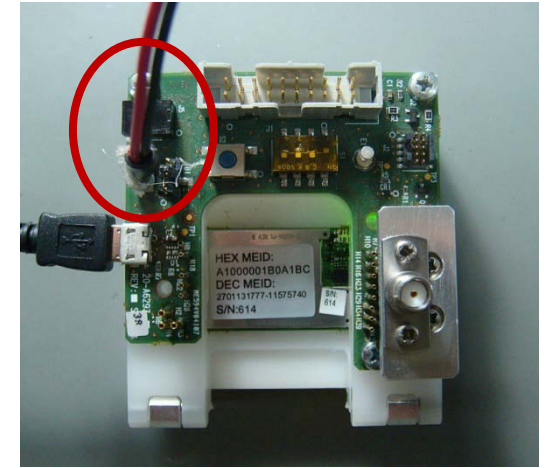


Module Powering Up/Down

6. In order to power up the module:

- Connect the battery emulator cable to the fixture battery port
- Connect the μ USB cable to the fixture USB port
 - » The module shall be powered on and the internal LED light shall be constantly GREEN
- If the μ USB cable is not connected, press the Power Button for 3 seconds until the LED blinks shortly in GREEN. From that point the LED should blink periodically every 5 seconds


7. In order to power down the module:

- Disconnect the uUSB cable
- Press the Power Button for 3 seconds until the LED blinks shortly in GREEN
- Disconnect the battery emulator cable from the fixture

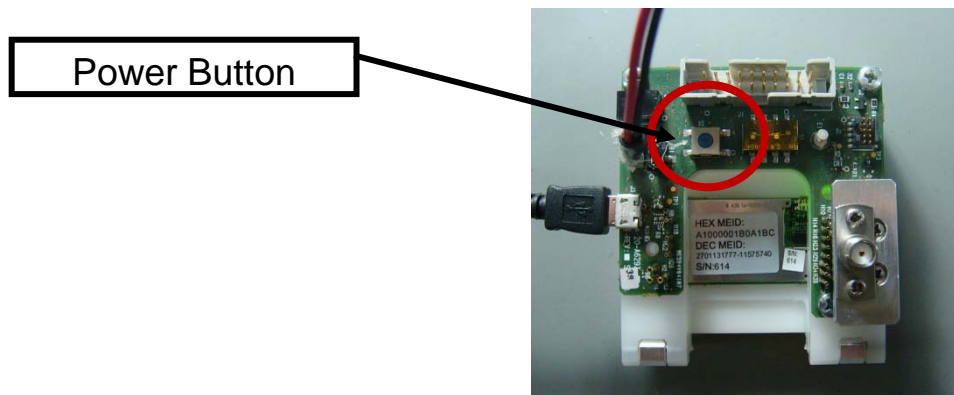

Ground Pin

8. When external test equipment requires ground connection (e.g., oscilloscope) the GND pin can be used for such purpose

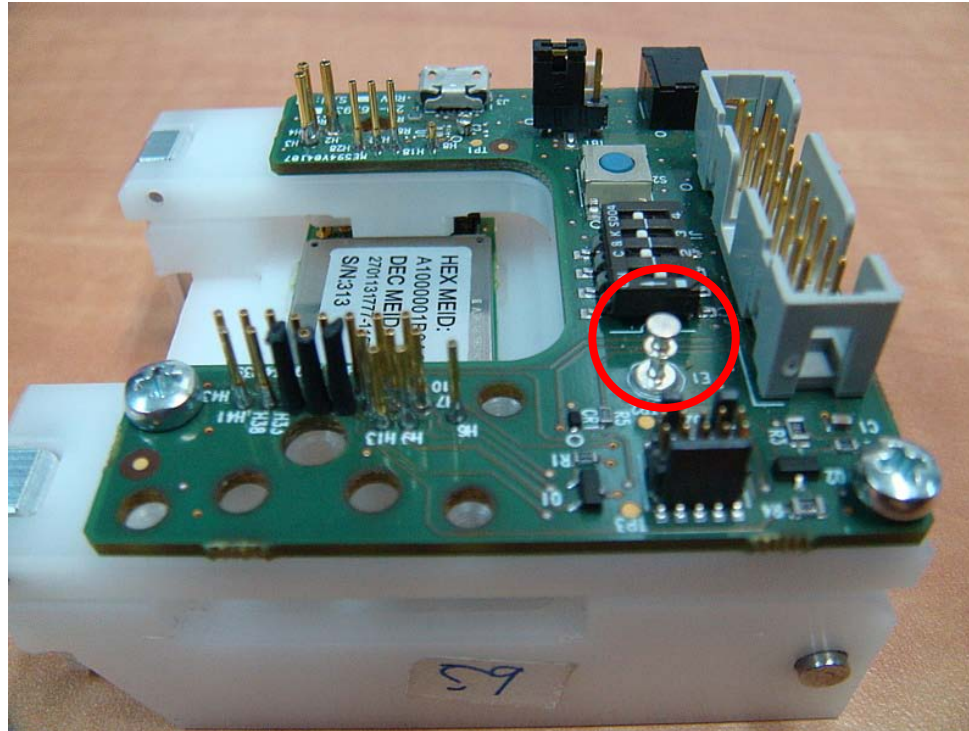

Standards

Standards and Certification

The Castra without Zigbee module conforms to the following standards and certification requirements:

- CDMA
 - TIA/EIA IS-98E (CDMA2000 1x)
- FCC
 - 47 CFR Part 1 – RF radiation exposure limits
 - 47 CFR Part 2 – Equipment authorization
 - 47 CFR Part 15 – Intentional and unintentional radiators
 - 47 CFR Part 22 – Cellular
 - 47 CFR Part 24 - PCS

Regulatory Compliance

Safety Warnings

Do not operate the Castra without Zigbee module in the following environments:

- In active blasting areas.
- In potentially explosive environments such as refueling points, fuel depots or chemical plants.
- Near medical equipment, especially life support equipment that might be susceptible to radio interference.
- In an aircraft.
 - The Castra without Zigbee module transmissions could interfere with aircraft electrical and communication systems. Like cell phones, using the module in an aircraft is illegal in some jurisdictions.
 - If cell phone usage is permitted while the aircraft is on the ground, normal Castra without Zigbee module operation is permitted as well.

Regulatory Compliance

The Castra without Zigbee module has been approved for mobile applications in the United States. Additional FCC certification is not required by host devices as long as the following conditions are met:

- Maintain at least 20 cm separation between the antennas and the user's body.
- Maximum antenna gain (including cable loss):
 - Cellular band < 7 dBi
 - PCS band < 4 dBi
- Independent Castra without Zigbee module operation. The module must not be co-located or jointly operated with any other transmitter or antenna within the host device.
- A label with the following (or similar) statement must be attached to the host end product: This device contains Tx FCC ID:J9CCASTRAWOZB.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

Regulatory Compliance

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician to help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the Castra without Zigbee module.



Thank you!

QUALCOMM CONFIDENTIAL AND PROPRIETARY | INTERNAL USE ONLY | RESTRICTED DISTRIBUTION