

USER MANUAL

VX LogTM 90, 230, 340 & M1

VXSPORTTM
performance you can see

APPROVALS & OPERATING CONDITIONS

EQUIPMENT WITHOUT RADIO TRANSMITTERS – WORLDWIDE MARKET

VX Log™ – Models 90 & 230, – CE stamped for use in EU. FCC Stamped for USA

Independently tested to meet:

- FCC Part 15 Sub parts A and B for Class B device, (no intentional transmission).
- EN55024: 1998 + A1 + A2
- AS/NZS CISPR 22 – 2006
- RSS-GEN Issue 2 & RSS 3001 Issue 1,
- Equipment meets **RoHS** regulations for EU.



EQUIPMENT WITH RADIO TRANSMITTERS – MARKET: Europe, UK, Africa, Middle East, Asia

VX Log™ M1a

Independently tested to meet:

- EN55024: 1998 + A1 + A2
- Equipment meets **RoHS** regulations for EU.
- **EQUIPMENT MUST ONLY BE OPERATED WITH THE ANTENNA SUPPLIED.**



VX Log™ 340a – CE stamped for use in EU.

Independently tested to meet:

- EN55024: 1998 + A1 + A2
- Equipment meets **RoHS** regulations for EU.



EQUIPMENT WITH NON-ADJUSTIBLE RADIO TRANSMITTERS – MARKET: North & South America: USA, Canada, Australia, New Zealand

VX Log™ M1b

Independently tested to meet:

- AS/NZS CISPR 22 – 2006
- RSS-GEN Issue 2 & RSS 3001 Issue 1,
- Equipment meets **RoHS** regulations.
- **FCC ID: SR2VSILM1B**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept interference received, including interference that may cause undesired operation.
- **EQUIPMENT MUST ONLY BE OPERATED WITH THE ANTENNA SUPPLIED.:**

VX Log™ 340b

Independently tested to meet:

- AS/NZS CISPR 22 – 2006
- RSS-GEN Issue 2 & RSS 3001 Issue 1,
- Equipment meets **RoHS** regulations.
- **FCC ID: SR2VSIL340B**

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept interference received, including interference that may cause undesired operation.



ALL MODELS:

Operate only within temperature range 0°C to +45°C (32°F to 113°F);

Do not immerse in water or use as a wet garment unless enclosed in a watertight plastic bag

Installing the Software

1.0 Software (PC Only – Windows XP SP2 onwards, Vista, Windows 7 - 32 and 64 bit, Windows 8*)

Minimum hardware requirements:

- 2.0 GHz CPU
- 2 GB RAM
- 1 GB free HDD space.

NOTE: VX View™ will run on Apple Mac™ using Windows XP™ or Windows 7™ emulation software. Use Parallels™ V4.0 or later. Boot Camp™ may also work. Refer to Apple™ for support of this software.

* VX Sport™ software will operate on most Windows 8 PCs but is not guaranteed.

1.1 Installation

- Insert VX Sport™ CD into your PC. Alternatively: Arrange for a software download from VX Sport™.
- VX View™ should automatically open an installer menu
- Follow instructions on screen
- Accept any prompts for Registry changes during the installation.
- **Refer to Appendix 1 of this guide for help and detailed troubleshooting for installation.**
- VX View™ has been developed to work with both Windows XP™ (SP2 onwards), Vista™ and 7 operating systems, including Windows 7 – 64 bit. Unfortunately owing to individual PC and software setups, user may occasionally experience problems on installation.
- Check first that there are not conflicts with virus checkers, port filters, firewall or other protection suites that might be preventing VX View™ to be correctly and fully installed.
- There is a known problem of conflict with finger print scanners on some Toshiba PCs, which requires the finger print reader to be disabled.
- Your PC must be running Microsoft™ Dot Net 2.0 or later framework to correctly handle VX View™ code.

1.2 Activation of VX View™ Software

To activate your software on your PC it must be connected to the Internet with a broadband connection. Enter the **activation code** supplied with your system (typically we advise you of this by email at time of purchase).

Note: The VX Sport™ activation service uses a third party in the US to track and verify all licences.

* In some circumstances Windows 8 software may not work with the activation service, for certain PC models.

VX View™ & VX Live™

The VX Sport™ user software suite includes VX View™ and VX Live™.

VX View™ is used for the setup, management and reporting of all the VX Log™ products; (Models 90, 230 and 340), and is used to initially pair the VXM1 basestation to the software and hardware.

VX Live™ software is used only for conducting realtime (live data) sessions, and requires the VX Log™ 340 hardware and a VXM1 base station.

IMPORTANT: VX Log™ 340 realtime sessions cannot be conducted until the VX Log™ M1 basestation is first plugged into the USB port of the PC, and recognised by VX View™ software. Read set up notes and operating instructions for VX View software **before** setting up your hardware for realtime data transmission.

The program icon represents the company logo of Visuallex® Sport.



Open VX View™ when you wish to:

- Set up the users of your VX Sport™ system; ie the Athletes and Teams you define
- VX340/VXM1 only: Pair the VXM1 realtime base station to the software and VX Log™ 340 hardware
- Issue your VX Log™ with specific details, such as date, athlete, sport and event.
- Run analysis of data recorded by your VX Log™ monitor during training or games
- Erase data from your VX Log™ memory
- View reports, and print all or part of your logged games, training or fitness workout

Open VX Live™ when you wish to:


- Conduct a realtime (live data) session for one or more athletes, using VX Log™ 340 hardware and a VX Log™ M1 basestation.
- **Note: Prior to the first realtime session it is essential to do the following:**
- 1. Open VX View™ software; plug in VX Log™ M1 basestation via USB cable to PC; observe that USB driver for VXM1 is loaded and that VXM1 appears in control panel display at left of VX View™ screen.
- 2. As soon as VXM1 is recognised by VX View control panel it must be disconnected from USB. Do not attempt to issue details to VXM1.
- 3. Plug in one or more VX Log™ 340 via USB to the PC, and observe that they are identified in the control panel at left of VX View screen.
- 4. Issue each VX Log™ 340 (See Page 5).
- 5. Remove VX Log™ 340 from USB; Reconnect VX Log™ M1 to USB.
- 6. Close VX View™ software and open VX Live™ software. Continue with set up of realtime session by completing the "Game Setup" form in VX Live™.

NOTE: There are no user adjustments required or possible, for radio transmission using the VX Log™ 340 and VX Log™ M1 hardware.


Your VX Log™

TERMINOLOGY:

In this manual the hardware models VX Log™ 90, VX Log™ 230, VX Log™ 340 (a or b) and basestation VX Log™ M1(a or b), are usually shortened to: VX90, VX230, VX340 and VXM1

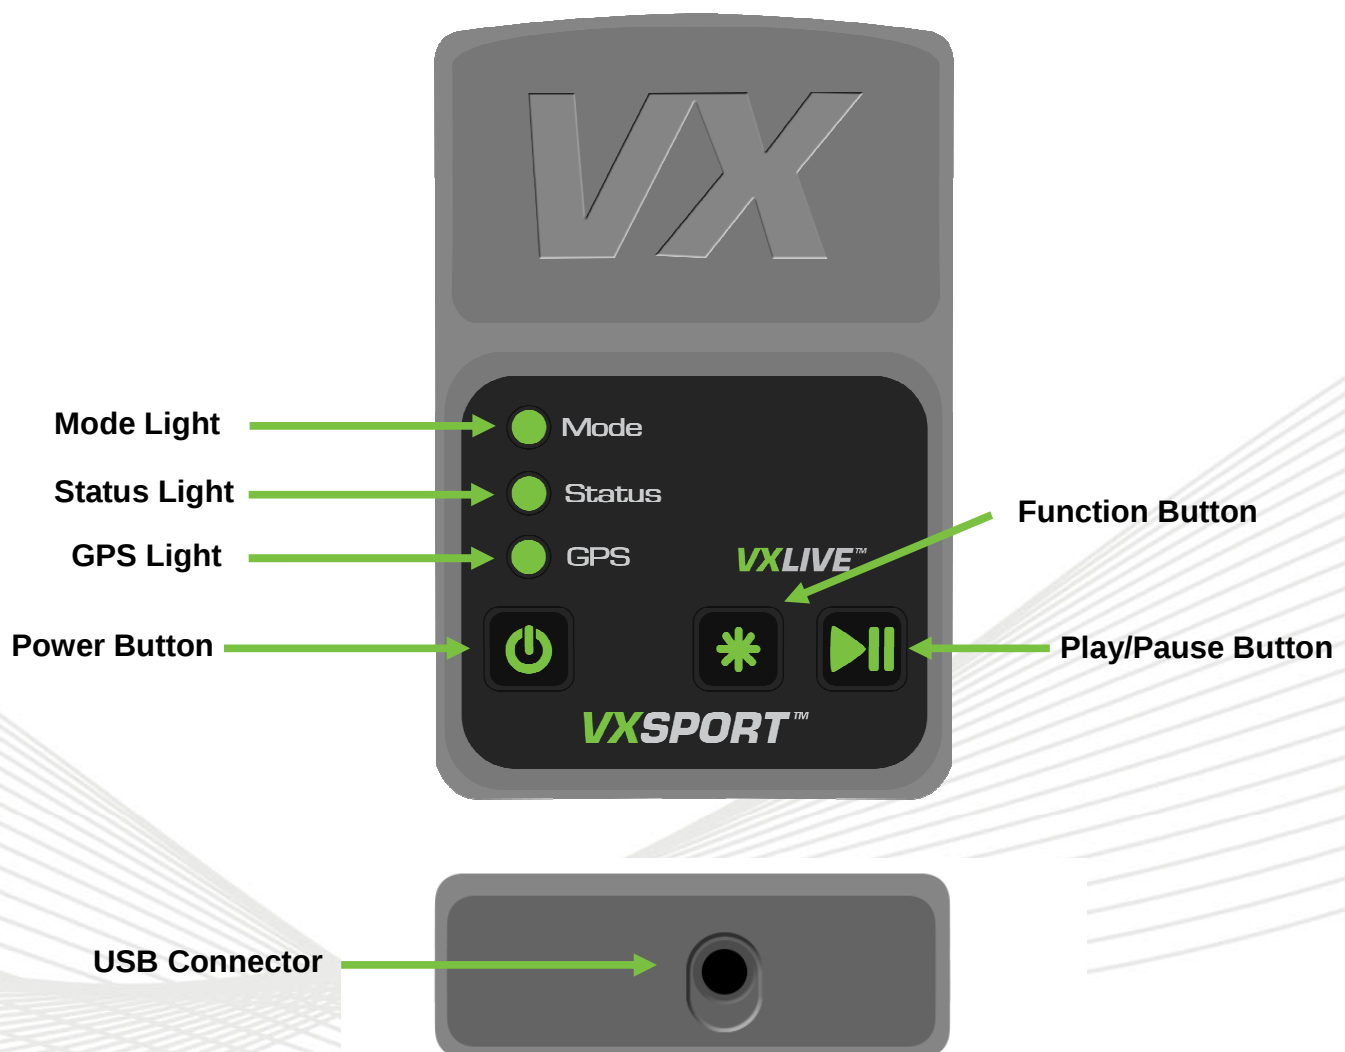

Your VX Log™ – M1 Base Station

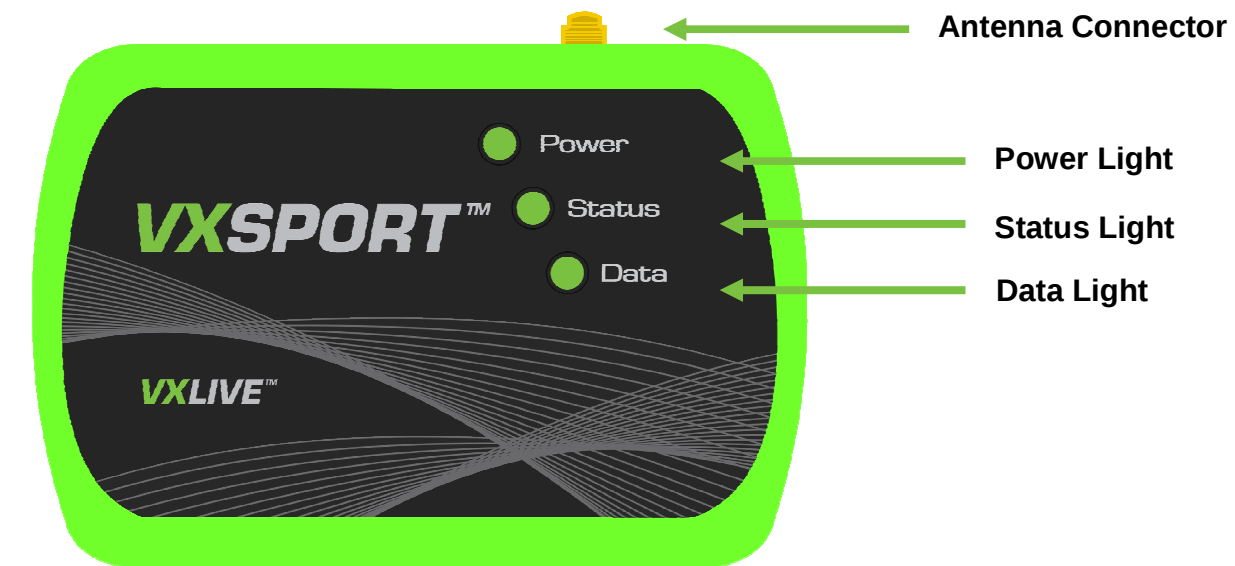

Creating Athletes and Teams

Before you start using your VX Sport™ system you need to define the athletes and teams.

To do this select the [ATHLETES] tab on VX View™. Note the example below:

VXSPORT™
performance you can see

Reports Athletes Files Settings About

Device (VX Log)

Issued To:

User Hardware

Issued:

Team:

Event:

Sport:

Location:

Status:

All Operation

Issue Device

Extract Data

Erase Memory

Import Guest Data...

Selection

Athlete

Team

Goldsworthy, Gary
Hearn, Andy
Hiini, Brendon
Hill, Joe
Hulme, Matthew
Hulme, Samantha
Human, Gerhard
Ingram, Matt
Jeffs, Carl
Jones, Mark
Joubert, Craig
Kelly, Steve
Kerr, Jason
Kikutani, Takashi
Kindred, Tom
Lake, Bradley
Lilley, Zac
Lochhead, Tony
Malone, Derek
Masaga, Lelia
McCone, Ryan

Athlete

Last Name: Cooper *

First Name: Mike *

Date of Birth: 01 Jan, 1972 *

Gender: ☒ Male ☐ Female

Home Phone:

Cell Phone:

Height (cm): 172 * (eg. 180)

Weight (kg): 68 * (eg. 60)

Activity Level: 10 * Multiple Daily exercise = 11 to 13hrs total weekly training time

VO2Max: 50 Calculate *

Notes:

Teams: Visuallex

Athlete Benchmarks *

Speed Max (km/h): 42 Heart Rate Max (bpm): 151

Speed Avg (km/h): 25 Heart Rate Avg (bpm): 80

Edit

For example:

To Create a Team: Place cursor on Team and click [New] button. Fill in required fields. Items marked * are compulsory.

To Create an Athlete: Place cursor on Athlete and click [New] button. Fill in required fields, one athlete at a time. If you know your VO2MAX then enter it directly. The software can set a VO2MAX based on your age and fitness; simply press the [Calculate] button.

After an athlete has been created the name cannot be edited. The other athlete information can be edited.

When filling in the forms for athletes & teams, don't forget to hit the [Save] button on screen after completing each form

Issuing the VX Log

Before the VX Log™ is used it will need to be issued to both a User and a sport.


Setting the sport tells the GPS chip which mode it should be in to give the most accurate results. It is not possible to change the selected sport after a session has been recorded because the GPS is only operating while the VX Log™ is recording.

The GPS chip in VX Log™ monitors has multiple modes for calculating position and speed. Because of this it is essential to set the VX Log™ to the correct sport before using it.

For constant slow speed activities, like jogging (where there are no sprints), the sport should be selected as “Walking”, rather than “Running”.

Issuing a device using VX View™.

- Connect the VX Log™ monitor to your PC via the USB Cable provided.
- Start the VX View™ software (See Page 1 if you have not yet installed VX View™).

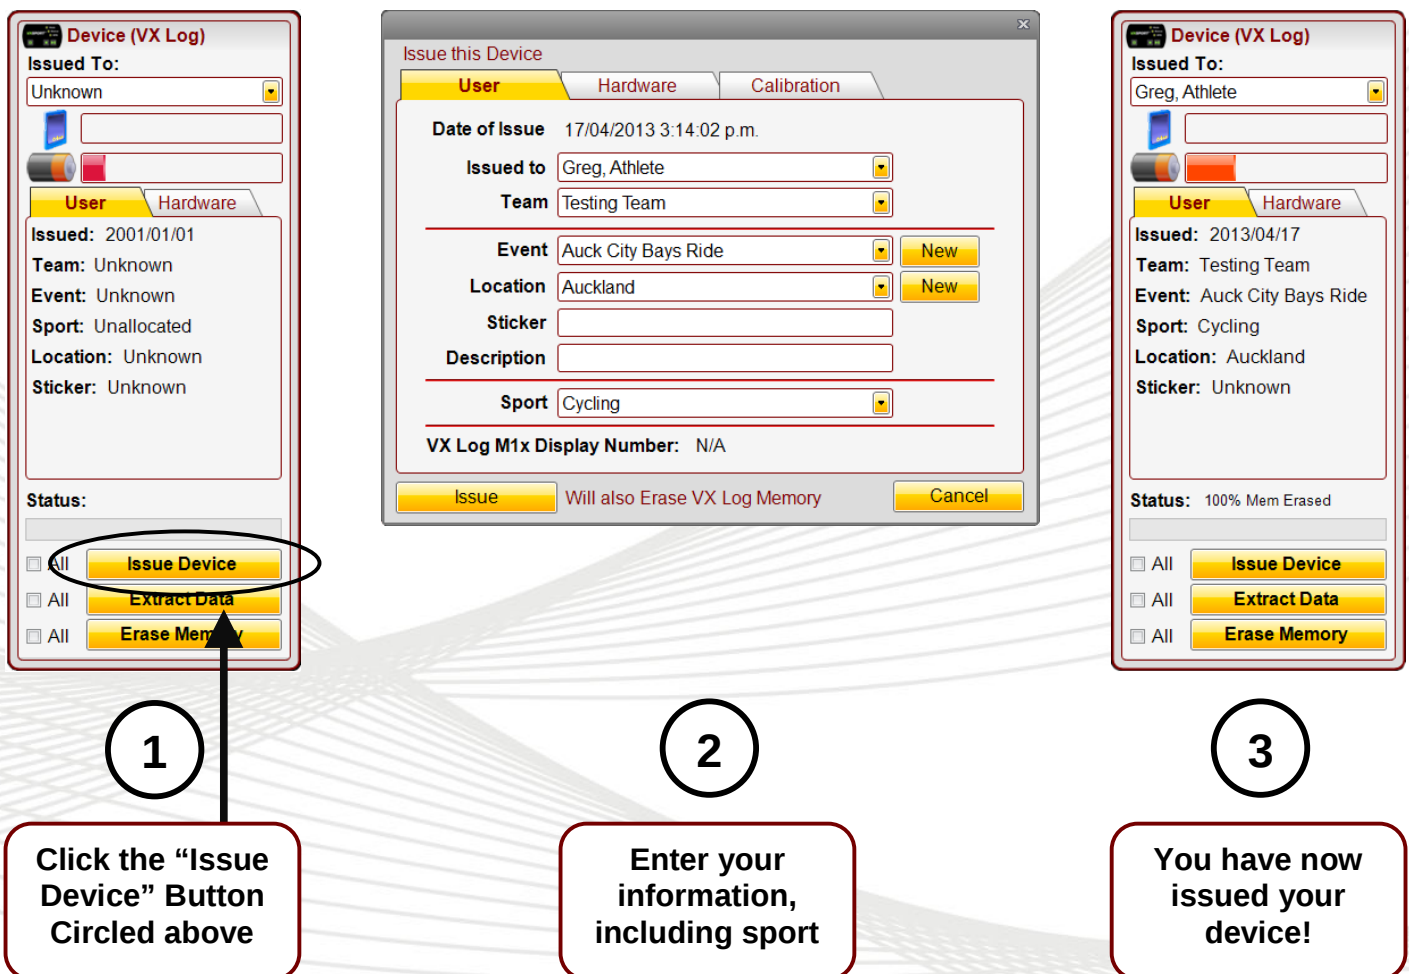

VX Log™ Operations

All buttons operate only when pressed for 3 seconds continuously. This is to avoid accidental operation.

GPS units rarely work indoors. You can use your VX Log™ monitor indoors, but only for heart rate and body force recording.

Normal Operation

Press power button for 3 seconds

Mode light should go green (steady).

Status light should go green (will flash green-red-green once per second when wearing a heart rate strap).


GPS light will go green in 1–3 minutes, once the receiver has locked-on to enough satellites to provide your accurate position.

Long Play Mode

For sessions greater than 2 hours recording you should select a long play mode by pressing the button for at least three seconds.

In “Long Play Mode” the mode light will flash green. “Long Play” allows 3 to 5 hours of recording, (depending on battery age and charge). In “Long Play” mode the magnetometer and accelerometer data is not recorded, allowing for longer recording.

You may return the unit to normal mode by pressing the function button again for at least seconds.

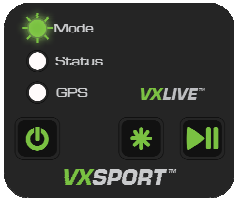	Mode Light Flashes Green once per Second	Long Play Mode Selected	Hold the mode button for at least three seconds to return to normal logging mode
---	--	-------------------------	---

Pause Mode

You can temporarily suspend recording by up to 30 minutes, by pressing the button for >3 seconds. The mode light will go red. The VX Log™ will turn off after being paused for 30 minutes.

Return the VX Log™ to record by pressing the button for >3 seconds.

	Solid red mode light, with other lights any colour	Low Battery	Plug in USB cable to charge device (see 'USB mode'). (Unit will not start logging unless sufficiently charged)
---	--	-------------	---

Wearing the VX Log™

The VX Log™ is worn in the pocket of the armband or vest, available separately from VX Sport™.

Before using your VX Log™ for the first time you must issue the device. (See page 4 if you have not done this).

Turn the VX Log™ on before placing in the vest or armband.

The VX Log™ must be placed in the vest with the green USB Plug facing upwards.



When you are finished playing or training remove the VX Log™ monitor and switch it off (by pressing the power button for at least 3 seconds).

Importing Your Data to VX View™

The cable supplied with your VX Sport™ system allows the USB connection port (hidden behind the rubber plug on your VX Log™) to connect to the USB port on your PC.

Note: the VX View™ software will manage multiple downloads from several VX Log™ devices, if they are plugged into a multi-port USB hub. Select the check box on screen and follow the instructions there.

Start your VX View™ software; plug VX Log™ into PC USB port.

Select [Extract Data] on the left side of the VX View™ screen.

The screenshot shows the 'Event Info' tab of the VX View software. The form contains the following fields and values:

- Athlete Name:** Greg, Athlete
- Team Name:** Testing Team
- Event:** Auck City Bays Ride
- Location:** Auckland
- Sport:** Cycling

Below these fields is a note: "An Athlete Event may contain one or more sessions." and a table with the following data:

Save	Date	Mins	Description
☒	2013-04-17 16:39:33	0	Unknown

The 'Save User Data' section contains dropdown menus for Athlete Name, Team Name, Event, Location, and Sport, each with a 'New' button. Below these is a 'Start Over' button. At the bottom are three checkboxes: 'Show Summary Report after data is saved' (checked), 'Archive Raw Data (*.bin file)' (checked), and 'Also Erase VX Log Memory' (unchecked). There are 'Save' and 'Cancel' buttons at the bottom.


Choose the sessions you wish to import into VX View™ for analysis, and then click save.

VX View™ automatically uploads all data in the VX Log™ memory.

If you do not erase data after uploading, then it will reappear on the next upload as a duplicate. To avoid confusion and manage your session results it is recommended that you select the check box to <Erase Device>.

You may separately erase the VX Log™ memory at any time you have it connected to your PC, using the labelled button on the left of the VX View™ screen.

Analyse and View Your Results

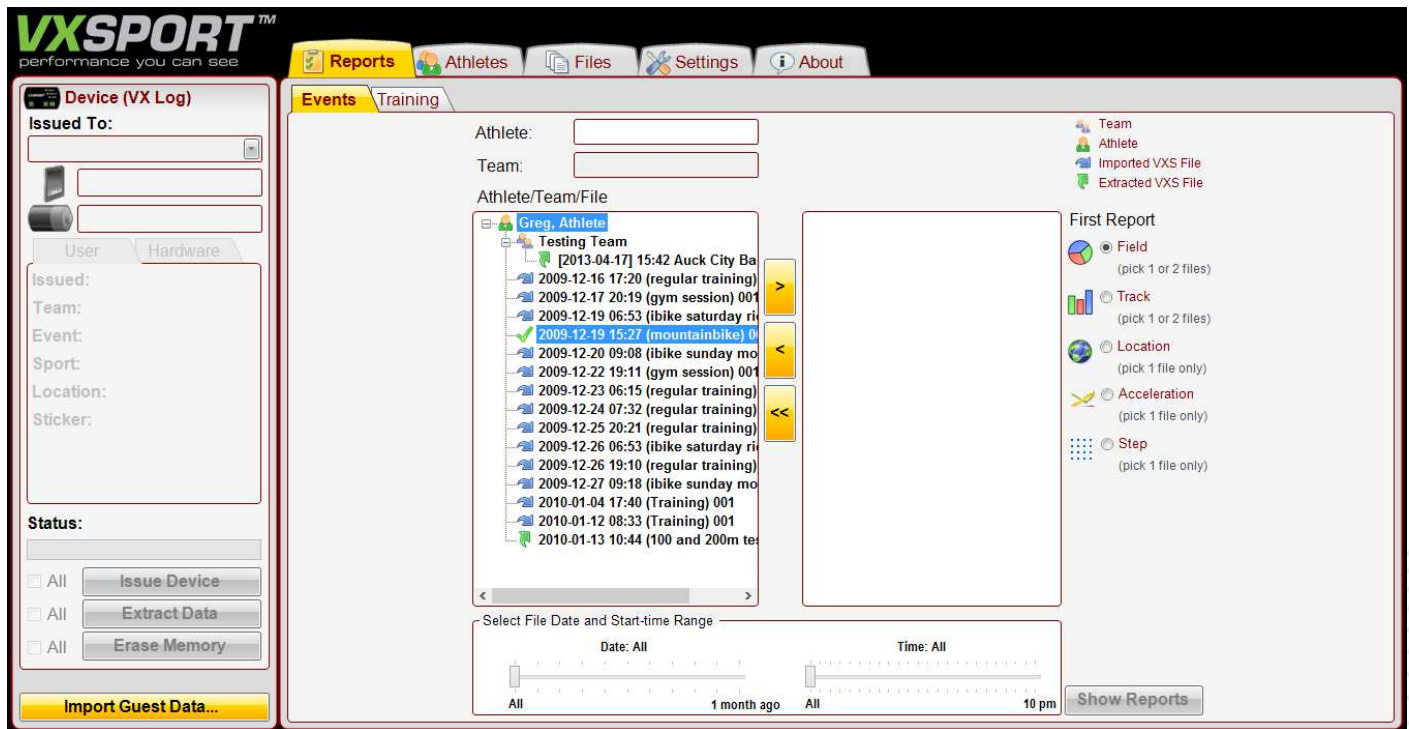

In the Reports tab can select the session(s) you wish to view from the Athlete/Team/File list on the left, which can be searched using the Athlete and Team boxes at the top of the screen.

Click the session(s) you wish to view, and then move it to the right hand section using the arrow buttons.

- The > Arrow moves a session from the left hand list to the right hand box to view.
- The < Arrow removes a session from the right hand box and allows you to add more.
- The << Arrow removes all items in the right hand box.

You can move up to two sessions into the right hand box in order to compare. Once you have the session(s) you wish to view on the right hand side, click the Show Reports button in order to launch the Report Viewer.

Stored files are cross referenced under both Athlete and Team names. An athlete can be a member of one or many teams (if required).

Viewing Reports

The screenshot displays the VX Sport reporting interface. At the top, a toolbar contains icons for various report types, grouped into 'Linkable' and 'Standalone' categories. Below this is a main menu with 'Overview', 'Pace & Distance', and 'Sprints Summary'. The 'Overview' section shows a line graph of Speed (km/h) and Heart Rate (bpm) over time. The 'Sprints Summary' section displays two tables: 'SPRINTS: Top Speeds' and 'SPRINTS: Dist.'. At the bottom, there are 'Export(csv)' and 'Print' buttons.

1 Field

2 Track

3 Location

4 Link

5 Step

6 Acceleration

Linkable

Standalone

Field Track Location Link Step Acceleration

Show Cascade Tile Hide All Exit

FIELD REPORT: Greg, Athlete (2013-01-30)

Overview

Speed (km/h)

Heart Rate (bpm)

Whole(50 min 03 sec)
3:59:29 - 4:49:32

View by (periods)
Whole

Start

End

Zoom

Report: Greg, Athlete

Pace & Distance **Sprints Summary**

All Zoom

Filter By None above 0 km/h

SPRINTS: Top Speeds

Start Time (HH:mm:ss)	Max Speed (km/h)	Start Speed (km/h)	End Speed (km/h)	Avg Speed (km/h)	Distance (m)	Accel Max (m/s/s)	Accel Avg (m/s/s)	Duration (secs)
4:14:47	11.2	3.5	8.2	7.0	14	2.40	0.20	7.5
4:15:34	10.5	2.7	7.9	7.0	20	1.40	0.10	9.8
4:15:45	11.0	2.5	7.3	7.0	26	2.80	0.10	13.4
4:16:00	13.8	3.3	10.2	12.0	33	4.00	0.20	9.5
4:16:13	12.6	1.9	9.1	10.0	25	2.00	0.20	9.0
4:16:46	11.8	4.2	3.8	10.0	14	2.00	0.00	5.0
4:17:04	12.7	3.1	9.0	8.0	9	3.30	0.40	4.0
4:17:09	18.5	9.0	13.2	15.0	14	2.60	0.40	3.3
4:17:25	13.5	5.8	8.9	12.0	18	2.30	0.20	5.3
4:17:33	10.0	1.2	4.9	7.0	14	3.70	0.10	7.8
4:17:43	16.0	3.8	12.0	11.0	21	2.60	0.40	6.5
4:17:56	11.7	2.2	8.5	10.0	25	2.00	0.20	9.3
4:18:10	15.5	6.9	10.8	13.0	37	2.00	0.10	10.0

SPRINTS: Dist.

Speed km/h	Count
24	1
22	2
21	1
20	1
19	1
18	3
17	5
16	9
15	1
14	8
13	9
12	1
11	1
10	1
9	1
8	1
7	1
6	1
5	1
4	1
3	1
2	1
1	1

Total Sprints: 56

Export(csv) Print

Export(csv)

Print

7

8

Viewing Reports (contd.)

Report Selection

There are 8 standard ways of viewing your recorded session.

1	Field Reports	Includes all sprint, speed & distance data and includes pie-chart graphs of activity, which is useful for game play, such as soccer, cricket, rugby etc.
2	Track Reports	Includes all tabled data for sprints, distance & speed. Graphs are continuous traces of speed and heart rate, with ability to zoom in on any part of the session, down to a few minutes.
3	Location Reports	Full route, speed and heart rate data plotted each ¼ second on a satellite map. Note: You need a broadband internet connection to your PC to run this report.
4	Link	
5	Step Report ^{*1}	Step reports are most useful and relevant for short sprints, runs, or run-ups in track and field training sessions.
6	Acceleration Report [*]	The VX 230 Log and the VX 340 Log have additional sensors to provide advanced analysis of body forces.
7	Export Report ^{**}	Creates a .csv (Comma Separated Value) file (which can be opened in Excel), for any report or screen view that the user selects within the software.
8	Print Report	You may print your selected report by pushing the <Print> button at the bottom right of the report screen.

^{*} Not available for the VX90

^{**} Only available for VX View™ Pro Users


¹ Step reports are designed for analysis of motion, starting at rest and ending at rest. The motion between rests is defined by VX Sport™ as a “run”. The software requires that the athlete remains upright and stationary for at least 3 seconds at both the start and end of the “run”.

Viewing Reports (contd.)

When you first open your report the lower section will be empty. You must first select a period using in the overview panel, and then use the Zoom function to display your full report.




To view the report for a whole session, just click the zoom button. If you want to focus on specific areas however, you can use the sliders and arrows to narrow your selection down. When you have made the selection you want, hit zoom and the report will be generated. When viewing, changing and updating reports remember to use the Zoom, Analyze and Update buttons on the screen. To start another report you must first return to the Reports screen by selecting the Exit button on the top bar.

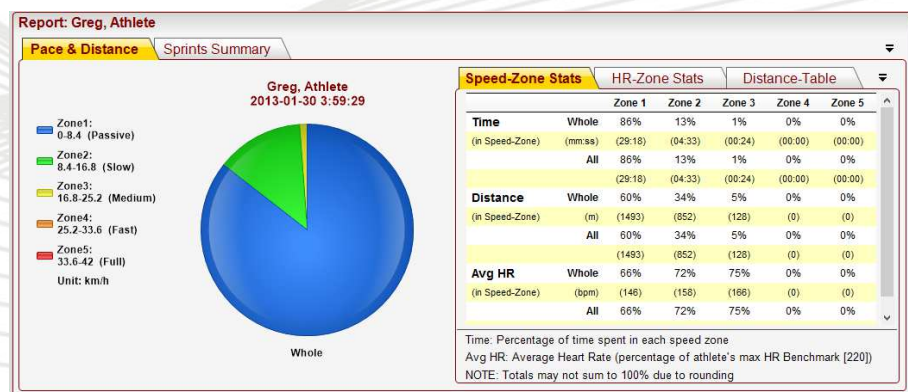


Settings and Customised Setup

By selecting the [SETTINGS] tab you can customize the bands (zones) for speed and heart rate that VX View™ uses for the reports. Note: the default values in the [SETTINGS] tab are applied to all athletes.

The default Speed Bands and Heart Rate Bands are based on nominal bands, arranged from still to 100% pace for world class athletes. You may choose to change zones to target speeds and heart rates that better suit your fitness or type of sport.

 Speed Band					
Pace Color	Passive	Slow	Medium	Fast	Full
Speed %	0% ≤ 20 % ≤ 40 % ≤ 60 % ≤ 80 % ≤ 100%				

 Heart Rate Band					
Zone	1	2	3	4	5
HR (bpm)	0% ≤ 22 % ≤ 35 % ≤ 52 % ≤ 70 % ≤ 100%				

The Default Benchmarks are values used in the Track Reports to show target lines on the report graphs. Note: These may be changed to suit an individual athlete by editing the athlete profile, using the [ATHLETES] tab.

 Benchmark Levels (Default)	
Speed Max (km/h)	42
Speed Avg (km/h)	25
Heart Rate Max (bpm)	220
Heart Rate Avg (bpm)	120
	

We recommend that you do not change the Sundry Options and Colour Scheme for Charts settings.

Managing and Sharing Data

The VX Sport™ system creates two types of files, which are stored on your PC.

- .bin files include all raw data that was downloaded from your VX Log™ at a given time.
- .vxs files are the individual sessions (one or more) that are created from a single bin file.

Note: If you do not erase your data after uploading it from your VX Log™ to VX View™ then the data will appear again in the next bin file that you create by uploading from the VX Log™.

You may share data (both **.bin** & **.vxs** files) with other users. The only limitation on this is the size of VX View™ license that you purchased with your VX Sport™ system.

To import a file into VX View™ select Import Guest Data at bottom left of screen. Select path to imported file with browser window.

Device (VX Log)

Issued To:

Team:

Event:

Sport:

Location:

Sticker:

Status:


☐ All ☐ All ☐ All

Issue Device

Extract Data

Eraser Memory

Import Guest Data...

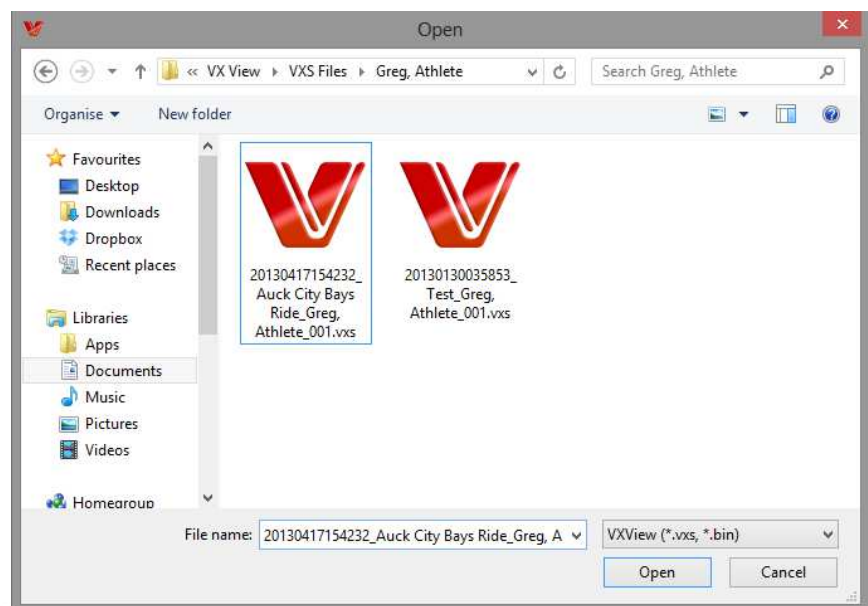

1. Insert Guest Data...
2. Navigate to VXS file

Moving VX View™ To Another PC

Depending upon the type of licence and support contract that you purchased you may install your software on 1 PC, or more if you have a multi-user licence (Activation Code).

If you move your software from your PC to another PC you must take care to move the licence. Failure to do this will prevent you from reactivating your software if you have a single activation.

To move your licence: Open the [ABOUT] tab in VX View™. Ensure that your PC is connected to the Internet via broadband. Click the (Move Licence) button, and then follow the instructions on screen. Once your licence is removed you should complete the uninstall of VX View™ on the original PC.

Install VX View™ on the new PC and follow same procedure for activation as you did originally.

Battery

Charging the Battery

Charge the internal battery in your VX Log™ by connecting the USB cable to your PC and VX Log™. The battery charges in around 3 hours to 90% capacity. Your PC normally must be on to allow USB port to supply power.

The lithium ion battery in the VX Log™ is good for between 300 to 500 recharging cycles. To obtain best battery life you should recharge your battery when it gets to about half capacity.

Do not recharge your VX Log™ unnecessarily. The battery will hold its charge well.

Every few months you should run your battery down to a low level then fully charge for 12 hours. Although lithium batteries do not have a "memory", it can help to improve the battery life.

If you do not use your VX Log™ for an extended time it will eventually go flat. The VX Log™ has a battery low-level protection device. Caution: if the battery is not charged for more than a year there is a possibility of permanently damaging it.

Battery Status Indicators:

	Solid Orange Light for 10 Seconds	Low Battery	Plug in USB cable to charge device (see 'USB mode'). (Unit will not start logging unless sufficiently charged)
	Solid Red Mode and Status Lights Light when plugged into PC	Battery Charging	Unplug USB Cable to turn device off. All lights will turn off.
	Solid Red Mode Light when plugged into PC	Battery Fully Charged	Unplug USB Cable to turn device off. All lights will turn off.

Heart Rate Straps

Using Third Party Heart Rate Straps

The VX Log™ hardware is tuned to pick up sensor signals within a 0.5 metre distance. However we do not recommend that two or more athletes stand closer than 1metre apart while wearing heart rate straps, to avoid interference between VX Log™ monitors.

It is important to make sure that heart rate chest straps are correctly placed (typically just below the line of the nipples on the chest), and are adjusted for firm contact. Heart rate straps require moisture to operate correctly, so it can be useful to initially moisten the strap contact areas with water to improve performance.

Our VX Log™ use ANT coded heart rate detection only, and are compatible with the Suunto Dual belt SS014543000.



Heart Rate

The VX Log™ 90/230/340 will automatically detect a signal from a Suunto™ ANT heart rate chest strap when the unit is turned on.

Note: Visuallex Sport International Ltd has no formal or technical association with Suunto™, apart from being an authorised reseller of Suunto™ products in New Zealand.

Google Earth Plug-in

The “Location Report” feature in VX View™ uses a software “plug-in” supplied by Google™ and controlled by their terms and conditions. When prompted to download the plug-in you must accept the Google™ terms. To run Location Reports and to download the plug-in you must have a broadband connection operating to your PC.

Visuallex® Sport cannot guarantee that the plug-in has detailed maps for everywhere on the globe. There are parts of the world, including some cities, where high resolution images are not yet available.

Using VX340 + VXM1 System in Realtime Mode

NOTES:

To conduct a realtime (live data) session requires a VX Log™ M1base station and one of more VX Log™ 340 devices. There are no user settings required for adjusting radio transmission. The hardware is factory set to provide radio power and protocols to conform to rules in the countries where the products are sold.

To avoid any problems with GPS location we suggest you reboot each of the VX340 units when you first receive them, or when you have moved to another country. Push 3 buttons at same time for >7 seconds until reboot operation starts. Total reboot time is less than 30 seconds.

There are some things to remember when setting up the realtime system:

1. First, start VX View™ software, and plug in the base station (VXM1) to the USB port of the PC
2. The VXM1 should be recognised in the left hand control panel on screen. Once the VXM1 detail appears in control panel at the left of VX View™ please unplug it from USB and continue to step 3.
3. Plug in one or more VX340 logs. Wait for log details to appear in left hand control panel in VX View™.
4. Click 'Issue Device' and each VX340 unit will automatically identify with the VXM1 base station. When you start the VX Live™ software the VXM1 should be plugged in first to USB port of PC. The VX Live™ software will automatically recognise the VXM1, which will start transmitting.
5. Next, turn on one or more VX340 units. VX Live™ will take about 60 seconds to automatically find these units (and will display all information of each unit – this is loaded during the issuing procedure).

GPS Settings and Information

- The VX Log™ hardware includes a high precision 4 Hz GPS chip made in Europe.
- VX Log™ monitors only operate using the US GPS satellites
- VX Log™ will use SBAS enhanced broadcasts in countries where this is available (EU and US).


The GPS system is latest generation and includes very fast lock times to lock onto satellites (typically in less than 1 minute). Once the VX Log™ has been in use and is restarted after an hour or so the time to re-lock onto GPS satellites can be as little as 5 seconds. The GPS chip in the VX Log™ can determine a position with 3 satellites and will normally give reliable information if 4 or more satellites are detected. The chip calculates speed and position 4 times each second.

There are several factors that can affect GPS performance with the VX Log™ monitor:

- The user must set the sport correctly in the VX Log™ before use.
- There is some variation in GPS reception quality throughout the day.
- The VX Log™ may have reduced position accuracy if it is used under significant tree cover.
- The VX Log™ will have reduced position and speed accuracy if used in locations with buildings shadow the user from a good view of the sky and horizon. This may be noticeable when using the VX Log™ in a stadium with very high stands on all sides.

Note: For Northern Hemisphere use most satellites are seen in the south, east and west of the sky.
For Southern Hemisphere use most satellites are seen in the north, east and west of the sky.

GPS Status Indicators:

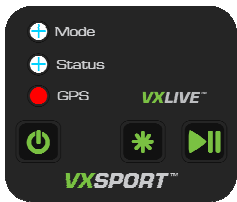	Solid red GPS light with other lights any colour.	No GPS lock
	Flashing GPS light, Red to Green	2D GPS Lock (No altitude information)
	Solid Green GPS light	3D GPS Lock

Further Information

For further information and support we recommend you:

Refer to your CD that came with your VX Sport™ system.

Also refer to the FAQ page at vxsport.com

Have a look at our support forums at <http://www.suport.vxsport.com/>

Appendices

APPENDIX 1: SOFTWARE INSTALLATION NOTES – VX VIEW™

Note: To install your VX View™ software you need an Activation Code, which will be emailed to you at time of purchase.

CORPORATE NETWORK USERS

Caution: To get the software to successfully install on a PC connected to a corporate network you should first ensure that you have adequate administrator rights to install the software. Secondly you need to ensure that the intranet, firewall or security protocols in place at your company will allow the VX View install to connect to the following websites:

1. Used by Nalpeiron Activation, activating the software.
<https://www.internetactivation.com/ECOSYSTEM/ControlActivation.aspx>
2. Used by VX View™ for VX Sport™ user management.
<https://www.internetactivation.com/ECOSYSTEM/ActivationWS.aspx>
3. Requesting VX View™ updates. <http://ws.vxsport.com/Service.aspx>

The port numbers are:

Nalpeiron HTTPS: 443

VX Updates HTTP: 80

Note: even if those ports are open by the network administrator it may not mean that it will work properly as your PC may be configured using a proxy server.

For example, using a proxy server, all HTTP traffic can be operated on a different port number from your PC to proxy server.

From your proxy server to the real servers (Nalpeiron and VX Sport), ports have to be 443 and 80.

If you are installing VX View™ software and receive an error message such as: “Activation Manager is Not Available”..., or “Cannot Access Port 2”, or similar then it typically indicates that the installation and activation is being blocked by a corporate security regime. Contact your own company network support staff in this case.

INSTALLING SOFTWARE ON PC RUNNING WINDOWS™ XP™ – MANUAL METHOD

1. Put VX View™ CD in the CD/DVD ROM.
2. Use mouse to “right click” on CD/DVD ROM and choose “Explore”
3. There will be three files (setup.exe, VXView.ico and autorun.inf) there.
4. “Double click” on “setup.exe”.
5. Then follow the procedures on screen to complete the installation of the software.

INSTALLING SOFTWARE ON PC RUNNING WINDOWS™ VISTA™ and WINDOWS 7™ – MANUAL METHOD

1. Put VX View™ CD in the CD/DVD ROM.
2. Use mouse to “right click” on CD/DVD ROM and choose “Explore”
3. There will be three files (setup.exe, VXView.ico and autorun.inf) there.
4. Use mouse to “right click” on “setup.exe”, and choose “Run as Administrator”.
5. Then follow the procedures on screen to complete the installation of the software.

INSTALLATION OF USB DRIVER – VX LOG™ HARDWARE – MANUAL METHOD

Browse the CD that comes with VX Sport and locate the folder “Silab Driver”. Open the folder and double click on “USBXpressInstaller.exe”. Follow on screen instructions. Driver should fully install on most PCs without further invention. If a window appears that asks for location of SIUSBXP.sys then select the “browse” button and point to the correct path of that file; (for 32 bit PCs the correct file inside the Silab Driver/x86 folder).

WHAT IF MY SOFTWARE IS INSTALLED AND ACTIVATED BUT THE VX LOG™ UNIT IS NOT RECOGNISED BY THE SOFTWARE

1. When you run VX View™ software you should notice the left panel of the screen, which is the “Control Panel” for communicating with your VX Log™ hardware (ie the athlete monitor).

2. Any time that the VX Log™ is plugged into your PC with the USB cable the “Control Panel” should light up, showing you the memory used, battery status and buttons to issue or extract data from the hardware.
3. If the VX Log™ is not recognised by the hardware, try reconnecting the cable.
4. If the situation is permanent it is likely that your PC security has prevented the driver from being loaded.
5. In this case first try reducing your security settings (**Windows Bit Defender and McAfee are particularly intrusive and may cause problems**), then try installing the USB driver again.
6. If the VX Log™ still cannot be recognised by VX View™ on your PC then email VX Sport for assistance. (sales@vxsport.com)

APPENDIX 2: Health & Safety Conditions

The products manufactured and sold by Visuallex® Sport International Ltd (VX Sport™) are for use by fit and healthy individuals.

The VX Sport™ system is designed to monitor performance, such as speed, leg forces, distance travelled and heart rate of athletes, but makes no claims whatsoever to the health or physical condition of the user. **Before engaging in any training or sport activity the user should consult their doctor or a health professional.**

By using the VX Sport™ products you acknowledge and agree that Visuallex® Sport International Ltd (VX Sport™) will not be liable for any injuries from wearing the products or for consequences from: using the software, the analysis or data produced by the system.

The athlete monitoring hardware (VX Log™) and the waist belt must be used as shown in the Quick Start Instructions booklet and any other diagrams or video included on the website.

The accuracy of any heart rate strap that the user may wear with the VX Sport™ system is determined by the performance of that third party equipment. Heart rate results will vary depending on a number of factors, including how the heart rate monitor is worn, and whether there is outside electrical or magnetic interference. Visuallex® Sport International Ltd (VX Sport™) makes no claims or warranty about the accuracy of heart rate monitoring made using VX Sport™ hardware. Users should consult a medical professional if they have concern over heart rate results.

APPENDIX 3: VX LOG™ LED Codes

This section describes the behaviour of the VX Log™ device user interface. Operation is divided into three modes: **OFF**, **ON** and **USB mode**

OFF Mode

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
All LEDs Off	Unit is Off	Press and hold the power button for 3 seconds to turn on. Plug in USB Cable to charge Device.
Solid Orange Status LED	Low Battery	Plug in USB Cable to charge Device. (Unit will not start logging unless sufficiently charged)

ON Mode

Logging (Recording)

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
Flashing Green Mode LED	Starting Logging	Press and hold the Play/Pause button for three seconds to pause logging. Press and hold the Function button to check or change the current logging mode. Press and hold the Power button for three seconds to stop logging and turn off the device.
Flashing Red Mode LED	Stopping Logging	
Solid Red GPS LED, other LEDs any colour	No GPS Lock	
GPS LED flashing between Red and Green. Other LEDs any colour	2D GPS Lock (No Altitude Data)	
Solid Green GPS LED, other LEDs any colour	3D GPS Lock	
Green Status LED, brief blink to red. Other LEDs any colour	Heartbeat Detected	

ON Mode

Error Conditions

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
Solid Red Status LED, other LEDs any color	Logger Memory Full	Turn off logger by holding the power button for three seconds. Connect logger to computer and download data using the VX View™ application. Erase the device memory when data is downloaded.
Solid Orange Status LED, other LEDs any color	Low Battery	Unit will automatically stop logging and return to Off mode when battery is empty. Plug in USB Cable to charge Device.

ON Mode

Changing the Logging Mode

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
Solid Green LED, other LEDs any colour	Normal logging mode selected	Press and hold the function button for three seconds to toggle between logging modes. Release the function key and repeat above to change logging mode again.
Green LED flashing once per second. Other LEDs flashing any colour	Long Play mode selected	

ON Mode


Pause

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
Solid Red LED, other LEDs any colour.	Paused	Press and hold the Play/Pause button for 3 seconds to resume logging.

USB Mode (With Cable Connected)

Logging (Recording)

<u>Lights</u>	<u>Status</u>	<u>Actions</u>
Solid Red Mode and Status LEDs	Battery Charging	
Solid Red Mode LED	Battery Full	Unplug USB cable to turn device off. All lights will turn off.
Solid Red Mode LED, flashing Green Status LED	Communicating with Computer	Wait until status light stops flashing, indicating download or erase operation is complete. Do not unplug the USB cable whilst the status light is flashing green. Doing so will cause the current operation to fail. If an accidental disconnect occurs, restart the last download/erase operation.
Solid Red Mode LED and solid Green Status LED	Communications Port Open (idle)	Device is ready to communicate with computer.

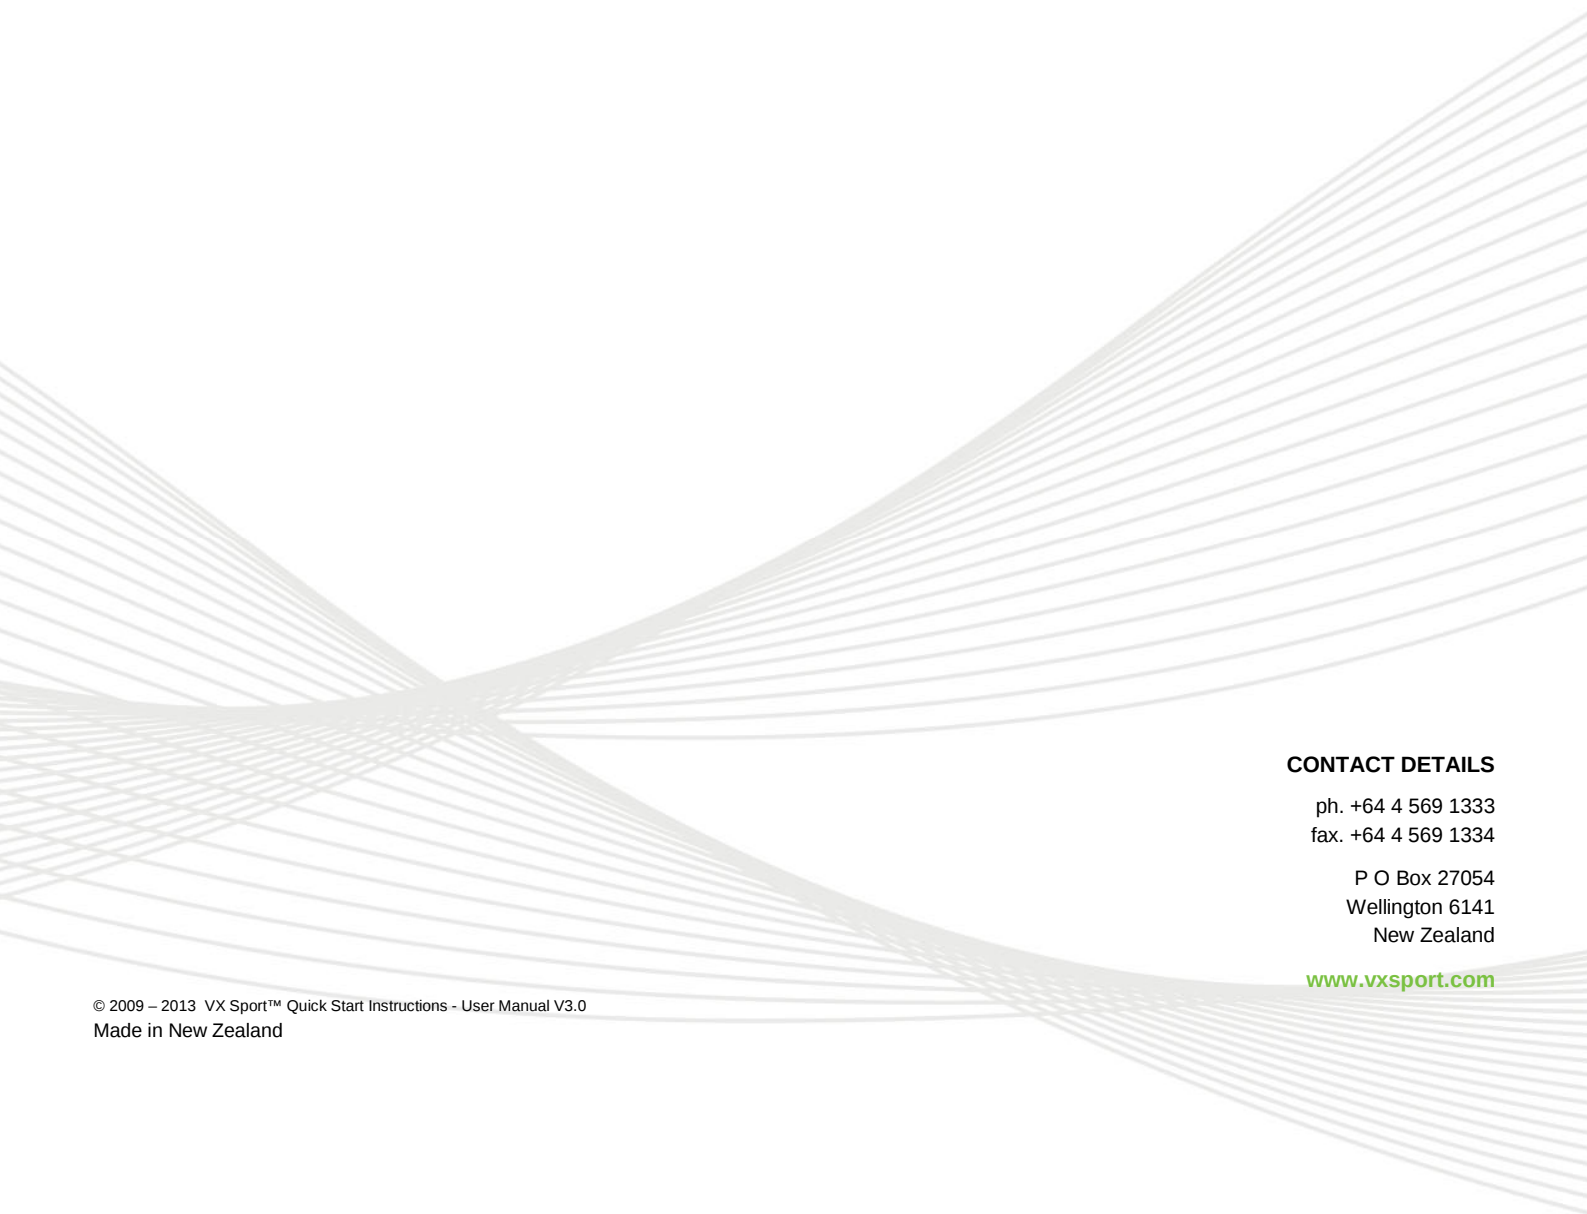

CONTACT DETAILS

ph. +64 4 569 1333
fax. +64 4 569 1334

P O Box 27054
Wellington 6141
New Zealand

www.vxsport.com