



User Manual

FDT 1080P wifi bullet IP camera-FD8902W/FD8902B

V 1.0.5

Contents

Welcome	4
1 Features.....	7
1.1 Overview.....	7
1.2 Features	7
2 Device Overview.....	9
3 Camera Connection and Installation	10
3.1 Connection Guide	10
3.2 Installation Guide	10
3.3 Default Username and Password.....	10
4 Access the camera.....	11
4.1 Mobile device access.....	11
4.2 Web browser access.....	11
4.2.1 SearchTool for Windows OS	11
4.2.2 SearchTool for Mac OS	13
4.2.3 Access by IP address and http port	15
4.2.4 Remote access.....	17
4.3 NVR access.....	18
4.4 RTSP access	18
5 App for Mobile Device.....	21
5.1 Add Camera	21
5.1.1 Set up a new camera.....	21
5.1.2 Set up an existing camera.....	25
5.2 Camera list page.....	26
5.3 Live view page.....	27
5.4 Settings pages	29
5.4.1 Edit Password	29
5.4.2 Alarm Settings.....	29
5.4.3 Alarm link settings	29
5.4.4 Timed recording settings	30

5.4.5 Audio settings.....	30
5.4.6 Video settings.....	30
5.4.7 Wifi settings.....	31
5.4.8 SD Card settings	31
5.4.9 Device time settings	31
5.4.10 Email settings.....	32
5.4.11 FTP settings	32
5.4.12 System settings	32
5.4.13 Device information.....	33
5.5 Local files page.....	33
5.6 Playback page	34
6 Web User Interface for operation.....	35
6.1 Login page.....	35
6.2 Live page	35
6.2.1 OSD	35
6.2.2 View	36
6.2.3 ImageSettings	36
6.2.4 Tool bar	36
6.3 Playback page(Only for IE/Firefox browser in windows).....	38
6.3.1 Search and playback videos.....	38
6.3.2 Tool bar	38
6.4 Configuration page	38
6.4.1 Media settings	39
6.4.2 Network.....	40
6.4.3 Alarm.....	43
6.4.4 Advance	44
6.4.5 System	47
7. Frequently Asked Questions	50

Welcome

Thank you for purchasing our FDT network camera!

This user manual will help you become familiar with our camera in a very short time. Here you can find information about the camera's features and functions, as well as information to aid in troubleshooting. Before installation and operation, please read the below safeguards and warnings carefully.

If you still have further questions, please visit <http://fdt.us> to get any supports from FDT team.

Email: support@fdt.us

Visit: www.fdt.us/support

USA Direct: **713-955-7170**

Important Safeguards and Warnings

In order to keep your camera secure and prevent unauthorized access, please make sure to follow the steps below:

- Always make sure that your camera has the latest firmware as listed on <http://fdt.us>.
- Never use the default password for your camera. Always ensure that your password is at least 8-10 characters long and contains a combination of lowercase characters, uppercase characters as well as numbers.

Electrical Safety

- All installations and operations here should conform to your local electrical safety codes.
- We assume no liability or responsibility for any of the fires or electrical shocks caused by improper handling or installation.
- We are not liable for any problems caused by unauthorized modifications or attempted repair.
- Improper battery use may result in fire, explosion, or personal injury.
- When replacing the battery, please make sure you are using the same model.
- This product must be grounded to reduce the risk of electric shock.

Transportation Security

Heavy stress, violent vibrations, and excess moisture should not occur during transportation, storage, and installation of the device.

Installation

Handle the device with care. Keep the device right side up.
Do not apply power to the camera before completing installation.
Do not place objects on top of the camera.

Repair Professionals

All the examination and repair work should be done by qualified service engineers.
We are not liable for any problems caused by unauthorized modifications or user-attempted repair.

Environment

The camera should be kept in a cool, dry place away from direct sunlight, flammable materials, explosive substances, etc.
This product should be transported, stored, and used only in the specified environments as stated above.
Do not aim the camera at a strong light source, as it may cause overexposure of the picture, and may affect the longevity of the camera's sensors.
Ensure that the camera is in a well ventilated area to prevent overheating.

Operation and Maintenance

Do not touch the camera sensor or lens directly.
To clean dust or dirt off of the lens, use an air blower or a microfiber cloth.

Accessories

Be sure to use only the accessories recommended by manufacturer.
Before installation, please open the package and check to ensure that all of the components are present.
Contact the retailer that you purchased from, or FDT directly if anything is broken or missing in the package.

Check Hardware

When you receive the product in the packaging, unpack it, and check all sides of the product for any physical damage. The protective materials used in the packaging of the product can protect most accidental damage during transportation, but to ensure that your equipment is operating as expected, it is recommended to inspect the product before proceeding further.

On the product, check specifically that the label on the bottom of the product is not damaged. The serial number of the unit is often needed to provide support.

Please check that all required items for your camera are present and accounted for. If any item is missing, please contact us as soon as possible so we can send you the missing component.

Note: Hardware does not look exactly as pictured in this section, but the steps to

assemble the hardware are the same.

1 Features

1.1 Overview

The FDT Camera is an excellent digital surveillance product that can be useful to a wide variety of users. The camera connects to any router, and uses an internet connection to allow the user to access all of its functionality from many internet connected devices. It's easy to use and can be set up in a relatively small amount of time. It has various functions such as recording, playback, and monitoring functionality.

The FDT IP camera connects to a wide variety of routers in order to connect to the internet, both through a wired connection and wirelessly. Once setup, the camera can be accessed remotely from a wide variety of internet connected devices, including PC, iPhone, iPad, Android tablet, and Android phone.

This Camera adopts a high-quality design in order to achieve high levels of reliability and security. It can be configured to work locally, as well as on a network. The Camera also has a built-in WiFi adapter that allows for the camera to be used on a wireless network, without needing a physical connection to a router or PC.

1.2 Features

The FDT Camera has the following features:

HD Resolution

FDT IP camera is an integrated wireless IP Camera with a color CMOS sensor which enable to view in High Definition resolution. It combines a high quality digital video camera, with a powerful web server, to bring clear video to your desktop and mobile devices no matter where by your local network or over the Internet.

P2P function

FDT cameras support P2P function. You don't need to do complicated Port Forwarding and DDNS settings, you just need to scan the QR code on the bottom of the camera to connect it to smart phone, or input the UID to realize remote access.

H.264 Encoding

FDT IP Camera provides users with more comprehensive controls over a monitored site. The camera supports H.264 video compression technology, dramatically reduces file size and saves network bandwidth.

Web access

FDT camera is designed for indoor surveillance with wide applications such as at home, in retail store and in office. Controlling the camera and managing images are simplified by using the provided web interface across the network in either wired or wireless way.

Mobile device access

FDT IP camera provides Smart Phone APP for Android and iPhone device, please search and install App named **FDT View** on App Store and Google Play, then you can view your

camera anywhere, anytime on your smart mobile devices.

Advanced Playback Function

FDT IP camera supports real-time recording and can support search, fast forwarded playback, recorded searches, and downloading of videos and screenshots. The Camera can also playback frame by frame as needed. When recording, the Camera shows a date/time overlay to ensure accurate viewing of events when they occurred.

Note: There may be slight differences in functionality due to the existence of different product series.

2 Device Overview




3 Camera Connection and Installation

To make your experience with the FDT WiFi camera easy and simple, we've provided multiple ways to set up, view, and operate your camera depending on your needs. Please set up your camera in the way that works best for you.

3.1 Connection Guide

The FDT camera can be accessed through the web browser in the computer or the App in the smart phone or tablet PC. Before accessing, you should connect the camera to the router by Ethernet cable or WiFi after it is powered on.

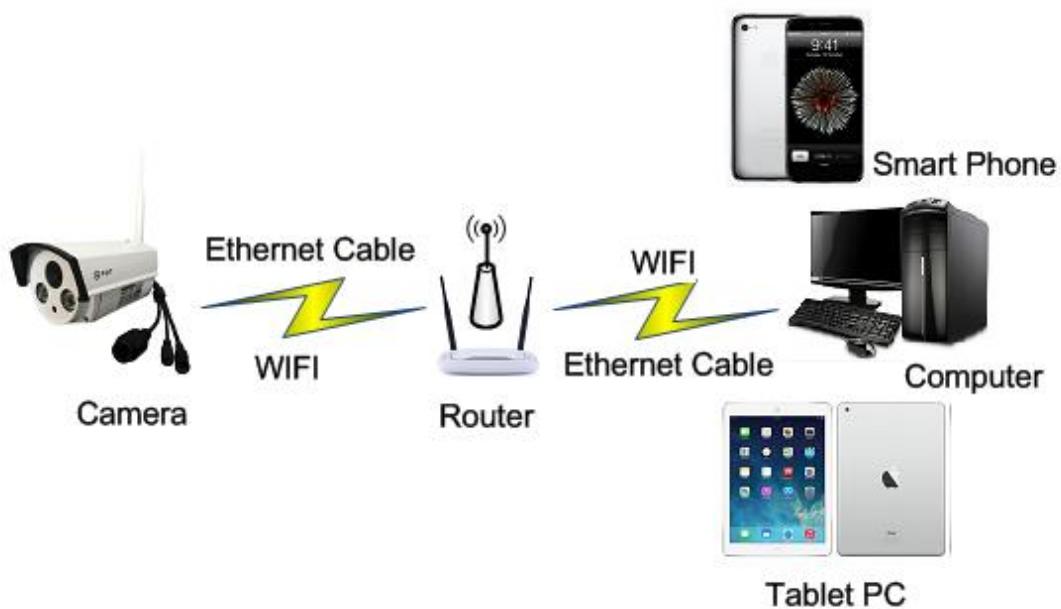

3.2 Installation Guide

The camera has a standard camera tripod screw hole (1/4-20 UNC thread) for use in mounting the camera onto a stable surface.

Note: Prior to installation ensure that the installation environment can support at least 3 times the weight of the camera.

3.3 Default Username and Password

To login to the system for the first time, use one of the following default username/password combinations. Once you've successfully logged in, it is highly recommended to change the password for security reasons.

Username: admin

Password: admin


Note:

1. Logging in for the first time will prompt you to change the password of admin account.
2. The password is case sensitive.

4 Access the camera

4.1 Mobile device access

FDT cameras enable access through the use of the FDT View app on either iOS or Android mobile operating systems. To access your device from a smart phone or tablet, please download and install **FDT View**. For iPhone and iPad users, please visit the App store to download the App. For Andriod user, please install the APP from the Google Play.

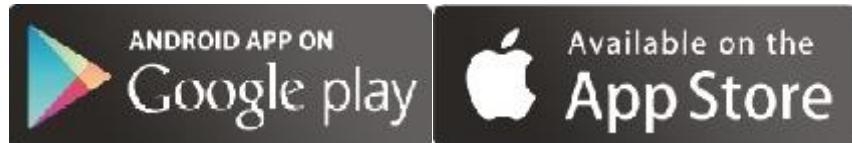

4.2 Web browser access

FDT camera can be accessed through the web browser from both windows OS and Mac OS. It supports the IE/Chrome/ Mozilla Firefox in windows OS and Safari/Chrome in Mac OS. The web browser accessing can supports all advance features of FDT camera.

4.2.1 SearchTool for Windows OS

To easily connect to the camera's interface, use the included CD to install and run the "SearchTool" in Windows. Alternatively, you can download the tool software from <http://fdt.us>.

However, before use the SearchTool to find the FDT camera, please ensure:


- The camera is connected to the Network via an Ethernet cable. You can skip this step if you have already set up the camera on WiFi using the FDT view App in your mobile device.

- The camera and the PC are on the same local network.

- Using the IE/Chrome/Mozilla Firefox in Windows OS, the Safari/Chrome in Mac OS.



You can also modify some network configurations, camera name of your camera through the SearchTool. Please ensure you have input the right username and password of the camera to let your modifications are valid.

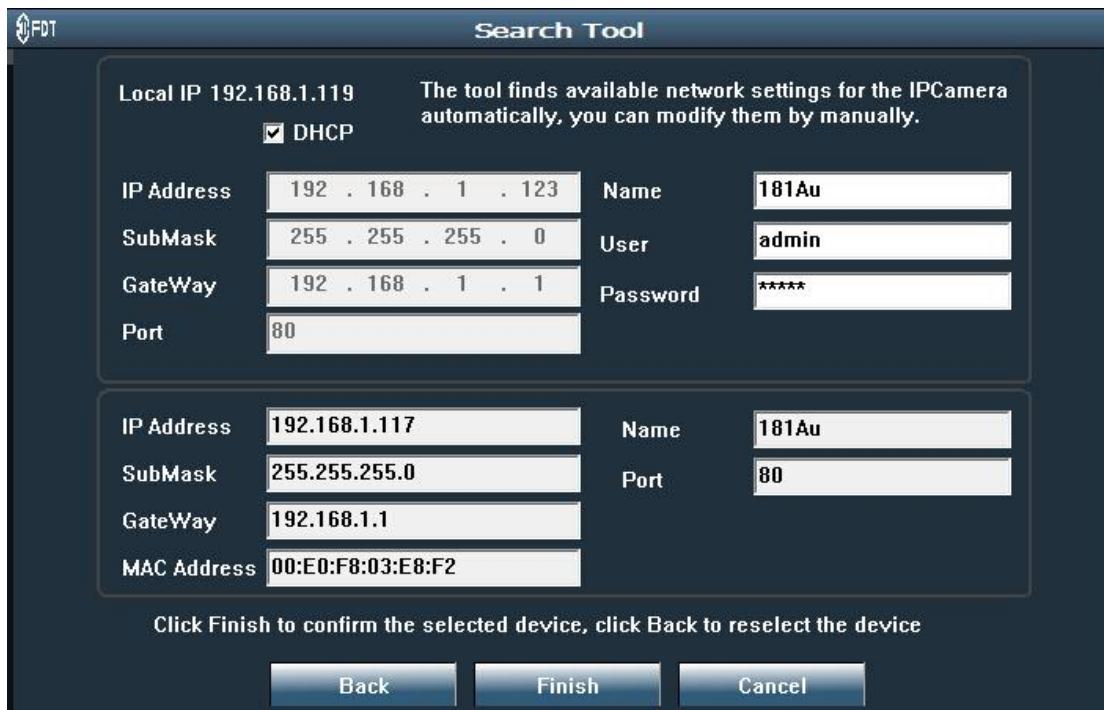

4.2.2 SearchTool for Mac OS


You can find the “[FDT Mac SearchTool.zip](#)” for Mac OS in the included mini CD. Please copy and install it on your Mac computer. Then run the tool named “SearchTool” to search the FDT camera in your LAN. From the tool, you can get the name, UID, IP address, Mac address, Http port and firmware version of the camera.




IPC Search Tool						
No.	Name	UID	IP	Mac	Port	Version
1	32GB	AAAA-263430-TYSHX	192.168.1.55	00:E0:F8:03:EE:0D	80	V7.1.4.1.14
2	POE 720P B...	AAAA-263422-EHPYM	192.168.1.8	00:E0:F8:09:FA:F3	80	V7.3.0.2.5
3	7903	AAAA-374267-RHPRY	192.168.1.6	00:E0:F8:09:F5:1B	80	V7.1.5.1.1
4	SanDisk 32G	AAAA-395060-YSPYC	192.168.1.65	00:E0:F8:09:A4:7A	80	V7.1.4.1.14
5	SanDisk 64G	AAAA-263425-CHZUK	192.168.1.201	00:E0:F8:03:EE:07	80	V7.1.4.1.14
6	128GB	AAAA-263426-BBRUH	192.168.1.10	00:E0:F8:03:EE:10	80	V7.1.4.1.14

Please double click the camera you selected to open it by your default web browser

By double left clicking the camera in the searching list, you can open the camera by your default web browser, such as Safari.

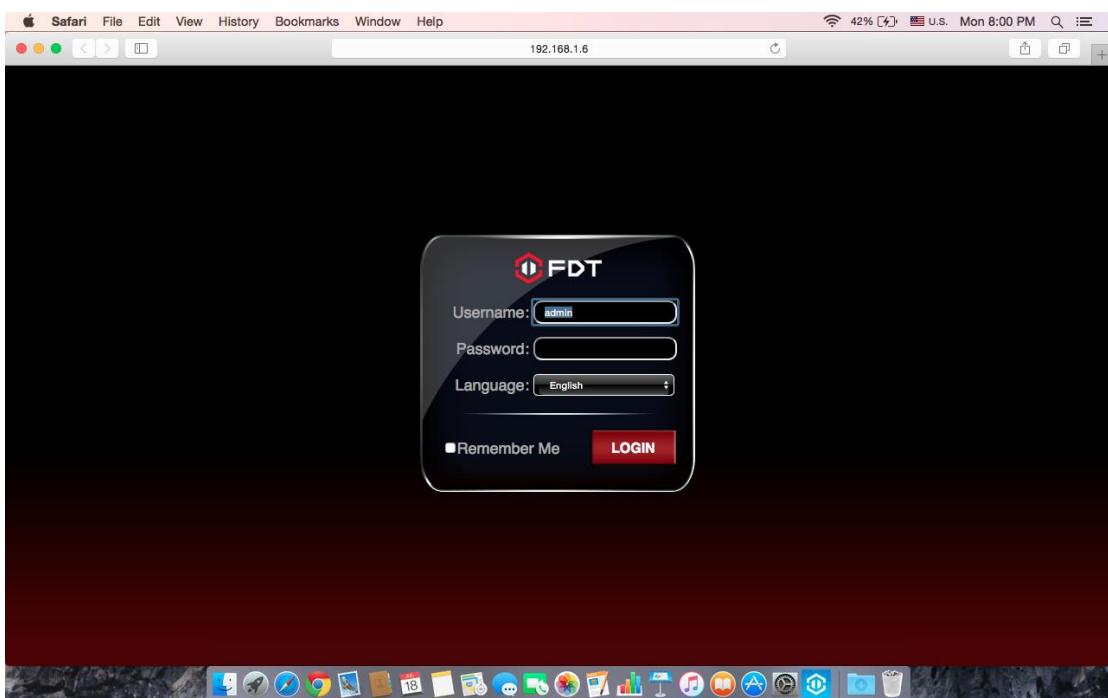


You can find the button “Refresh Camera List” and “Flush Arp Buffer” by right click the search tool or the camera in the searching list, then you can refresh the searching list by these 2 buttons.

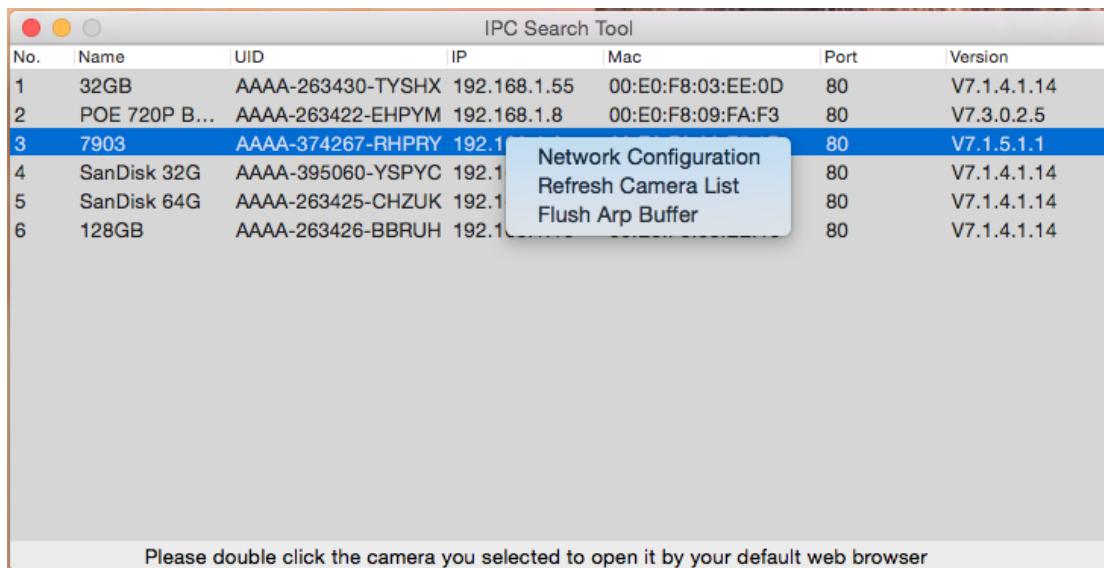

Here is a “Network Configuration” button in the right-clicking button list. From this button, you can modify the IP, Device display name and http port of the FDT camera. Please note:

1. The camera will reboot automatically if you modify its http port.
2. Please enter the right username and password of your camera before you modify any network configuration of the camera.

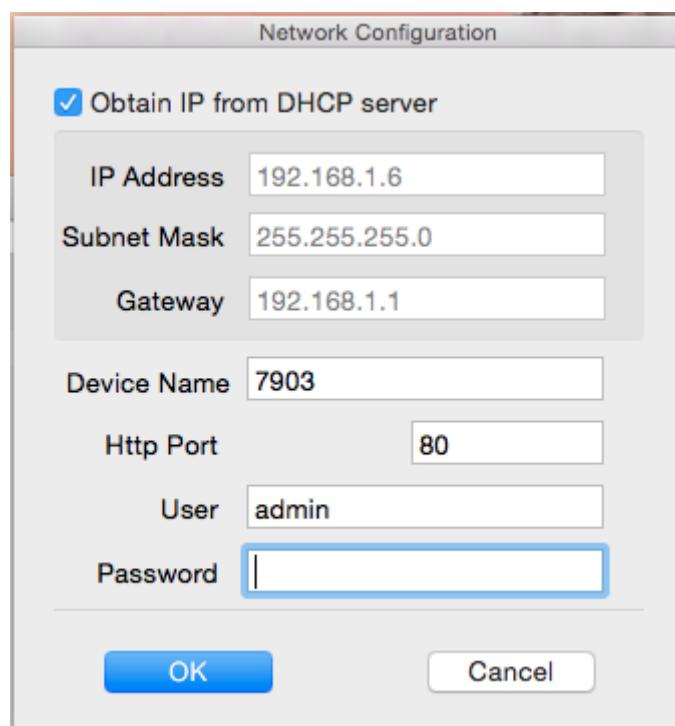


4.2.3 Access by IP address and http port

After launching the SearchTool, click the next to skip the welcome page and refresh the searching page to bring up the cameras on your LAN. Then you can double click the camera's line item to login the camera by your default web browser, or you can open the web browser you want first and input the IP address of the camera in the URL address bar of the browser by manual to login your camera. You can access the FDT camera by HTTP

protocols as below:

<http://LAN> IP Address + HTTP Port No.

You can find the LAN IP Address of your camera through the SearchTool. As for the HTTP Port No., the default port No. is 80.

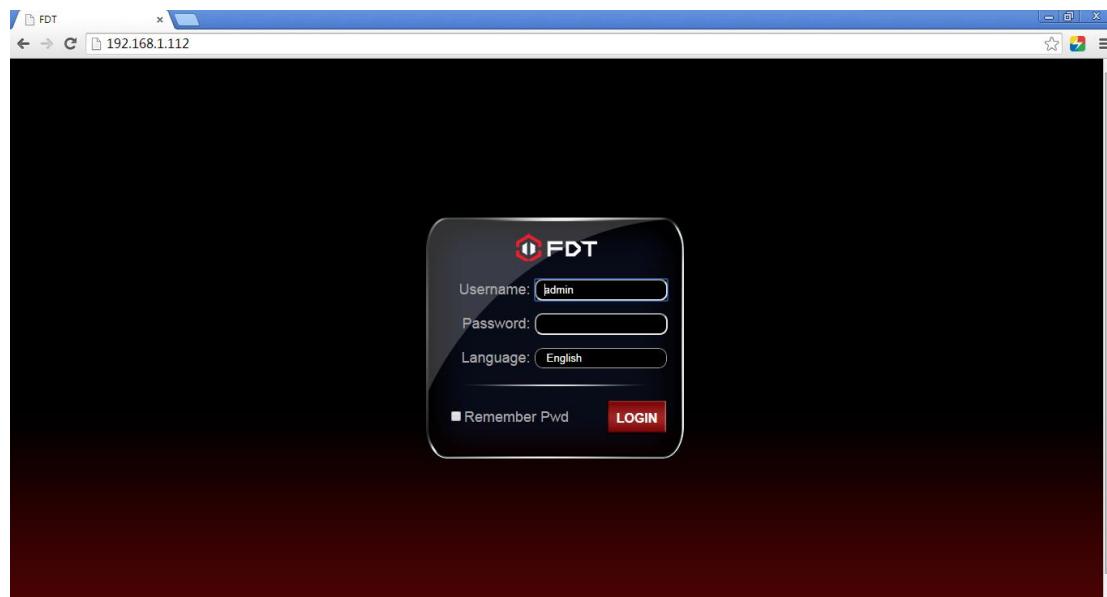


Log in to the camera using your login credentials (default username and password are both “admin”). If this is your first time logging into the camera by default account after it is reset, you will be prompted to change the default password. Please select a password that is at least 8 characters long, and one that uses a combination of uppercase letters, lowercase letters, and numbers.



For the IE/ Mozilla Firefox web browser in Windows OS, when opening the camera's interface, the browser will prompt you to install a plugin. The plugins are necessary for using the camera's interface. Click install to download the plugin, and then install the plugin. If the browser prompts you to allow the plugin to work on the computer, hit Allow to ensure the plugin can run successfully. Then the camera is now successfully set up for

live viewing, playback and configuration!

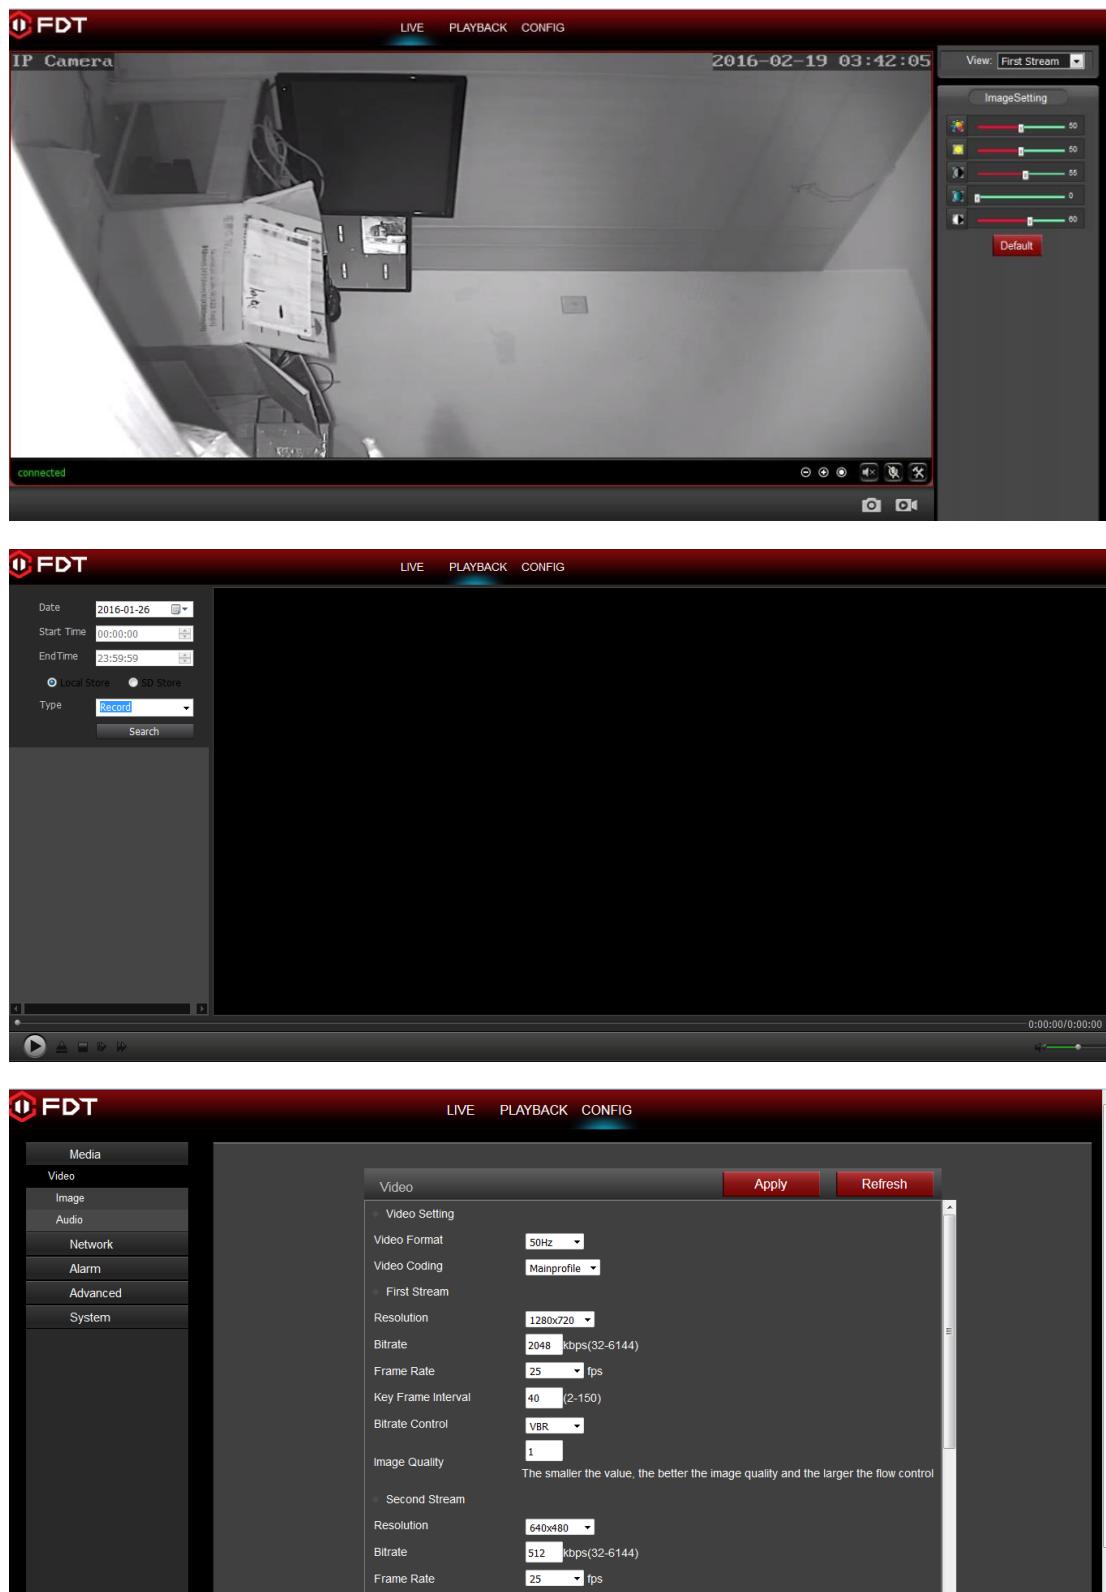

LIVE **PLAYBACK** **CONFIG**

IP Camera

2016-02-19 03:42:05

connected

ImageSetting

View: First Stream

Color: 50
Yellow: 50
Blue: 55
Green: 0
Cyan: 60

Default

LIVE **PLAYBACK** **CONFIG**

Date: 2016-01-26

Start Time: 00:00:00

End Time: 23:59:59

Local Store CD Store

Type: Record

Search

0:00:00/0:00:00

LIVE **PLAYBACK** **CONFIG**

Media

- Video
- Image
- Audio
- Network
- Alarm
- Advanced
- System

Video

Video Setting

Video Format: 50Hz

Video Coding: Mainprofile

First Stream

Resolution: 1280x720

Bitrate: 2048 kbps(32-6144)

Frame Rate: 25 fps

Key Frame Interval: 40 (2-150)

Bitrate Control: VBR

Image Quality: 1

The smaller the value, the better the image quality and the larger the flow control

Second Stream

Resolution: 640x480

Bitrate: 512 kbps(32-6144)

Frame Rate: 25 fps


Apply **Refresh**

Note: Due to the limitations of NPAPI plugins, the web browser of Chrome/Safari can not support the settings for features of playback, talk, motion-detection and privacy mask.

4.2.4 Remote access

You can access the FDT camera remotely through web browsers by UPnP/DDNS features or Port forwarding.

Go to the CONFIG/DDNS page to enable the UPnP and input the information for third-party DDNS, such as Dyndns.org/3322.org/dynddns.us/No-ip.com. Then you can access the FDT by DDNS remotely.

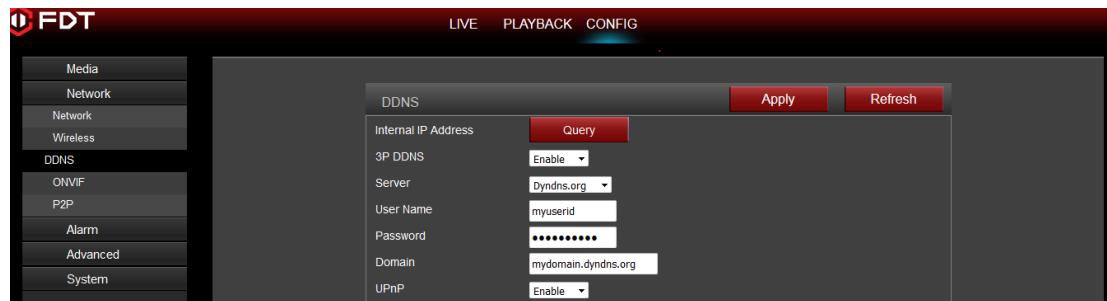

Go to your router settings page to make the appreciate port forwarding, then you can access your camera remotely through the public IP address and its corresponding port.

4.3 NVR access

FDT camera supports connecting to any NVR that uses the ONVIF standard. This allows the camera to view live, playback and to save recorded data to a network storage device.

4.4 RTSP access

The FDT camera supports the RTSP standard protocol, you can access the video from the camera directly by RTSP player such as VLC. Please make sure you enable the RTSP feature of you camera, you can set this feature in the webUI of the camera through the web browsers, like IE/Firefox/Chrome in Windows OS computer, and Safari or Chrome in Mac OS computer.

RTSP URL

First stream: rtsp://username:password@IP:port/11


For example: rtsp://admin:123456@192.168.1.10:554/11

Second stream: rtsp://username:password@IP:port/12


For example: rtsp://admin:123456@192.168.1.10:554/12

Follow these steps to access the camera rtsp stream by VLC player:

1) Open the VLC player and go to “Media”/”Open Network Stream”;

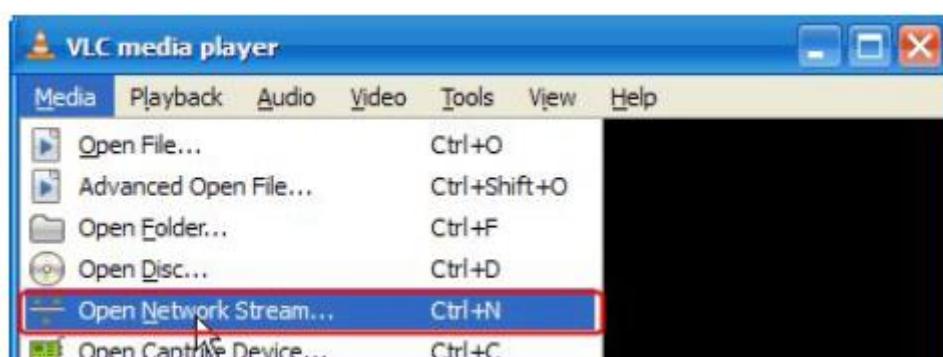

2) Enter the URL in VLC and click the play button.

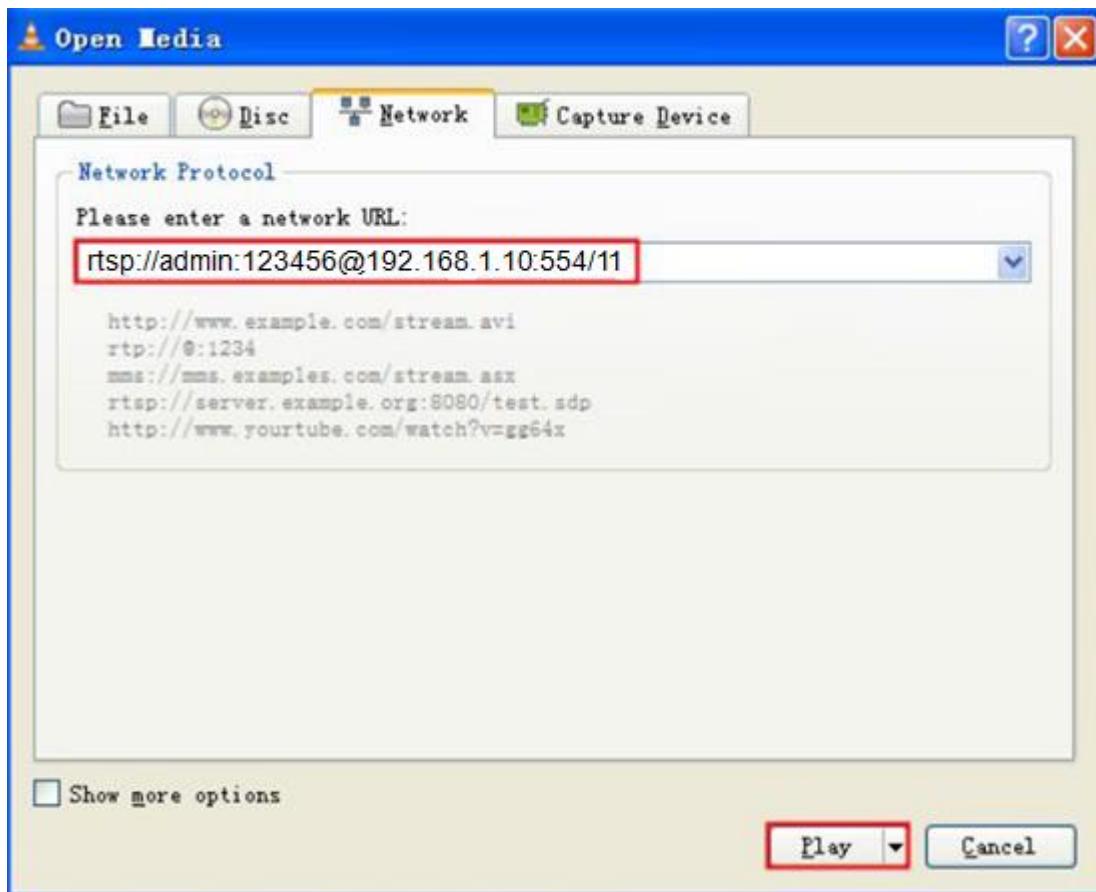

3) You may need to go through the rtsp authentication if you did not input the username/password in your RTSP RUL.



4) Then you can view the video from the VLC player by now.



Note: you can also view the video remotely by the rtsp stream if you have the right DDNS or port mapping or forwarding.

5 App for Mobile Device

To access your device from a smart phone or tablet, please download and install **FDT View**. For iPhone and iPad users, please visit the App store to download the App. For Android user, please install the APP from the Google Play, or <http://fdt.us>.


Note: For purposes of this guide, we will use iOS, though both apps have the same interface. The App Interface may differ slightly from the screenshots below as updates are released.

Note: If you have a dual band router, and your camera is not connecting to your WiFi network, please make sure you did not connect the FDT camera by 5G. It support 2.4G only.

Note: The password is case sensitive.

5.1 Add Camera


You can go to the camera list page to find a “+ Add Camera” to add cameras into your App. There are 2 methods to add camera. The first one is “Set up a new camera”, it is used to add camera which is just reset to factory setting or you just get the camera from the package. You can change the initial password of the camera and set wifi settings to your camera through this method. It is usually used for the first time you want to setup this camera. The second one is “Set up an existing camera”, it means to add the camera you set up before, for example you have already set up your camera in another smartphone or web. For the second method, you can search and add the camera directly, no need to change the password or set the wifi configuration.

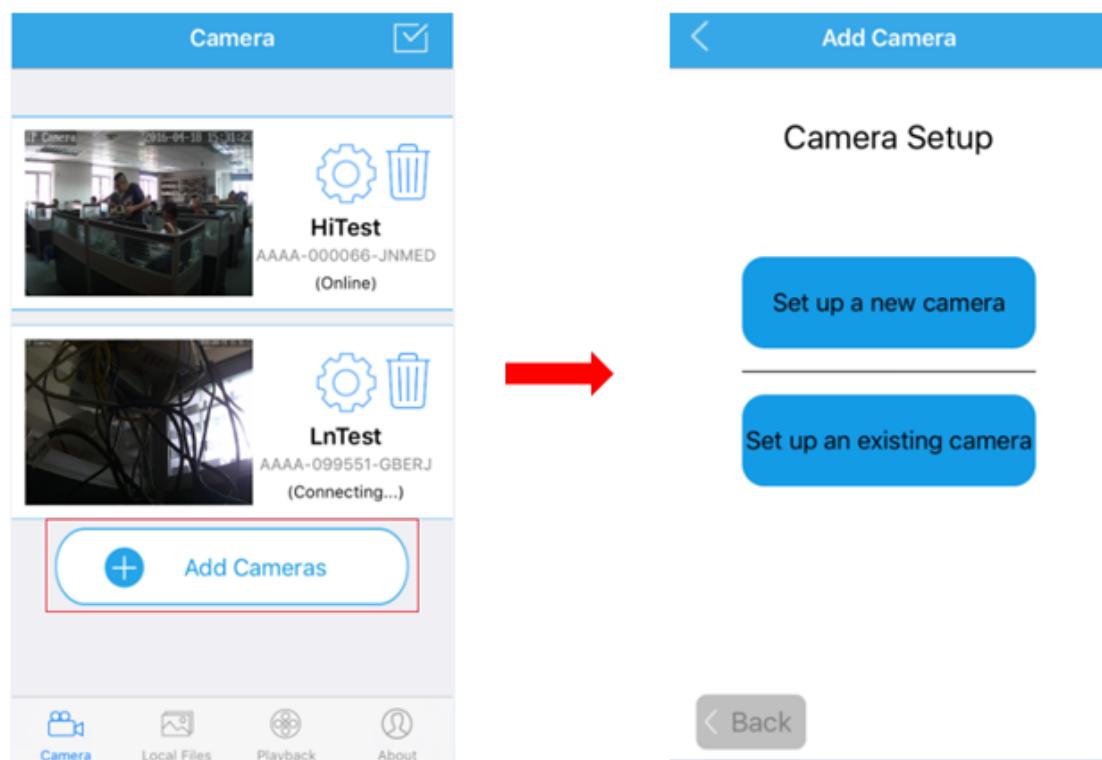

5.1.1 Set up a new camera.

If you are the first time to set up the FDT camera, or your just reset your FDT camera.


Please click the button “Set up a new camera” to add it into your smartphone or tablet. Please power up your camera first, and connect your camera to your router with an Ethernet cable. After you connect your smartphone or tablet to the same local network via wifi, then you can go to add your camera into the App by scanning the camera in the LAN or by inputting its UID by manual. We do recommend you to scan and add the camera in your local network, so you do not need to input the UID which is a long identifier and hard to remember.

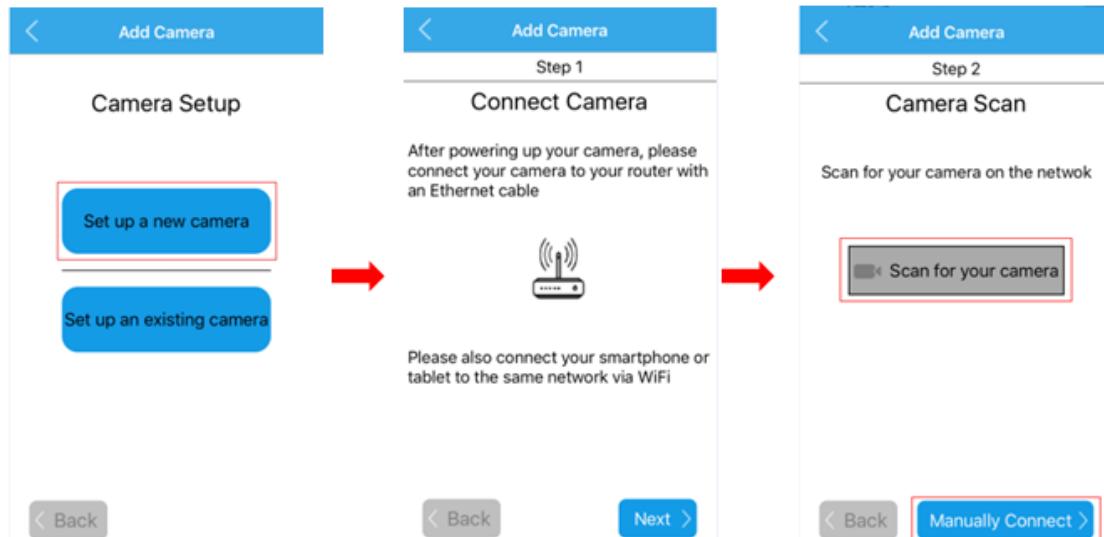

1. Scan for your camera

Once you chosen to add the camera by scanning, you can follow the NEXT or text instructions to complete the process of adding camera. Here are the screenshots to show how to add the camera by scanning.

- Select the camera you want to set up from the camera list you get by scanning.
- Give your camera a name, and input right username and password to access it. The default username is admin, the default password is admin too.
- Change the initial admin/admin username/password for the consideration of account security. Give your camera a private username and password that known only by you, and keep it secret.
- If you want to configure the wifi in this set up process, you can choose YES to connect to your wifi, or you can choose NO to start the live view directly. You can also configure your wifi in the wifi setting page after you added the camera into your App if you do not want to configure it in this step.
- Please click the refresh icon to search the wifi AP list again if you did not find the wifi SSID you want.
- Please input the right password of your wifi, and click next to set it into your camera.
- Then you can start live view of your camera and complete this set up process, and you can access and control your camera now.

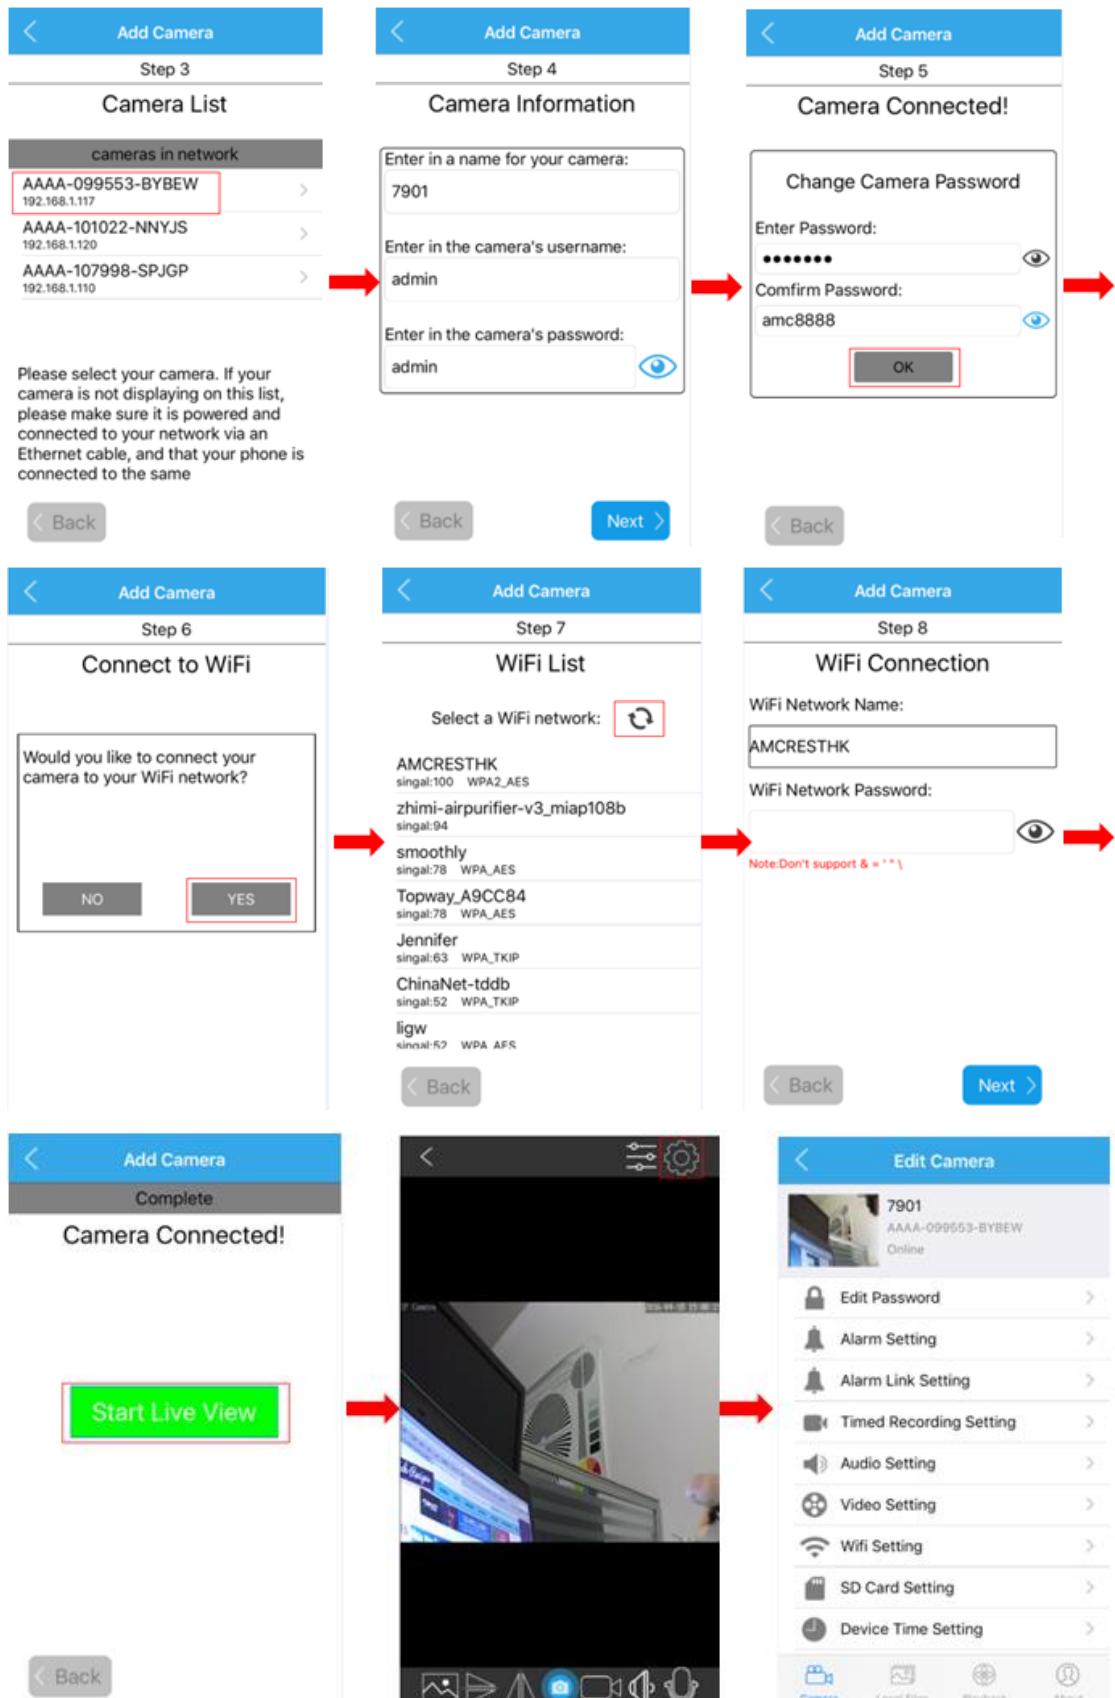

2. Manually connect

Once you chosen to add the camera by manual, you can follow the NEXT or text instructions to complete the adding of camera. Here are the screenshots to show you this

process.

-Enter in your camera's UID first, you can find it on the sticker of your camera's bottom or side. Give your camera a name, and input right username and password to access it. The default username is admin, the default password is admin too.

-Change the initial admin/admin username/password for the consideration of account security. Give your camera a private username and password that known only by you, and keep it secret.


-If you want to configure the wifi in this set up process, you can choose **YES** to connect to your wifi, or you can choose **NO** to start the live view directly. You can also configure your wifi in the wifi setting page after you added the camera into your App if you do not want to configure it in this step.

-Please click the refresh icon to search the wifi AP list again if you did not find the wifi SSID you want.

-Please input the right password of your wifi, and click next to set it into your camera.

-Then you can start live view of your camera and complete this set up process, and you can access and control your camera now.



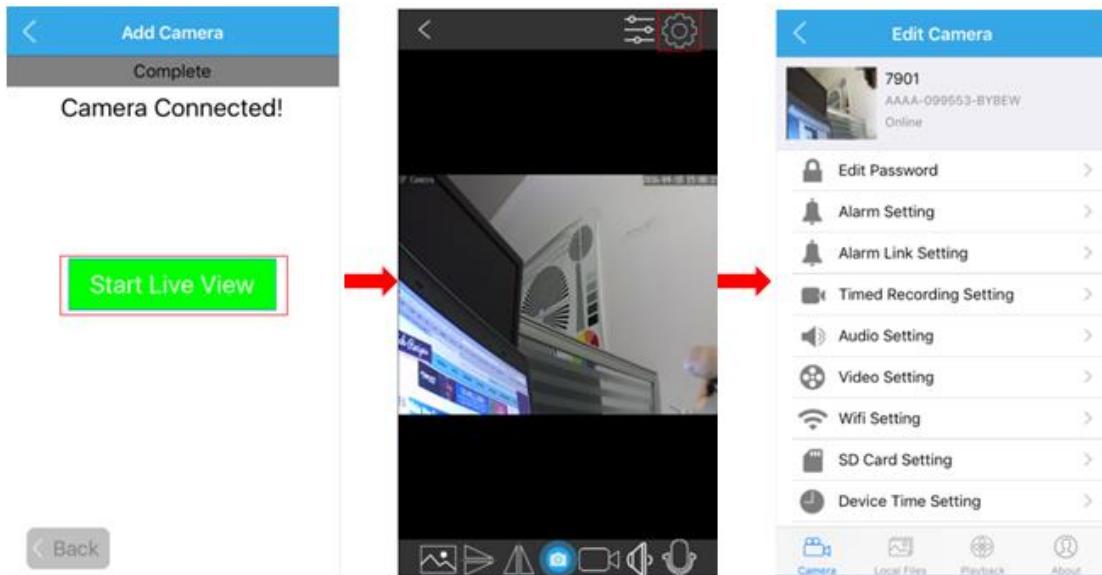



5.1.2 Set up an existing camera.

For the FDT camera you have set up before, you can click the button “**Set up an existing camera**” to add it into your smartphone or tablet. There are also 2 ways to add it, by scanning or by manual. We do recommend you to scan and add the camera in your local network area, so you do not need to input the UID which is a long identifier and hard to remember.

1. Scan for your camera


- After click the scanning button to search the FDT camera in your local network area, you can get a camera list. Please select the camera you want to set up.
- Give your camera a name, and enter in its right username and password.
- Then you can start the live view and go to the setting page to access or control it.

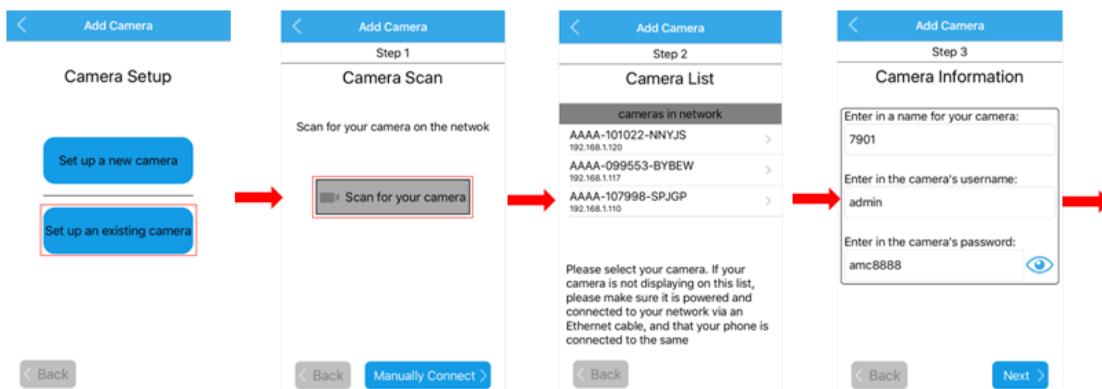

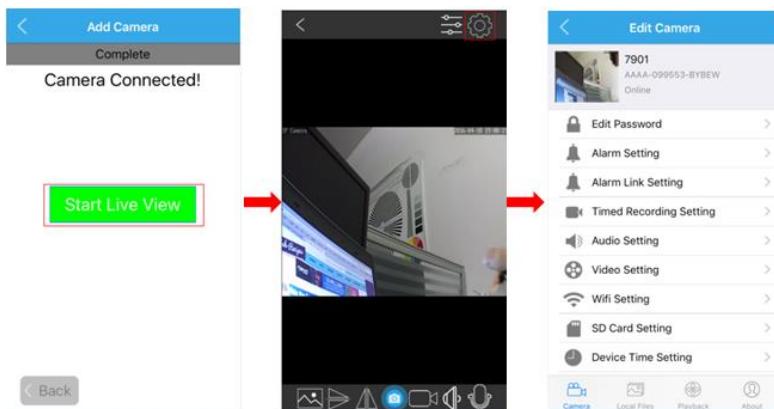

2. Manually connect

If you want to add this existing camera to your smartphone or table by manual, please click the button “Manually Connect”. Enter in your camera’s UID, username and password, you can also give it a new name you like. Then you can start the live view and go to the setting page to access and control your camera.

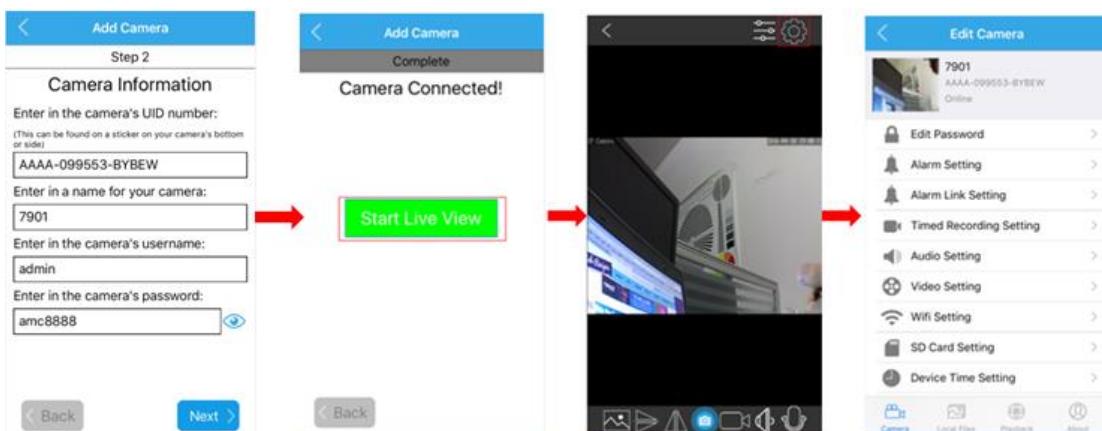


5.2 Camera list page

You can go to the camera page to check what cameras you have added. Here are a camera list, and you can also delete or edit the login information for the camera.

-Click the edit icon  to edit the camera login information. For example, you can change the camera’s name in your smartphone or modify the camera’s username and password if you could not login your camera, even the UID.


-Click the tooling icon  to enter the setting page, then you can edit all your camera’s settings, include Edit Password, Alarm Setting, Alarm Link Setting, Timed Recording Setting, Audio Setting, Video Setting, Wifi Setting, SD Card Setting, Device Time Setting, Email Setting, FTP Setting, System Setting and Device Information. All of these settings will be explained in detail in next chapter.

-Click the trash icon  to delete the camera you want. You can also delete the camera you want by sliding the camera from right to left, then you can find a Delete button to delete this camera.

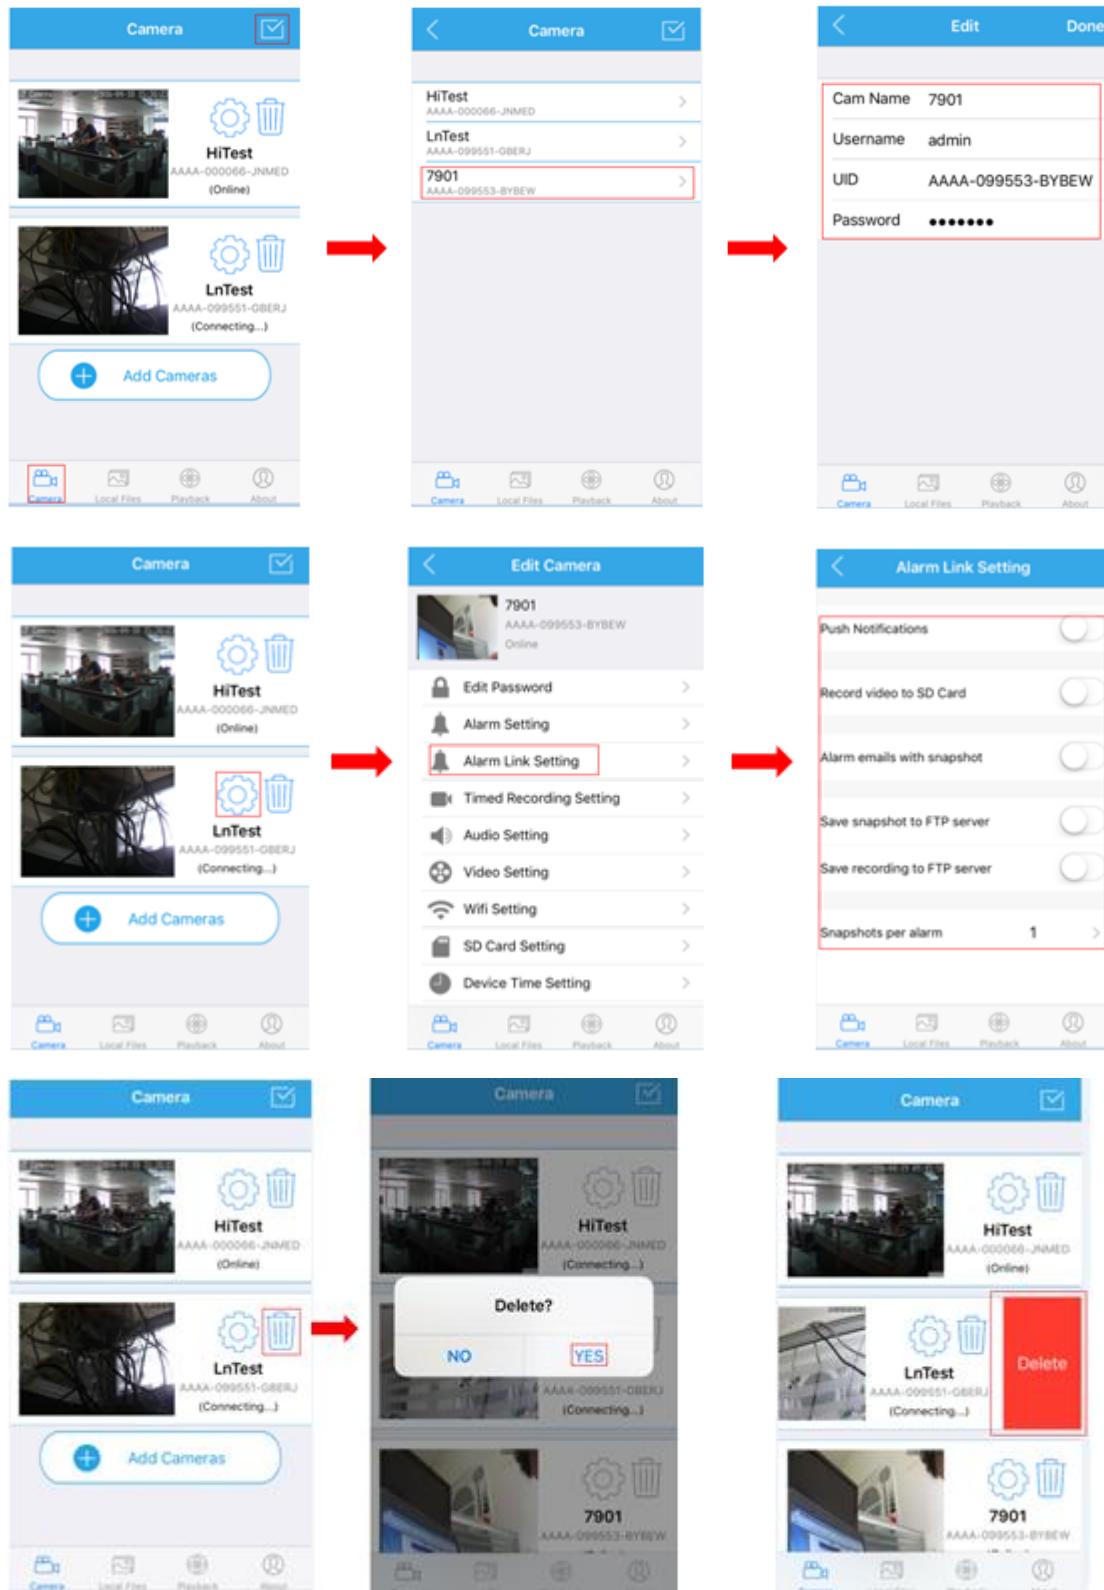

5.3 Live view page

After add the camera successfully, you can preview the video of your camera and set the configurations you want. This section will show you what the icons can do in the live view page of the FDT View.

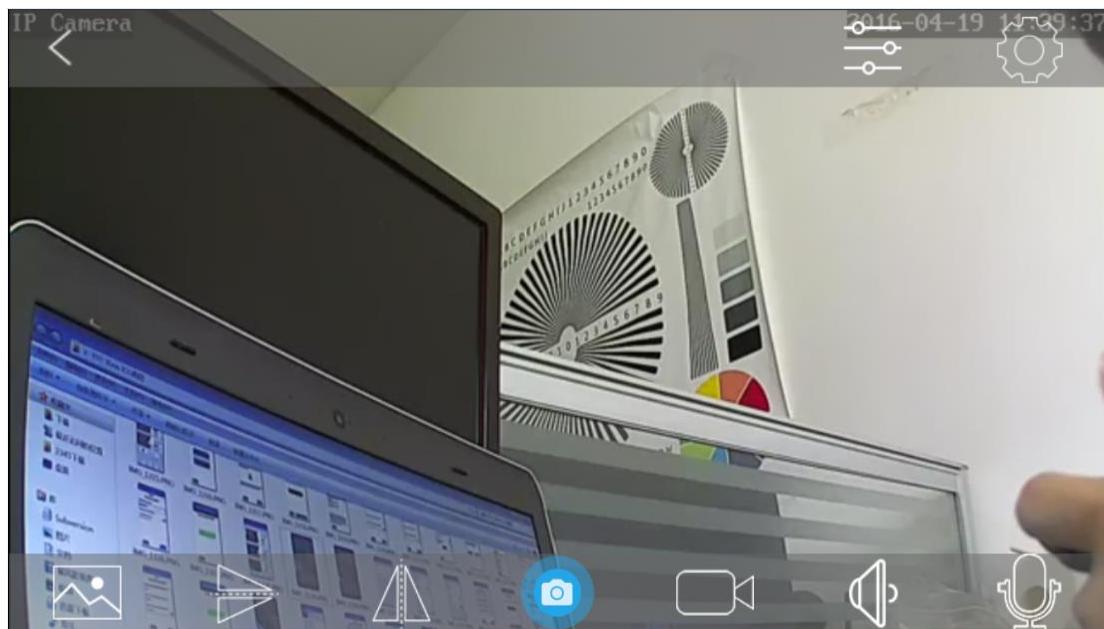

-The **resolution** (HD/SD or High/Low) 

The HD standards for the first/main stream of the camera, it is 720P as default. The SD means second/sub stream of the camera, it is VGA as default. You can also change the default settings as you want in the setting pages.

-**Flip** the View 

-**Mirror** the Video 

-**Snap picture** from the video and save it to your phone 

-**Record video** by manual from the video and save it to your phone;

-**Audio** from the camera 


-**Talking** to the camera ; By press and holding this icon, you can hear the voice from the camera or the audio out port by connecting an earphone.

-Set the **video parameters** of your camera, such as bright/contrast/saturation. And control the **LED status** of your camera by the icons of the model, such as auto/night

vision/day vision. 

-**Exit** , you can go back to the device list page by click the back icon .


-**Settings** page , you can go to the settings page by click the icon of settings.

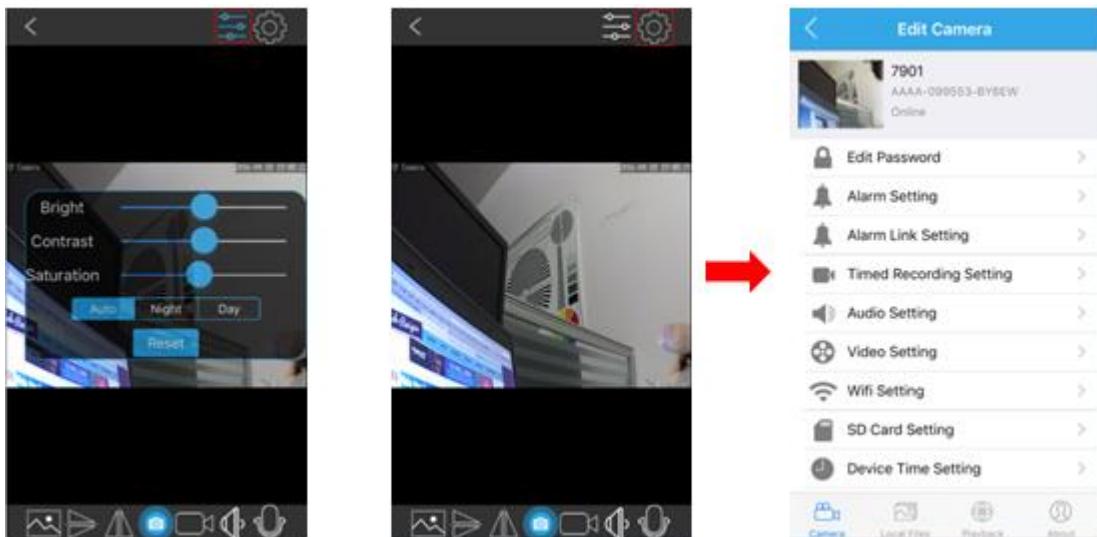

5.4 Settings pages


5.4.1 Edit Password

You can change the password of the FDT camera in this page.

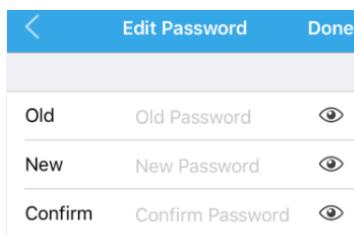


5.4.2 Alarm Settings

You can set the configuration about motion-detection alarm of the camera in this page, such as enable or disable the alarm, set the sensitivity of the motion-detection like low/medium/high.

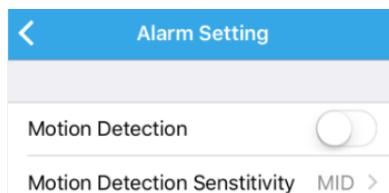

5.4.3 Alarm link settings

You can enable the linked actions once the alarm is triggered in this page, include the Push Notifications to your smartphone, record video to the SD Card, alarm emails with snapshot, save snapshot or recording to FTP server, and the count for the snapshot.

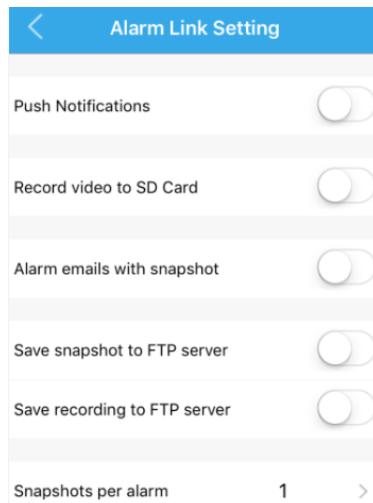


5.4.4 Timed recording settings

You can set the scheduled recording settings in this page, include the recording length.



5.4.5 Audio settings

You can set the configurations for audio in this page.

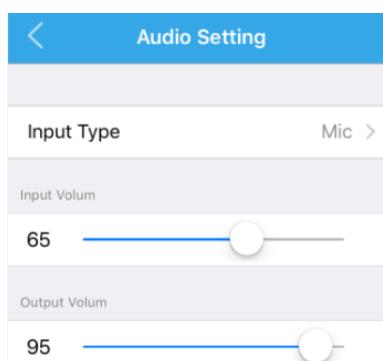

5.4.6 Video settings

You can set the configuration about video encoding for the first/second stream in this page, like bitrate/frame rate and video quality. The top one is for first stream, the second one is for second stream.

Video Setting		Done
Bit Rate	2048	
Frame rate	25	
Quality	1	
Bit Rate	512	
Frame rate	25	
Quality	1	
Anti-Flicker	50Hz	>

5.4.7 Wifi settings

You can search the wifi in the LAN and set it to your camera in this page.



5.4.8 SD Card settings

You can get the space information about the SD Card in your camera and format it in this page.

SD Card Setting	
Total Space	7598MB
Free Space	7598MB
Format SD Card	


5.4.9 Device time settings

You can set the time of your camera to sync it with your smartphone in this page.

Device Time Setting	
DeviceTime	2016-04-19 11:53:04
Sync with phone time	
Device Time Zone	GMT-6 >
Phone Time Zone	GMT+8
Apply time zone for device	


5.4.10 Email settings

You can set the email information in this page to enable the email alarm actions. Here is a test button for you to check the connection of the email settings, please save your settings and test it before you complete the email settings to make sure your email setting will work successfully.

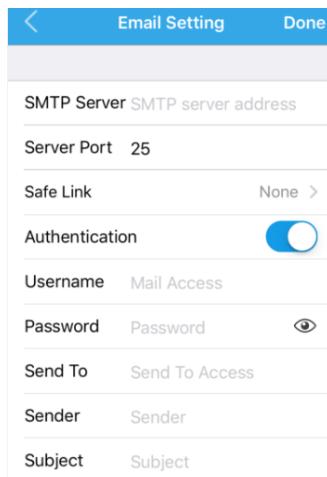


5.4.11 FTP settings

You can set the FTP account information for the video recording or alarm linked actions in this page.

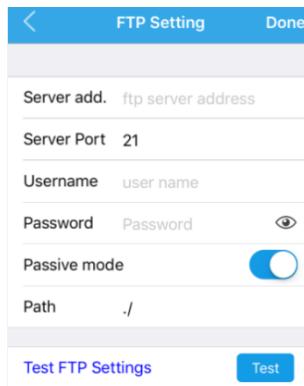

5.4.12 System settings

You can reboot, restore the camera in this page. And there is an icon “Version checking” for you to check the latest firmware for the camera and upgrade it online.

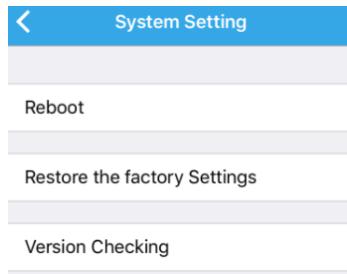


5.4.13 Device information


You can obtain the information about the camera in this page.

Device Information	
Device ID	181Au
Network	WLAN
Current Client	0
Soft Version	V7.1.4.1.7
IP Address	192.168.1.112
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
DNS	192.168.1.1

5.5 Local files page

You can browse the pictures and videos saved in your smart phone in this page by clicking the chosen file. And you can delete these files if you want. For the video file you can delete by sliding the file you choosing from right to left.

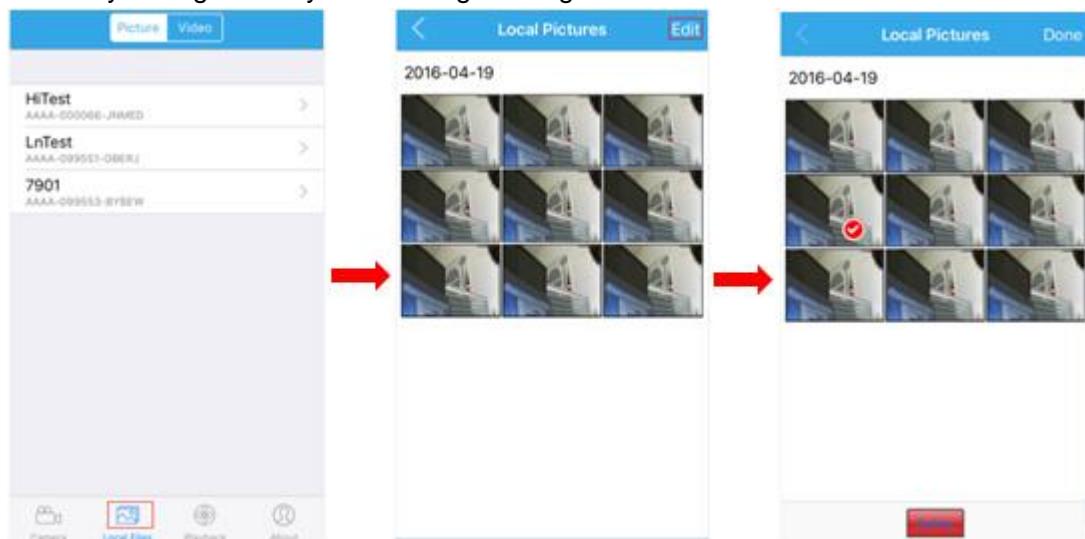

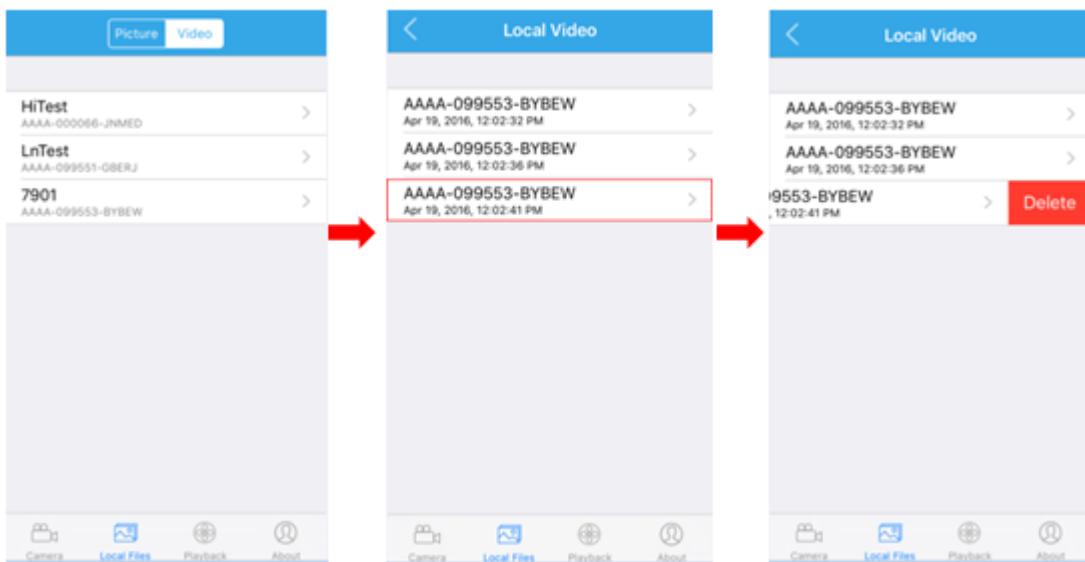

5.6 Playback page


You can browse the recording stored in the SD Card of the camera in the playback page and playback it remotely by click the video file from the list. And you can also filter the files by assigning an exact recording time.



6 Web User Interface for operation

Here details the FDT camera's user interface for web browser, as well as all of the operations the camera can perform, including the Login, LIVE, PLAYBACK and CONFIG pages.

6.1 Login page

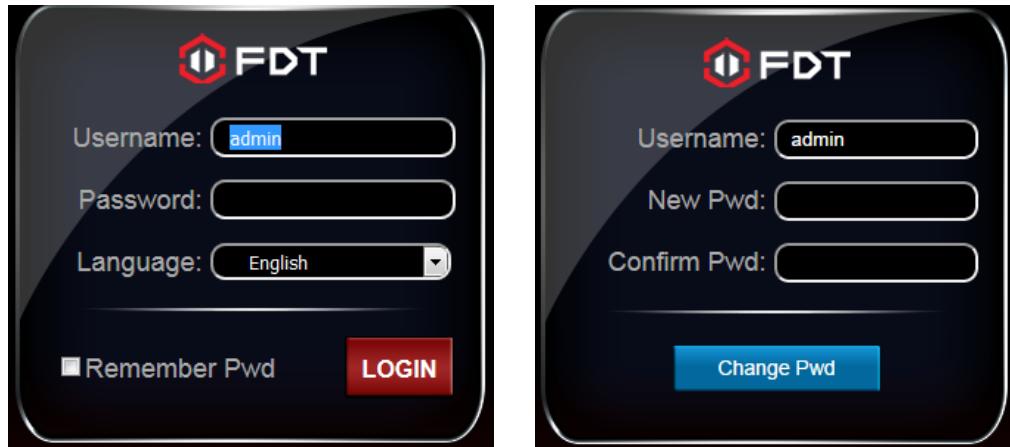

Username and Password: It is the account of your camera, the default username is “**admin**”, the default password is “**admin**” too. Please change the password the first time you use to prevent unauthorized users login the camera.

Language: You can click on the language dropdown list to select the language for the web UI.

Note: When setting up your camera for the first time, it will request you modify the default password, please input the new password and confirm it. Then you can access your camera by the new password in the future once you saved your settings.

Note: The password is case sensitive.

6.2 Live page




6.2.1 OSD

-Camera Name: **IP Camera**

-Camera Date & Time: 2016-01-25 21:51:15


6.2.2 View

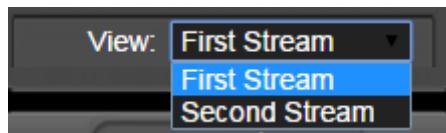

First Stream: the main stream, default is 720P-1280x720.

Second Stream: the sub stream, default is VGA-640x480.

6.2.3 ImageSettings

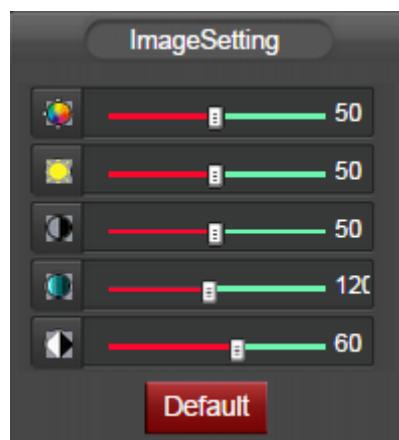

You can set the color parameters for the video image in this “ImageSet”, such as Hue, Brightness, Contrast, Saturation, Sharpness.

: Hue.


: Brightness.

: Contrast.

: Saturation.

: Sharpness.

6.2.4 Tool bar

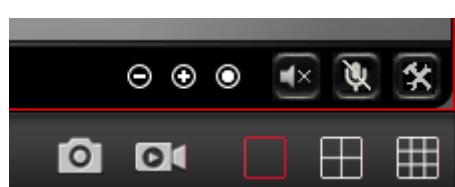

X1.5 : Zoom in/Zoom out/Back to original size, 1x/1.5x/2x/3x.



: Open/Close the audio(Only for the camera support audio).



(Only for IE/Firefox browser in windows): Enable/Disable the talking(Only for the camera support audio).



(Only for IE/Firefox browser in windows): Set the storage path to save the picture captured by manual through the web browser, or save the video recorded by manual through the web browser. It will pop up a folder browser windows for you to select the folder path in your computer.

Note: If your windows OS is windows 10, please run the web browser as administrator, or it will forbid you to generate the folder in your computer, then you will be failed to snap pictures or record video through the web browser.




(Only for IE/Firefox browser in windows): Capture pictures by manual.




(Only for IE/Firefox browser in windows): Record video by manual. There will show you a red “REC” icon if you enable the manual recording.



(Only for IE browser in windows): These icons are used to show you multiple-devices in your local network at the same time. If you have multi FDT cameras, you add them to the multiple-device page, then you can view them all at the same time.

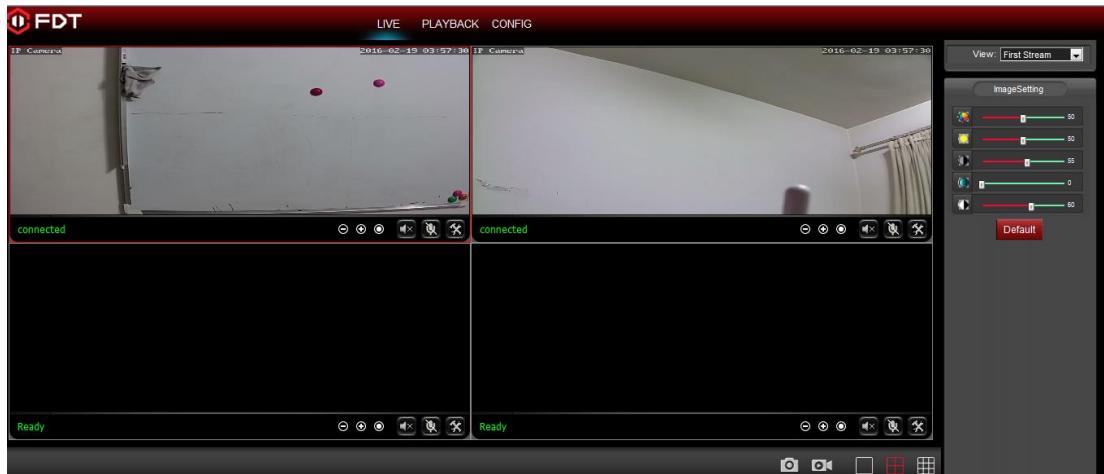

Note: For the Chrome in windows and Chrome/Safari in Mac, there are something limitations for the plugins. They have different tool bar show as below and some features are forbited.

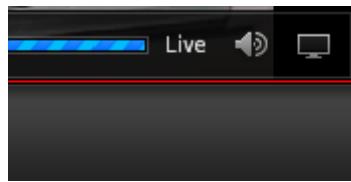

 Open/Close the audio(Only for the camera support audio).

 Enable the full screen for the live view video.

6.3 Playback page(Only for IE/Firefox browser in windows)

6.3.1 Search and playback videos



In the playback page, you can browser the videos stored in your computer recorded by manual. You can search these videos by date and time, then playback them online.

6.3.2 Tool bar



There is a tool bar in the playback page for you to control your playback as your wish.



: Play or Pause the playback process.



: Open the local file in your computer to playback.



: Stop or close the playback process.




: Playback next frame in the video.



: Adjust the audio volume when you playback the recordings.

6.4 Configuration page

Here you can set configurations for all features of the FDT camera, please click the “Apply” button to save your settings, click the “Refresh” to query or refresh the current configuration in your camera.

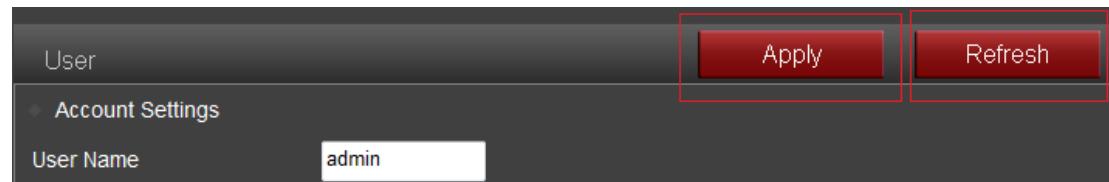

User

Account Settings

User Name: admin

Apply Refresh

6.4.1 Media settings

1) Video

Here you can set the configurations for power frequency and the encoding profile for H.264. For the power frequency, 50Hz used for the region Europe and China, 60HZ used for the region USA and Canada.



Video


Video Setting

Video Format: 50Hz

Video Coding: Mainprofile

Apply Refresh

Here you can set the configurations about the stream for both first and second stream in your camera, such as the resolution, bitrate, frame rate, key frame interval, bitrate control and the image quality level.

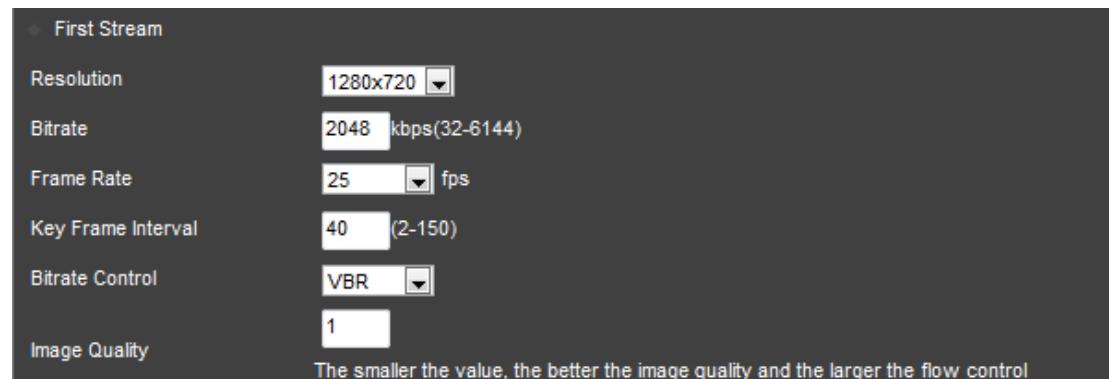

First Stream

Resolution: 1280x720

Bitrate: 2048 kbps(32-6144)

Frame Rate: 25 fps

Key Frame Interval: 40 (2-150)

Bitrate Control: VBR

Image Quality: 1

The smaller the value, the better the image quality and the larger the flow control

Here you can enable/disable the OSD for camera time or name, and modify the camera name to one you like.




Time Stamp: YES

Camera Name: YES


Camera Name: IP Camera

2) Image

Here you can control the camera video status, such as mirror the video, flip the video, enable/disable the WDR.

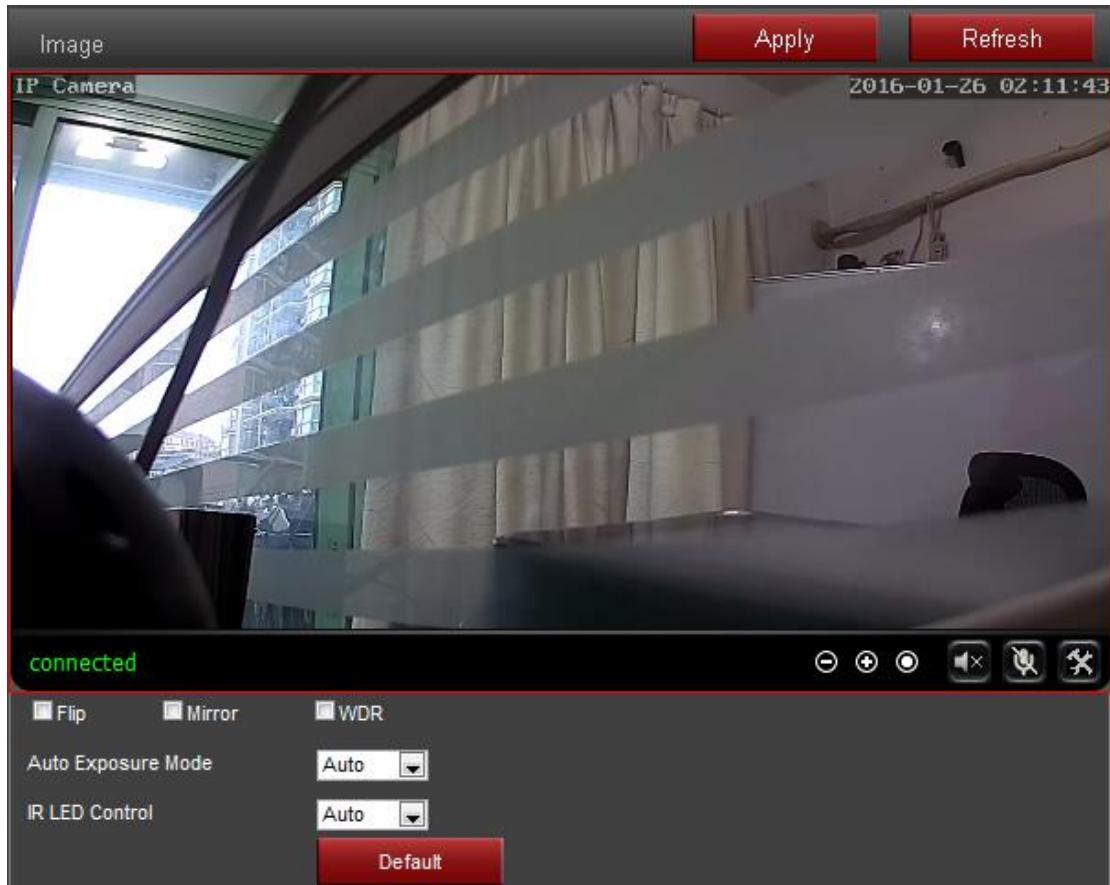

Here you can set an appropriate exposure mode for your camera, such as indoor, outdoor or let it change automatically as the change of the working environment.

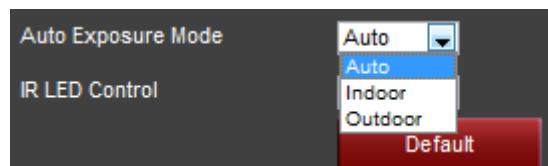

Here you can control the LED light status:

Enable-Camera works at the night vision status always.

Disable-Camera works at the day vision status always.

Auto-Camera will change between the day and night vision status automatically according the change of the outside light.



Note: To reset the default settings, please click the “Default” button.

6.4.2 Network

1) Network

Here you can set the IP address information like DHCP or Static and the port for HTTP/RTSP/RTMP.

Note: Please keep the type for IP and DNS are the same, both are the DHCP or Static

Network		Apply	Refresh
<ul style="list-style-type: none"> LAN Settings 			
IP Type	DHCP <input type="button" value="▼"/>		
DNS Type	DHCP <input type="button" value="▼"/>		
<ul style="list-style-type: none"> HTTP & RTSP & RTMP 			
HTTP Port	80	(80 Or 1024~49151)	
RTSP Port	554	(554 Or 1024~49151)	
RTMP Port	1935	(1935 Or 1024~49151)	
RTSP Permissions Check	Enable <input type="button" value="▼"/>		
Note:After saving your settings please reboot the device!			

2) Wireless

Here you can search the WIFI AP around your camera, then select and apply one of them to your camera. Please make sure you enable the wifi before you start to use it. You can also check your settings by click the "Check" button after you save your settings.

Wireless		Apply	Refresh																																
<ul style="list-style-type: none"> Enable Wireless 																																			
Enable	Enable <input type="button" value="▼"/>																																		
SSID	<input type="button" value="Search"/> <input type="text"/>																																		
Security Mode	None <input type="button" value="▼"/>																																		
WPA Algorithm	TKIP <input type="button" value="▼"/>																																		
Key	<input type="text"/>																																		
Note:Do't support & = ' " \ %																																			
Re-type key	<input type="text"/>																																		
Check Wireless Settings	<input type="button" value="Check"/>																																		
Please click the apply button first then try again!																																			
<input type="button" value="Scan"/>																																			
<table border="1"> <thead> <tr> <th></th> <th>Single</th> <th>SSID</th> <th>WPA Algorithm</th> <th>Security Mode</th> <th>Channel</th> </tr> </thead> <tbody> <tr> <td><input type="button" value="Apply"/></td> <td>100</td> <td>AMCRESTHK</td> <td>AES</td> <td>WPA2-PSK</td> <td>6</td> </tr> <tr> <td><input type="button" value="Apply"/></td> <td>31</td> <td>zhimi-airpurifier-v3_miap108b</td> <td>NONE</td> <td>OPEN</td> <td>6</td> </tr> <tr> <td><input type="button" value="Apply"/></td> <td>31</td> <td>Topway_A9CC84</td> <td>AES</td> <td>WPA-PSK</td> <td>2</td> </tr> <tr> <td><input type="button" value="Apply"/></td> <td>26</td> <td>smoothly</td> <td>AES</td> <td>WPA-PSK</td> <td>1</td> </tr> </tbody> </table>							Single	SSID	WPA Algorithm	Security Mode	Channel	<input type="button" value="Apply"/>	100	AMCRESTHK	AES	WPA2-PSK	6	<input type="button" value="Apply"/>	31	zhimi-airpurifier-v3_miap108b	NONE	OPEN	6	<input type="button" value="Apply"/>	31	Topway_A9CC84	AES	WPA-PSK	2	<input type="button" value="Apply"/>	26	smoothly	AES	WPA-PSK	1
	Single	SSID	WPA Algorithm	Security Mode	Channel																														
<input type="button" value="Apply"/>	100	AMCRESTHK	AES	WPA2-PSK	6																														
<input type="button" value="Apply"/>	31	zhimi-airpurifier-v3_miap108b	NONE	OPEN	6																														
<input type="button" value="Apply"/>	31	Topway_A9CC84	AES	WPA-PSK	2																														
<input type="button" value="Apply"/>	26	smoothly	AES	WPA-PSK	1																														

Network		Apply	Refresh
◆ LAN Settings			
IP Type	Static <input type="button" value="▼"/>		
IP Address	192.168.1.113		
Subnet Mask	255.255.255.0		
Gateway	192.168.1.1		
DNS Type	Static <input type="button" value="▼"/>		
Primary DNS	192.168.1.1		
Secondary DNS	0.0.0.0		
◆ HTTP & RTSP & RTMP			
HTTP Port	80 (80 Or 1024~49151)		
RTSP Port	554 (554 Or 1024~49151)		
RTMP Port	1935 (1935 Or 1024~49151)		
RTSP Permissions Check	Enable <input type="button" value="▼"/>		
Note: After saving your settings please reboot the device!			

Note: The FDT camera use the wired Ethernet cable by default, it will work on the wireless status automatically if you disconnect the Ethernet cable. But the wireless will not work if you still connect the Ethernet cable in your camera.

3) DDNS

Here you can set the third-party DDNS like Dyndns.org/3322.org/dynddns.us/No-ip.com and the status of the UPnP for your camera. You can get the public IP address of the LAN your camera works by click the “Query” button.

DDNS		Apply	Refresh
Internal IP Address	Query <input type="button" value=""/>	14.153.242.159	
3P DDNS	Enable <input type="button" value="▼"/>		
Server	Dyndns.org <input type="button" value="▼"/>		
User Name	myuserid		
Password	*****		
Domain	mydomain.dynddns.org		
UPnP	Enable <input type="button" value="▼"/>	<input type="button" value="Enable"/> <input type="button" value="Disable"/>	

4) ONVIF

Here you can set the control configurations about ONVIF, such as enable status, port and privilege. You can configure these information as the needs of your NVR, so FDT camera can match your NVR best.

ONVIF		Apply	Refresh
ONVIF	Enable <input type="button" value="▼"/>		
Port	8080		
Privilege	Uncheck <input type="button" value="▼"/>		
Time Zone Settings	Enable <input type="button" value="▼"/>		
Image Settings	Disable <input type="button" value="▼"/>		

5) P2P


Here you can query the UID of your camera for P2P, and you can enable or disable the P2P feature of your camera as you need.

P2P		Apply	Refresh
P2P	Enable <input type="button" value="▼"/>		
UID	AAAA-099532-MYJCN		

6.4.3 Alarm

1) Motion Detection(Only for IE/Firefox in windows)

Here you can set the areas for the motion detection and the sensitivity of each area. You can enable or disable each of the area, or change the size of each area by dragging the bottom right corner of the setting window of square, or change the position by dragging the setting window through your mouse.

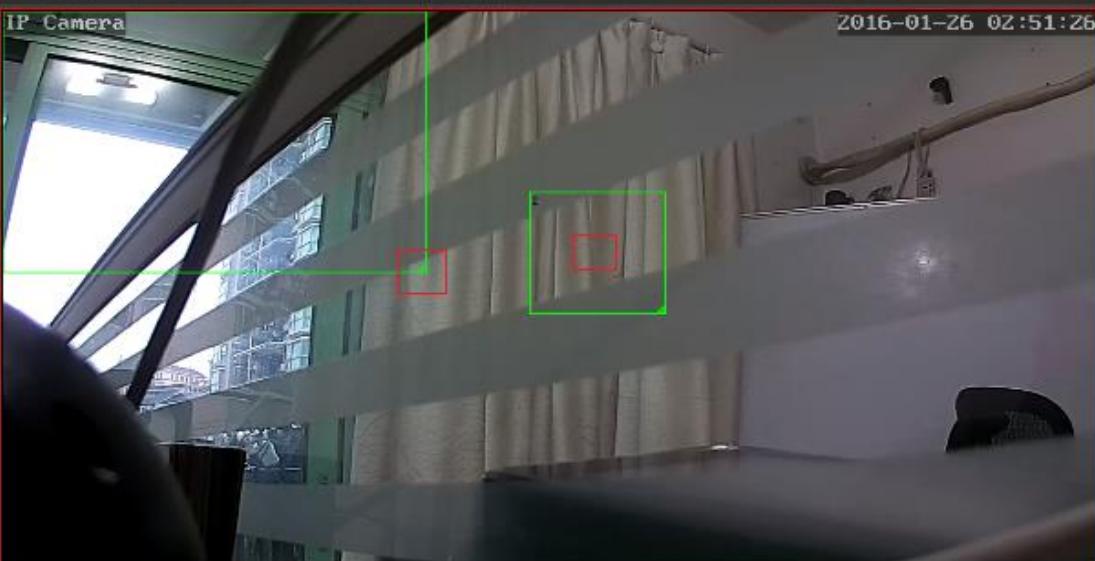Motion Detection		Apply	Refresh
			
2016-01-26 02:51:26			
connected			
  			
Window1	Enable <input type="button" value="▼"/>	<input type="range" value="50"/>	50
Window2	Enable <input type="button" value="▼"/>	<input type="range" value="50"/>	50
Window3	Disable <input type="button" value="▼"/>	<input type="range" value="50"/>	50
Window4	Disable <input type="button" value="▼"/>	<input type="range" value="50"/>	50

2) Alarm link

Here you can enable or disable the alarm actions once the alarm triggered, including send email with picture, save alarm picture to FTP server.

Alarm Link		Apply	Refresh
◆ Linkage Settings			
Email alarm and send with picture	Disable <input type="button" value="▼"/>		
Save Picture to FTP	Disable <input type="button" value="▼"/>		
◆ Capture Image			
Capture Image	1 <input type="button" value="▼"/>		

3) Schedule

Here you can set the schedule for the motion detection alarm, red means enable and white means disable. You can select certain one or several days or hours you like to enable or disable the motion detection features.

Schedule		Apply	Refresh
	00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23		
SUN	██		
MON	██		
TUE	██		
WED	██		
THU	██		
FRI	██		
SAT	██		

6.4.4 Advance

1) User

Here you can edit the account information of the FDT camera, such as change the username or password, the default account is admin/admin.

User		Apply	Refresh
◆ Account Settings			
User Name	admin		
Password	*****		
Confirm Password	*****		

2) Auto Snap

Here you can set the save path and time interval for the feature of capture pictures automatically. You can select to save the picture to FTP server.

Auto Snap	<input type="button" value="Apply"/>	<input type="button" value="Refresh"/>
Save Picture to FTP	<input type="button" value="Disable"/> <input type="button" value="60"/> s	

3) Email

Here you can set the sending or receiving email for your email alarm.

Note:

SMTP port is usually set as 25. Some SMTP servers have special port, such as 587 or 465.

Authentication is used for transport layer security, it is usually none. If you use gmail and enable the authentication with TLS or STARTTLS, the SMTP port must be set to 465 or 587, it depends the authentication type you selected.

You can click the “Test” button to check whether your email settings is valid or not.

Email	<input type="button" value="Apply"/>	<input type="button" value="Refresh"/>
SMTP Server	<input type="text"/>	
Port	<input type="text" value="25"/>	
Authentication	<input type="button" value="None"/> <input type="button" value="None"/>	
Authentication Status	<input type="button" value="Enable"/> <input type="button" value="Enable"/>	
User Name	<input type="text"/>	
Password	<input type="text"/>	
Send to	<input type="text"/>	
Sender	<input type="text"/>	
Subject	<input type="text"/>	
Message	<input type="text"/>	
SMTP Test	<input type="button" value="Test"/>	
Please click the apply button first then try again!		

4) FTP

Here you can set the FTP server configurations for your FTP storage for picture or video.


You can click the “Test” button to check whether your settings is ok or not. Please make sure you have input the right folder path in your FTP server.

FTP	<input type="button" value="Apply"/>	<input type="button" value="Refresh"/>
Server	192.168.1.107	
Port	21	
User Name	martin	
Password	*****	
Passive Mode	Enable	<input type="button" value="▼"/>
Path	/JFDT	
FTP Test	<input type="button" value="Test"/>	

5) Multiple Setting(Only for IE in windows)


Here you can search the FDT cameras in your LAN and add them into your multiple device group. Then you can view them at the live page together.

Multiple Setting	Apply	Refresh
122-9712(192.168.1.101) IPCAM(192.168.1.113)		
LAN Search	Refresh	
<ul style="list-style-type: none">The 1st deviceThe 2nd device		
OSD Name	122-9712	
IP Address	192.168.1.101	
HTTP Port	80	
User Name	admin	
Password	*****	

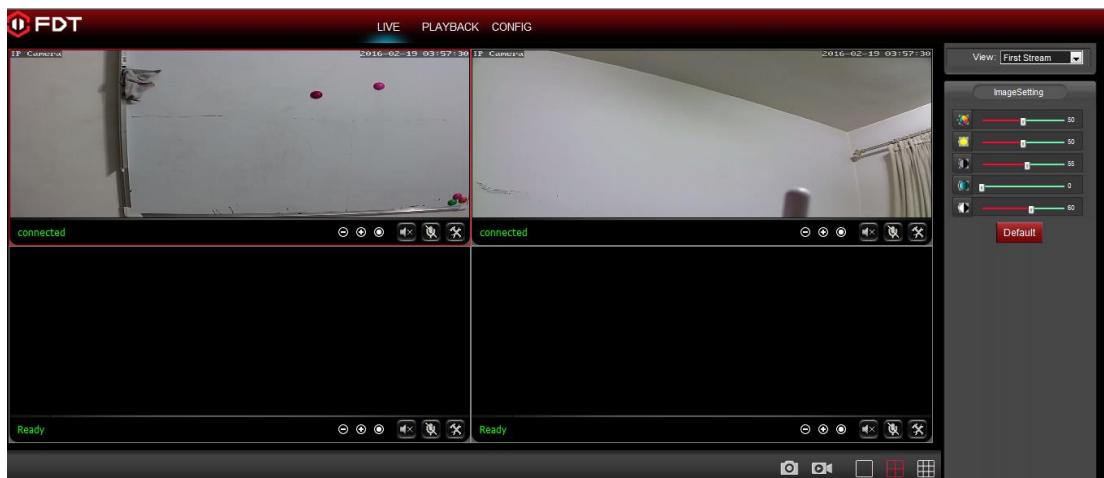

6) Privacy Mask(Only for IE/Firefox in windows)

Here you can set the area and color for the privacy mask of your camera, it up to 4 areas. You can set the color of the mask, change the size of the area by dragging the right-bottom corner, change the position of the area by dragging the area.

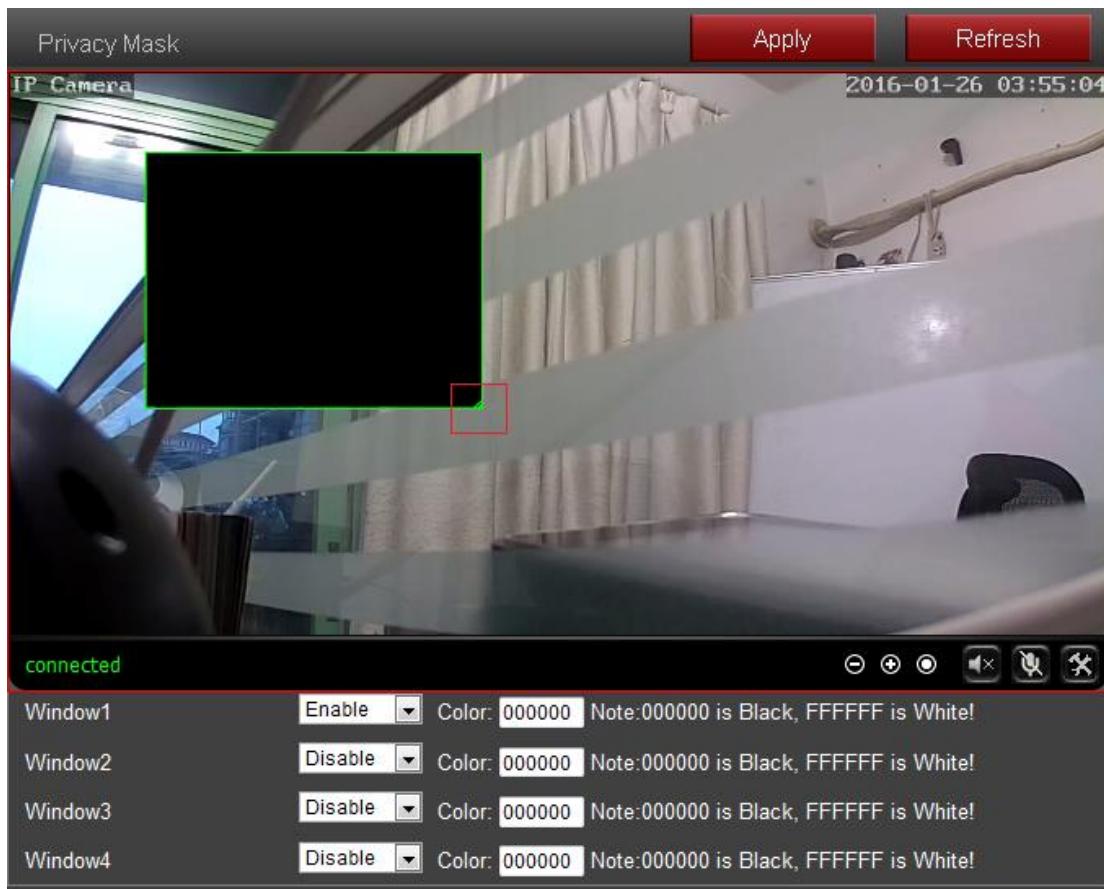

6.4.5 System

1) Time

Here you can set the time and date, the status for NTP and DST, the time zone for your camera.

Time		Apply	Refresh
◆ Time Settings			
Device Date	2016-01-26 03:58:14		
◆ Adjust			
NTP	Enable <input type="button" value="▼"/>		
NTP Server	time.windows.com <input type="button" value="▼"/>		
Interval	1	<input type="button" value="▼"/>	h
Time zone	Central Standard(US and Canada), Mexico City <input type="button" value="▼"/>		
DST	Enable <input type="button" value="▼"/>		
<input type="button" value="Sync PC Time"/>			

2) Maintenance

Maintenance	
Reboot	<input type="button" value="Reboot"/>
Factory Default	<input type="button" value="Factory Default"/>
Backup Configuration	<input type="button" value="Backup"/>
Restore Configuration	<input type="button" value="Browse..."/> <input type="button" value="Import"/>
Upgrade	<input type="button" value="Browse..."/> <input type="button" value="Upgrade"/>

Reboot: reboot the camera.

Factory Default: restore the camera settings to the factory default settings.

Backup Configuration: backup the current settings of the camera, it will generate a file name “config_backup.bin” for you to save.

Restore Configuration: Import and restore the configuration file you backup before.

Please browse and select the file you want to import, then click the “Import” button.

Upgrade: Upgrade the firmware. Please browse and select the file you want to upgrade, then click the “Upgrade” button.

3) Device Information

Here you can query and check the main information and status of the FDT camera, including the name, time, IP, firmware version, DDNS and UPnP status.

Device Information		Refresh
Device Name	122-9712	
Device Type	C6F0SeZ3N0P0L0	
Network Connection	LAN	
Current Client	2	
Software Version	V7.3.0.2.5	
Mac Address	00:E0:F8:02:F8:68	
IP Address	192.168.1.123	
Subnet Mask	255.255.255.0	
Gateway	192.168.1.1	
Primary DNS	192.168.1.1	
Secondary DNS	0.0.0.0	
UPnP Status	failed	
3rd DDNS Status	off	
Start Time	2016-04-19 01:12:50	

4) System Log

Here you can query the history operation or running log for your camera.

System Log	Refresh
<pre>[2016_01_26 01:49:33] ipc_server start. [2016_01_26 01:49:35] user(admin) login for live stream. [2016_01_26 01:49:35] user(admin) login for live stream. [2016_01_26 01:49:37] ircut: display switch(blackwhite -> color). [2016_01_26 01:49:39] user(admin) login for live stream. [2016_01_26 01:51:25] playback login(admin). [2016_01_26 01:51:31] playback logout(admin). [2016_01_26 01:51:31] playback login(admin). [2016_01_26 03:45:48] user(admin) login for live stream. [2016_01_26 03:45:57] user(admin) logout from live stream. [2016_01_26 03:46:14] user(admin) login for live stream. [2016_01_26 03:46:22] user(admin) logout from live stream. [2016_01_26 03:46:36] user(admin) login for live stream. [2016_01_26 03:47:08] user(admin) logout from live stream. [2016_01_26 03:47:08] user(admin) login for live stream.</pre>	

7. Frequently Asked Questions

7.1 How to start the live view in computer by web browser?

Before you start the live view in windows OS by IE browser or Mozilla Firefox. Please install the plugin first. But for the Google Chrome in Windows/Mac OS and Safari in Mac, you can start the live view directly by accessing the IP address of your camera, no need to install the plugin.


7.1.1 How to install the plugin for IE browser in Windows OS?



When you login the camera in your computer at the first time by IE browser, the IE browser will prompt automatically to show you to allow the installing of the FDT camera plugin named **WebCam_Plug**.

1. Allow to install this plugin after you login the camera.





2. Install the plugin after you login the camera.

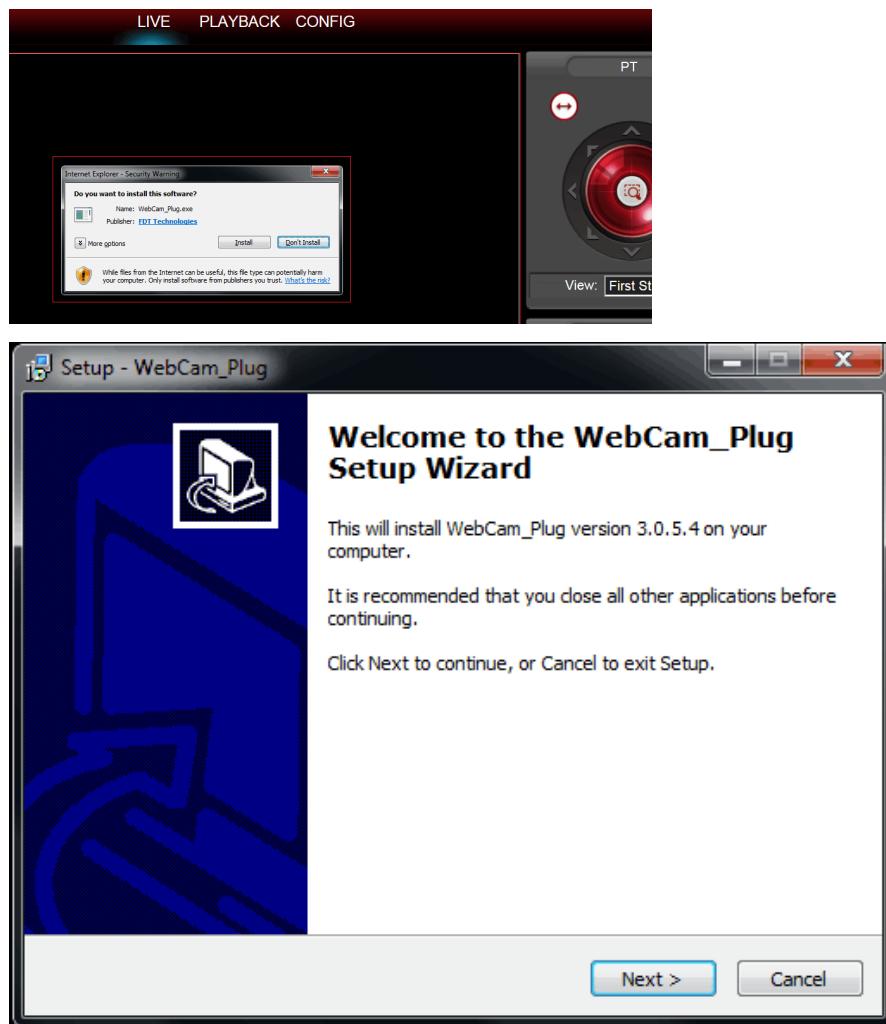

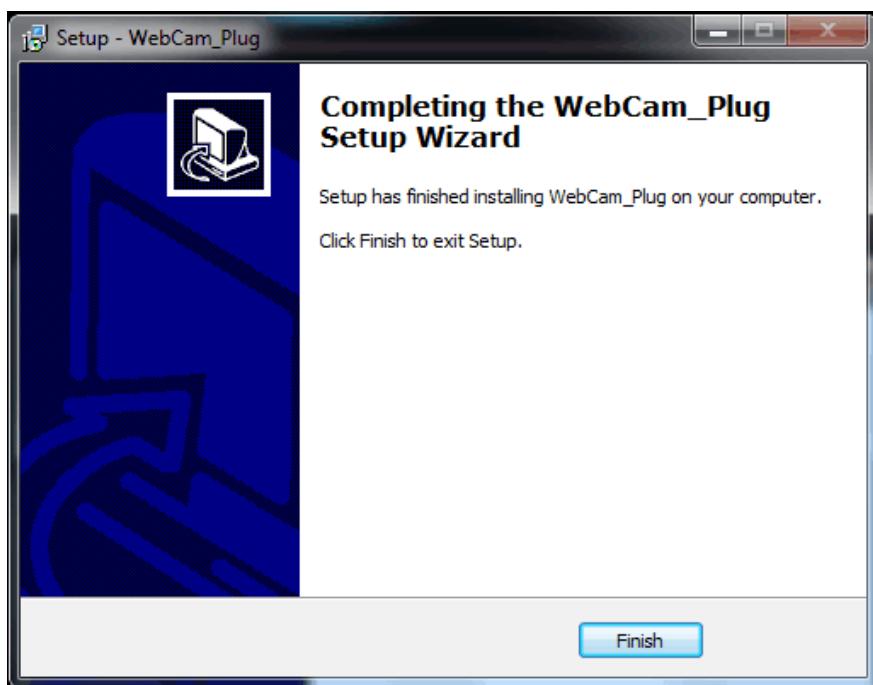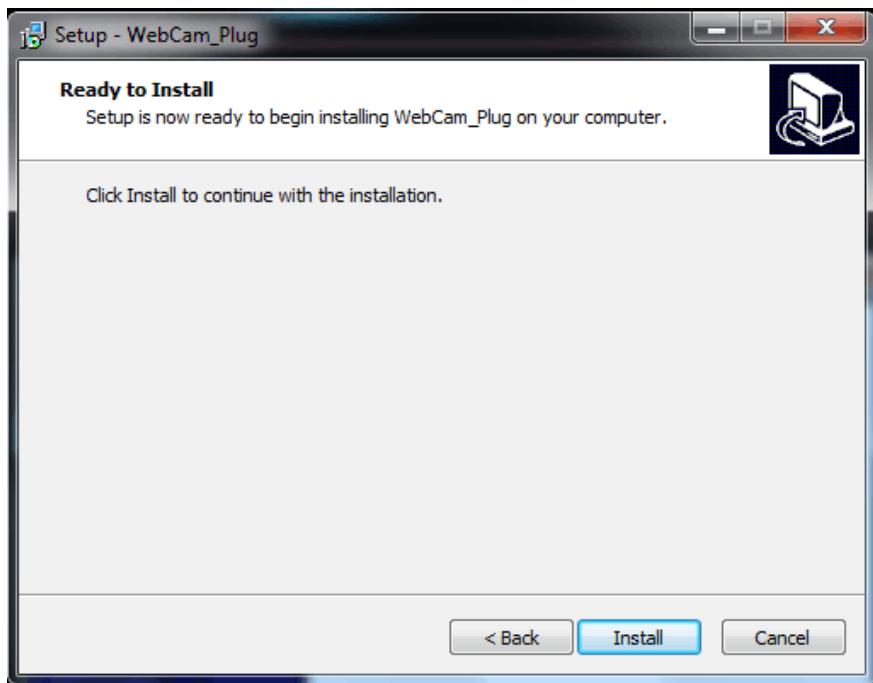

3. Refresh the IP address when it is ready to login and access your camera.

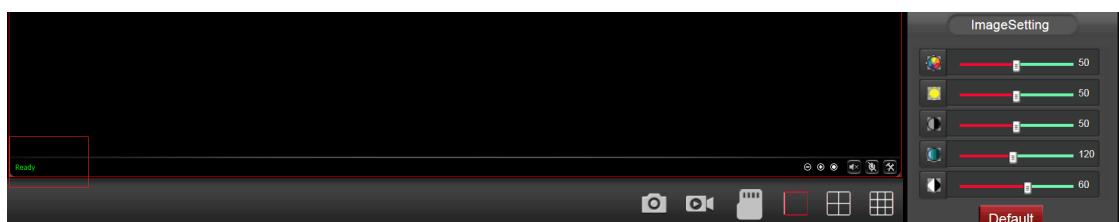


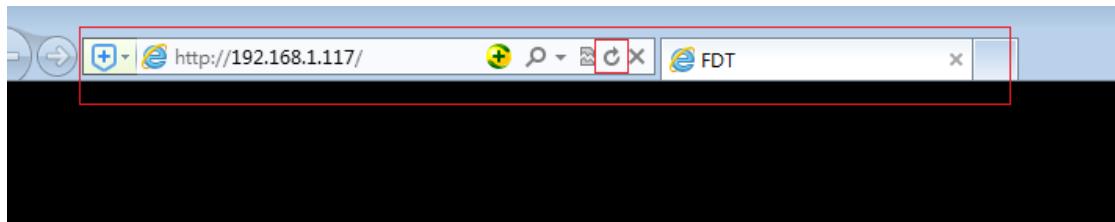


7.1.2 How to install the plugin for Mozilla Firefox browser in Windows OS?

When you login the camera in your computer at the first time by Firefox browser, it will show you to download the plugin. Please click the text link to download and save this plugin in your computer, and install it by manually.

1. Click and download the plugin from the login page, save it to your computer

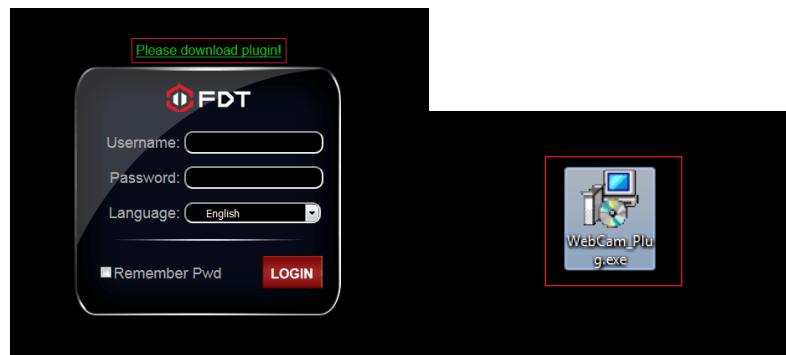

2. Double click the WebCam_Plug.exe file to install it in your computer.

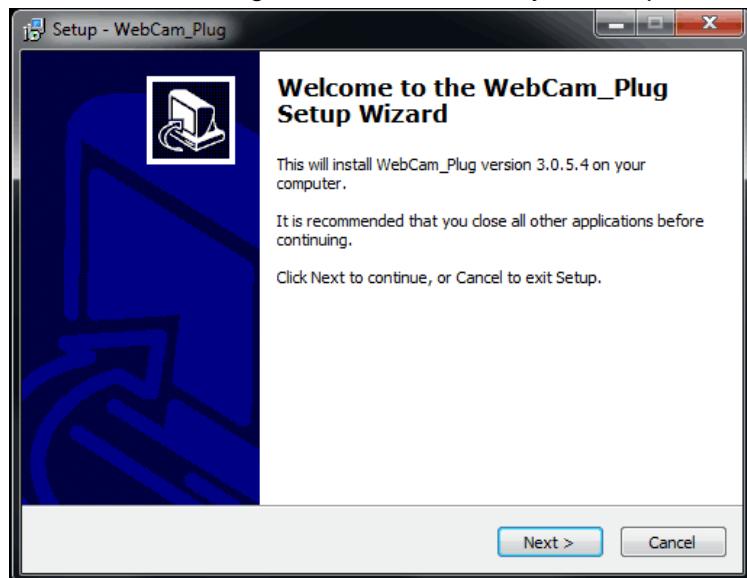

3. Refresh the IP address in your web browser to access your camera after you install the plugin successfully in your computer.

7.2 How to uninstall the plugin in your computer?

Please go to Control Panel->Uninstall a program to find the program named WebCam_Plug, then uninstall it directly.

Note: Please make sure you closed the web browser who is using this plugin, or it may could not be uninstalled completely.

Uninstall or change a program

To uninstall a program, select it from the list and then click Uninstall, Change, or Repair.

Name	Publisher	Installed On	Size	Version
WebCam_Plug version 3.0.5.4		4/18/2016	5.97 MB	3.0.5.4
Adobe Flash Player 21 ActiveX	Adobe Systems Incorporated	4/11/2016	5.09 MB	21.0.0.213
SearchTool version v1.6		3/24/2016	3.82 MB	v1.6

7.3 Forgotten the username or password of the camera.

Here is a hard reset button in the camera. Please press and hold the reset button for 5-10 seconds. Upon releasing the reset button, the camera will reboot and the username and password will be restored to the factory default settings.


Default username: **admin**

Default password: **admin**

Note: The password is case sensitive.

7.4 Could not record videos or snap pictures in IE 11 or Firefox of Windows 10 OS.

Because the security limitation of IE 11 and windows, you could not enable the recording/snap path to store. Please run your web browser as administrator authority, and set an available file path to save your recordings and pictures. Then they will work in your computer.

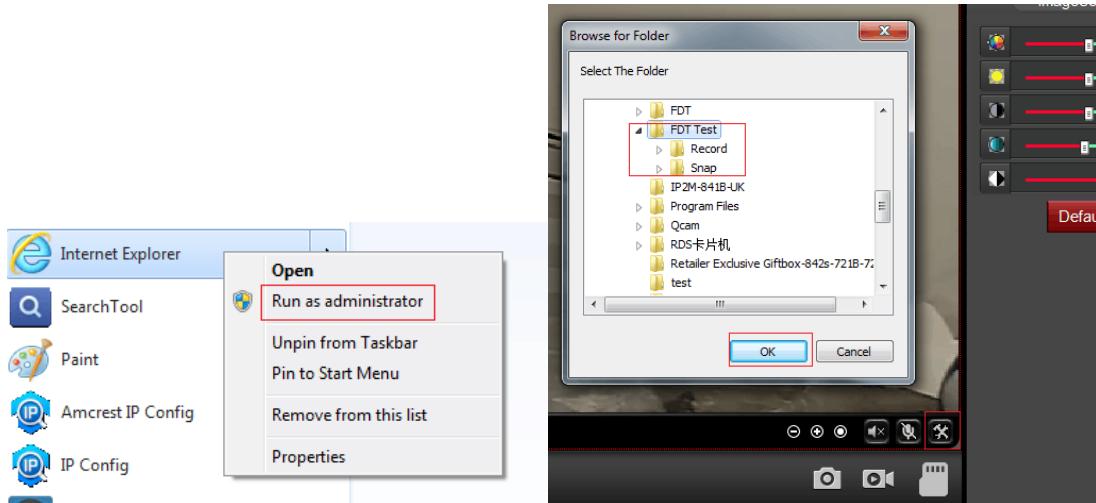

7.5 Camera could not connect the wireless network by wifi.

1. Please go to the CONFIG->Network->Wireless page through web browser, here is a check button, you can check whether your wifi settings are right or not by this button. If your settings are correct, it will show you success.

2. Please make sure these special characters did not be included in your wifi password, such as & = ' " \ % +.

3. The camera only support 2.4G wifi, did not support 5G. Please make sure you did not set the 5G wifi configuration to the camera.

4. Please make sure you have enabled the wireless.
5. Please make sure your wifi password is correct, you can display the password by click the eye-icon beside the input box.

Wireless
Apply
Refresh

Enable Wireless	Enable <input type="button" value="▼"/>	
SSID	Search <input type="button" value=""/>	
Security Mode	WPA2-PSK <input type="button" value="▼"/>	
WPA Algorithm	AES <input type="button" value="▼"/>	
Key	SECUTEK20160 <input type="button" value="eye"/>	
Re-type key	SECUTEK20160 <input type="button" value="eye"/>	
Check Wireless Settings	Check <input type="button" value=""/>	Success <input type="button" value=""/>

Please click the apply button first then try again.


Scan


	Single	SSID	WPA Algorithm	Security Mode	Channel
<input type="button" value="Apply"/>	100	icongo-cb2543	NONE	OPEN	8
<input type="button" value="Apply"/>	100	secutek	AES	WPA2-PSK	11

7.6 The plugin is blocked by Firefox.

Firefox will block the NPAPI plugin by default, it will prompt you to allow this plugin when you access the camera or you can active the plugin after you login the camera.

Please **refresh** the IP address of your camera to access your camera again once you allow or active the plugin in your Firefox browser.

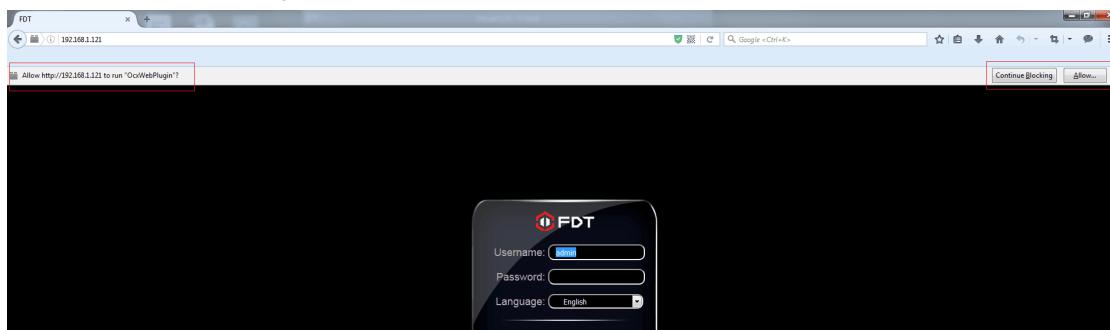

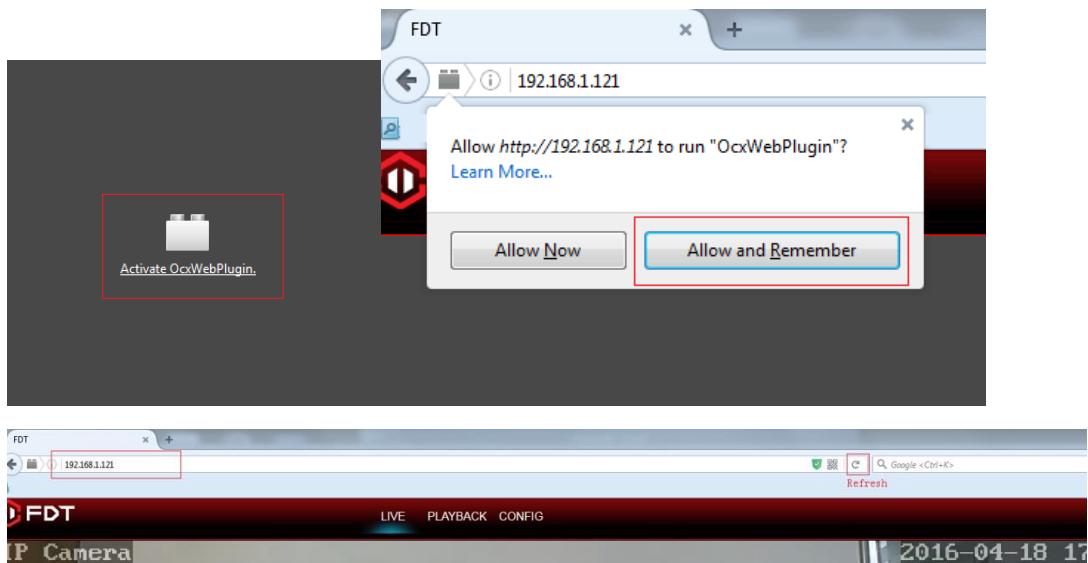

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. User should avoid un-intended operation of usage when it is collocated with other transmitters or antenna.