


DesignCore® RS-6843AOPD Integration Guide

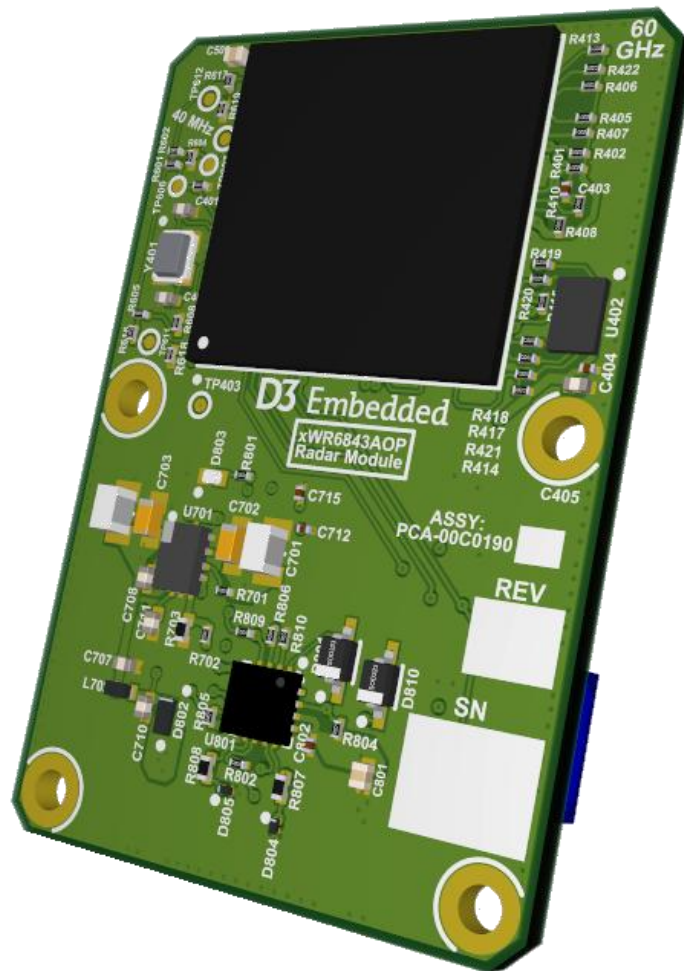

D3 Embedded

Document Number: 00C-673

Version: 2.0

Date: 2025-09-08

CONTENTS

1.0 RS-6843AOPD RF Compliance Notices	3
1.1 FCC and ISED Identification Label	3
1.2 FCC Compliance Statement	3
1.3 FCC RF Exposure Statement	3
1.4 ISED Non-Interference Disclaimer	3
1.5 ISED RF Exposure Statement	4
1.6 Indoor and Outdoor operation	4
1.7 FCC and ISED Modular Approval Notice	4
1.8 Class 2 Permissive Change Test Plan	5
2.0 RS-6843AOPD RF Special Compliance Notices.....	7
2.1 FCC Compliance Statement	7
2.2 ISED Compliance Statement	7
1.0 INTRODUCTION.....	9
2.0 MECHANICAL INTEGRATION.....	9
2.1 Thermal and Electrical Considerations.....	9
2.2 Antenna Orientation.....	9
2.3 Enclosure and Radome Considerations.....	10
3.0 INTERFACES.....	10
3.1 J801 Multifunction Connector.....	10
4.0 SETUP.....	11
4.1 Requirements	11
4.2 Running the Application	11
4.3 Programming	12

FIGURES

Figure 1. Worst-Case Chirp Config.....	5
Figure 2. View through circuit board top-down	9
Figure 3. J801 Location and Pin Order	10

TABLES

Table 1. J801 Functions for RS-6843AOPD	11
Table 2. Revision History.....	13

1.0 RS-6843AOPD RF Compliance Notices

The following RF emissions statements apply exclusively to the RS-6843AOPD model radar sensors.

1.1 FCC and ISED Identification Label

The RS-6843AOPD devices have been certified to be in compliance with FCC Part 15 and ISED ICES-003. Due to its size the required FCC ID including the grantee code is included in this manual below.

FCC ID: 2ASVZ-05

Due to its size the required IC ID including the company code is included in this manual below.

IC: 30644-05

1.2 FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a **Class A digital device**, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1.3 FCC RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, this equipment should be installed and operated with **minimum distance 20 cm (7.9 in)** between the antenna and your body during normal operation. Users must follow the specific operating instructions for satisfying RF exposure compliance.

1.4 ISED Non-Interference Disclaimer

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with the Canadian ICES-003 Class A specifications. CAN ICES-003(A) / NMB-003 (A).

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempt de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

1.5 ISED RF Exposure Statement

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm (7.9 inches) between the radiator and any part of your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations ISED CNR-102 établies pour un environnement non contrôlé. Une distance de séparation d'au moins 20 cm doivent être maintenue entre l'antenne de cet appareil et toutes les personnes. Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.

1.6 Indoor and Outdoor operation

This equipment's intended operation is indoor and outdoor.

1.7 FCC and ISED Modular Approval Notice

This module was approved under a Limited Modular Approval, and because the module has no shielding, each other host which is not identical in construction/material/configuration to RS-6843AOPDA would have to be added through a Class II Permissive Change with appropriate assessment following C2PC procedures. This section provides module integration instructions as per KDB 996369 D03.

2.2 List of Applicable Rules

See section 1.2.

2.3 Summary of the Specific Operational Use Conditions

This Modular Transmitter is approved for use only with specific antenna, cable and output power configurations that have been tested and approved by the manufacturer (D3). Modifications to the radio, the antenna system, or power output, that have not been explicitly specified by the manufacturer are not permitted and may render the radio non-compliant with applicable regulatory authorities.

2.4 Limited Module Procedures

See the remainder of this integration guide and section 1.8.

2.5 Trace Antenna Designs

There are no provisions for external trace antennas.

2.6 RF Exposure Conditions

See section 1.3.

2.7 Antennas

This device employs an integrated antenna which is the only configuration approved for use. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2.8 Label and Compliance Information

The end product must carry a physical label or shall use e-labeling following KDB 784748 D01 and KDB 784748 stating: "Contains Transmitter Module FCC ID: 2ASVZ-05, IC: 30644-05" or "Contains FCC ID: 2ASVZ-05, IC: 30644-05".

2.9 Information on Test Modes and Additional Testing Requirements

See section 1.8.

2.10 Additional Testing, Part 15 Subpart B Disclaimer

This modular transmitter is only FCC authorized for the specific rule parts listed on the grant, and the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. The final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

2.11 EMI Considerations

While this module was found to pass EMI emissions alone, care should be taken when used with additional RF sources to prevent mixing products. Best design practices should be used with regard to electrical and mechanical design to avoid creating mixing products and to contain/shield any additional EMI emissions. A host manufacturer is recommended to use D04 Module Integration Guide recommending as "best practice" RF design engineering testing and evaluation in case non-linear interactions generate additional non-compliant limits due to module placement to host components or properties.

This module is not sold separately and is not installed in any host except for the Grantee of this modular certification (Define Design Deploy Corp.). In case where the module will be integrated in other Define Design Deploy Corp.'s non-identical hosts in the future, we will expand the LMA to include the new hosts after an appropriate assessment to the FCC rules.

1.8 Class 2 Permissive Change Test Plan

This module is limited to the specific host of Define Design Deploy Corp, Models: RS-6843AOPD. When this module is to be used in an end device with a different host type, the end device must be tested to ensure compliance has been maintained, and the results must be submitted by Define Design Deploy Corp. dba D3 as a Class 2 Permissive Change. To perform the testing, the worst-case chirp profile should be hard-coded in the firmware or input into the command UART port to begin operation as listed in Figure 1 below.

```
sensorStop
flushCfg
dfeDataOutputMode 1
channelCfg 15 7 0
adcCfg 2 1
adcbufCfg -1 0 1 1 1
profileCfg 0 77 4 6 200 0 0 20 1 64 2500 0 0 30
chirpCfg 0 0 0 0 0 0 0 1
chirpCfg 1 1 0 0 0 0 0 2
chirpCfg 2 2 0 0 0 0 0 4
frameCfg 0 2 16 0 30 1 0
lowPower 0 0
guiMonitor -1 1 1 0 0 0 1
cfarCfg -1 0 2 8 4 3 0 15 1
cfarCfg -1 1 0 4 2 3 1 15 1
multiObjBeamForming -1 1 0.5
clutterRemoval -1 0
calibDcRangeSig -1 1 -5 8 128
extendedMaxVelocity -1 0
lvdsStreamCfg -1 0 0 0
compRangeBiasAndRxChanPhase 0.0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0
measureRangeBiasAndRxChanPhase 0 1.5 0.2
CQRxSatMonitor 0 3 19 125 0
CQSigImgMonitor 0 125 16
analogMonitor 0 0
aoaFovCfg -1 -90 90 -90 90
cfarFovCfg -1 0 0 31.50
cfarFovCfg -1 1 -.32 .32
calibData 0 0 0
enableSpreadSpec 1
sensorStart
```

Figure 1. Worst-Case Chirp Config

After this configuration is activated, proceed to test compliance to the applicable agency specifications as described below.

Test Objective: Verify the electromagnetic emissions of the Product.

Specifications:

- Transmit output power according to FCC Part 15.255(c), with limits of 20 dBm EIRP.
- Spurious unwanted emissions according to FCC Part 15.255(d), with limits below 40 GHz according to FCC 15.209 within bands listed in FCC 15.205, and limit of 85 dB μ V/m @ 3 m above 40 GHz

Setup:

- Place the Product on the turn platform within the anechoic chamber.
- Position the measurement antenna on the antenna mast at a distance of 3 meters from the Product.
- For fundamental power set transmitter to operate in continuous mode on the highest aggregate power, and highest power spectral density to confirm continued compliance.
- For band edge compliance, set the transmitter to operate in continuous mode on the widest and the narrowest bandwidths per modulation type.
- For radiated spurious emissions up to 200 GHz the following three parameters should be tested:
 - widest bandwidth,
 - highest aggregate power, and
 - highest power spectral density.
- If according to the radio module's initial test report these conditions do not all combine in the same mode, then multiple modes should be tested: set transmitter to operate in continuous mode at low, mid and top channels with all the supported modulations, data rates and channel bandwidths until the modes with these three parameters have been tested and confirmed.

Rotation and Elevation:

- Rotate the turn platform 360 degrees.
- Gradually raise the antenna from 1 to 4 meters.
- Purpose: Maximize emissions and verify compliance with Quasi-peak limits below 1 GHz and Peak/Average limits above 1 GHz; and compare with the appropriate limits.

Frequency Scans:

- Initial scan: Cover frequency ranges from 30 MHz to 1 GHz.
- Subsequent scan: Change measurement setup for above 1 GHz measurements.

Verification:

- Verify fundamental emission levels, according to FCC Part 15.255(c)(2)(iii) within passband 60–64 GHz.
- Check harmonics according to FCC Part 15.255(d).

Extended Scans:

- Continue scanning for frequency ranges:
 - 1–18 GHz
 - 18–40 GHz
 - 40–200 GHz

Spurious Emissions:

- Verify against quasi-peak, peak and average limits.

2.0 RS-6843AOPD RF Special Compliance Notices

The following RF emissions statements apply exclusively to the RS-6843AOPD model radar sensors.

2.1 FCC Compliance Statement

CFR 47 Part 15.255 Statement:

Limitations for use are as follows:

- (a) General. Operation under the provisions of this section is not permitted for equipment used on satellites.
- (b) Operation on aircraft. Operation on aircraft is permitted under the following conditions:
 - (1) When the aircraft is on the ground.
 - (2) While airborne, only in closed exclusive on-board communication networks within the aircraft, with the following exceptions:
 - (i) Equipment shall not be used in wireless avionics intra-communication (WAIC) applications where external structural sensors or external cameras are mounted on the outside of the aircraft structure.
 - (ii) Except as permitted in paragraph (b)(3) of this section, equipment shall not be used on aircraft where there is little attenuation of RF signals by the body/fuselage of the aircraft.
 - (iii) Field disturbance sensor/radar devices may only operate in the frequency band 59.3-71.0 GHz while installed in passengers' personal portable electronic equipment (e.g., smartphones, tablets) and shall comply with paragraph (b)(2)(i) of this section, and relevant requirements of paragraphs (c)(2) through (c)(4) of this section.
 - (3) Field disturbance sensors/radar devices deployed on unmanned aircraft may operate within the frequency band 60-64 GHz, provided that the transmitter not exceed 20 dBm peak EIRP. The sum of continuous transmitter off-times of at least two milliseconds shall equal at least 16.5 milliseconds within any contiguous interval of 33 milliseconds. Operation shall be limited to a maximum of 121.92 meters (400 feet) above ground level.

2.2 ISED Compliance Statement

According to RSS-210 Annex J, the devices certified under this annex are not permitted to be used on satellites. Devices used on aircraft are permitted under the following conditions:

- a. Except as allowed in J.2(b), devices are only to be used when the aircraft is on the ground.
- b. Devices used in-flight are subject to the following restrictions:
 - i. they shall be used within closed, exclusive on-board, communication networks within the aircraft
 - ii. they shall not be used in wireless avionics intra-communication (WAIC) applications where external structural sensors or external cameras are mounted on the outside of the aircraft structure
 - iii. they shall not be used on aircraft equipped with a body/fuselage that provides little or no RF attenuation except when installed on unmanned air vehicles (UAVs) and complying with J.2(d)
 - iv. devices operating in the 59.3-71.0 GHz band shall not be used except if they meet all of the following conditions:
 - 1. they are FDS
 - 2. they are installed within personal portable electronic devices
 - 3. they comply with the relevant requirements in J.3.2(a), J.3.2(b) and J.3.2(c)
- c. Devices' user manuals shall include text indicating restrictions shown in J.2(a) and J.2(b).
- d. FDS devices deployed on UAVs shall comply with all of the following conditions:
 - i. they operate in the 60-64 GHz band

- ii. the UAVs limit their altitude operation to the regulations established by Transport Canada (e.g. altitudes below 122 metres above ground)
- iii. they comply with J.3.2(d)

1.0 INTRODUCTION

This document describes how to use the D3 Embedded DesignCore® RS-6843AOPD single-board mmWave sensor module.

2.0 MECHANICAL INTEGRATION

2.1 Thermal and Electrical Considerations

The sensor board has to evacuate up to 5 Watts to avoid overheating. The design includes two surfaces that should be thermally coupled to some form of heatsink that is designed to perform this transfer. These are at the side edges of the board where the screw holes are. A polished metal surface should contact the bottom of the board from the edge approximately 0.140" inward. The surface can be relieved to avoid shorting three via areas on the bottom. There is solder mask over the vias that provides insulation, however in an environment with vibration it is safest to create a void above them. Figure 2 shows the locations of the via areas.

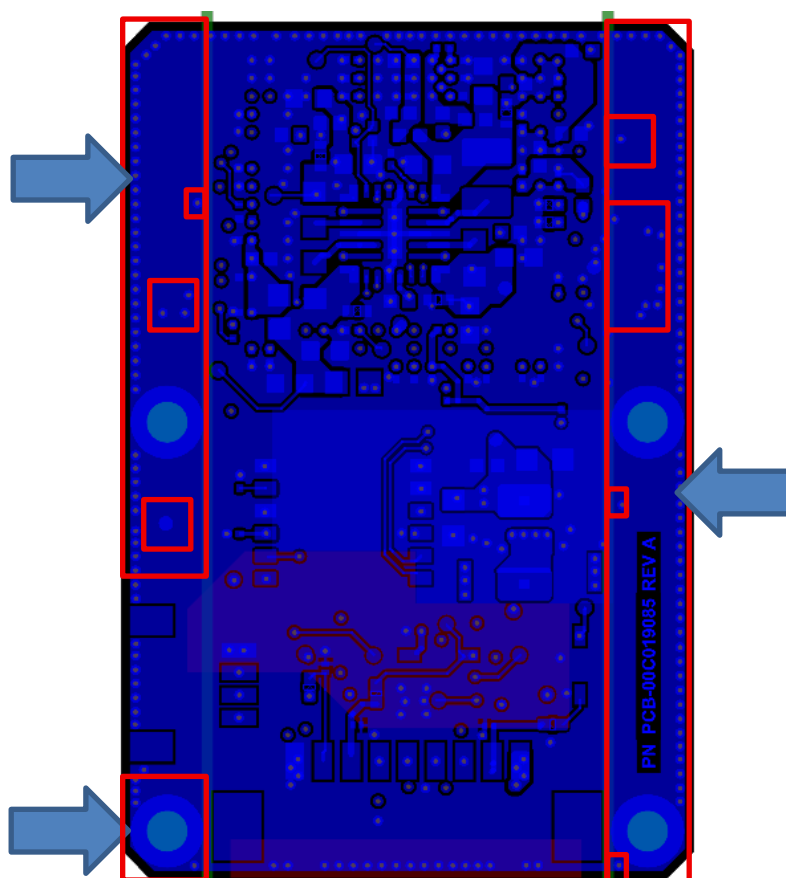


Figure 2. View through circuit board top-down

2.2 Antenna Orientation

It should be noted that the application firmware can operate with any orientation of the sensor, but some prebuilt applications may assume a given orientation. Please verify that the orientation configured in the software matches the actual placement of the sensor.

2.3 Enclosure and Radome Considerations

It is possible to create a cover over the sensor, but the cover must appear invisible to the radar by making it a multiple of a half wavelength in the material. More on this can be found in section 5 of TI's application note found here:

<https://www.ti.com/lit/an/swra705/swra705.pdf>. D3 Embedded offers consulting services on Radome design.

3.0 INTERFACES

3.1 J801 Multifunction Connector

This connector is a Molex 53261-0971. The location and orientation pinout are as shown in Figure 3 and pin definitions are in Table 1.

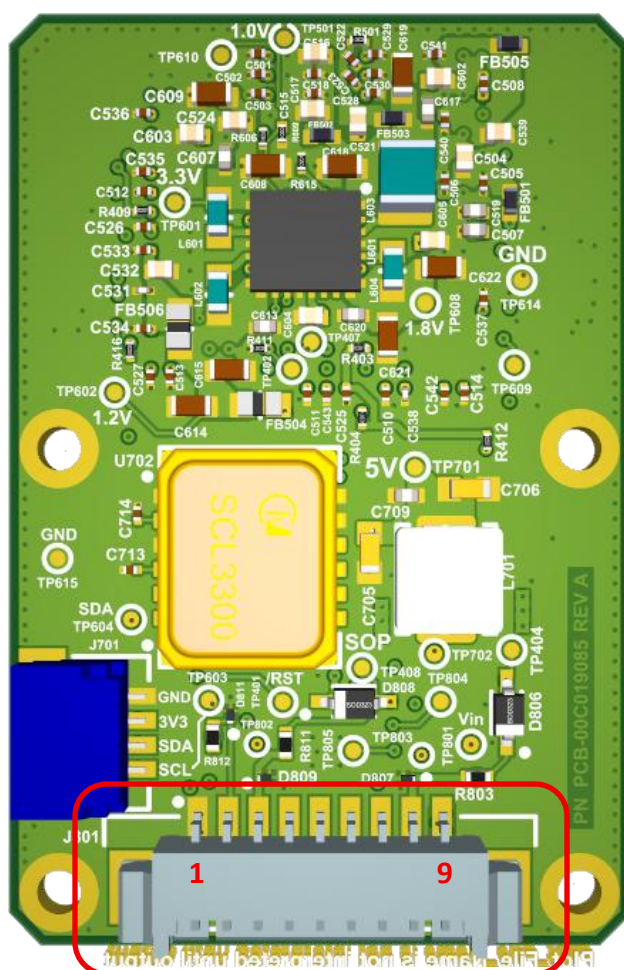


Table 1. J801 Functions for RS-6843AOPD

J801 pin	RS-485 Mode Function
1	Ground
2	/EXT_RST (into sensor) Pull low to place the sensor in reset.
3	EXT_SOP2 (into sensor) When pulled high during boot the sensor with boot into flash mode. For normal boot this pin should be left floating.
4	RS485_RX_P (into sensor) This should be connected to the host's RS-485 transmit high.
5	RS485_RX_N (into sensor) This should be connected to the host's RS-485 transmit low.
6	RS485_TX_N (out of sensor) This should be connected to the host's RS-485 receive low.
7	RS485_TX_P (out of sensor) This should be connected to the host's RS-485 receive high.
8	EXT_SYNC (into sensor)
9	8 to 32 VDC IN (into sensor)

WARNING: Except for the RS-485 signals, the signal lines use 3.3 V logic and are directly connected to the RFIC.

4.0 SETUP

The RS-6843AOPD sensors are programmed, configured, and started via the Console UART (either RS-485 TX/RX or LV UART TX/RX).

4.1 Requirements

- TI mmWave SDK: <https://www.ti.com/tool/MMWAVE-SDK>
- TI Uniflash Utility: <https://www.ti.com/tool/UNIFLASH>
- TI mmWave Visualizer: https://dev.ti.com/gallery/view/mmwave/mmWave_Demo_Visualizer/ver/3.5.0/
- An RS-485 to USB adapter. A suitable RS-485 to USB adapter can be obtained from Amazon: <https://www.amazon.com/dp/B09PYNVHLV>
- 8 to 32 Volt supply, rated for at least 4 W.

4.2 Running the Application

To run, the board must be reset or powered up with the AR_SOP_2 signal (pin 5) **open or held low** for the rising edge of reset.

Following this, a host can communicate with the command line of the sensor.

- If you are using a host with RS-485 levels and the RS-6843AOPD, an RS-485 to USB adapter must be used.
- If you are using LV UART levels and the RS-6843AOPS, a LV UART to USB adapter must be used.

The command line depends on the application software running, but if using the mmWave SDK demo application, you can find the command line documentation within your install of the SDK. You may also use the TI mmWave Visualizer to configure, run, and monitor the sensor. This can be run as a web application or downloaded for local use.

With the RS-6843AOPS and the standard demo application, data output from the sensor is available on pin 6 (UART_MSS_TX).

With the RS-6843AOPD, data is available on the pins 6 and 7 (RS485_TX_N AND RS485_TX_P).

The data format is described within the documentation for the mmWave SDK. Other software may be written that performs other functions and uses the peripherals differently.

4.3 Programming

This procedure is only needed if you wish to use different software from what was programmed by the factory.

To program, the board must be reset or powered up with the EXT_SOP_2 signal (pin 5) **held high** for the rising edge of reset.

Following this, use a PC USB port with an RS-485 to USB adapter to pins 4 *through* 7, or a LV UART to USB adapter to pins 4 *and* 7. Ensure there is a ground connection to the board from the adapter as well.

Use TI's Uniflash utility to program the Flash connected to the RFIC. The demo application is found within the mmWave SDK. For example:

"C:\ti\mmwave_sdk_03_06_02_00-LTS\packages\ti\demo\xwr64xx\mmw\xwr64xxAOP_mmw_demo.bin". This package is for the RS-6843AOPS only. Contact D3 Embedded for the software for the RS-6843AOPD. D3 Embedded offers many other customized applications as well.

4.4 Host marking

When this module is integrated into a host device, the following statement must be printed on the host device's label:

Contains FCC ID: 2ASVZ-05, IC: 30644-05

This labeling ensures compliance with FCC and ISED regulations regarding modular approvals.

Table 2. Revision History

Revision	Date	Description
1.0	2025-07-23	Initial Issue
2.0	2025-09-08	Revised to describe RS-6843AOPD only