



Excellence in Compliance Testing

Certification Exhibit

FCC ID: KDZLXEBT001
IC: 1995B-BT001

FCC Rule Part: 15.247
IC Radio Standards Specification: RSS-210

ACS Report Number: 08-0452

Manufacturer: LXE, Inc.
Model: LBMA46NET2

Manual

For Review Only – Draft 01 – change to RF Safety Notice

MX8 User's Guide

(Microsoft® Windows® CE 5.0 Equipped)



Copyright © 2009 by LXE Inc.
All Rights Reserved
E-EQ-MX8OGWW-D



Notices

LXE Inc. reserves the right to make improvements or changes in the products described in this document at any time without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, LXE assumes no liability resulting from any errors or omissions in this document, or from the use of the information contained herein. Further, LXE Incorporated, reserves the right to revise this document and to make changes to it from time to time without any obligation to notify any person or organization of such revision or changes.

Copyright:

This document is copyrighted. All rights are reserved. This document may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form without prior consent, in writing, from LXE Inc.

Copyright © 2009 by LXE Inc. An EMS Technologies Company.
125 Technology Parkway, Norcross, GA 30092 U.S.A. (770) 447-4224

Trademarks:

LXE® and **Spire®** are registered trademarks of LXE Inc. **RFTerm®** is a registered trademark of EMS Technologies, Norcross, GA.

Microsoft®, ActiveSync®, MSN, Outlook®, Windows®, the Windows logo, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Summit Data Communications, Inc. Summit Data Communications, the Summit logo, and “The Pinnacle of Performance” are trademarks of Summit Data Communications, Inc.

Java® and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. or other countries, and are used under license.

The **Bluetooth®** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LXE, Inc. is under license.

Hand Held® is a registered trademark of Hand Held Products, Inc., located in Skaneateles Falls, NY.

Wavelink®, the Wavelink logo and tagline, Wavelink Studio™, Avalanche Management Console™, Mobile Manager™, and Mobile Manager Enterprise™ are trademarks of Wavelink Corporation, Kirkland.

RAM® and **RAM Mount™** are both trademarks of National Products Inc., 1205 S. Orr Street, Seattle, WA 98108.

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

When this manual is in PDF format: “Acrobat® Reader® Copyright © 2009 Adobe Systems Incorporated. All rights reserved. Adobe®, the Adobe logo, Acrobat®, and the Acrobat logo are registered trademarks of Adobe Systems Incorporated.” applies.

The user is strongly encouraged to read Appendix B, Regulatory Notices and Safety Information. Important safety cautions, warnings and regulatory information is contained in Appendix B.



Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.

Revision Notice

Appendix B – Regulatory Notices and Safety Information	Updated RF Safety Notice (Summit Client – 4830 and 4831).
--	---

Table of Contents

INTRODUCTION	1
Overview	1
MX8 Features	2
Important Battery Information	3
Document Conventions	4
Environmental Specifications	4
Laser Warnings and Labels	5
Continuous Scan Mode	5
Components	6
Front View	6
Back View	7
Scanner / Imager Aperture	8
Trigger Handle	8
Handstrap	9
I/O Port and Cables	10
MX8 AC Adapter	11
QUICK START	13
In Brief	13
Troubleshooting	14
Related Manuals for Startup	14
Inserting Fully Charged Battery	15
Checking Battery Status	15
About Lithium-Ion Batteries	16
Tapping the Power Key	16
Tapping the Touchscreen with a Stylus	17
Keypad Shortcuts	17
Calibrating the Touchscreen	18
Set Time Zone (Optional)	18
Entering the AppLock Activation Key	19
Hotkey (Activation Hotkey)	19
Touch	19
Optional Accessory Installation	20
Attaching Handstrap (Optional)	20
Connecting an External Power Supply (Optional)	21
Putting it all together	21
Assembling the 5V AC Power Adapter	22
Connecting the Multipurpose USB / Power Cable	23
Connecting the Multipurpose RS-232 / Power Cable	23
Connecting the Audio Cable and a Headset	24
Adjust Microphone and Secure the Cable	24
Voice Case	25
Using the 32-Key Triple-Tap Keypad	27

Using the 32-Key Alpha-Mode Keypad	28
Entering Data	29
Using the Keypad	29
Using the Input Panel or Virtual Keyboard	29
Using the Stylus.....	30
Using the Integrated Barcode Scanner or Imager	31
Barcode Scanner	31
2D Imager	31
Scan Status LED	32
Tethered Scanners.....	32
Bluetooth Scanners and Printers	32
Voice Data	32
Bluetooth Devices	33
Mobile Bluetooth Accessories	33
Getting Help	34
Manuals	34
Accessories	34
 THE MX8 HAND HELD COMPUTER	 39
 Reboot Sequences	 39
Suspend / Resume	39
Warm Boot.....	39
Cold Boot.....	39
Reset to Default Settings	40
Reset Registry	40
Reset All.....	40
Saving Changes to the Registry	40
Touchscreen Display	41
Cleaning the Glass Display/Beam Aperture	41
Applying the Protective Film to the Display	41
Adjusting the Display Backlight.....	42
Set the Display Backlight Timer.....	42
Setting the Power Schemes Timers.....	43
Battery Power Scheme.....	43
AC Power Scheme	43
Setting The Audio Speaker Volume	44
Using the Keypad	44
Using the Touchscreen	44
The Keypads	45
LED Indicators.....	45
System Status LED	46
Scan Status LED	46
Alpha Mode LED	46
Standard Keys.....	47
Function Keys.....	47
Sticky Keys	47
Ctrl (Control key)	47
Alt (Alternate key).....	47
Shft (Shift key)	47
Orange and Blue Keys.....	48

CapsLock Mode Function	48
Batteries	49
Main Battery	49
Backup Battery	50
Battery Hotswapping	50
MX8 Battery Multi-Charger	51
Charge a Main Battery Pack	51
MX8 Cradles (Optional)	53
APPENDIX A KEY MAPS	55
Introduction.....	55
32-Key Triple-Tap Keypad	55
32-Key Alpha-Mode Keypad	61
APPENDIX B REGULATORY NOTICES AND SAFETY INFORMATION	67
Class A Digital Device.....	67
RF Notices	69
MX8 Approvals/Standards	70
Revision History	75
INDEX	77

Illustrations

Figure 1 CDRH / IEC 825 Caution Label Location – MX8, Back	5
Figure 2 Caution Label – Class 2 Laser Scanner	5
Figure 3 Front of MX8 with Triple-Tap Keypad	6
Figure 4 Back	7
Figure 5 Beam Aperture	8
Figure 6 Trigger Handle (Optional)	8
Figure 7 Handstrap (Optional)	9
Figure 8 I/O Port and Cables	10
Figure 9 5V AC Adapter - Assembled	11
Figure 10 MX8 Cabling Options	12
Figure 11 MX8 Desktop	13
Figure 12 Lithium Ion Battery Pack	15
Figure 13 Power Key Location	16
Figure 14 Touchscreen Recalibration	18
Figure 15 Attaching the Handstrap	20
Figure 16 USB – MX8 – Power Assembly	21
Figure 17 AC 5V External Power Supply	22
Figure 18 Connect Power Cable to the Cradle	22
Figure 19 Connect the USB / Power Cable to the MX8 Port	23
Figure 20 Connect the RS-232 / Power Cable to the MX8 Port	23
Figure 21 Audio Cable and Headset	24
Figure 22 MX8 Voice Case, Front	25
Figure 23 Belt Loop Snaps	25
Figure 24 Audio Cable in Cable Retaining Clip	26
Figure 25 The Triple-Tap Keypad	27
Figure 26 The Alpha-Mode Keypad	28
Figure 27 Input Panel / Virtual Keyboard	29
Figure 28 Laser Scanner Beam on Linear Barcode	31
Figure 29 Imager Bracketed Crosshair Target on 2D Barcode	31
Figure 30 Scan Status LED	32
Figure 31 Touchscreen Display	41
Figure 32 Setting the Display Backlight Timer	42
Figure 33 Volume & Sounds Properties	44
Figure 34 The 32-key Keypad	45
Figure 35 LED Indicators	45
Figure 36 Lithium Ion Battery Pack	49
Figure 37 Multi-Charger Power Adapter	51
Figure 38 MX8 Multi-Charger	51
Figure 39 Insert Battery Pack in Charging Pocket	52

Introduction

Overview

The LXE® MX8 is a rugged, portable, hand-held Microsoft® Windows® CE 5.0 equipped mobile computer capable of wireless data communications. The mobile device can transmit information using an 802.11 network card and it can store information for later transmission through an RS-232 or USB port.



The mobile device is vertically oriented and features backlighting for the display. The touch-screen display supports graphic features and Windows icons that the Windows CE 5.0 operating system supports. The keypad is available in a 32-key numeric-alpha triple-tap version and a 32-key Alpha mode version.

This device is a Windows CE 5.0 compatible computer that can be scaled from a limited function batch computer to an integrated RF scanning computer. A trigger handle is available as an accessory.

The stylus attached to the handstrap is used to assist in entering data and configuring the mobile device. Protective film for the touchscreen is available as an accessory.

The MX8 is powered by a 3000 mAh Lithium-Ion main battery pack and an internal Ni-MH backup battery.

Important

- If the mobile device has AppLock installed, please refer to the *MX8 Reference Guide, Chapter 6 – AppLock* for setup and processing.
- Wireless configuration and security parameters are described in detail in the *MX8 Reference Guide, Chapter 5 – Wireless Network Configuration*.

Based on your installed software version and hardware options, your setup may not be exactly the same as the system described in this guide. Contact your LXE representative for information on the latest upgrades for your MX8.

MX8 Features

The appropriate wireless utility for your device configuration has been pre-installed by LXE.

The desktop will display a Summit Client Utility icon for 802.11 wireless configuration and security.

	Summit 	Optional?
LXE 802.11 b/g Radio	x	No
Summit® Client Utility	x	No
Bluetooth Client	x	Yes
LXE Bluetooth Printers and Scanners	x	Yes
520MHz	x	No
128MB RAM	x	No
128MB Flash	x	No
SE955 Laser Scanner	x	Yes
EV-15 Linear Imager	x	Yes
5300 2D Imager	x	Yes
Triple-Tap keypad	x	No
Alpha-Mode keypad	x	Yes
CE 5.0	x	No
Voice	x	Yes
RFTerm®	x	Yes
JAVA®	x	Yes
AppLock	x	Yes

The MX8 has one mini SD card interface for storage of User data. Use only LXE-qualified SD Cards (see *Accessories*).

The MX8 does not have a Bluetooth managed LED.

The MX8 is not approved for use in Hazardous Locations.

Important Battery Information

Note: This mobile device's backup battery maintains its charge by drawing power from the main battery pack. Always store unused devices with a fully charged main battery pack installed. LXE recommends an in-use mobile device be frequently connected to an external power source to maintain optimum power levels in the main battery pack and the backup battery. When the backup battery and main battery pack are dead, the mobile device reverts to the last saved setup defaults when a fully charged main battery pack is installed and the device is powered On again.

Tap  | Settings | Control Panel | Battery tab.

- Until the main battery and backup battery are completely depleted, the MX8 is always drawing power from the batteries (On).
- New batteries must be fully charged prior to use.
- Whenever possible, use the AC power adapter with the MX8 to conserve the main battery and recharge the backup battery. The backup battery receives power from the main battery.
- When the MX8 is connected to AC power and the main battery is being hotswapped, do not disconnect AC power from the MX8 until a main battery is secured in the battery well.
- Ni-MH backup battery replacement must be performed by qualified service personnel.

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Document Conventions

ALL CAPS	All caps are used to represent disk directories, file names, and application names.
Menu Choice	Rather than use the phrase “choose the Save command from the File menu”, this guide uses the convention “choose File Save”.
“Quotes” or Italics	Indicates the title of a book, chapter or a section within a chapter (for example, “Document Conventions” and Document Conventions).
< >	Indicates a key on the keypad (for example, <Enter>).
	Indicates a reference to other documentation.
ATTENTION	Keyword that indicates vital or pivotal information to follow.
	Attention symbol that indicates vital or pivotal information to follow. Also, when marked on product, means to refer to the user’s guide.
	International fuse replacement symbol. When marked on the product, the label includes fuse ratings in volts (v) and amperes (a) for the product.
Note:	Keyword that indicates immediately relevant information.
CAUTION 	Keyword that indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
WARNING 	Keyword that indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
DANGER 	Keyword that indicates a imminent hazardous situation which, if not avoided, will result in death or serious injury.

Environmental Specifications

Operating Temperature	14°F to 122°F (-10°C to 50°C) [non-condensing]
Storage Temperature	-4°F to 158°F (-20°C to 70°C) [non-condensing]
Water and Dust	IEC 60529 compliant to IP54
Operating Humidity	5% to 90% non-condensing at 104°F (40°C)
Vibration	Based on MIL Std 810D
ESD	8 kV air, 4kV contact
Bluetooth Range	32.8 feet (10 meters) Direct line of sight only. The CF Bluetooth Radio in the LXE MX8 is Bluetooth Special Interest Group (SIG) Qualified and is listed as EPLs (End Product Listings) and with QDID: B013455.

Laser Warnings and Labels

- Do not look into the laser's lens.
- Do not stare directly into the laser beam.
- Do not remove the laser caution labels from the MX8.
- Do not connect the laser barcode aperture to any other device. The laser barcode aperture is certified for use with the MX8 only.

Caution: 	Laser radiation when open. Please read the caution labels. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
--	---



Figure 1 CDRH / IEC 825 Caution Label Location – MX8, Back



Figure 2 Caution Label – Class 2 Laser Scanner

Continuous Scan Mode

If Continuous Scan Mode has been enabled (default is disabled), the laser is always on and decoding. Refer to the *MX8 Reference Guide, Chapter 4 Scanner*. **Caution: Laser beam is emitted continuously. Do not stare into the laser beam.**

Components

Front View



Figure 3 Front of MX8 with Triple-Tap Keypad

1	Imager/Scanner Aperture
2	Speaker
3	System Status LED
4	Scan Button
5	Orange Key (Sticky Key)
6	Blue Key (Sticky Key)
7	Scan Status LED
8	Cable Port
9	On / Off Button
10	Alpha Mode LED
1	Diamond Number Keys

Back View**Figure 4 Back**

- 1 Imager/Scanner Aperture
- 2 Trigger Handle Attach Points
and
Handstrap Retainer Bracket Attach Points
- 3 Main Battery
- 4 Battery Fastener
- 5 Cable Ports (I/O Port)

Note: The touch screen stylus is tethered to the handstrap or the trigger handle.

Scanner / Imager Aperture

CAUTION: Never stare directly into the beam aperture. Read the previous section “Laser Warnings and Labels” before using the scanner/imager.



Figure 5 Beam Aperture

Identify the type of integrated imager or laser scanner installed in the MX8 by looking at the type of plastic lens covering the Beam aperture.

- The No-Scanner option has an opaque lens protecting the MX8 internal components.
- The SE955 laser barcode scanner has a red lens protecting the laser engine.
- The EV-15 integrated imager has a clear lens protecting the imager engine.
- The 5300 2D imager has an opaque lens protecting the imager engine.

Trigger Handle



Figure 6 Trigger Handle (Optional)

1	Scan Aperture	3	Handle
2	Trigger	4	Tether Attach Point

Note: Either the trigger handle is attached to the MX8 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times. The stylus is tethered to the handstrap or the trigger handle.

Refer to the *MX8 Reference Guide* for Trigger Handle installation instruction.

Handstrap



Figure 7 Handstrap (Optional)

- 1 Handstrap Retainer Bracket
- 2 Handstrap
- 3 Handstrap Clip

Note: Either the trigger handle is attached to the MX8 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times. The stylus is tethered to the handstrap or the trigger handle. LXE pre-installs the handstrap when the MX8 is purchased without a trigger handle.

I/O Port and Cables

Note: There is no IR port on the MX8. Tethered scanners are not supported on the MX8.



Figure 8 I/O Port and Cables

Cable: Multipurpose RS-232 and Power

MX8A055MULTICBLDA9F



Cable: Multipurpose USB and Power

MX8A052MULTICBLUSB



Adapter/Cable : Audio

MX8A060ADPTCBLVOICE




MX8 AC Adapter

AC Adapter and AC Power Cable



Figure 9 5V AC Adapter - Assembled

The MX8 AC Power Adapters (MX8A301CRDLPSAC and MX8A302CRDLPSACWW) are only intended for use with the MX8 multi-purpose cables and the MX8 Desktop Cradle.

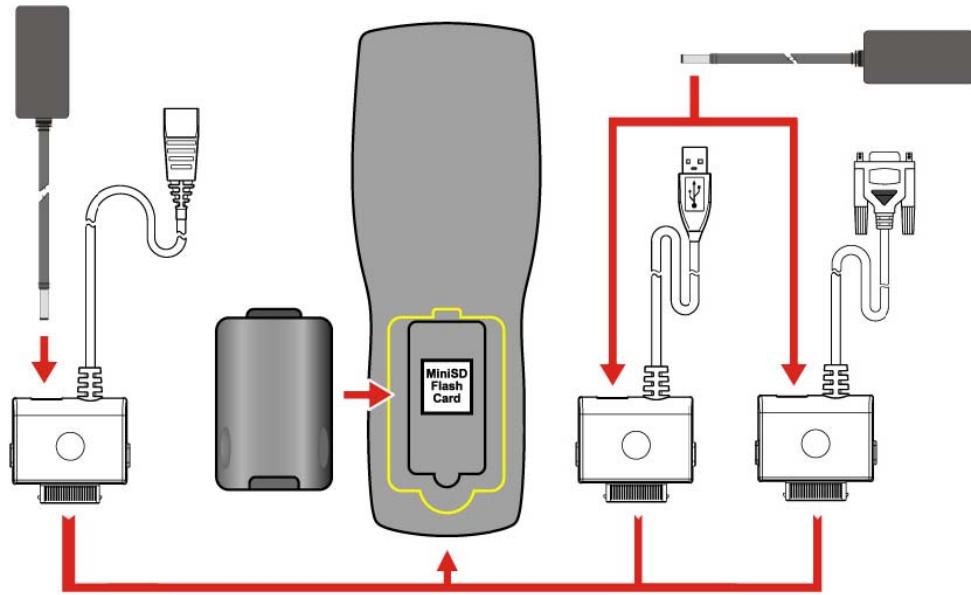

Note: Tethered scanners connected to the MX8 I/O port are not supported by LXE.

Figure 10 MX8 Cabling Options

Quick Start

In Brief . . .

Note: When your mobile device is pre-configured, the client, keypad and scan aperture configurations are assembled by LXE to your specifications. The desktop will display a Summit Client Utility icon.

This section's instructions are based on the assumption that your new device is pre-configured and requires only accessory installation (e.g. stylus) and a power source. LXE recommends that installation or removal of accessories be performed on a clean, well-lit surface. When necessary, protect the work surface, the mobile device, and components from electrostatic discharge.

In general, the sequence of events is:

1. Insert a fully charged battery. (Always put a fully charged battery in the mobile device at the beginning of the shift or workday.)
2. Connect an external power source to the unit (if available).
3. If the screen does not automatically display, tap the Power key.
4. Calibrate the touchscreen.
5. A white screen will appear during the boot process until all CAB files and applications are loaded and installed. Wireless client setup screens may appear and disappear while files are loading.
6. After all files are loaded and the Microsoft Windows CE Desktop is displayed, adjust audio volume and other parameters if desired.

If needed, change the Time and Date from it's default value by tapping the  | Settings | Control Panel | Date/Time icon.



Figure 11 MX8 Desktop

Troubleshooting

Can't calibrate the touch screen, change the date/time or adjust the volume.	AppLock is installed and running on the mobile device. AppLock restricts User access to running programs. Changes or modifications require Administrator access. Refer to <i>AppLock</i> in the <i>MX8 Reference Guide</i> for setup and processing information.
RFterm opens and runs upon each cold reset and warm reset.	Tap File Exit to close the RFTerm application. When installed, RFTerm opens and runs by default after every reset.
The MX8 seems to lockup as soon as it is warm booted.	There may be small delays while the wireless client connects to the network, authorization for Voxware-enabled applications complete, Wavelink Avalanche management of the MX8 startup completes, and Bluetooth relationships establish or re-establish.

Related Manuals for Startup

Integrated Scanner Programming Guide – contains programming barcodes used when setting up integrated scan engines.

- SE955 scanner barcode reading parameters, refer to *Chapter 2* in the Integrated Scanner Programming Guide.
- Intermec EV-15 linear imager, refer to *Chapter 3* in the Integrated Scanner Programming Guide.
- 5300 2D imager, refer to *Chapter 5* in the Integrated Scanner Programming Guide.

MX8 Reference Guide – contains instruction, technical and troubleshooting information for software and hardware functions.

MX8 Multi-Charger User's Guide – contains user, technical and troubleshooting information for the MX8 battery Multi-Charger.

MX8 Cradle Reference Guide – contains user, technical and troubleshooting information for the MX8 docking cradles.

Inserting Fully Charged Battery

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Press the Power key after the battery is inserted into the MX8.

Note: On first use the MX8 batteries should be charged with an external power source (i.e. AC Adapter) – 5 hours for the main battery and 7 hours for the backup battery. New main battery packs alone must be charged prior to first use – this process takes up to five hours in an MX8 Multi-Charger.



Figure 12 Lithium Ion Battery Pack

The MX8 Battery Compartment is located at the bottom of the back of the computer. The main battery functions as the battery well cover.

Push the battery locking tab towards the I/O connector until it stays in place. Place the battery in the battery well, making sure the tab at the top of the battery pack fits into the slot at the top end of the battery well. With a hinging motion, slip the battery down into the battery well until the locking tab clicks into place and the battery pack is secured to the MX8.

The backup battery is trickle-charged by the main battery. Whenever possible, use the AC power adapter with the MX8 to conserve the main battery and charge the backup battery.

The Status LED indicates battery condition. It is steady red when the main battery is Low. When the battery has sufficient energy the Status LED is unlit. The Battery control panel displays main and backup battery charging and power status ( | Settings | Control Panel | Battery).

Checking Battery Status

Tap the  | Settings | Control Panel | Battery icon. Main battery level, backup battery level, status and other details are displayed.

About Lithium-Ion Batteries

Li-Ion batteries (like all batteries) gradually lose their capacity over time (in a linear fashion) and never just stop working. This is important to remember – the MX8 is always ‘on’ even when in the Suspend state and draws power from the batteries at all times. Tap the  | Settings | Control Panel | Power tab to check the battery status and power reading.

The following chart is an approximation. Actual battery capacity varies based on usage, ambient temperature and peripherals drawing power from the MX8:

100% capacity	2800 mAh minimum
80% capacity	2280 mAh minimum

Deciding when to put a fully charged main battery pack in the MX8 is difficult to quantify because it is very application specific. 2000 mAh may be the cutoff for one customer who uses the mobile device frequently, while 1500 mAh may be perfectly fine for a customer who occasionally uses the mobile device. You need to determine the point at which battery life becomes unacceptable for your business practices and replace the main battery pack before that point.

Tapping the Power Key

Note: Refer to the section titled Power Modes in the “MX8 Reference Guide” for information relating to the power states of the MX8.

Important: Until the main battery and backup battery are completely depleted, the MX8 is always drawing power from the batteries (On).

The Power key is located at the bottom of the keypad. When a battery is inserted in the MX8 for the first time press the Power key.

Tapping the Power key places the MX8 immediately in Suspend mode.

Tapping the Power key again immediately returns the MX8 from Suspend.

or

Tap  | Suspend.



Figure 13 Power Key Location

See Also: *LED Indicators and System Status LED* later in this guide.

See Also: *Reboot Sequence* in *MX8 Hand Held Computer* for reboot options and instruction.

Tapping the Touchscreen with a Stylus

Note: Always use the point of the stylus for tapping or making strokes on the touchscreen. Never use an actual pen, pencil, sharp or abrasive object to write on the touchscreen.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. Place the stylus into the stylus holder when the stylus is not in use.

Like using a mouse to left-click icons on a desktop computer screen, using the stylus to tap icons on the touchscreen is the basic action that can:

- Open applications
- Choose menu commands
- Select options in dialog boxes or drop-down boxes
- Drag the slider in a scroll bar
- Select text by dragging the stylus across the text
- Place the cursor in a text box prior to typing in data or retrieving data using the Scan button or an input/output device connected to the serial port.
- A mouse right-click is performed by holding the stylus down on the touchscreen. A circle of dots appear and then the right-click operation can be performed. See note.

Note: A “right mouse click” function must be programmed by the customer to accept a Tap and Hold function. An application can choose to interpret this function as a right mouse click. LXE does not support non-LXE application programming.

Keypad Shortcuts

Use keyboard shortcuts instead of the stylus:

- Press <Tab> and an <Arrow> key to select a file.
- Once you've selected a file, press <Enter> to open the file or press <Alt> then press <Enter> to open its Properties dialog.
- Press to delete a file.
- To force the Start menu to display, press <Ctrl> and release, press <Blue> and release, then press <Esc> (the Alt key).

See the section titled *Accessories* for the stylus replacement kit part number.

Calibrating the Touchscreen

If the touchscreen is not responding properly to stylus taps, you may need to recalibrate the touchscreen. Recalibration involves tapping the center of a target. If you miss the center, keep the stylus on the screen, slide it over the target's center, and then lift the stylus.

If the touchscreen is not accepting taps or needs recalibration, press `<Ctrl>+<Blue>+<Alt>` to force the Start Menu to appear.

To recalibrate the screen, select  | Settings | Control Panel | Stylus | Calibration tab.

To begin, tap the Recalibrate button on the screen with the stylus.

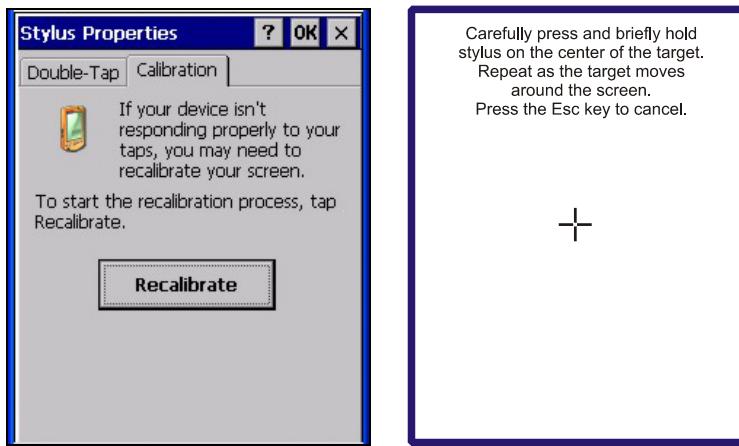


Figure 14 Touchscreen Recalibration

Follow the instructions on the screen and press the Enter key to save the new calibration settings or press Esc to cancel or quit.

Set Time Zone (Optional)

Note: The first time it is powered up, or the device returns from a Cold Reset, the MX8 resets the Time Zone to the factory default values (GMT-05:00 Eastern Time).

To set the Time Zone, tap the Start | Settings | Control Panel | Date/Time icon.

Select the physical time zone. Enable the checkbox next to 'Automatically adjust clock for daylight saving' if applicable.

If required, adjust the time and calendar date and tap the Apply button. Tap the OK button when you are finished or the X button to ignore any changes.

Entering the AppLock Activation Key

Hotkey (Activation Hotkey)

If the mobile device uses LXE's AppLock to allow the user to switch between applications, the default Activation key is <Ctrl>+<Spc>. The key sequence switches the focus between one application and another. Data entry affects the application running in the foreground only. Note that the system administrator may have assigned a different key sequence to use when switching applications.

Touch

Note: The touch panel must be enabled.

Tap the Switchpad taskbar icon to place the popup menu on screen. Tap one of the application names in the popup menu. The selected application is brought to the foreground while the other application continues to run in the background. Stylus taps affect the application running in the foreground only.

Optional Accessory Installation

Attaching Handstrap (Optional)

Note: Either the trigger handle is attached to the MX8 or the handstrap is attached, not both. LXE recommends that, in the absence of a trigger handle, the handstrap be used at all times. Refer to the “MX8 Reference Guide” for instructions on installing the Trigger Handle (a torque wrench will be required).

Once installed, the handstrap provides a means for the user to secure the computer to their hand. It is adjustable to fit practically any size hand and does not interfere with the multipurpose cable, if connected, when the mobile device is in a cradle. Loosen the top strap of the handstrap to allow access to the battery well.



Figure 15 Attaching the Handstrap

- 1 Handstrap Retainer Bracket
- 2 Handstrap and tethered stylus
- 3 Handstrap Clip

Tool Required: #1 Phillips Screwdriver (not supplied by LXE)

Installation

1. Place the MX8, with the screen facing down, on a flat stable surface.
2. Attach the handstrap retainer bracket to the MX8 with the screws provided.
3. Slip the Handstrap Clip into the bracket at the base of the MX8.
4. Making sure the closed loop fastener surfaces on the handstrap are facing up, slide the strap through the pin in the retainer bracket and the clip.
5. Fold each end of the the strap over so that the closed loop fastener surfaces mate evenly.
6. Test the strap's connection making sure the MX8 is securely connected to each end of the strap connectors.

Check the closed loop fastener, retainer bracket and clip connections frequently. If they have loosened, they must be tightened before the MX8 is placed into service again. If the handstrap gets worn or damaged, it must be replaced.

Connecting an External Power Supply (Optional)

The MX8 receives AC/DC power from the AC/DC 5V Power Supply. The MX8 external power connection is part of the RS-232 cable assembly and the USB cable assembly.

Note: The MX8 AC Power Adapters (MX8A301CRDLPSAC and MX8A302CRDLPSACWW) are only intended for use with the MX8 multi-purpose cables and the MX8 Desktop Cradle.

Putting it all together . . .



Figure 16 USB – MX8 – Power Assembly

To apply external power to the MX8 follow the steps below in sequence.

1. Plug the 2 prong adapter cable end of the external power module into an AC power source (e.g. wall outlet).
2. Squeeze the sides of the power connector and push the power cable connector into the MX8 I/O port until it clicks. The click means the connector is seated firmly.

The System LED above the Scan key illuminates when the MX8 is charging the main battery pack using external power through the power cable. The backup battery is always being trickle charged by the main battery pack.

Whenever possible, use the AC power adapter with the MX8 to conserve the main battery power and maintain a charge in the backup battery.

Assembling the 5V AC Power Adapter

If the 2-prong AC power cable is not included with the Adapter, please contact your LXE representative for assistance.

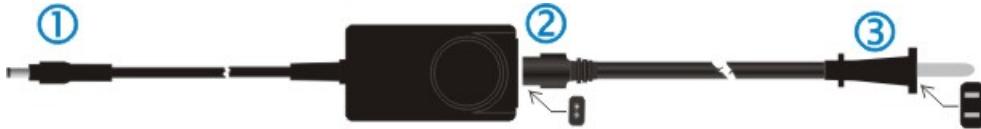


Figure 17 AC 5V External Power Supply

1. To cradle -- Firmly press the **cradle end** of the power cable into the female connector on the back of the cradle.
2. From AC Power to Adapter -- Firmly press the **female end** of the power cable into the male connector on the power adapter.
3. To AC wall outlet -- Plug the **2-prong cable** into any AC wall outlet with a dependable power source.

AC power is now being supplied to the AC power adapter and the cradle.

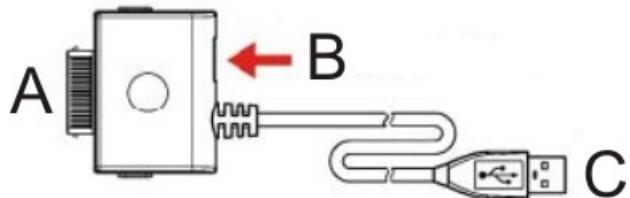


Figure 18 Connect Power Cable to the Cradle

Input :100-240VAC, 50-60 Hz, 0.5A

Output : 5VDC, 3A


Indoor, dry location use only.

Connecting the Multipurpose USB / Power Cable**Figure 19 Connect the USB / Power Cable to the MX8 Port**

Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX8. Release the clips in the connector cable. Test the connection for stability before connecting to USB

Connector B Firmly push the power cable connector pin into connector B. Plug the 2-prong cable into an AC wall outlet.

Connector C Insert the USB Type A plug into an appropriate USB port on a desktop/laptop computer for ActiveSync communication.

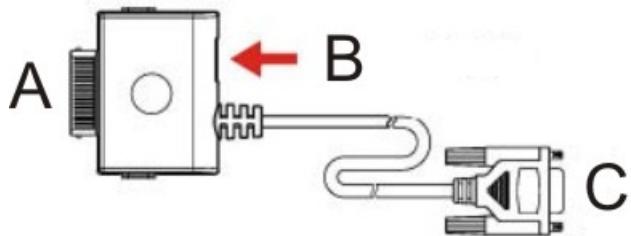Connecting the Multipurpose RS-232 / Power Cable**Figure 20 Connect the RS-232 / Power Cable to the MX8 Port**

Connector A Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX8. Release the clips in the connector cable. Test the connection for stability before connecting the B or C connector.

Connector B Firmly push the power cable connector pin into connector. Plug the 2-prong cable into an AC wall outlet.

Connector C Align the RS-232 serial cable end carefully to an appropriate serial port on a desktop/laptop computer for ActiveSync communication. Press the ends together and hand tighten the screws on either side of the serial cable until the MX8 is securely connected to the serial device.

Connecting the Audio Cable and a Headset

See section titled Set the Audio Speaker Volume. Use the Control Panel Mixer applet to set up the mono headphone. The Summit Client supports mono only.

Note: The audio option draws power from the main battery.

The headset consists of an earpiece, a microphone and an attached cable. The headset attaches to the audio cable which attaches to the MX8.

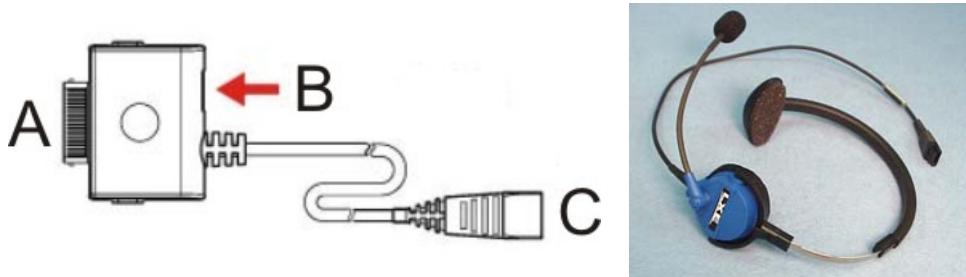


Figure 21 Audio Cable and Headset

Connector A	Squeeze the clips on the connector cable to open the catches in the connector assembly. Firmly press Connector A into the connector at the base of the MX8. Release the clips in the connector cable. Test the connection for stability before continuing.
Connector B	(Optional) Firmly push the power cable connector pin into the MX8 connector. Plug the 2-prong cable into an AC wall outlet.
Connector C	Align Connector C and the headset quick connect cable end. Firmly push the cable ends together until they click and lock in place.

Adjust Microphone and Secure the Cable

Do not twist the microphone boom when adjusting the microphone.

The microphone should be adjusted to be about two finger widths from your mouth.

Make sure the microphone is pointed at your mouth. Note the small “Talk” label near the mouthpiece. Make sure the Talk label is in front of your mouth.

The microphone cable can be routed over or under clothing.

Under Clothing

- Leave the cable exposed only at the top of the collar.
- Be sure to leave a small loop of cable to allow movement of your head.

Over Clothing

- Use clothing clips to hold the cable close to your body.
- Tuck the cable under the belt, but leave a small loop where it goes under the belt.
- Do not wear the cable on the front of your body. It may get in your way or get caught on protruding objects.

Voice Case

Figure 22 MX8 Voice Case, Front

The voice case is a sturdy, lightweight, protective covering for the MX8. The voice case cannot protect the MX8 from destructive, excessive force or a harsh or wet environment. It is designed to protect the MX8 from dirt, dampness, and minor, trivial bumps or jostling. The MX8 battery cannot be hotswapped while the MX8 is enclosed by the voice case.

1. Open the belt loop on the voice case. The belt loop snaps are self locking at the dimple. Locate the dimple on each belt loop snap. Unfasten each belt loop snap by using your thumb to push the snap head upward at the dimple.



Figure 23 Belt Loop Snaps

2. Place the belt on the voice case inside the open area of the belt loop. Fasten the belt to the voice case. Lock each belt loop snap by rocking the snap head onto the snap base (starting on the opposite side of the dimple) and pressing down on the dimple side of the snap head.
3. Do not put the belt on yet.
4. Attach the audio adapter/cable to the base of the MX8. Do not connect the headset to the cable yet.
5. Slip the MX8 into the voice case, with the keypad and touchscreen facing the front of the case. The audio cable should be exiting the side opening at the left side of the case. If it is not, remove the MX8 from the voice case, turn it around and insert into the voice case again.
6. Close the voice case cover by folding the hook side over the loop side. Press along the length of the cover until the hook and loop fabric adheres to each other.

7. Slide the audio cable upward under the cable retaining clips on the left side, leaving a small amount of slack between the cable retaining clip and the MX8. Do not pull it tight.



Figure 24 Audio Cable in Cable Retaining Clip

8. The MX8 in the voice case is ready for use.
9. Connect the headset quick connect cable and the audio quick connect cable attached to the MX8.
10. Put the belt on. Adjust the belt and voice case for comfort.

Examine the cable in the cable retaining clip and the hook and loop fabric periodically. If any are loose or unfastened, tighten and re-fasten before placing the voice case back into service. If the voice case is damaged, it should be removed from service.

Using the 32-Key Triple-Tap Keypad

The keypad is installed and configured by LXE to your specifications.

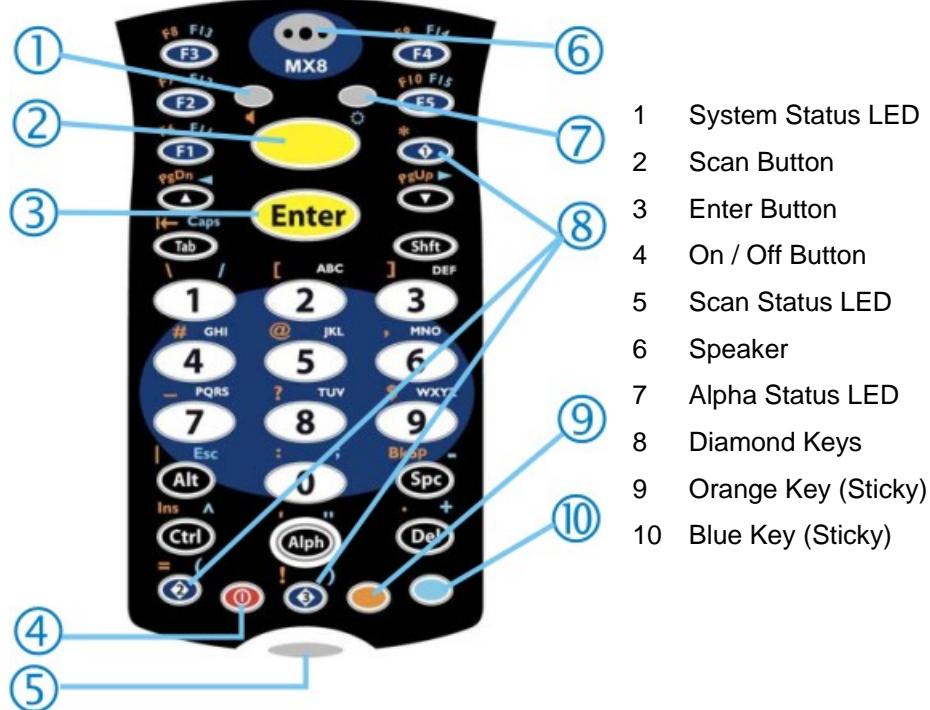


Figure 25 The Triple-Tap Keypad

- When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shft sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.
- Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.
- To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.
- When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

The keymaps (keypress sequences) are located in *Appendix A – Key Maps*.

Using the 32-Key Alpha-Mode Keypad

The keypad is installed and configured by LXE to your specifications.

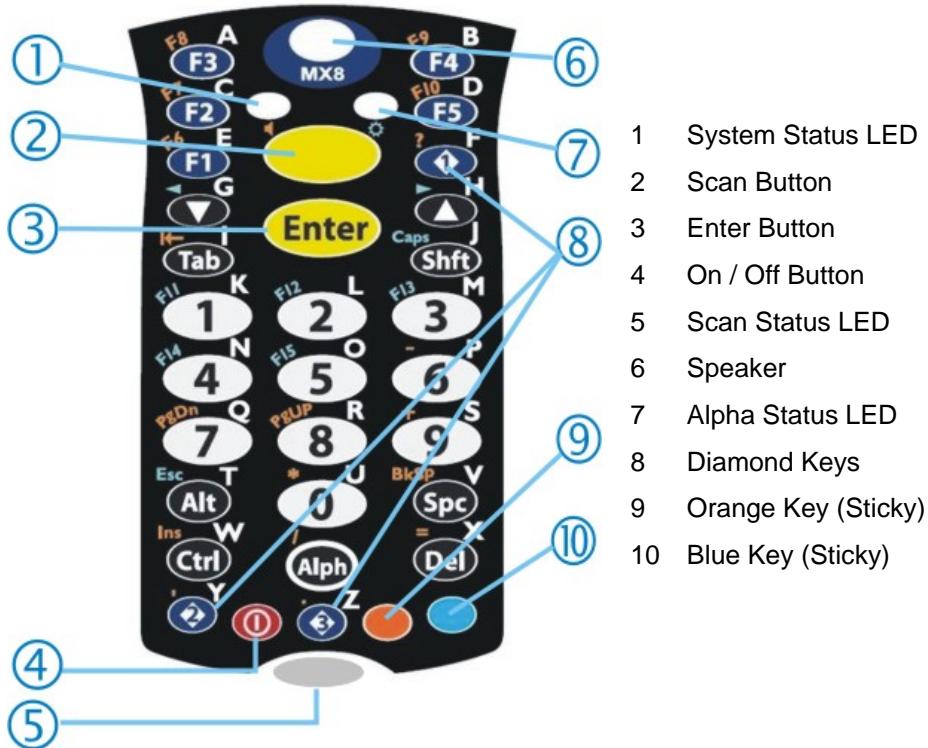


Figure 26 The Alpha-Mode Keypad

- When using a sequence of keys that require a lowercase alpha key, first press the Alph key. Use the Shft sticky key for upper case alphabetic characters.
- Pressing the Alph key forces “Alpha” mode for the numeric keys.
- To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.
- When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.
- Since letters are mapped to Alt, Ctl, Shft, these modifiers must be pressed before the Alph key is pressed. For example, for Alt T, press Alt, then Alpha, then Alt again.
- A modifier key pressed after itself toggles that modifier key off.
- Pressing Alph locks the keypad into Alpha mode. Pressing Alph a second time toggles alpha mode off.

The keymaps (keypress sequences) are located in *Appendix A – Key Maps*.

Entering Data

You can enter data into the MX8 through several different methods. The scanner aperture provides barcode data entry, the I/O port is used to input/output data, and the keypad provides manual (or keyed) data entry.

Mobile devices with a touchscreen use a stylus to input data, the I/O port and/or the keypad. An input panel (virtual keyboard) is available in applications that expect keyed input.

Using the Keypad

The keypad is used to manually input data that is not collected otherwise. Almost any function that a full sized computer keyboard can provide is duplicated on the MX8 keypad but it may take a few more keystrokes to accomplish a keyed task. Please refer to Appendix A – Key Maps for instruction on the specific keypresses to access all keypad functions.

Almost every key has two or three different functions. The primary alpha or numeric character is printed on the key.

The Orange or Blue keys are pressed when you want to use a “sticky” key function. For example, when you press a Blue or Orange key (the sticky key), then press the key that has the desired second-function key, the second-function key is the “active” key. The specific sticky character is printed above the corresponding key in either Orange or Blue.

Using the Input Panel or Virtual Keyboard

The virtual keyboard is always available when needed e.g. text field input. Tap the keyboard icon at the bottom of the screen to put the virtual keyboard on the display. Using the stylus:

- Tap the Shift key to type one capital letter.
- Tap the CAPS key to type all capital letters.
- Tap the au key to access symbols.



Figure 27 Input Panel / Virtual Keyboard

Some applications do not automatically display the Input Panel. In this case, do the following to use the Input Panel:

1. Tap the Input Panel/Virtual Keyboard icon in the taskbar.
2. Select Keyboard from the menu.
3. Tap the data entry area on the display when you want to enter data using the Input Panel.

Using the Stylus

Note: This section is directed to the MX8 daily user. The assumption is that the mobile device has been configured and the touch panel calibrated by the System Administrator prior to releasing the MX8 for daily use. The touch screen should be calibrated before initial use.

The stylus performs the same function as the mouse that is used to point to and click elements on a desktop computer. The stylus is used in the same manner as a mouse – single tap or double tap to select menu options, drag the stylus across text to select, hold the stylus down to activate slider bars, etcetera.

Hold the stylus as if it were a pen or pencil. Touch an element on the screen with the tip of the stylus then remove the stylus from the screen. Place the stylus into the stylus holder when the stylus is not in use.

The stylus can be used in conjunction with the keyboard and scanner and an input/output device connected to the serial port.

- Touch the stylus to the field of the data entry form to receive the next data feed.
- The cursor begins to flash in the field.
- The unit is ready to accept data from either the physical keypad, virtual keyboard, an input/output device connected to the serial port or the integrated scan aperture.

Note: Always use the point of the stylus for tapping or making strokes on the display. Never use an actual pen, pencil or sharp object to write on the touch screen.

Using the Integrated Barcode Scanner or Imager

Use the integrated laser scanner to scan linear barcodes.

Use the EV-15 integrated imager to scan 1D linear barcodes.

Use the 5300 integrated imager to scan 2D barcodes.

- Read all cautions, warnings and labels before using the laser scanner.
- Do not look into the laser's lens.
- Do not stare directly into the laser beam.

Barcode Scanner

To scan with the integrated laser barcode reader, point the scan aperture towards a barcode and press the Scan button. You will see a red beam strike the barcode. Align the beam so that the barcode is centered within the beam. The laser beam must cross the entire barcode. Move the MX8 towards or away from the barcode so that the barcode takes up approximately two-thirds the width of the beam.

There may be a tactile response combined with the Scan functions.



Figure 28 Laser Scanner Beam on Linear Barcode

2D Imager



Figure 29 Imager Bracketed Crosshair Target on 2D Barcode

To scan with the integrated imager, point the scan aperture towards a 2D barcode and press the Scan button. You will see a bracketed crosshair strike the barcode. Align the brackets so that the center of the barcode is covered by the crosshair.

Move the MX8 towards or away from the barcode until a response is received by the MX8 (beep, tactile response, etc) or the bracketed crosshair times out and disappears.

Scan Status LED



Figure 30 Scan Status LED

The Scan Status LED (oval shaped LED below keypad) turns red when the laser beam is on. Following a barcode scan and read the Scan Status LED turns green for two seconds and the MX8 beeps or vibrates, indicating a successful scan. If the scan was unsuccessful, the Scan Status LED turns off and a different beep sequence is heard.

The laser engine and Scan Status LED automatically turn off after a successful read, or after the timer expires after an unsuccessful read. The scanner / imager is ready to scan again after the Scan key (or trigger on the handle if installed) is released, or after the Scan Status LED turns off following a successful scan.

The Scan Status LED turns amber when scanner/imager programming changes, if any, are being saved. When the LED is off, the MX8 is ready to scan again.

Tethered Scanners

Tethered scanners cabled to the MX8 I/O port are not supported by LXE.

Bluetooth Scanners and Printers

Bluetooth scanners are paired to the MX8 wirelessly using the MX8 Bluetooth wireless client.

Only LXE Bluetooth scanners and LXE Bluetooth printers are supported by LXE. See *Accessories*.

Voice Data

Data is entered into the MX8 by speaking into the headset's microphone when prompted. Please contact your System Administrator if assistance is needed with the voice software.

Bluetooth Devices

Assumption: The System Administrator has Discovered and Paired targeted Bluetooth devices for each MX8. The System Administrator has also enabled / disabled Bluetooth settings and assigned a Computer Friendly Name for each MX8. See the *MX8 Reference Guide* for information and instruction on the MX8, Bluetooth control panel applet and supported LXE Bluetooth printers and scanners.

The Bluetooth taskbar Icon state and Bluetooth scanner LED states change as Bluetooth devices are discovered, pair, connect and disconnect. There may be audible or visual signals as paired devices re-connect with the MX8. Only LXE printers or scanners are recognized and displayed in the Bluetooth panel. All other Bluetooth devices are ignored (see *MX8 Reference Guide* for details).

Taskbar Icon	Legend
	Bluetooth module is connected to one or more of the targeted Bluetooth device(s).
	<p>MX8 is not connected to any Bluetooth device.</p> <p>MX8 is ready to connect with any Bluetooth device.</p> <p>MX8 is out of range of all paired Bluetooth device(s). Connection is inactive.</p>

Note: *When an active paired device, not the MX8, enters Suspend Mode, is turned Off or leaves the MX8 Bluetooth scan range, the Bluetooth connection between the linked device and the MX8 is lost. There may be audible or visual signals as paired devices disconnect from the MX8.*

Notes:

- The MX8 does not have a Bluetooth managed LED.
- The LED on the Bluetooth scanner illuminates during a scanning operation; the Scan LED on the MX8 does not illuminate.
- Barcode data captured by the Bluetooth scanner is manipulated by the settings in the MX8 Scanner Properties control panel applet.
- Multiple beeps may be heard during a barcode scan using the Bluetooth scanner; beeps from the Bluetooth scanner as the barcode data is accepted/rejected, and other beeps from the MX8 during final barcode data manipulation.

See *Accessories* for supported Bluetooth printers and scanners.

AppLock, if installed, does not stop the end-user from using Bluetooth, nor does it stop authorized Bluetooth devices from pairing with the MX8 while AppLock is in control.

Mobile Bluetooth Accessories

Using the Bluetooth Barcode reader, scan the (Lnk) pairing barcode located on the MX8 to pair the mobile barcode reader with the MX8. See *Bluetooth Devices* in the *Quick Start* section for details. Refer to the *MX8 Reference Guide, Chapter 1 – Introduction, Bluetooth* section for instruction when Discovering nearby Bluetooth scanners and printers.

Getting Help

All LXE user guides are now available on one CD and they can also be viewed/downloaded from the LXE ServicePass website. Contact your LXE representative to obtain the LXE Manuals CD.

You can also get help from LXE by calling the telephone numbers listed on the LXE Manuals CD, in the file titled “Contacting LXE”. This information is also available on the LXE website.

Explanations of terms and acronyms used in this guide are located in the file titled “LXE Technical Glossary” on the LXE Manuals CD and the LXE ServicePass website.

Manuals

- MX8 User’s Guide - English
- MX8 User’s Guide - German
- MX8 Cradle Reference Guide
- MX8 Multi-Charger User’s Guide
- RFTerm Reference Guide
- LXE Security Primer
- CE API Programmers Guide
- Integrated Scanner Programmers Guide

Accessories

Note: Items with a Green letter R in the second column are ROHS-compliant. Please contact your LXE representative when ordering ROHS-compliant items as the part number may have changed. Items without the letter R may have received ROHS-compliance after this guide was published.

MX8 Main Battery , Lithium Ion	R	MX8A380BATT
MX8 (and MX8 Desktop cradle) power supply , with US power cord	R	MX8A301CRDLPSACUS
MX8 (and MX8 Desktop cradle) power supply , without power cord	R	MX8A302CRDLPSACWW
MX8 Passive vehicle cradle . Does not support charging or communication. U-Bracket included.	R	MX8A003VMCRADLE
MX8 Desktop cradle, requires power supply	R	MX8A002DESKCRADLE
RAM mount kit for MX8 Vehicle Bracket. This kit does NOT include the Cradle. Attaches to U-Bracket.	R	MX8A001RAMBRKT
MX8 4 Unit Main Battery Multi-Charger (US power cord)	R	MX8A385CHGR4US
MX8 4 Unit Main Battery Multi-Charger (no power cord)	R	MX8A386CHGR4WW
MX8 Voice Pouch	R	MX8A405NHVCECASE
Carry case for MX8 with no handle, includes shoulder strap	R	MX8A410CASENOHDL
Carry case for MX8 with handle, includes shoulder strap	R	MX8A411CASEHDL
Holster for MX8 without handle or boot, belt not included	R	MX8A420HOLSTERNHDL
Holster for MX8 with handle, without boot, belt not included	R	MX8A421HOLSTERHDL
Holster for MX8 with handle and boot, belt not included	R	MX8A423HLSTRWHDLBOOT
MX8 Padded handle with rubber overmold and two finger trigger, includes wrist strap	R	MX8A401HANDLE

Replacement MX8 Hand Strap	R	MX8A405HANDSTRAP
Black rubber protective boot	R	MX8A402PROTBOOTBLK
Yellow rubber protective boot	R	MX8A403PROTBOOTYEL
Holster belt	R	9200L67
MX8 Replacement Stylus , fits MX8 carry cases, 10-pack	R	MX8A501STYLUSPACK
CD with CE 5.0 API's and LXE API's with documentation for custom application development	R	MX8A505CE50SDK
Touch screen anti-glare anti-reflective protective film , 10 pack	R	MX8A580PROTFILM
MX8 Charge/Comm Interface Cable , USB Client for ActiveSync with power connector	R	MX8A051MULTICBLUSB
MX8 Charge/Comm Interface Cable , RS-232 Serial ActiveSync, D9 Female with power connector	R	MX8A055MULTICBLDA9F
MX8 RS-232 Serial Adapter cable , 6in, for use with printers that provide their own source of power.	R	MX8A058ADPTCBLPER
MX8 Headset coiled adapter cable , includes quick disconnect headset connector. A headset is still required.	R	MX8A060ADPTCBLVOICE
128MB mini-SD Card	R	MX8A226SD128MB
512MB mini-SD Card	R	MX8A227SD512MB
1GB mini-SD Card	R	MX8A228SD1GB
VoxBrowser™ English & Americas		VOXBROWSER ENG
VoxBrowser™ Rest-of-the-World		VOXBROWSER ROW
Single ear, single headband, headset with noise canceling microphone, includes 5 replacement windscreens		HX1A501SNGBHEADSET
Single ear, dual headband, headset with noise canceling microphone, includes 5 replacement windscreens		HX1A502DUALBHEADSET
Dual ear, behind the head, headset with noise canceling microphone, includes 5 replacement windscreens		HX1A503BTHHEADSET
Replacement foam block for 502 dual band headsets, qty 1		HX1A504AHSBLOCKFOAM
Replacement head yoke for dual band 502 headset, qty 1		HX1A505DUALYOKE
Replacement head yoke for single band 501 headset, qty 1		HX1A506SINGLEYOKE
Replacement windscreen for all headset microphones, 10 Pack		HX1A508WINDSCREEN10
Replacement windscreen for all headset microphones, 50 Pack		HX1A509WINDSCREEN50
Replacement foam ear piece cover for 501 and 502 headsets, 10 pack		HX1A510FOAMEAR10
Replacement foam ear piece cover for 501 and 502 headsets, 50 pack		HX1A511FOAMEAR50

Mobile Bluetooth Barcode Readers and Accessories		
LXE Bluetooth Ring Scanner module with laser ring scanner, battery, two hand/wrist straps (large and small)	R	8651A100BTLASERKIT
LXE Bluetooth Ring Scanner module with 1D/2D imager ring scanner, battery, two hand/wrist straps (large and small)	R	8652A100BTIMAGERKIT
Li-Ion Spare Battery for LXE Bluetooth Ring Scanner Module	R	8650A376BTBOHBATTERY
LXE Bluetooth Ring Scanner 8-bay battery charger with US power cord	R	8650A377BTBOHCHGRUS
LXE Bluetooth Ring Scanner single-bay charger with US wall plug	R	8651A379SINGLECHGRUS
PowerScan 7000BT Scanner RS-232 with pointer	R	8700A301SCNRBTSRI
PowerScan 7000BT Base Station, RS232, without universal power supply.	R	8700A501BASERS232
PowerScan 7000BT Base Station Power Supply, Std US, 120V	R	8700A502PSACUS
PowerScan 7000BT, RS232 Cable for Base Station, DB9S, Coil, 8'	R	8700A001CBL8DA9F
PowerScan 7000BT Battery Charger with Power Supply, Four Station, US Std	R	8700A503CHGR4US
PowerScan 7000BT Battery Pack	R	8700A504BATT
Bluetooth Standard Range Fuzzy Logic laser	R	8810A326SCNRBTFZ
Bluetooth Auto Range LORAX laser	R	8820A327SCNRBTER
Spare battery	R	8800A376BATTERY
US AC Power Cord (use with 8800A301ACPS and 8800A379CHGRBASE)	R	8800A051POWERCORD
Single Slot Universal Battery Charger adapter cup for 8800 Battery	R	8800A377CHGRADPTRCUP
Single slot battery charger with International power supply	R	8800A378CHGR1SLOT
Universal Battery charger 4-Slot Base. Power Supply included, no AC power cord.	R	8800A379CHGRBASE
LS3408 Scanner Holster for Belt	R	8200A501HOLSTRBELT
Mounted Take Up Reel (Mounted applications)	R	8000A501INDREEL
Auto Sense Intellistand, Hands Free Scanning	R	8500A505STANDSMT
CBL ASSY, DA9F, 9ft (cradle to terminal)	R	8500A051CBL9DA9F
Desk Cradle, Radio/Charging, Multi-Interface (requires data cable and power supply)	R	8800A001CRADLERCMI
Desk Cradle, Charge Only, Multi-Interface (requires data cable and power supply)	R	8800A002CRADLECMI
Forklift Cradle, Radio/Charging, Multi-Interface (requires data cable and power supply)	R	8800A003CRADLEVRCMI
Forklift Cradle, Charge Only, Multi-Interface (requires data cable and power supply)	R	8800A004CRADLEVCM

US AC Power Cord (use with 8800A301ACPS and 8800A379CHGRBASE)	R	8800A051POWERCORD
Universal Desktop Power Supply 90-264VAC, 9VDC, 2A, EPS	R	8800A301ACPS
9-60VDC Forklift Power Supply (For Use with Forklift Cradles)	R	8800A302DCPS
Power Cable: Connects DC Power Supply to Forklift Cradle	R	8800A052DCPWRCABLE
Forklift Rugged Scanner Holder with RAM mount (all metal with cloth padding)	R	8800A005STAND

The MX8 Hand Held Computer

Reboot Sequences

When the Windows CE desktop is displayed or an application begins, the power up (or reboot) sequence is complete. If you have previously saved your settings, they will be restored on reboot. Application panel changes are saved when OK is tapped on an application properties panel.

Suspend / Resume

Quickly tapping the Power key places the MX8 in Suspend mode. Quickly tapping the Power key again, pressing any key, pressing the trigger (on the trigger handle), or tapping the touchscreen, returns the MX8 from Suspend. The System LED blinks green when the video display is Off.

Warm Boot

Temporary data not saved is lost. All previous user control panel settings and changes are saved. Warm boot is also called warm reset.

Hold down the **Power** key and then the **Enter** key until the screen blanks. Release the keys and the MX8 warm boots.

or

Tap **Start | Run** and, using the virtual keyboard or SIP, type **WARMBOOT**. Tap the OK button and the MX8 warm boots. This command is not case-sensitive.

Cold Boot

Temporary data not saved is lost. All programs are re-launched. Previously saved user settings are restored. Cold boot is also called cold reset.

Hold down the **Blue** key, the **Scan** key and the **Power** key until the screen blanks. Release the keys and the MX8 cold boots.

or

Tap **Start | Run** and, using the virtual keyboard or SIP, type **COLDBOOT**. Tap the OK button and the MX8 cold boots. This command is not case-sensitive.

There may be small delays while the wireless client connects to the network, authorization for Voxware-enabled applications complete, Wavelink Avalanche management of the MX8 startup completes, and Bluetooth relationships establish or re-establish.

Reset to Default Settings

Important:-- Because of the extreme nature of resetting the MX8 to factory default settings, LXE recommends that this process be used only as an emergency procedure and the Warm Boot be used whenever necessary.

Two different resets are provided on the MX8. User registry settings can be reset to factory defaults using ClearHive.exe or all settings, which includes registry and the persist keys in Launch.reg, can be reset using Coldboot.exe.

Reset Registry

To reset the MX8 **registry** to factory defaults:

1. Tap **Start | Run** and, using the virtual keyboard or SIP, type **CLEARHIVE**. Tap the **OK** button. This command is not case-sensitive.
2. A dialog appears, explaining the restore to default settings process. Select either **Yes** or **Cancel**.
3. Selecting **Yes** causes the reset process to continue and factory default settings are restored when the device powers on again. Selecting **Cancel** stops the reset process. All previous user settings, authorizations and configurations, wireless connection settings, Bluetooth relationship settings and Control Panel parameter settings are cleared.
4. Programs begin installing and messages are shown on the display as each is installed. When the **CE Desktop** appears or the final application opens, the reset is complete.

Calibrating the touchscreen will need to be performed during this process.

If needed, change the MX8 Time and Date from it's factory default value by tapping the  | **Settings | Control Panel | Date/Time** icon.

Reset All

To reset **all** MX8 configuration to factory defaults:

Tap **Start | Run** and, using the virtual keyboard or SIP, type **RESETALL**. Tap the **OK** button. Because of the extreme nature of resetting the MX8 to factory default settings, two confirmation prompts are displayed. To proceed with the reset, select '**Yes**' to both prompts. The MX8 cold boots after resetting the configuration. This command is not case-sensitive.

There may be small delays while the wireless client connects to the network, authorization for Voxware-enabled applications complete, Wavelink Avalanche management of the MX8 startup completes, and Bluetooth relationships establish or re-establish.

Note: *ResetAll.exe vs ClearHive.exe – The ClearHive.exe utility clears the registry and coldboots the MX8. The ResetAll.exe utility clears the registry, resets the persist keys in the Launch.reg file to factory defaults and coldboots the MX8.*

Saving Changes to the Registry

The MX8 saves the registry every time a Suspend function is initiated.

The registry is automatically saved every 10 seconds. It is also saved every tenth time the registry settings are changed. Registry settings are changed when control panel property (e.g. Date/Time) parameters are changed by the user and the **OK** button is tapped. The changes are not permanently saved until one or both of the two conditions above are met (10 seconds elapsed or 10 registry changes).

Touchscreen Display



Figure 31 Touchscreen Display

The touchscreen display is an active color LCD unit capable of supporting VGA graphics modes. Display size is 240 x 320 pixels or 1/4 VGA in portrait orientation. The covering is designed to resist stains. The touchscreen allows signature capture (using Transcriber) and touch input. A pen stylus is included with the handstrap and the trigger handle. The touchscreen responds to an actuation force (touch) of 4 oz. of pressure (or greater).

The color display is optimized for indoor lighting. The display is black when the mobile device is in Suspend mode or when both batteries have expired and the unit is Off.

See section titled *Calibrating the Touchscreen* in the *Quick Start* section for touchscreen calibration instruction. See the *MX8 Reference Guide* for full instruction.

Cleaning the Glass Display/Beam Aperture

Note: These instructions are for components made of glass. If there is a removable protective film sheet on the display screen, remove the film sheet before cleaning the screen.

Keep fingers and rough or sharp objects away from the scan aperture and display. If the glass becomes soiled or smudged, clean only with a standard household cleaner such as Windex® without vinegar or use Isopropyl Alcohol. Do not use paper towels or harsh-chemical-based cleaning fluids since they may result in damage to the glass surface. Use a clean, damp, lint-free cloth. Do not scrub optical surfaces. If possible, clean only those areas which are soiled. Lint/particulates can be removed with clean, filtered canned air.

Applying the Protective Film to the Display

First, clean the display of fingerprints, lint particles, dust and smudges.

Remove the protective film from its container. Remove any protective backing from the film sheet by lifting the backing from a corner of the film. Discard the backing.

Apply the film to the screen starting at one side and smoothing it across the display. If air bubbles appear, raise the film slightly and continue smoothing the film across the display until it covers the glass surface of the display.

If dust, lint or smudges are trapped between the protective film and the glass display, remove the protective film, clean the display and apply the protective film again.

Adjusting the Display Backlight

Set the Display Backlight Timer

Select  | Settings | Control Panel | Display | Backlight tab. Change the parameter values and tap OK to save the changes.

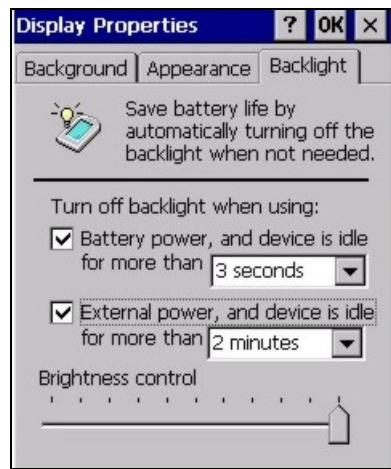


Figure 32 Setting the Display Backlight Timer

The first option affects the mobile device when it is running on battery power only. The second option affects the device when it is running on external power (e.g. AC adapter).

The default value for the battery power timer is 3 seconds. The default value for the external power timer is 2 minutes. The backlight will remain on all the time when both checkboxes are blank.

The display backlight timer dims the backlight at the end of the specified time.

Setting the Power Schemes Timers

Note: Refer to the section titled Power Modes in the “MX8 Reference Guide” for information relating to the power states of the mobile device.

Select  | Settings | Control Panel | Power | Schemes tab. Change the parameter values and tap OK to save the changes.

Battery Power Scheme

Use this option when the device will be running on battery power only.

Switch state to User Idle:	Default is After 3 seconds
Switch state to System Idle:	Default is After 15 seconds
Switch state to Suspend:	Default is After 5 minutes

AC Power Scheme

Use this option when the device will be running on external power (e.g. AC adapter).

Switch state to User Idle:	Default is After 2 minute
Switch state to System Idle:	Default is After 2 minutes
Switch state to Suspend:	Default is After 5 minutes

These mode timers are cumulative. The System Idle timer begins the countdown after the User Idle timer has expired and the Suspend timer begins the countdown after the System Idle timer has expired. When the User Idle timer is set to ‘Never’, the power scheme timers never place the device in User Idle, System Idle or Suspend modes (even when the device is idle).

Because of the cumulative effect, and using the Battery Power Scheme Defaults listed above:

- The backlight turns off after 3 seconds of no activity,
- The display turns off after 18 seconds of no activity (15sec + 3sec),
- And the device enters Suspend after 5 minutes and 18 seconds of no activity.

Setting The Audio Speaker Volume

Note: An application may override the control of the speaker volume. Turning off sounds saves power and prolongs battery life.

The speaker is located on the front of the device above the MX8 logo. The audio volume can be adjusted to a comfortable level for the listener. The volume is increased or decreased one step each time the volume key sequence is pressed. The device has an internal speaker and a jack for an external headset. Operational ‘beeps’ are emitted from the speaker.

Using the Keypad

Note: Volume & Sounds (in Settings / Control Panel) must be enabled before the following key sequences will adjust the volume.

To adjust speaker volume:

- Tap the Orange key then the Scan key to enter Volume change mode.
- Use the Up Arrow and Down Arrow keys to adjust volume until the speaker volume is satisfactory.
- Press the Enter key to exit this mode.

Using the Touchscreen

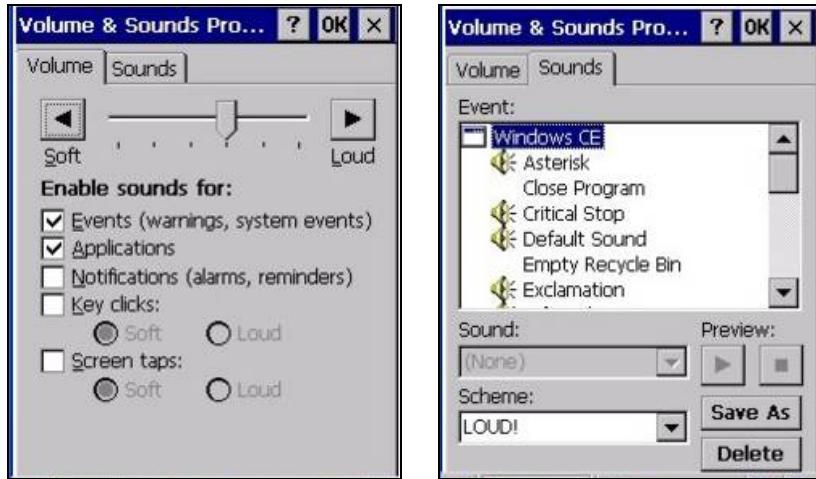


Figure 33 Volume & Sounds Properties

Tap  | Settings | Control Panel | Volume & Sounds | Volume tab. Change the volume setting and tap OK to save the change. You can also select / deselect sounds for key clicks and screen taps and whether each is loud or soft.

As the volume scrollbar is moved between Loud and Soft, the computer will emit a tone each time the volume increases or decreases in decibel range.

The Keypads

The keypad is installed and configured by LXE to your specifications.

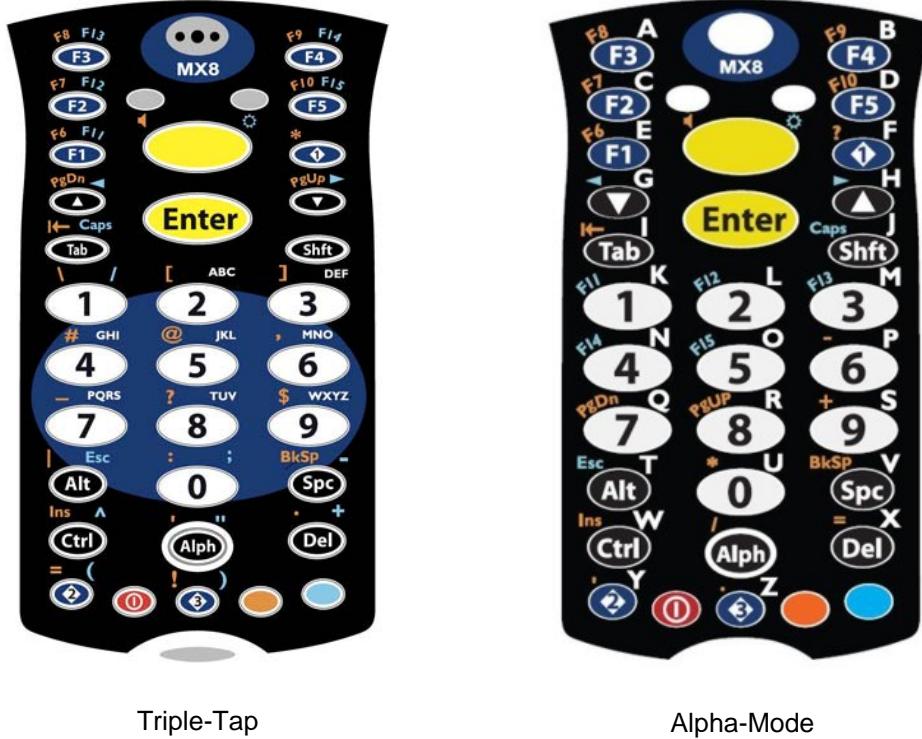


Figure 34 The 32-key Keypad

See *Appendix A – Key Maps* for instruction on the specific keypresses to access all keypad functions.

LED Indicators

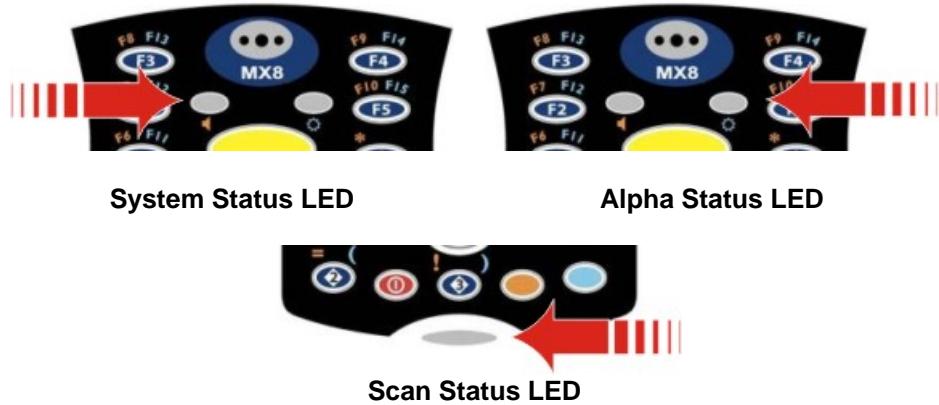


Figure 35 LED Indicators

System Status LED

The System Status LED is located at the top left of the keypad, above the Scan button.

When the LED is ...	The Status is ...	Comment
Blinking Red	Power Fail	Replace the main battery with a fully charged main battery. Or Connect the MX8 to external AC power.
Steady Red	Main Battery Low	Low Battery Warning. Replace the main battery with a fully charged main battery. Or Connect the MX8 to external AC power.
Blinking Green	Display Off	No user intervention required.
No Color	Good	No user intervention required.

Scan Status LED

The Scan Status LED is located below the MX8 keypad.

When the Scan Status LED is ...	The Status is ...
Steady Green	Good Scan
Steady Red	Scan in Progress
Amber	Scanner/imager programming changes are being saved.
No Color	Scanner/Imager ready for use.

Alpha Mode LED

The Alpha Mode LED is located next to the <F5> key.

When the Alpha LED is ...	The Status is ...
Steady Green	Device is in “Alpha” character input mode.
No Color	Device is in “Numeric” key input mode.

Standard Keys

See *Appendix A – Key Maps*

Scan	The integrated scanner/imager scans only when the Scan button is pressed (or when the scan trigger is pressed on the optional trigger handle).
Enter	The Enter key is used to confirm a forms entry or to transmit information. How it is used is determined by the application running on the mobile device.
Diamond	The Diamond key(s) can be programmed to duplicate a single keypress (as defined by Windows CE) with the exception of the Shift, Alt and Ctrl key.
Numeric	The number keys are used to add numbers to data entry fields.
Alpha	The alpha keys are used to add letters and characters to data entry fields.
Space	The Spc key adds a space to the line of data on the display. This function is similar to a regular keyboard's Spacebar. Note that the Spc key only stays active for one keystroke.

Function Keys

Sticky Keys

The Sticky Key feature allows the user to activate multi-keypress combinations with one finger.

Ctrl (Control key)

 A Control sticky keypress stays active until the Control key is pressed again. The Control key enables the control functions of the keypad. This function is similar to a regular keyboard's Control key. Each time you need to use a Control function, you need to press the Ctrl key before pressing the desired key.

Alt (Alternate key)

 An Alt sticky keypress stays active until the Alt key is pressed again. The Alt key enables the alternate functions of the keypad. This function is similar to a regular keyboard's Alt key. Each time you need to use an alternate function, you need to press the Alt key before pressing the desired key.

Shift (Shift key)

 A Shift keypress ends a sticky key function. The Shft key enables the shifted functions of the keypad. This function is similar to a regular keyboard's Shift key. Note that the Shift key only stays active for one keystroke. Each time you need to use a Shifted function, you need to press the Shft key before pressing the desired key.

When the Shft key is pressed the next key is determined by the major key legends, i.e., the alpha keys display lower case letters -- when CAPS is On alpha characters are capitalized. For example, when CAPS is On and the Shft key and the G key are pressed, a lower case g is displayed.

Orange and Blue Keys



The Orange and Blue keys are sticky keys that, when tapped, activate the second functions of the keypad. Printed above many keys are small characters, in either orange or blue, that represent the second function of that key. Using the sticky key (identified by color of printed second key function) activates the second key function.

Note that the blue and orange sticky keys only stay active for one keystroke. Each time you need to activate a second function you must press the Orange or Blue key. To cancel a sticky key function before pressing another key, press the same sticky key again.

Orange Key

Tap the Orange key to enter “orange” mode. Tap it again to cancel “orange” mode. If you were in “blue” mode before you pressed the Orange key, blue mode is cancelled and you enter Orange mode.

Blue Key

Tap the Blue key to enter “blue” mode. Tap it again to cancel “blue” mode. If you were in “orange” mode before you pressed the Blue key, orange mode is cancelled and you enter Blue mode.

CapsLock Mode Function

The CapsLock key sequence is Blue key then the <Tab> key.

This function is similar to a regular keyboard’s CapsLock key. Note that the CapsLock mode stays active until the CapsLock key sequence is pressed again. Each time you need to use a Caps function, you need to press the Caps key sequence first. To cancel a CapsLock function press the Caps key sequence again.

To enter a string of letters in a text field, tap the <Alph> key to toggle it On. It remains active until it is tapped again and toggled off.

To enter a string of numbers in a text field, make sure the <Alph> key is toggled off.

Batteries

Note: New batteries must be charged prior to use. If the main battery and backup battery are depleted, the mobile device reverts to factory default values. Wireless configuration parameters will need to be re-entered after reverting to factory default values. The backup battery is continually recharged by the main battery pack.

The mobile device is designed to work with a replaceable 3000 mAh Lithium-Ion (Li-Ion) battery pack from LXE. Under normal conditions it should last approximately eight to ten hours before requiring a recharge. During very heavy scanning or RF transmitter use, the operating time of the battery may be less. The operating system keeps date and time valid for a minimum of four days using a fully charged backup battery and a main battery pack installed that has reached the Low Warning point. The status indicator is illuminated when the backup battery is being charged by the main battery pack.

Main Battery

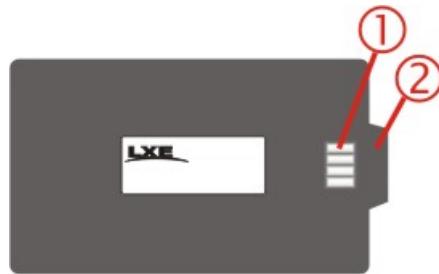


Figure 36 Lithium Ion Battery Pack

1. Contacts, Battery Charging
2. Tab

CAUTION 	RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
ATTENTION 	Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

The main battery has a rugged plastic enclosure that is designed to withstand the ordinary rigors of an industrial environment. Exercise care when transporting the main battery making sure it does not come in contact with excessive heat or any power source other than an MX8 Multi-Charger or the mobile device.

A new main battery pack can be fully charged in 5 hours when it is in an MX8 connected to AC power and 5 hours when it is in the MX8 Multi-Charger.

Backup Battery

The internal 160mAh Nickel Metal Hydride (NiMH) backup battery provides power to the device for a short amount of time when the main battery has been depleted, removed or has failed. The backup battery status and conditioning is available using  | Settings | Control Panel | Battery. The backup battery is charged by the main battery pack only.

Recharging maintains the battery near full charge at all times. If the backup battery is completely discharged, it may take up to 5 hours to recharge. The capability to discharge the backup battery is provided to allow the user to condition the battery in order to recover fully backup battery capacity.

Backup battery replacement must be performed by qualified service personnel. The backup battery has a minimum 2 years service life.

Note: An uninterrupted external power source (wall AC adapters) transfers power to the computer's internal charging circuitry which, in turn, recharges the main battery and backup battery. Frequent connection to an external power source, if feasible, is recommended to maintain backup battery charge status as the backup battery cannot be recharged by a dead or missing main battery.

Battery Hotswapping

Important: When the backup battery power is Low or Very Low ( | Settings | Control Panel | Power | Battery tab) connect the AC adapter to the MX8 before replacing the main battery pack.

Replace the main battery pack after first pressing the Power key and placing the MX8 in Suspend Mode. LXE recommends any work in progress be saved prior to replacing the main battery pack.

Simply replace the discharged main battery with a fully-charged main battery. A fully charged backup battery will retain data during a main battery hotswap for 5 minutes.

Warning: Never replace the main battery in a hazardous location.

MX8 Battery Multi-Charger

The MX8 Multi-Charger is not approved for use in a Hazardous Location.

Charge a Main Battery Pack

The main battery pack can be charged while it is in the MX8 (connected to an AC power supply) or while it is in the LXE MX8 Multi-Charger.

Please refer to the *MX8 Multi-Charger User's Guide* for instruction.



Figure 37 Multi-Charger Power Adapter

The external Power Supply for the Multi-Charger is shipped with the Multi-Charger. The multi-charger AC adapter and cable is not compatible with other MX8 devices.



Figure 38 MX8 Multi-Charger

1	Power Jack Location	3	LED Indicators
2	Battery Charging Well	4	Front



Figure 39 Insert Battery Pack in Charging Pocket

1. Battery Well
2. Retaining Clip
3. Battery Charging Contacts

Push the locking tab towards the back of the battery well until it stays in place. Place the battery in the battery well, making sure the tab at the top of the battery pack fits into the slot at the top end of the battery well. With a hinging motion, slip the battery down into the battery well until the locking tab clicks into place and the battery pack is secure in the battery well.

Do not "slam" the battery into the charging cup or drop it into the cup.

Failure to follow these instructions can result in damage to the main battery or the charger.



Please refer to the *MX8 Multi-Charger User's Guide* for technical information and operating instructions.

MX8 Cradles (Optional)



The **MX8 Desktop Cradle** restrains the MX8, re-charges MX8 main batteries, and enables serial or USB communication with a PC, scanner, printer or other peripheral device. MX8 keypad data entries can be mixed with cradle-tethered scanner barcode data entries while the MX8 is in a powered cradle. Bluetooth device connection and use, while the MX8 is docked, are managed by the MX8 Control Panel Bluetooth program, not the cradle.

The cradles are designed to secure an MX8 with or without a protective boot, a handstrap and/or a trigger handle.

Using wall AC adapters or DC/DC converters, the desktop cradle can also recharge a spare MX8 battery in approximately 4 hours while the mobile device is docked. The MX8 battery recharging is managed by the power management configuration in the docked MX8. The MX8 can be either On or in Suspend Mode while in the cradles. Special purpose and power cables are available from LXE.

Wireless host/client communications can occur whether the cradle is receiving external power or not as wireless functions draw power from the main battery in the MX8.



Note: The MX8 AC Power Adapters (MX8A301CRDLPSAC and MX8A302CRDLPSACWW) are only intended for use with the MX8 multi-purpose cables and the MX8 Desktop Cradle.



The **MX8 Passive Vehicle Cradle** does not have connectors that can accept an external power source or tethered scanner. It is designed to secure the MX8 in a vehicle.



Please refer to the *MX8 Cradle Reference Guide* for installation, technical specifications and user instruction.

Appendix A Key Maps

Introduction

Remember :

“Sticky” keys are also known as “second” function keys.

Ctl/Ctrl, Alt, Shft, Blue and Orange keys are “sticky keys”. Sticky keys do not need to be held down before pressing the next (or desired) key. It is valid to use combined modifiers on specific keys.

Note: The key mapping in this appendix relates to the physical keypad. See section titled Input Panel for the Virtual (or Soft) Keypad used with the stylus.

32-Key Triple-Tap Keypad

When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shft sticky key or the Caps key sequence (Blue+Tab) for upper case alphabetic characters.

Pressing the Alph key forces “Alpha” mode for the 2,3,4,5,6,7,8, and 9 keys. The 1 and 0 keys continue to place a 1 and 0 into the text field.

To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.

When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

Refer to *Reboot Sequences* earlier in this guide for warmboot and coldboot key sequences.

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
Power / Suspend							Power ¹
Field Exit (default VK_PAUSE)	MAP				MAP		Diamond#1 MAP=Mappable
= or (X			MAP		Diamond#2 Default is MAP MAP=Mappable
! or)		X	X		MAP		Diamond#3 Default is MAP MAP=Mappable
Volume Adjust Mode		X					Scan Key ²

¹ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

² Orange+Scan enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
Display Backlight Brightness Adjust Mode	x						Scan Key ³
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shft
Toggle Alpha Mode							Alph
Alt Mode							Alt
Control Mode							Ctrl
Scan Mode							Scan Key
Esc	x						Alt
Space							Spc
Enter							Enter
CapsLock (Toggle)	x						Tab
Back Space		x					Spc
Tab							Tab
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert		x					Ctrl
Delete							Del
Home				x			Down Arrow
End				x			Up Arrow
Page Up		x					Up Arrow
Page Down		x					Down Arrow
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5
F11	x						F1
F12	x						F2

³ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
F13	x						F3
F14	x						F4
F15	x						F5
F16				x			F1
F17				x			F2
F18				x			F3
F19				x			F4
F20				x			F5
F21		x		x			F1
F22		x		x			F2
F23		x		x			F3
F24		x		x			F4
a					x	2	
b					x	22	
c					x	222	
d					x	3	
e					x	33	
f					x	333	
g					x	4	
h					x	44	
i					x	444	
j					x	5	
k					x	55	
l					x	555	
m					x	6	
n					x	66	
o					x	666	
p					x	7	
q					x	77	
r					x	777	
s					x	7777	
t					x	8	
u					x	88	
v					x	888	
w					x	9	
x					x	99	
y					x	999	
z					x	9999	
A				x	x	2	
B				x	x	22	

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
C					x	x	222
D					x	x	3
E					x	x	33
F					x	x	333
G					x	x	4
H					x	x	44
I					x	x	444
J					x	x	5
K					x	x	55
L					x	x	555
M					x	x	6
N					x	x	66
O					x	x	666
P					x	x	7
Q					x	x	77
R					x	x	777
S					x	x	7777
T					x	x	8
U					x	x	88
V					x	x	888
W					x	x	9
X					x	x	99
Y					x	x	999
Z					x	x	9999
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0 (zero)							0
. (period)		x					DEL
<	x						7
[x					2 or 2

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
]		x					3 or 3
>	x						8
=		x					Diamond 2
{	x						4
}	x						5
/	x						1
-	x						Spc
+	x						Del
* (asterisk)		x			x		8 or Diamond 1
: (colon)		x					0 (zero)
; (semicolon)	x						0 (zero)
. (period)		x					Del
?		x					8
` (accent)	x						6
_ (underscore)		x					7
, (comma)		x					6
' (single quote)		x					Alph
“ (double quote)	x						Alph
~ (tilde)	x						9
\		x					1
		x					Alt
“	x						Alph
!		x					Diamond 3 or 1
@		x			x		2 or 5
#		x			x		3 or 4
\$		x			x		9 or 4
%					x		5

To Get This MX8 Key / Function	Press These Triple-Tap Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
^	x				x		6 or Ctrl
&					x		7
(x				x		Diamond 2 or 9
)	x				x		Diamond 3 or 0 (zero)

32-Key Alpha-Mode Keypad

When using a sequence of keys that require an alpha key, first press the Alph key. Use the Shft sticky key for upper case alphabetic characters.

Pressing the Alph key locks the keypad into alpha mode. Pressing Alph a second time toggles alpha mode off.

To create a combination of numbers and letters before pressing Enter, remember to tap the Alph key to toggle between Alpha and Numeric mode.

Since letters are mapped to Alt, Ctl, Shft, these modifiers must be pressed before Alph. For example, for Alt T, press Alt, then Alph, then Alt again.

When using a sequence of keys that do not include the Alph key but does include a sticky key, press the sticky key first then the rest of the key sequence.

Refer to *Reboot Sequences* earlier in this guide for warmboot and coldboot key sequences.

To Get This MX8 Key / Function	Press These Alpha-Mode Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
Power / Suspend							Power ⁴
Field Exit (default VK_PAUSE)	MAP				MAP		Diamond 1 MAP=Mappable
= or (X			MAP		Diamond 2 Default is MAP MAP=Mappable
! or)	X	X			MAP		Diamond 3 Default is MAP MAP=Mappable
Volume Adjust Mode		X					Scan Key ⁵
Display Backlight Brightness Adjust Mode	X						Scan Key ⁶
Toggle Blue Mode							Blue
Toggle Orange Mode							Orange
Toggle Shift Mode							Shft
Toggle Alpha Mode							Alph
Alt Mode							Alt
Control Mode							Ctrl
Scan Mode							Scan Key
Esc	X						Alt
Space							Spc

⁴ Tapping the Power key when in any sticky mode (Blue, Orange, Shift, etc) either turns the device On (when Off) or places it in Suspend (when active).

⁵ Orange+Scan enters Volume Adjust Mode. Use Up Arrow and Down Arrow to adjust volume. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

⁶ Blue+Scan enters Backlight Brightness Adjust Mode. Use the Up Arrow and Down Arrow to adjust brightness. Press any other key but Up Arrow or Down Arrow to exit Adjust Mode.

To Get This MX8 Key / Function	Press These Alpha-Mode Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
Enter							Enter
CapsLock (Toggle)	x						Shft
Uppercase Alpha							Shft
Back Space		x					Spc
Tab							Tab
BackTab		x					Tab
Up Arrow							Up Arrow
Down Arrow							Down Arrow
Right Arrow	x						Up Arrow
Left Arrow	x						Down Arrow
Insert		x					Ctrl
Delete							Del
Home				x			Down Arrow
End				x			Up Arrow
Page Up		x					Up Arrow or 8
Page Down		x					Down Arrow or 7
F1							F1
F2							F2
F3							F3
F4							F4
F5							F5
F6		x					F1
F7		x					F2
F8		x					F3
F9		x					F4
F10		x					F5
F11	x						F1 or 1
F12	x						F2 or 2
F13	x						F3 or 3
F14	x						F4 or 4

To Get This MX8 Key / Function	Press These Alpha-Mode Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
F15	x						F5 or 5
	x						
F16					x		F1
F17					x		F2
F18					x		F3
F19					x		F4
F20					x		F5
F21		x			x		F1
F22		x			x		F2
F23		x			x		F3
F24		x			x		F4
a						x	F3
b						x	F4
c						x	F2
d						x	F5
e						x	F1
f						x	Diamond 1
g						x	Down Arrow
h						x	Up Arrow
i						x	Tab
j						x	Shft
k						x	1
l						x	2
m						x	3
n						x	4
o						x	5
p						x	6
q						x	7
r						x	8
s						x	9
t						x	Alt
u						x	0
v						x	Spc
w						x	Ctl
x						x	Del
y						x	Diamond 2
z						x	Diamond 3
A					x	x	F3
B					x	x	F4
C					x	x	F2

To Get This MX8 Key / Function	Press These Alpha-Mode Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
D					x	x	F5
E					x	x	F1
F					x	x	Diamond 1
G					x	x	Down Arrow
H					x	x	Up Arrow
I					x	x	Tab
J					x	x	Shft
K					x	x	1
L					x	x	2
M					x	x	3
N					x	x	4
O					x	x	5
P					x	x	6
Q					x	x	7
R					x	x	8
S					x	x	9
T					x	x	Alt
U					x	x	0
V					x	x	Spc
W					x	x	Ctl
X					x	x	Del
Y					x	x	Diamond 2
Z					x	x	Diamond 3
1							1
2							2
3							3
4							4
5							5
6							6
7							7
8							8
9							9
0							0
. (period)		x					Diamond 3
<	x						7
[x					2
]		x					3
>	x						8
=		x					Del
{		x					4

To Get This MX8 Key / Function	Press These Alpha-Mode Keys and Then ...						Press This Key
	Blue	Orange	Ctl	Alt	Shft	Alpha	
}		x					5
/		x					Alph
-		x					Spc
+		x					9
* (asterisk)		x			x		8 or 0 (zero)
: (colon)	x						Diamond 3
; (semicolon)	x						0 (zero)
?		x					Diamond 1
` (accent)	x						6
_ (underscore)	x						Diamond 2
, (comma)		x					Diamond 2
“ (double quote)	x						Alph
‘ (single quote)		x					1
~ (tilde)	x						9
\	x						Diamond 1
		x					Alt
“	x						Alph
!					x		1
@					x		2
#					x		3
\$					x		4
%					x		5
^					x		6
&					x		7
(x		9
)					x		0 (zero)

Appendix B Regulatory Notices and Safety Information

Class A Digital Device

FCC Information:

This device complies with FCC Rules, part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning: Changes or modifications to this device not expressly approved by LXE, Inc., could void the user's authority to operate this equipment.

Korea (KR)

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니
판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약
잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기
바랍니다.

Class A Equipment (Business purpose info/telecommunications equipment)

As this equipment has undergone EMC registration for business purpose, the seller and/or the buyer is asked to beware of this point and in case a wrong sale or purchase has been made, it is asked that a change to household use be made.

Japan (JP)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準
に基づくクラスA情報技術装置です。この装置は、家庭環境で使用すること
を目的としていますが、この装置がラジオやテレビジョン受信機に近接して
使用されると受信障害を引き起こすことがあります。
取り扱い説明書に従って正しい取り扱いをして下さい。

This equipment is the Class A information technology system which is based on the standard of Voluntary Control Council for Interference by Information Technology Equipment (VCCI).

Taiwan Class A Statement

警告使用者

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這
種情況下，使用者會被要求採取某些適當的對策。

Taiwan NCC

根據交通部 低功率管理辦法 規定：

第十四條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十七條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Industry Canada:

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe A prescrites dans le Règlement sur le brouillage radioélectrique édits par le ministère des Communications du Canada.

EMC Directive Requirements:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Notice:

The long term characteristics or the possible physiological effects of radio frequency electromagnetic fields have not been investigated by UL.

RF Notices

This device contains transmitter Module FCC ID: KDZLXE4830P

RF Safety Notice (Summit Client - 4830)

Caution

This portable device with its antenna complies with FCC's and Industry Canada's RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the MX8 is 0.125W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device contains transmitter Module FCC ID: KDZLXE4831P

RF Safety Notice (Summit Client - 4831)

Caution

This portable device with its antenna complies with FCC's and Industry Canada's RF exposure limits set for an uncontrolled environment. This equipment has shown compliance with FCC and Industry Canada Specific Absorption Rate (SAR) limits. Highest reported SAR for the MX8 is 0.358W/kg on body. Any accessories not provided by LXE should not be used with this device. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Directive Requirements (Applies only to equipment operated within the EU/EFTA)

**Information to User**

A label on the exterior of the device should resemble one of the labels shown below (the label contains the LXE part number of the installed radio card). The labels shown below and affixed to the device, identify where the device may be used and where its use is restricted. Use of a device is prohibited in countries not listed below or otherwise identified by the label. (May or may not include the 0560 Notified Body No. Substitute 4 digit Notified Body No. may also be applied.)

**French**

For 2.4 GHz Wireless LAN operation of this product certain restrictions apply: This product may be used indoor for the entire 2400-2483.5 MHz frequency band (channels 1-13). For outdoor use, only 2400-2454 MHz frequency band (channels 1-9) may be used. For the latest requirements, see <http://www.art-telecom.fr>.

L'utilisation de cet équipement (2.4GHz Wireless LAN) est soumise à certaines restrictions: Cet équipement peut être utilisé à l'intérieur d'un bâtiment en utilisant toutes les fréquences de 2400 à 2483.5MHz (Chaîne 1-13). Pour une utilisation en environnement extérieur, vous devez utiliser les fréquences comprises entre 2400-2454 MHz (Chaîne 1-9). Pour les dernières restrictions, voir <http://www.art-telecom.fr>

Italy

License required for use. Verify with your dealer or directly with the General Direction for Frequency Planning and Management (Direzione Generale Pianificazione e Gestione Frequenze).

E' necessaria una concessione ministeriale anche per l'uso del prodotto. Verifici per favore con il proprio distributore o direttamente presso la Direzione Generale Pianificazione e Gestione Frequenze.

Japan RF

この機器の使用周波数帯では、電子レンジ等の産業・科学・医療用機器のほか工場の製造ライン等で使用されている移動体識別用の構内無線局（免許を要する無線局）および特定小電力無線局（免許を要しない無線局）並びにアマチュア無線局（免許を要する無線局）が運用されています。

- 1 この機器を使用する前に、近くで移動体識別用の構内無線局及び特定小電力無線局並べにアマチュア無線局が運用されていないことを確認して下さい。
- 2 万一、この機器から移動体識別用の構内無線局に対して有害な電波干渉の事例が発生した場合には、速やかに使用周波数を変更するか又は電波の発射を停止した上、下記連絡先にご連絡頂き、混信回避のための処置等（例えば、パーティションの設置など）についてご相談して下さい。
- 3 その他、この機器から移動体識別用の特定小電力無線局あるいはアマチュア無線局に対して有害な電波干渉の事例が発生した場合など何かお困りのことが起きたときは、次の連絡先へお問い合わせ下さい。

連絡先：

MX8 Approvals/Standards

Product	EMI / EMC Standards	Safety Standards
MX8	FCC Part 15 Subpart B, Class A EN 55022 Class A (CISPR 22) EN 55024:1998 AS/NZS 3548, Class A (CISPR 22)	UL 60950 / CSA C22.2 No. 60950 IEC/EN 60950-1 CDRH: 21 CFR 1040.10 IEC/EN 60825-1
Transceiver	RF Standards	RF Safety Standards
MX8 with 802.11 b/g [Summit Client - 4830]	FCC Part 15 EN 300 328 IC-RSS 210	FCC O.E.T. Bulletin 65 Industry Canada RSS 102
MX8 with 802.11 a/b/g [Summit Client - 4831]	FCC Part 15 EN 300 328 IC-RSS 210	FCC O.E.T. Bulletin 65 Industry Canada RSS 102

Complies with
IDA Standards
DA103458

Republic of Singapore - LXE Dealer
License Number DA103458 complies
with IDA Standards.

Lithium Ion Battery

When disposing of the MX8 main battery, the following precautions should be observed: The battery should be disposed of promptly. The battery should not be disassembled or crushed. The battery should not be heated above 212°F (100°C) or incinerated.



Important: This symbol is placed on the product to remind users to dispose of Waste Electrical and Electronic Equipment (WEEE) appropriately, per Directive 2002-96-EC. In most areas, this product can be recycled, reclaimed and re-used when properly discarded. Do not discard labeled units with trash. For information about proper disposal, contact LXE through your local sales representative, or visit www.lxe.com.



A/C Power Supply Safety Statement – MX8

Output Rated 5 VDC, 3 A.



Optional A/C Power Supply:

Outside North America, this unit is intended for use with an IEC certified ITE power supply with output rated as stated at the top of this page. (US)

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

(JP)

Alimentation c.a. optionnelle:

Hors de l'Amérique du Nord, cette unité est conçue pour être utilisée avec une alimentation ITE certifiée CEI de sortie nominale indiquée au haut de cette page. (FR)

Valgfrit vekselstrømforsyning

Udenfor Nord Amerika er denne enhed udstattet med en IEC (international elektronisk Kommission) udfærdiget med en ITE strømforsyning med strømudgang som fastslættet på denne sides begyndelse. (DK)

Vaihtoehtoinen vaihtovirran syöttölaite:

Pohjois-Amerikan ulkopuolella tämä laite on tarkoitettu käytettäväksi sellaisen IEC:n sertifioiman ITE-tehonsyöttölaiteen kanssa, jonka antoteho on tämän sivun yläosassa esitetyn mukainen. (FI)

Optionales Netzteil (Wechselstrom)

Außerhalb Nordamerikas sollte diese Einheit über ein der IEC-Norm entsprechendes ITE-Netzteil gespeist werden, und zwar mit einer wie oben auf dieser Seite genannten Ausspeisung. (DE)

Προαιρετική Τροφοδοσία Συνεχούς Ρεύματος

Εκτός Β. Αμερικής, η μονάδα αυτή προορίζεται για χρήση με ένα τροφοδοτικό ITE πιστοποιημένο κατά IEC με ονομαστική ισχύ όπως δηλώνεται στην αρχή της σελίδας. (GR)

Alimentazione opzionale a corrente alternata:

Al di fuori dei paesi dell'America del nord, l'unità deve essere impiegata con un dispositivo d'alimentazione per attrezzature informatiche approvato dalla IEC la cui potenza nominale sia pari a quella indicata all'inizio della pagina. (IT)

Vekselstrømforsyning (ekstrautstyr):

Utenfor Nord-Amerika skal dette produktet brukes med en IEC-sertifisert ITE-strømforsyning med klassifisert effekt som angitt øverst på denne siden. (NO)

Fornecimento opcional de CA:

Fora dos EUA, esta unidade destina-se a ser usada com dispositivos de fornecimento de corrente ITE com certificação IEC, com a capacidade indicada no topo desta página. (PT)

Suministro optativo de corriente alterna

Fuera de América del Norte, esta unidad se debe utilizar con un alimentador ITE homologado por la IEC (comisión electrotécnica internacional) con una salida que tenga la calificación que figura en la parte superior de esta página. (ES)

Valfri A/C Strömförsljning

Utanför Nordamerika är det meningen att denna enheten används med en IEC-certifierad ITE-strömförsljare med den uteffekt som anges längst upp på den här sidan. (SE)

İsteğe Bağlı A/C Güç Kaynağı:

Kuzey Amerika dışında, bu ünite, çıkış sınıflandırması bu sayfanın başında belirtilen IEC sertifikalı bir ITE güç kaynağı ile birlikte kullanılmak üzere tasarlanmıştır. (TR)

Updated 9/12/2007

Legend: Danish – DK; English – US; Finnish – FI; French – FR; German – DE; Greek – GR; Italian – IT; JP – Japan; Norwegian – NO; Portuguese – PT; Spanish – ES; Swedish – SE; Turkish – TR.



Laser Light Safety Statement

**Warning:**

This product uses laser light. One of the following labels is provided on the scanner. Please read the Caution statement. (US)

Mise én garde:

Ce produit utilise un rayon laser. L'une des étiquettes suivantes est apposée sur le scanner. Veuillez lire l'avertissement qu'elle contient. (FR)

Advertência:

Este produto usa luz de laser. O scanner contém um dos seguintes avisos. Favor ler o Aviso. (PT)

Varning:

Denna produkt använder laserljus. En av de nedanstående etiketterna sitter på scannern. Var god läs varningstexten. (SE)

Advarsel:

Dette produkt anvender laserlys. En af følgende mærkater anvendes på scanneren. Læs venligst sikkerhedsforanstaltningen. (DK)

Varoitus:

Tämä tuote käyttää laservaloa. Skannerissa on jokin seuraavista tarroista. Lue Huomio-kohta. (FI)

Warnung:

Dieses Produkt verwendet Laserlicht. Eines der folgenden Etiketten befindet sich auf dem Scanner. Bitte lesen Sie den Gefahrenhinweis. (DE)

Attenzione:

Questo prodotto utilizza luce laser. Una delle etichette seguenti c' è ubicata sullo scanner. Si raccomanda di leggere con attenzione le avvertenze riportate. (IT)

Advarsel:

Dette utstyret bruker laserlys. En av følgende etiketter er plassert på scanneren. Les advarselene på etiketten. (NO)

Advertencia:

Este producto usa luz de láser. Las etiquetas se proveen en la máquina exploradora. Por favor, lea detenidamente la explicación para las precauciones. (ES)

Waarschuwing:

Dit product gebruikt laserlicht. Een van de volgende labels is op de scanner aangebracht. Lees a.u.b. de waarschuwing onder Oppassen. (NL)



Laser Light Safety Statement



<p>Uyarý:</p> <p>Bu ürün lazer ýþýðý kullanýr. Aþaðýdaki etiketlerden bir tanesi tarayýcýnýn üstünde saðlanýr. Lütfen Dikkat ifadesini okuyun. (TR)</p>	<p>Προειδοποίηση:</p> <p>Αυτό το προϊόν χρησιμοποιεί λέιζερ φως. Υπάρχει μία από τις ακόλουθες ετικέτες στο σαρωτή. Παρακαλούμε διαβάστε τη δήλωση με τίτλο Προσοχή. (GR)</p>
<p>경고:</p> <p>본 제품은 레이저 광선을 사용합니다. 다음 라벨 중 하나가 스캐너에 제공됩니다. 주의 사항을 읽어 주십시오. (KR)</p>	<p>警告:</p> <p>この製品はレーザー光線を使用します。 次のラベルのうち 1 つがスキャナーに 貼られています。 注意事項をお読みください。 (JP)</p>
<p>警告:</p> <p>本产品使用激光。 下列一个标签将随扫描仪一道提供。 请阅读“当心”一栏的内容。 (CN)</p> <p>雷射光 本產品使用雷射光掃描條碼，請勿正視雷射光或以 雷射光照射眼睛。 (Taiwan, ROC)</p>	<p>Legend:</p> <p>Chinese-CN; Danish-DK; Dutch-NL; English-US; Finnish-FI; French-FR; German-DE; Greek-GR; Italian-IT; Japanese-JP; Korean-KR; Norwegian-NO; Portuguese-PT; Republic of China-ROC; Spanish-ES; Swedish-SE; Turkish-TR;</p>

Labels – MX8 Hand Held Computer [Summit Client]



Revision History

Sept 2008, Revision C

- Appendix A – Keymaps - Added *MX8 32-key Alpha Mode* keypad.
- Appendix B – Regulatory Notices and Safety Information - Updated approvals for 802.11 a/b/g radio. Removed Summit Declaration of Compliance for consistency.
- Entire Manual - Added *Triple-Tap* keypad and *Alpha-Mode* keypad. Changed references to *5380SF 2D imager* to *5300 2D imager* and changed related documentation where appropriate.

May 2008, Revision B

- Introduction -- Added Continuous Scan Mode.
- Quick Start -- Added installation instruction for the MX8 Voice Case. Added Mobile Bluetooth Accessories after Bluetooth Devices section that contains brief pairing instruction. Accessories: Added Back of Hand Bluetooth Ring Scanner. Added Voice Pouch.
- MX8 Hand Held Computer -- Updated Reboot Sequence. Added Saving Changes to the Registry.
- Appendix B – Regulatory Notices and Safety Information -- Added Bluetooth QDID. Added Laser Light Safety Statement for Taiwan in the CN table row. Added updated Laser Labels graphic to Labels – MX8 Hand Held Computer [Summit Client].

Initial Release, December 2007

Index

2

2D Imager 31
2nd key function, described 48

A

AC External Power Supply, How to 21
AC Power Adapter
 Assembly 22
AC Power Scheme 43
Accessories 34
 Electrostatic Discharge 13
 Installing 13
Activation Key
 AppLock 19
Alph key
 Enter a string of letters in a text field 48
Alpha Mode Keypad 61
Alpha Mode LED 46
Alpha-Mode Keypad 45
Alt key function 47
Alt sticky keypress 47
Assemble
 Audio connection 24
 RS232 connection 23
 USB connection 23
Audio Cable
 Install 24
Audio Volume settings 44

B

Backlight timer 42
battery
 trickle charging 15
Battery 49
 charge before using 15
 Check status 15
 Check status and power reading 16
 Compartment 15
 Important 3
 status LED 15
Battery Multi-Charger 51
Battery Power Scheme 43
Battery, Backup

described 50
Battery, Main
 described 49
Bluetooth icons 33
Bluetooth printers and scanners 33

C

Cable
 Adapter, Audio 10
 Multipurpose RS-232 and Power 10
 Multipurpose USB and Power 10
 CapsLock key sequence 48
 CapsLock mode function 48
 Change the Time and Date 13
 Charger, battery 51
 Cleaning 41
 ClearHive 39, 40
 Cold Boot 39
 Color Display 41
 Color displays and backlight timers 42
Components 6
Connect External PS 21
Contact LXE 34
Continuous Scan Mode 5
Control sticky keypress 47
Ctrl key function 47

D

Data entry
 imager 31
 keypad 29
 laser scanner 31
 stylus 30
 virtual keyboard 29
Data entry 29
Display 41
Display and scanner aperture cleaning 41
Display backlight timer 42

E

Enter key function 47
Entering Data 29
Environmental Specifications 4
External PS 21

F

Features.....	2
Forms entry.....	29
Function	
2nd Key.....	48
Alt Key.....	47
CapsLock Mode.....	48
Ctrl Key.....	47
Enter Key.....	47
Shft Key.....	47
Spc Key.....	47
Function keys.....	47

G

Getting Help	34
Getting Started.....	13
Glossary	34

H

Handstrap.....	9
Handstrap or Trigger Handle	9
Handstrap, installation	20
Headset, Install	24
Help	34
Hotswapping	
cautions	50

I

IEC IP54	4
Input panel	
virtual keyboard	29

K

Key	
Alpha.....	47
Diamond.....	47
Enter.....	47
Numeric	47
Scan.....	47
Space.....	47
Key functions.....	47
Keypad	
and entering data	29
Keypad Shortcuts.....	17
Keypad, 32 Key	27, 28

L

Li-Ion battery life.....	16
Lithium-Ion (Li-Ion).....	49
LXE Manuals CD	34
LXE ServicePass	34

M

Microphone adjustment	24
Mode Key Functions.....	48
Mode timers.....	43

N

Nickel Metal Hydride (NiMH)	50
-----------------------------------	----

O

Operating Temperature	4
Orange and Blue sticky keypresses.....	48
Overview	1

P

Pen Stylus	
and data entry	30
Power key	16
Power Scheme	43
Protective Film	41

Q

Quick Start Instructions	13
--------------------------------	----

R

Reboot, How to	39
Recalibrate	18
Regulatory Notices	67
Reset	
all MX8 configuration to factory defaults.....	40
the MX8 registry to factory defaults	40
Reset to Factory Default, How to	40
ResetAll	39, 40

S

Safety Information	67
Saving Changes to the Registry	40

Scan Status LED	46
Scanner Aperture identify type	8
Scanning and data entry	31
Scanning status, LED	32
Scheme	43
Screwdriver	
Phillips, for handstrap	20
SD card interface	2
Setting the Time Zone	18
Shift key function	47
Shift keypress and sticky keys	47
Sound Scheme	44
Space key function	47
Specifications	
Environmental	4
Sticky Key	47
Stylus	
and data entry	30
Suspend	39
Suspend mode and ActiveSync	39
Suspend mode, How To	16
Suspend Timer	43
Switch applications	
AppLock	19
System Idle Timer	43
System Status LED	46

T

Tethered scanners	32
Timer	
User, System, Suspend	43
Touch Screen	41
Touch Screen and Keypad Shortcuts	17
Touch Screen and the Stylus	17

Touch screen calibration	18
Touchscreen	
and data entry	30
Trigger Handle	8
Triple-Tap Keymap	55
Triple-Tap Keypad	45
Troubleshooting	
Startup	14

U

User Idle Timer	43
-----------------------	----

V

Virtual keyboard	
Input panel	29
Voice	
Accessories	34
Voice case	25
Voice data	32
Volume	
adjust audio volume	44

W

Warm Boot	39
Warnings and Labels	
Laser Scanner	5, 31
When the backup battery power is Low or Very	
Low	50
Wireless communication	53
