




RFID Discovery Kit

User Manual

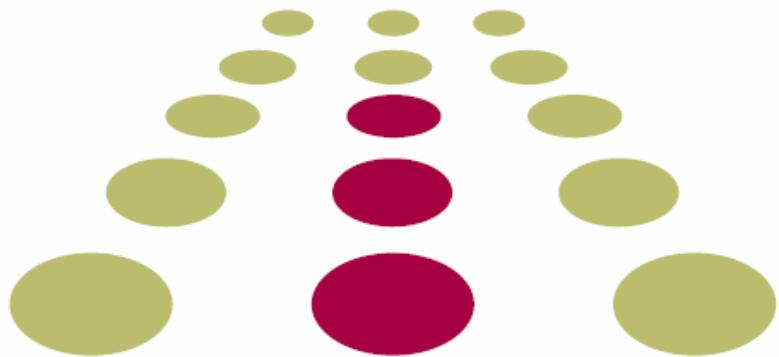

© 2007 Tracient Technologies Limited.



Padl-R UF Reader User Manual

Quick Start Guide

Thank you for choosing the RFID Discovery Kit from Tracient. Before you start to use the RFID Reader please read the following instructions:

- Install the software provided on the CD-ROM, before connecting your RFID Reader to the PC.
- To install the software you need a PC that runs Microsoft Windows XP or Windows 2000 and is compatible with the provided USB cable.
- The RFID Reader will need charging for at least 10 hours before use. After installing the software, charge the RFID Reader by connecting it to the PC using the provided USB cable.
- After installation of the software, user manuals for the RFID Reader and TraceConnect software are available in electronic format on the PC or CD-ROM.

Important Notice

Install the software supplied with the reader before connecting the reader to the PC. Failure to do so may cause problems when using the reader with the PC.

Overview of Features

Hardware

The Padl-R RFID Reader has the following features:

- Battery powered.
- Touch Sensitive button.
- Status LED's.
- Bluetooth Enabled.
- USB Connection for battery charging, data downloads and configuration.
- ID log storage for 1000 Tag ID's.

Software

The TraceConnect software supplied with the Reader gives you everything you need to evaluate your RFID reader. The software supplied has the following features:

- *Control Panel Applet* for configuration of the Reader for both the PC and PDA.
- *RFID Wedge* for capturing Tags for PC and PDA applications.
- *RFID Sync* log download application for the PC.

Software Developers Kit (SDK)

If you have purchased the SDK version, software will be provided that gives you the tools to begin developing your own applications. The SDK includes:

- The SDK, a programming interface for Tracient RFID products.
- Example software (Including source code) for PC and PDA.
- Documentation.

Using the Padl-R



Using the Button

The button on the Padl-R is touch sensitive and as such responds to your finger either pressing the button or resting lightly over it. To prevent unexpected operation please remove your finger from the button when not in use.



Single button press –
Press or touch the button, then remove your finger

Long Press – Hold your finger on the button until the reader responds and then remove your finger from the button

Charging the Padl-R Battery

The Padl-R is powered by a Lithium-Ion battery. The battery is charged via the USB port on a PC or via one of the other charging accessories that can be purchased separately. Whenever the Padl-R is connected to a PC the battery will be charged. When charging, the Amber LED will be on.



Charging times vary depending on the state of the battery. It is recommended that the battery is charged when not in use. Doing so ensures the battery is kept in a good working order. A full charge takes approx 10 Hrs.

Low Battery Indication

The Padl-R indicates a low battery condition by continuously flashing the Amber LED. If this happens it is recommended that you give the Padl-R a full charge.

1200 seconds (20 minutes) of inactivity.



If the Padl-R is plugged into a USB connection, the auto power OFF will not operate.

Turning the Padl-R ON

Press and hold the button. The Blue LED flashes 3 times and the Padl-R plays a short multi tone tune.



If the battery is flat the Padl-R will turn straight off again. This will be seen as the Blue LED flashing 6 times in quick succession.

Turning the Padl-R OFF

Press and hold the button. The Blue LED flashes 3 times and the Padl-R plays a different multi tone tune. The Padl-R is also equipped with an auto shutdown feature. The factory default for this feature is to shutdown after

Reading a Tag

To read a Tag, present a compatible Tag to the Reader's antenna. Press and release the button. If successful, the Padl-R will beep and the Green LED will flash twice. If unsuccessful the Padl-R will beep and the Red LED will flash twice.



The button is touch sensitive technology. Please remove your finger from the button when not in use. Keeping your finger on the button will turn the Padl-R off.

For Your Safety



Read these guidelines before using your Reader. Failure to comply with these guidelines may be dangerous or illegal.



Road Safety

Do not operate a vehicle while using the Reader.



Interference

Device performance may be affected by interference.



Hospitals and Pacemakers

Do not operate the Reader near medical equipment or pacemakers.



Aircraft

It is illegal to use wireless devices on aircraft.



Refuelling

Do not use the Reader when refuelling or near chemicals.



Use Qualified Service

This Reader has no user-serviceable parts. Only qualified personnel may repair or service this equipment.



Accessories

Use only approved accessories. Do not connect incompatible products.



Batteries

This Reader is equipped with a Lithium Ion Battery. Do not incinerate.

Padl-R Use and Maintenance

Firmware Upgrades

Your Reader has the ability to have its firmware upgraded in the field via the USB interface. These upgrades will be available for download from the Tracient website (www.tracient.com).

Accessories

A full range of accessories are available for the Padl-R. These include:

- Various charging options, such as mains and car chargers
- Protective boots, to provide additional weather and mechanical protection
- Key fobs and chains
- Other RFID Tags

For a complete list of available accessories or requests for other RFID products or services, please contact

Tracient or visit the website (www.tracient.com).

Battery Handling and Care

This RFID Reader contains a Lithium-Ion battery. To get maximum performance from the Reader follow the instructions relating to charging in the supplied manual.

Battery charging is controlled by the device when connected to either a PC via a USB cable, or other Tracient specified chargers.

The battery should not be removed, unless done so by an authorised Tracient service engineer.

Charging the Battery

Charge the battery for at least 6 hours before use.

Be sure to follow the warnings listed below while charging the battery. Failure to do so may cause the battery to become hot, explode, or ignite and cause serious injury.

- When charging the battery, use a specified battery charger.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, explode, or ignite.

The temperature range over which the battery can be charged is 0°C to 45°C.

Charging the battery at temperatures outside this range may cause severe damage to the battery or reduce battery life.

Using the Battery

Battery packs may get hot, explode, or ignite and cause serious injury if exposed to abuse conditions. Be sure to follow the safety warnings listed below:

- Do not place the battery in fire or near a heat source. Doing so may cause the battery to explode, ignite, or result in a loss of performance.
- Do not install the battery backwards.
- Do not short circuit the battery.

- Do not puncture the battery, deform or subject it to strong impacts or shocks.
- Do not allow the battery to get wet.
- Do not disassemble or modify the battery. The battery contains safety and protection devices, which, if damaged may cause the battery to generate heat, explode, or ignite.
- Immediately discontinue use of the device if during use or charging, the battery emits an unusual smell, feels hot, changes colour or shape, or appears abnormal in any other way.
- Do not place the battery in microwave ovens, high-pressure containers, or on induction cookware.
- In the event the battery leaks and the fluid gets into one's eye, do not rub. Rinse well with water and immediately seek medical care. If left untreated, the battery fluid could cause damage to the eye.

Discharging the Battery

Do not discharge or use the battery in devices other than the RFID Reader. Doing so may reduce the battery's life or cause abnormal battery conditions which may result in the battery becoming hot, exploding, or causing serious injury.

The temperature range over which the battery can be discharged is -20°C to 60°C. Use of the battery outside this temperature range may reduce the performance of the battery.

Limitations and Recommendations

Tracient accepts no liability for damage to devices connected to, or operated with the RFID Reader. The examples, code and SDK are provided for end users and are to be used at the end user's own risk.

In order to avoid or minimise potential risk of ergonomic injury follow the recommendations below:

- Reduce or eliminate repetitive motion
- Maintain a natural position
- Keep device within easy reach
- Improve work procedures

All Tracient devices are designed to be compliant with rules and regulations applicable for the locations they are sold into. Any changes or modifications made to the device without Tracient's approval could void the user's authority to operate the device.

Warranty Statement

Tracient manufactures its hardware products in accordance with industry standard practices. Tracient warrants that for a period of twelve (12) months from date of shipment, products will be free from defects in materials and workmanship. This warranty is provided to the original owner only and is not transferable to any third party. It shall not apply to any product (i) which has been repaired or altered unless done or approved by Tracient, (ii) which has not been maintained in accordance with any operating or handling instructions supplied by Tracient, (iii) which has been subjected to unusual physical or

electrical stress, misuse, abuse, power shortage, negligence or accident, or (iv) which has been used other than in accordance with the product operating and handling instructions. The Customer must notify Tracient in writing within 7 days of the alleged defect first coming to the Customer's notice, and the Customer must at this time also state the date and place of the purchase. Preventive maintenance is the responsibility of the customer and is not covered under this warranty. Tracient shall not be responsible for any defect in products arising as a result of defects in any third party software or hardware.

Items and accessories having a Tracient serial number will carry a 90-day limited warranty. Non-serialized items will carry a 30-day limited warranty.

Warranty coverage and procedure

During the warranty period, Tracient will repair or replace defective products returned to Tracient's headquarters in Christchurch, New Zealand or an authorized service agent. (Please see contact details at the bottom of the page). Products must be shipped in the original or comparable packaging, shipping and insurance charges prepaid. Tracient will ship the repaired or replacement product freight and insurance prepaid within New Zealand only. The removal of the defective equipment and the installation of any repaired or replacement parts shall be performed by the Customer at its own expense.

Subject to any service contract between the Customer and Tracient and with respect to products not capable of removal and return to

Tracient, in such cases Tracient will use its best endeavours to remedy any defect by remote repair, advice or upgrade. In the event that such defect is not able to be repaired in the manner provided above,

Tracient will, at the Customer's request, undertake repairs at the cost of the Customer.

Tracient will use new or refurbished parts at its discretion and will own all parts removed from repaired products. The customer will pay for the replacement product in case it does not return the replaced product to Tracient within 3 days of receipt of the replacement product. The process for return and Customer's charges will be in accordance with Tracient's Exchange Policy in effect at the time of the exchange.

The customer accepts full responsibility for its software and data including the appropriate backup thereof. Repair or replacement of a product during warranty will not extend the original warranty term.

General

Except for the warranties stated above, Tracient disclaims all warranties, express or implied, on products furnished hereunder, including without limitation implied warranties of merchantability and fitness for a particular purpose. The stated express warranties are in lieu of all obligations or liabilities on part of Tracient for damages, including without limitation, special, indirect, or consequential damages arising out of or in connection with the use or performance of the product.

Tracient's liability for damages to buyer or others resulting from the use of any product shall in no way exceed the purchase price of said product, except in instances of injury to persons or property. Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the proceeding exclusion or limitation may not apply to you.

Troubleshooting Guide

Problem	Possible Cause / Suggested Action
Power Problems	
The Padl-R will not turn ON.	The battery is flat. Plug the Padl-R into a PC (The PC must be ON) for charging.
Reader switches OFF very frequently.	Check the Auto Power OFF setting using the Control Panel Applet.
Amber LED flashing continuously.	The battery needs charging.
Red LED flashing continuously.	<p>The Padl-R is indicating a fault. To determine the precise fault, connect to the Reader using the <i>Control Panel Applet</i>. The <i>Status</i> message will indicate the error.</p> <p>The following are the most probable causes.</p> <p>Memory Full. To clear this:</p> <ul style="list-style-type: none">■ The Reader log can be downloaded by connecting the Padl-R a PC using <i>RFID Sync</i>.■ The memory can be cleared using either <i>RFID Sync</i> or the <i>Control Panel Applet</i>. <p>Time Invalid:</p> <ul style="list-style-type: none">■ Connect the Padl-R using the <i>Control Panel Applet</i>, then on the <i>Settings</i> tab, click <i>Synchronise clock</i>.■ This will re-sync the Padl-R clock.

Problem	Possible Cause / Suggested Action
Bluetooth Problems	
Cannot connect to the Padl-R via Bluetooth.	<p>Check the following:</p> <ul style="list-style-type: none"> ■ Connect to the Reader from a PC via USB using the <i>Control Panel Applet</i> and ensure the <i>Enable Bluetooth</i> feature under the <i>Settings</i> tab is enabled. ■ Disconnect the Padl-R USB cable. ■ Turn on the Padl-R. ■ Charge the battery.
I cannot find the Padl-R when searching using Bluetooth.	<ul style="list-style-type: none"> ■ The Padl-R is OFF. ■ The Padl-R is connected to a PC via the USB cable. ■ Connect to the Reader from a PC via USB using the <i>Control Panel Applet</i> and ensure the <i>Enable Bluetooth</i> feature under the <i>Settings</i> tab is enabled. ■ There is a problem with your PC or PDA.
When ever I lose the Bluetooth Connection the Padl-R turns off.	Select the Unplug and Stay ON feature under the <i>Settings</i> tab in the <i>Control Panel Applet</i> .
I still cannot get the Bluetooth working.	Check the <i>Bluetooth address</i> on the <i>Main</i> tab of the <i>Control Panel Applet</i> . If this is blank, contact Tracent for assistance.
USB Problems	
I cannot find the Padl-R when searching using USB.	<ul style="list-style-type: none"> ■ The Padl-R is OFF. ■ The Padl-R is not connected to the PC via the USB cable. ■ There is a problem with your PC.
I cannot connect to the Padl-R using USB.	<ul style="list-style-type: none"> ■ The Padl-R is OFF. ■ The Padl-R is not connected to the PC via the USB cable.
The Padl-R is not recognised when Connected via USB.	<p>The USB Driver for the Padl-R may not be installed correctly.</p> <ul style="list-style-type: none"> ■ Open Control Panel and select the System program

	<ul style="list-style-type: none"> ■ Select the System Tab and click on the Device Manager button ■ With the Padl-R connected to the PC, check for an Unknown Tracient device in the list. ■ Uninstall this device ■ Re connect the Padl-R, The device should install correctly as long as the RFID connect software has been installed fully.
--	--

Problem	Possible Cause / Suggested Action
Tag Reading Problems	
Padl-R fails to read the Tag.	<p>Check:</p> <ul style="list-style-type: none"> ■ The Padl-R is set up to read that particular Tag. Check the <i>Tag type</i> settings in the <i>Control Panel Applet</i>. ■ The Tag is not too far from the Padl-R's antenna.
Every time I read a Tag the Padl-R turns off.	The battery is low. Recharge the Padl-R.
Every time I read a Tag the Padl-R loses the Bluetooth connection.	The battery is low. Recharge the Padl-R.
The green LED flashes but the beeper does not sound.	De-select the <i>Mute</i> setting under the <i>Settings</i> tab in the <i>Control Panel Applet</i> .
Other	
The Padl-R does not beep.	De-select the <i>Mute</i> setting under the <i>Settings</i> tab in the <i>Control Panel Applet</i> .
PDA Problems	
I cannot find the applications on the PDA.	Synchronise the PDA to the PC. The applications and necessary software will be installed automatically.
Tag logging problems – RFID Sync	
I cannot download Tag IDs from the Reader	There are no Tag IDs to download. Test by disconnecting the Padl-R and reading some Tags.

log.	
The time column is empty after I have downloaded Tag IDs.	Enable the <i>Log Time with Tag ID</i> option under the <i>Reader</i> tab of the <i>Control Panel Applet</i> . Also ensure that <i>Timestamp</i> is added under <i>Output Fields</i> in the <i>Settings</i> page of the <i>RFID Sync</i> .

LED Flash Indications

Condition	Duration	Sequence	Colour
Power On	Temporary	3 Short Flashes	Blue
On	Continuous	1 Short Flash	Blue
Power Down	Temporary	3 Short Flashes	Blue
BT Connected	Continuous	2 Short Flashes	Blue
Good Read	Temporary	2 Short Flashes	Green
Bad Read	Temporary	2 Short Flashes	Red
Battery Low	Continuous	1 Short Flash	Amber
Battery Charging	Continuous	On	Amber
Battery Charged	Continuous	Off	Amber
Fault	Continuous	1 Short Flash	Red

Audio Beep Indications

Tune	Action
Multi tone tune	Turn ON / OFF
Single Beep	All other processes

Padl-R UF Specifications

Power Supply	
Power Supply (Internal)	3.7V / 1000mAh Li-Ion battery
Power Supply (External)	+5V DC @ 100mA Max
Battery Charging	Via USB Mini-B Connector
Wireless Interface	
Bluetooth	Bluetooth Standard V1.1
Pairing Requirement	Can be discovered and paired by a PDA or Bluetooth enabled device.
Profile	Serial Port Profile (SPP)
RF	
Operating Frequency	862 - 955MHz (Max) Operating frequency bands for regions are Restricted by reader's firmware. US Region: 902.3 – 927.7MHz
Read Range	Approx 1.5 Metres
Air Interface Standards	ISO 18000-6A ISO 18000-6B ISO 18000-6C EPC Class 0 EPC Class 1 (GEN2)
Tag Type	Passive
Antenna	Internal

User Interface	
Visual	Coloured LEDs
Audio	Multi tone buzzer
Operation	Single button

Mechanical	
Dimensions (L x W x D)	21x72x16 mm
Weight	132 grams
Material and Finish	ABS, Black Color with Light Textured Finish

Environment	
Water and Dust Ingress	IEC 529 IP54
Shock	Can withstand a drop of 1.2m to plywood on all faces and corners.
Vibration	Random 1.9grms (non operational), 1hour all axis. Random 0.95grms (operational), 1hour all axis.
Operating Temperature	-10 – 55 deg C
Humidity	10 - 90% non condensing

Compliance
EN 302-208
AS/NZS 42
EN 301 489-1
EN 301 489-3
EN 60950
C-Tick: Z997
Canada:
IC: 7453A-UFP001007
Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.
FCC:
FCC Part 15 Part C
FCC ID:VRJUFP001007
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
RoHS Directive 2002/95/EC
WEEE Directive 2002/95/EC
This product must not be disposed of with other waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city recycling office or the dealer from whom you purchased the product.

