

**Quick Start Guide** 

#### Instructions for:

- 1. Getting Started
- 2. Downloading the Orangetheory App
- 3. Charging Device
- 4. Proper Placement
- 5. Pairing Device
- 6. LED Guide 7. Caring for Device
- 8. Technical Specifications

### **Getting Started:**

- 1. Included in packaging: OTbeat Burn, SM band, LG band, & USB cord
- 2. Remove OTbeat Burn from packaging
- Connect USB cord into charging port of device to wake the device from manufacturing sleep mode
- 4. LED light will appear after a few seconds


### Downloading the Orangetheory App:



Note: Fully charge device before attempting to pair for the first time.

## **Charging Device:**

- 1. Open rubber port cover on back of device
- 2. Plug in mini-USB connector into device port
- 3. Plug in regular USB connector into charging block (not provided)
- 4. Plug in charging block into wall outlet

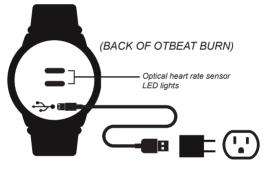

Device can be connected directly to a computer USB port for charging. Note: Charging time will vary due to differences in voltage between wall outlet and computer.

Battery is fully charged when Green LED is continuously on During charging: Red LED light will blink slowly LED indication for charging is on front of device

# Proper Placement:

### To transmit accurate data from your device:

- Fasten device snugly in one of the below placement options
   Note: Ideal placement is above or below the elbow.
- 2. Wear device below, and not directly on top, of wrist bone\* or elbow
- 3. The optical sensor on the back should make good contact with skin

\*For placement on wrist, measure two fingers above wrist bone





Page 4

### Pairing Device:

1. Once OTbeat Burn is fully charged, double click the center of the Splat to power ON the device





Set power ON: Short button press (Blue LED blinks for 5 seconds)



Set power OFF: Long button press (Red LED light blinks quickly for 5 seconds then turns off) Page 5

# Pairing Device (Cont.):

- 2. Launch the settings app on your mobile device
- 3. Ensure your bluetooth settings are on



## Pairing Device (Cont):

4. Open Orangetheory app on mobile phone.



## Pairing Device (Cont.):

5. Use the Orangetheory app to search for device

\*Once device appears, OTbeat Burn is successfully connected to app



#### LED Guide

#### **Heart Rate Detection LED Indication:**

Alternating BLUE and GREEN: Detecting heart rate Alternating BLUE and RED: No heart rate detected Blinking GREEN: Heart rate detected Blinking ORANGE: Heart rate zones are changing

#### **Bluetooth Connection State:**

Blue LED blinks for 5 seconds: After turning on the unit Blue LED continuously on for 5 seconds: Connected Green LED continuously on: Updating firmware

# **Battery LED Light**

### During Charging:

Red LED blinks slowly: Charging
Green LED continuously on: Battery full

#### Battery State:

Red LED blinks three times: Low battery at <15% (repeat every 5 min. until reach critical level)

Red LED continuously on for 2 sec: Device powering off

## **Caring for Device:**

- To ensure accurate readings, clean the sensors with a soft cloth after use
- OTbeat Burn unit and strap are waterproof to IP67 specifications and can be easily cleaned with mild soap and cool water
- Use a cotton swab and rubbing alcohol to clean the USB charging contacts when necessary. Do NOT contact USB charging port
- 4. Do not use any abrasive chemicals to clean the OTbeat Burn unit, sensor, or strap. This will cause permanent damage

# **Technical Specifications:**

Feature	Description
Functions	heart rate detection and transmission (ANT+ or Bluetooth 5.0), battery low alert
Heart Rate Range	30 to 220 BPM in 1 BPM resolution
Heart Rate Accuracy	+/-5 BPM
Transmission	ANT+ /BLE
Power Supply	3.8V Li-ion Polymer rechargeable battery
ANT+ or BLE Transmission Distance	15 Meters
Battery Life time (PPG&BLE always on)	Up to 24 hours of continuous detection
Water Resistance Level	IP67
Storage Temperature	-20 to +60∘C
Operating Temperature	0 to +40C
Memory canacity	6 hours detection

For more information visit orangetheory.com



∠ F8D诉达科技	[F] [E] (clate)	2021-5-5	订单号 (order number)	
iii 牌 OT	公司型号 (Company Model)	FD063	客户型号 (Castomer model)	OTbeat
版本 (version) A0	设计内容 (design content)	说明书	科 号 (Part No)	12.005.0004.03579
电子 (electronics engineer)	救 件 (software engineer)		结构 (structural engineer)	
设计者 (Designant) 唐雄	标准化 (standardization)		項目经理 (project manager)	
雙 核 (Berjan)	业务 (Sales)		核 准	

(electronics engineer)	1	(software engineer)		atructural			
设计者 (Designers)	唐雄	标准化 (standardisation)		項目 (projectr	经理 nanager)		
便 核		业务 (Sales)		核 (apps	准(******		
	規格尺寸 SIZE	展开尺寸:172*86mm,成型尺寸:86*86mm					
[	材质要求 MATERIAL	70g哑粉纸					

I (Review	核	业务 核准 (Sales)
	規格尺寸 SIZE	展开尺寸: 172*86mm,成型尺寸: 86*86mm
	材质要求 MATERIAL	70g哑粉纸
	印刷要求	单黑印刷

单骑马钉装订