


SmooSat

SAS ELECTRIC SCOOTER
OWNER'S MANUAL



Shenzhen Ruiyundi Tech. Co. Ltd.
Website: www.ismoosat.com
Facebook: www.facebook.com/smoosatscooter
Email: support@ismoosat.com
Tel: +1 929 693 6066
Mon-Fri 9:00 AM - 5:00 PM Pacific Time
Add: 2208-E3, Block A, Lianhe Plaza, No. 5022,
Binhe Avenue, Fushan Community, Futian District,
Shenzhen, Guangdong, China.

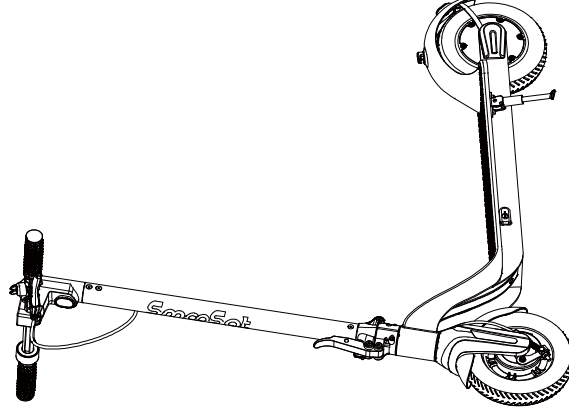

Customer Support
www.facebook.com/smoosatscooter
or scan above QR code

V_220210

Thank you for purchasing

SmooSat Electric Scooter. It is a sports and recreational vehicle with style.


Contents

1. Package Contents	02
2. Product Overview	03-04
3. Assembly and Set-Up	05
4. Charge Your Scooter	06
5. How To Ride and Stop	07-08
6. Safety Instructions	09-13
7. Folding and Carrying	14
8. Daily Care and Maintenance	15
9. Specifications	16
10. Troubleshooting Guide	17
11. Trademark and Legal statement	18
12. FCC Compliance	19


1 Package Contents

Pre-Assembled Electric Scooter

Owner's Manual	Legal Statement	Quick Start Guide	Warranty Card
SA3 Owner's Manual	Legal Statement	Quick Start Guide	Warranty Card

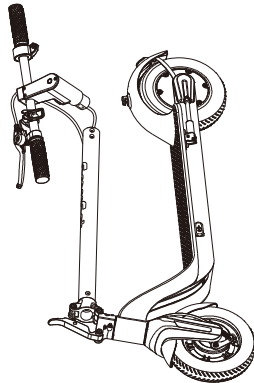


Accessories

M5x14mm Screw x4	3mm Allen Wrench	Charger
		

Carefully check package contents, if anything is missing or damaged, please contact support@ismoosat.com for help.

2 Product Overview

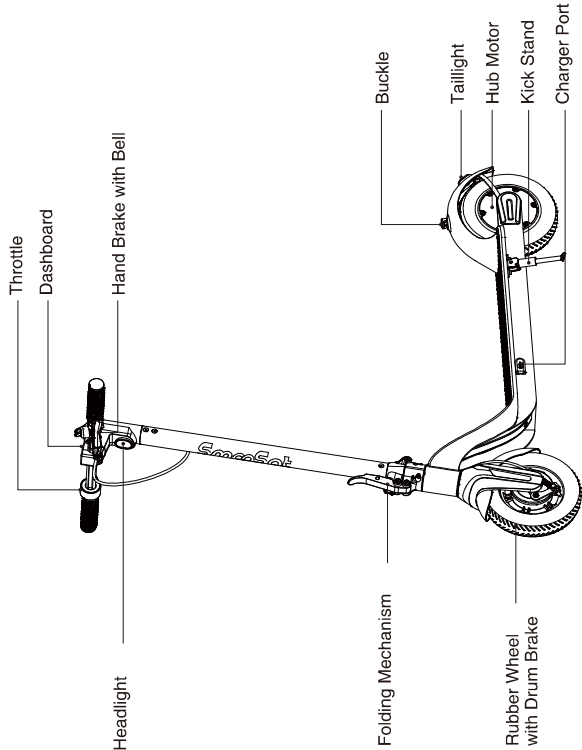


Dashboard Instruction

- ECO - Max Speed 5 mph
- D - Max Speed 10 mph
- S - Max Speed 15.6 mph

Current Speed

Trip

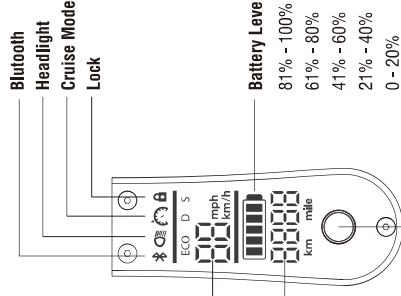


Battery Level Display:

- 81% - 100% Battery is sufficiently charged.
- 61% - 80%
- 41% - 60%
- 21% - 40% Charge product as soon as possible.
- 0 - 20% Stop riding and charge product immediately.


ON/OFF Button Instruction:

- Press and hold for 3 seconds to turn ON/OFF the scooter.
- Quick press once to change the max speed.
- Quick press twice to turn ON/OFF the headlight.
- Quick press triple to switch between metric and imperial.
- Quick press 5 times to turn ON/OFF the cruise mode.


3 Assembly and Set-Up

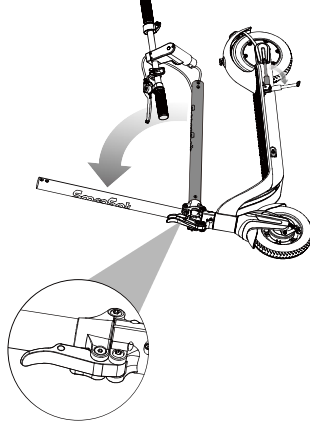

1. Place the scooter on the ground, push the kick stand down. Unfold the steer tube to vertical position and lock the folding mechanism.

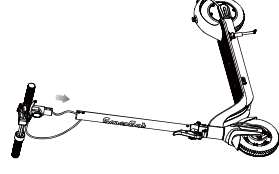


2. Insert the handlebar into the steer tube.

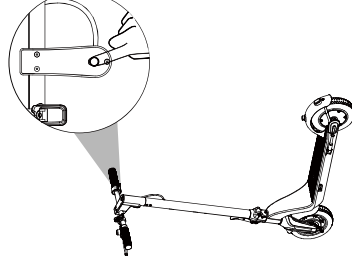

3. Using the 3mm Allen Wrench tighten the screws on both sides of steer tube.

4. After the assembly, press the power button to check if it works properly.

4 Charge Your Scooter

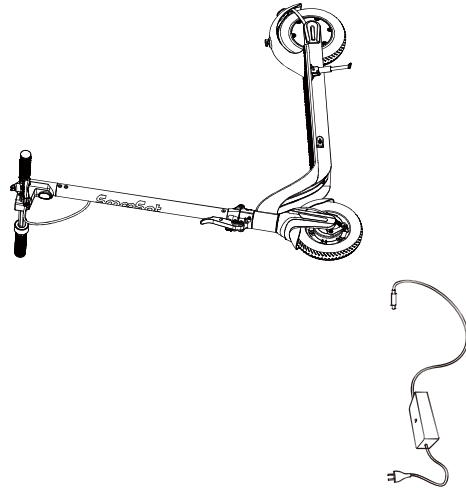


NOTE:

Plug the charger plug into wall outlet, the light on the charger should be green.


The light on the charger should turn red during charging.

When the charging is completed the light will turn green again.


The battery will be fully charged after 5-6 hours.

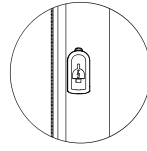

1. Lift the plastic flap.

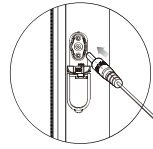


2. Plug the charger into the charging port.

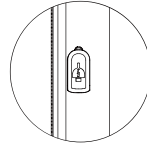

3. When charging is completed, put back the plastic flap.


5 How to Ride and Stop

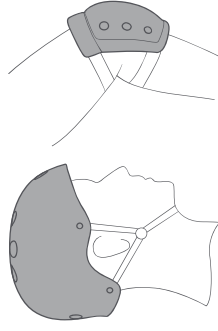

Always wear proper protective equipment, such as an approved safety helmet (with chin strap securely buckled), elbow pads, and kneepads.

A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, and long pants are recommended.

Always wear shoes and keep shoelaces tied and out of the way of the wheels and motor. Never ride barefooted or in sandals.

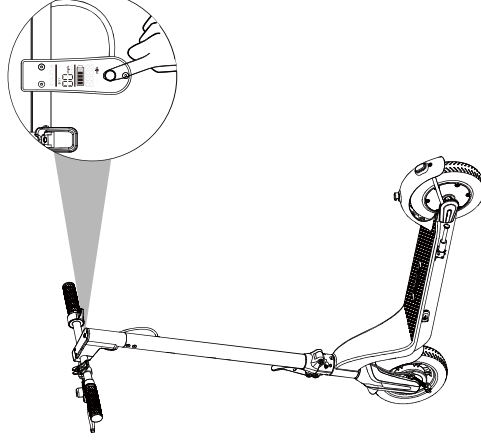

1. Press the power button and hold for 3 seconds to turn on the scooter, check the power indicator.