

User
manual

MultiScent²⁰

by NOAR





Care and use your device properly

Before operating this device, read the manual carefully. Observe the safety and operating instructions, including warnings.



- Do not place heavy objects on the product.



- Do not expose this device to magnetic fields, as magnetic interference may affect the performance of the device.



- Do not expose this device to high levels of direct sunlight or moisture.




- Do not block the ventilation grids on the sides of the device.




- Do not expose this product to liquids or damp locations.
- Do not connect the device to electricity for charging at temperatures below 32°C F or above 104°F.
- Do not expose the device to high temperatures (e.g., inside the closed car on a day of extreme heat).
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

1 Getting to know your MultiScent 20 device

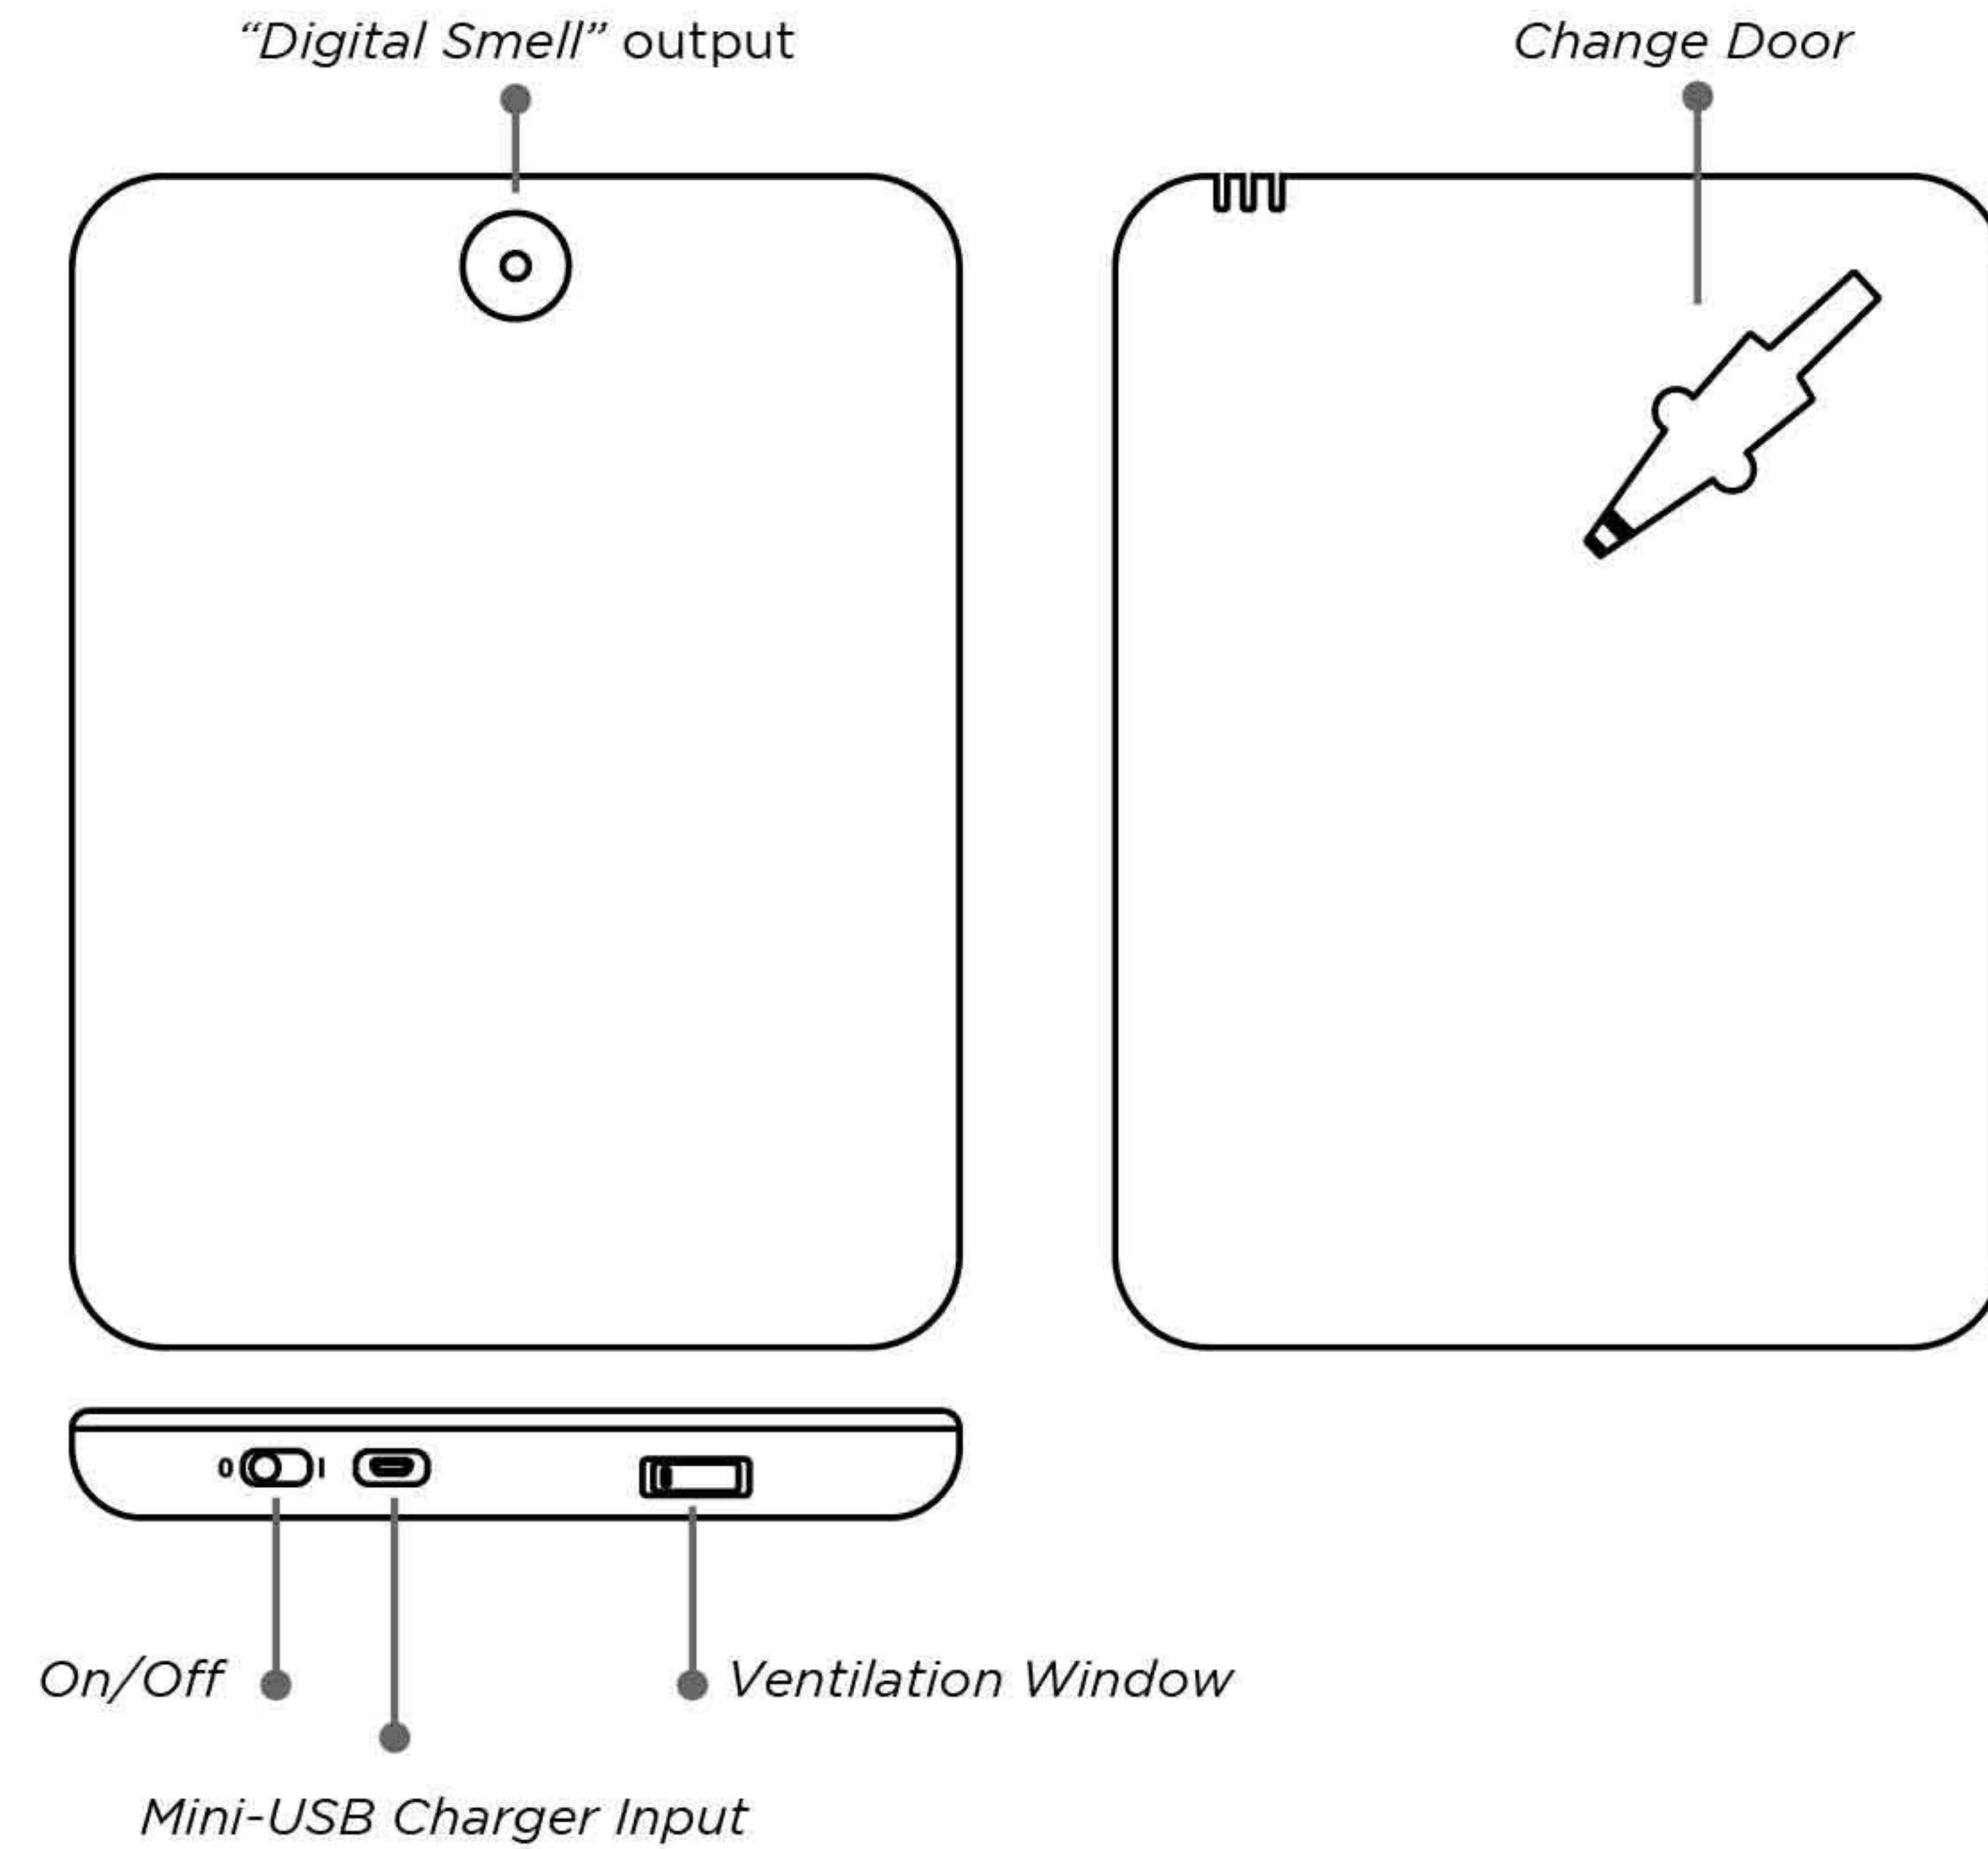

2 Getting to know the fragrance capsule

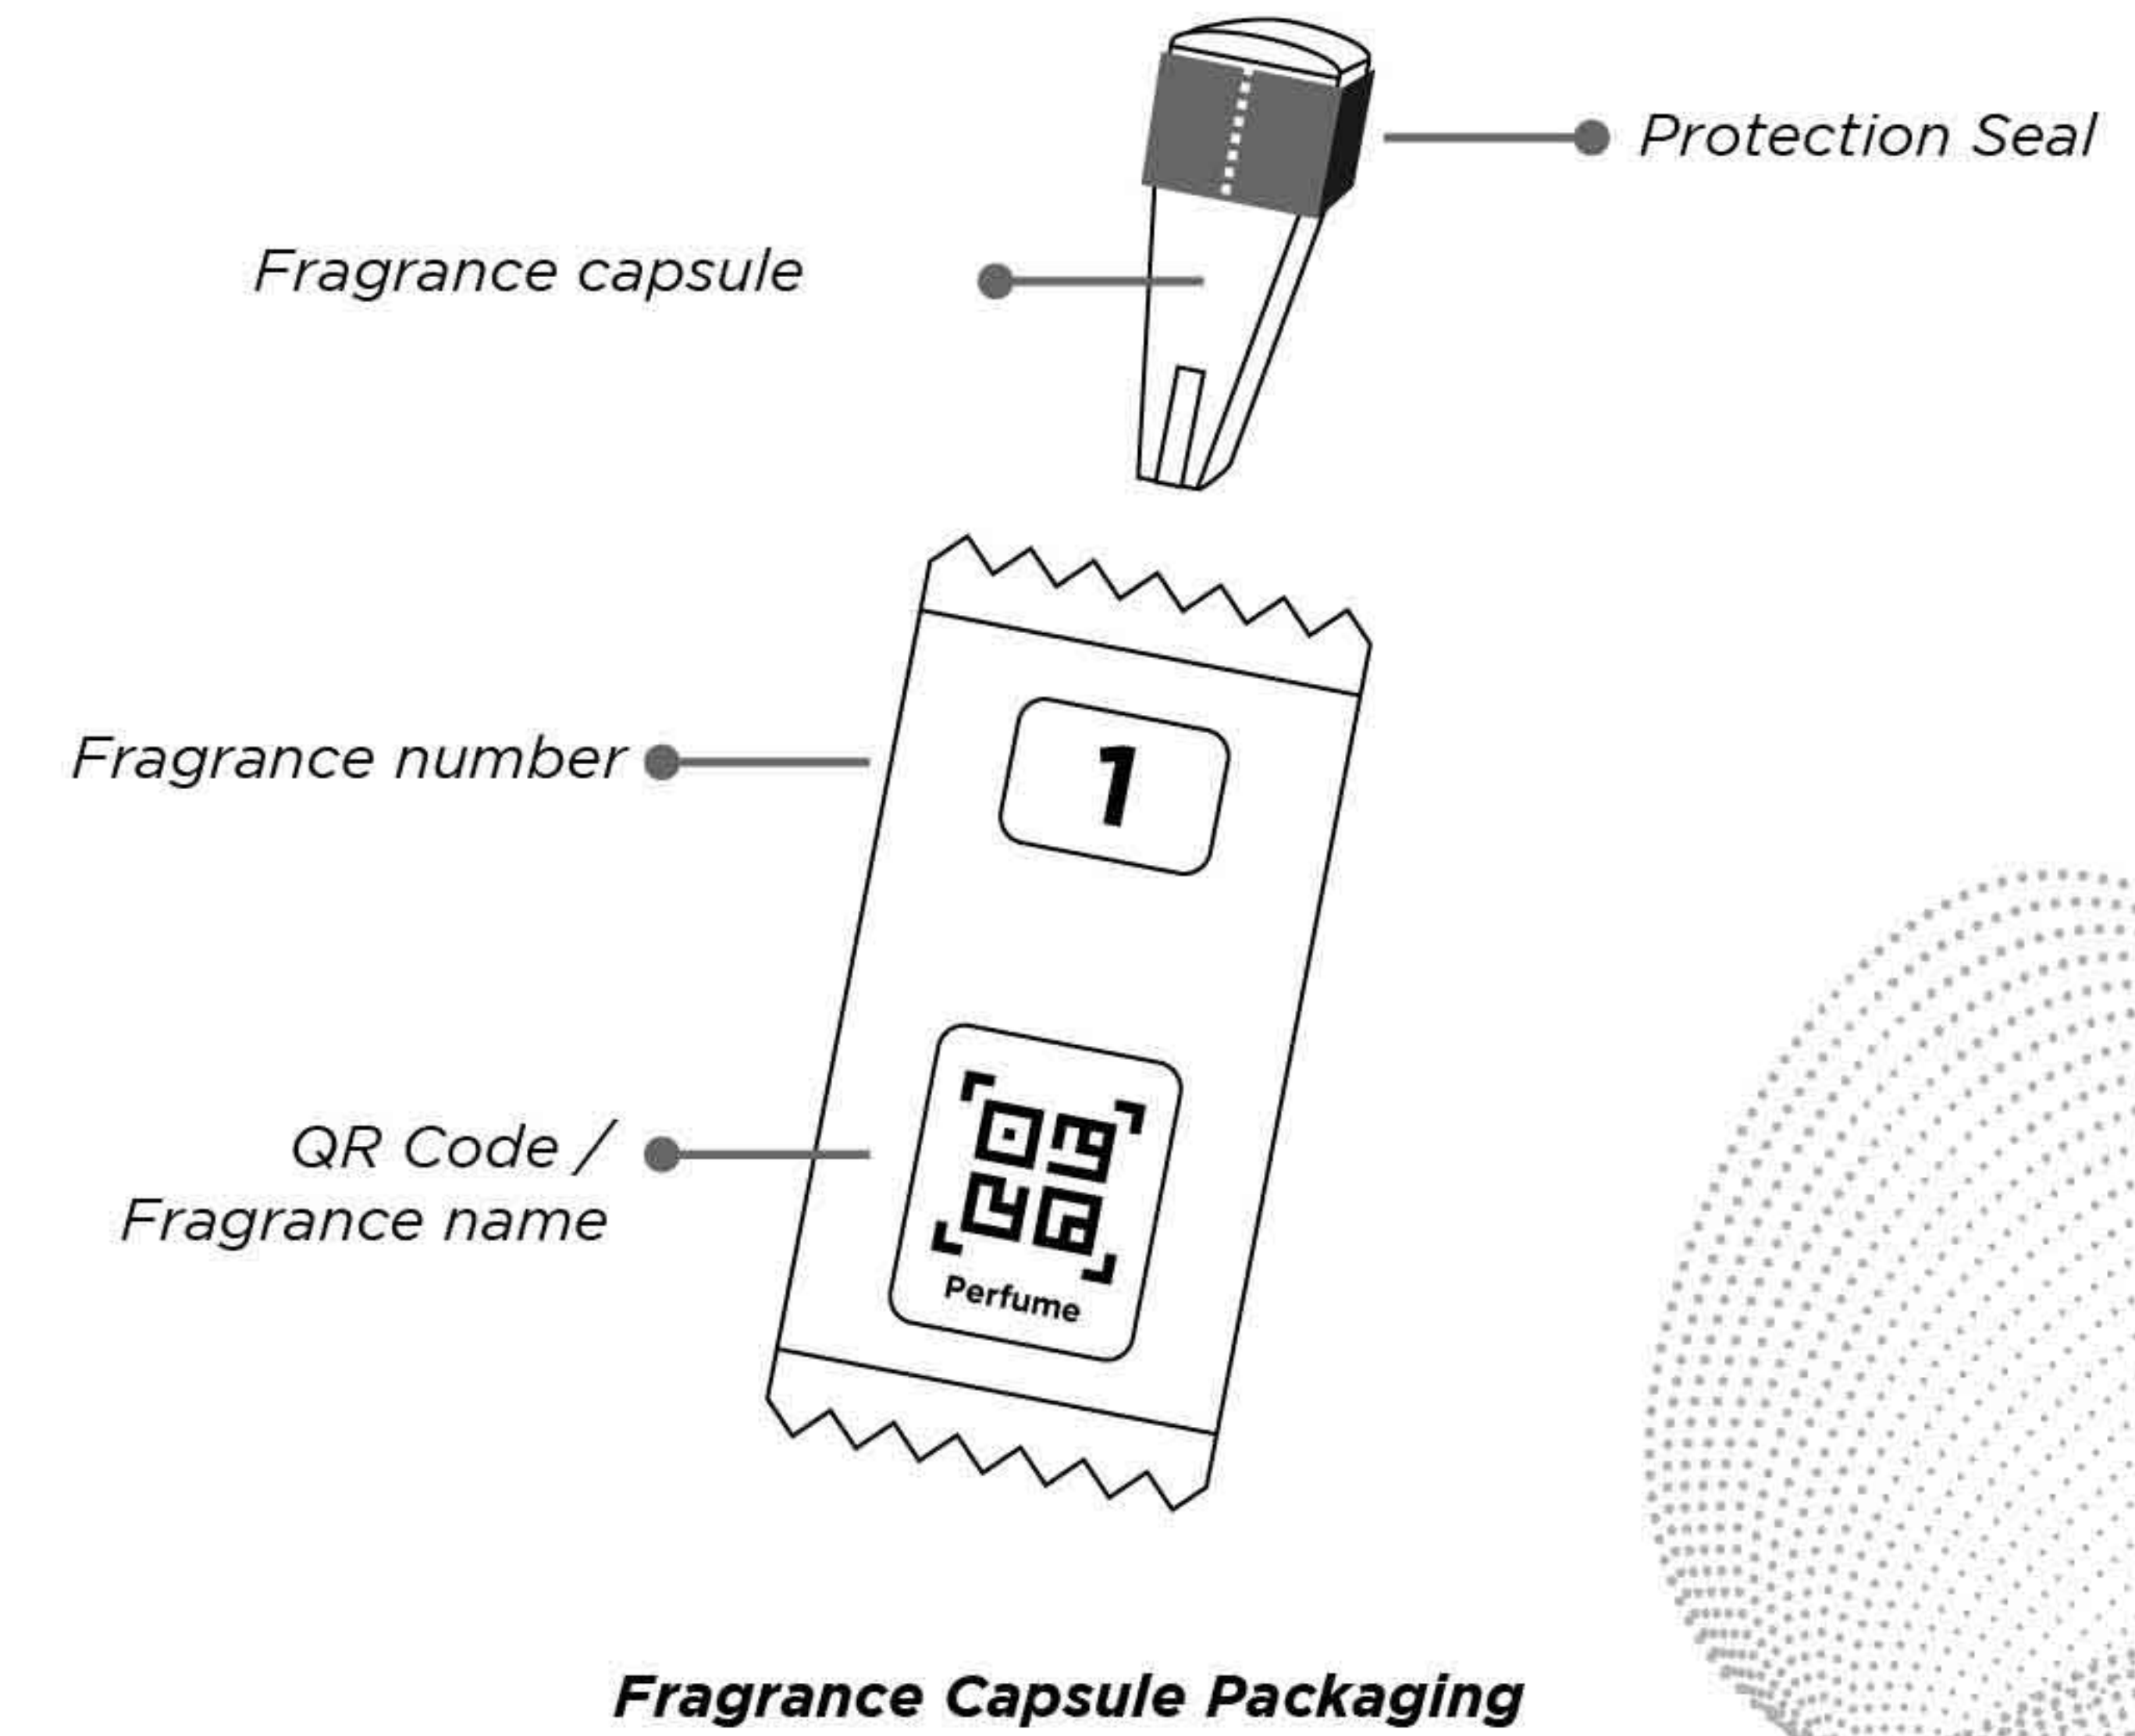


3 Preparing MultiScent 20 for first use

Charge the battery

Your device will not have its battery fully charged when it is first turned on. **We recommend you to charge it the first time for approximately 8 hours.**

Attention: If the device is not used for a long period of time, the battery will discharge. In this situation, we recommend you to charge it for approximately 6 hours for full charge.

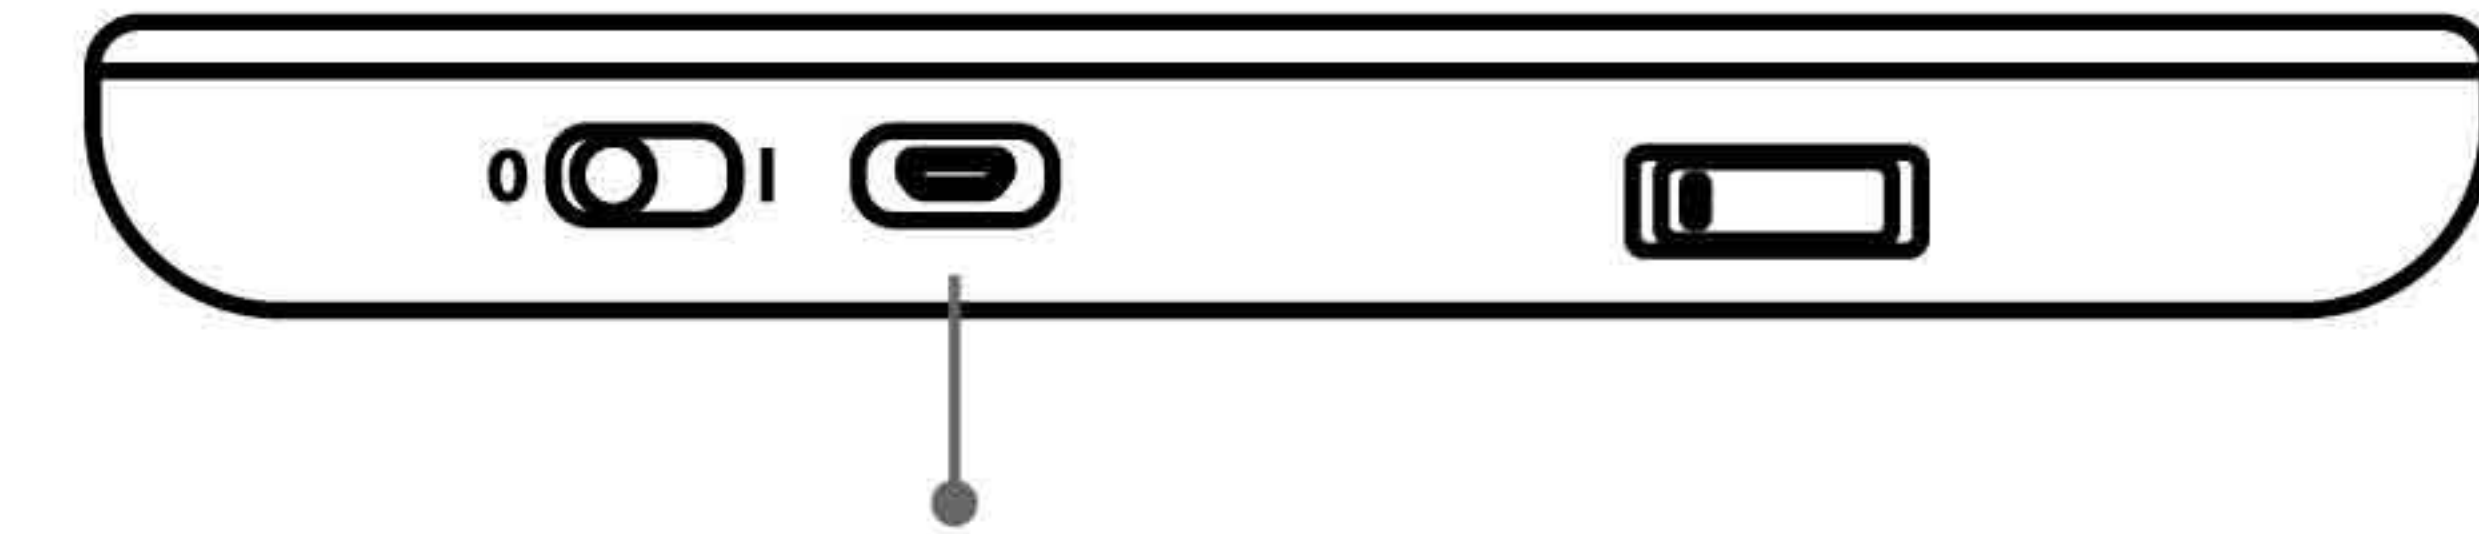

Connect the Bivolt charger to the device

1. Connect the Bivolt charger tip (mini-USB connector) to the device;
2. Connect the adapter to the outlet. The charging should start automatically;
3. Wait for the recommended charging time of **8 hours**.

You can check the battery charge level in the app running MultiScent 20 when the app is connected to the device.

4 Using MultiScent 20

An internet connection is required to download the app and register.

Then it will be possible to operate offline and connect from time to time to update the data.

1. Download the app compatible with your MultiScent 20 on the App Store or Play Store (refer to the apps indicated in the Quick Start Guide) and install it on your mobile or tablet.

2. The app uses location services to operate. When installed, the app will ask your permission to use it. Make sure this option is enabled and that you have not disabled it for any reason during use.

Minimum configuration

The minimum settings of your cell phone or tablet to operate the app are the following:

Android (cell phone or tablet): operating system 6 or higher

Iphone: models 6s or higher with iOS 13 or higher

Ipad: models with iOS 13 or higher

Please note


1. Before turning on your MultiScent 20 **open the Ventilation Window** of the device and keep it open during use.

2. After opening the Ventilation Window, turn on your MultiScent 20 by dragging the button to the “I” position. **Every time you turn on the device it performs an automatic process that lasts 22 seconds. Wait for this time before connecting to the app.**

3. Follow the configuration steps in the app. **You will need to register on the platform and then you will be able to synchronize your MultiScent 20** with the cell phone or tablet scanning the QR Code on the back of your device or selecting it from the list of devices that will appear on your app screen. Your device will be listed by the name “MultiScent 20”.

4. Once connected you will be guided by the app to insert the fragrances for the first time (see page 10).

5. Whenever you turn off and carry your MultiScent 20, **close the Ventilation Window.**

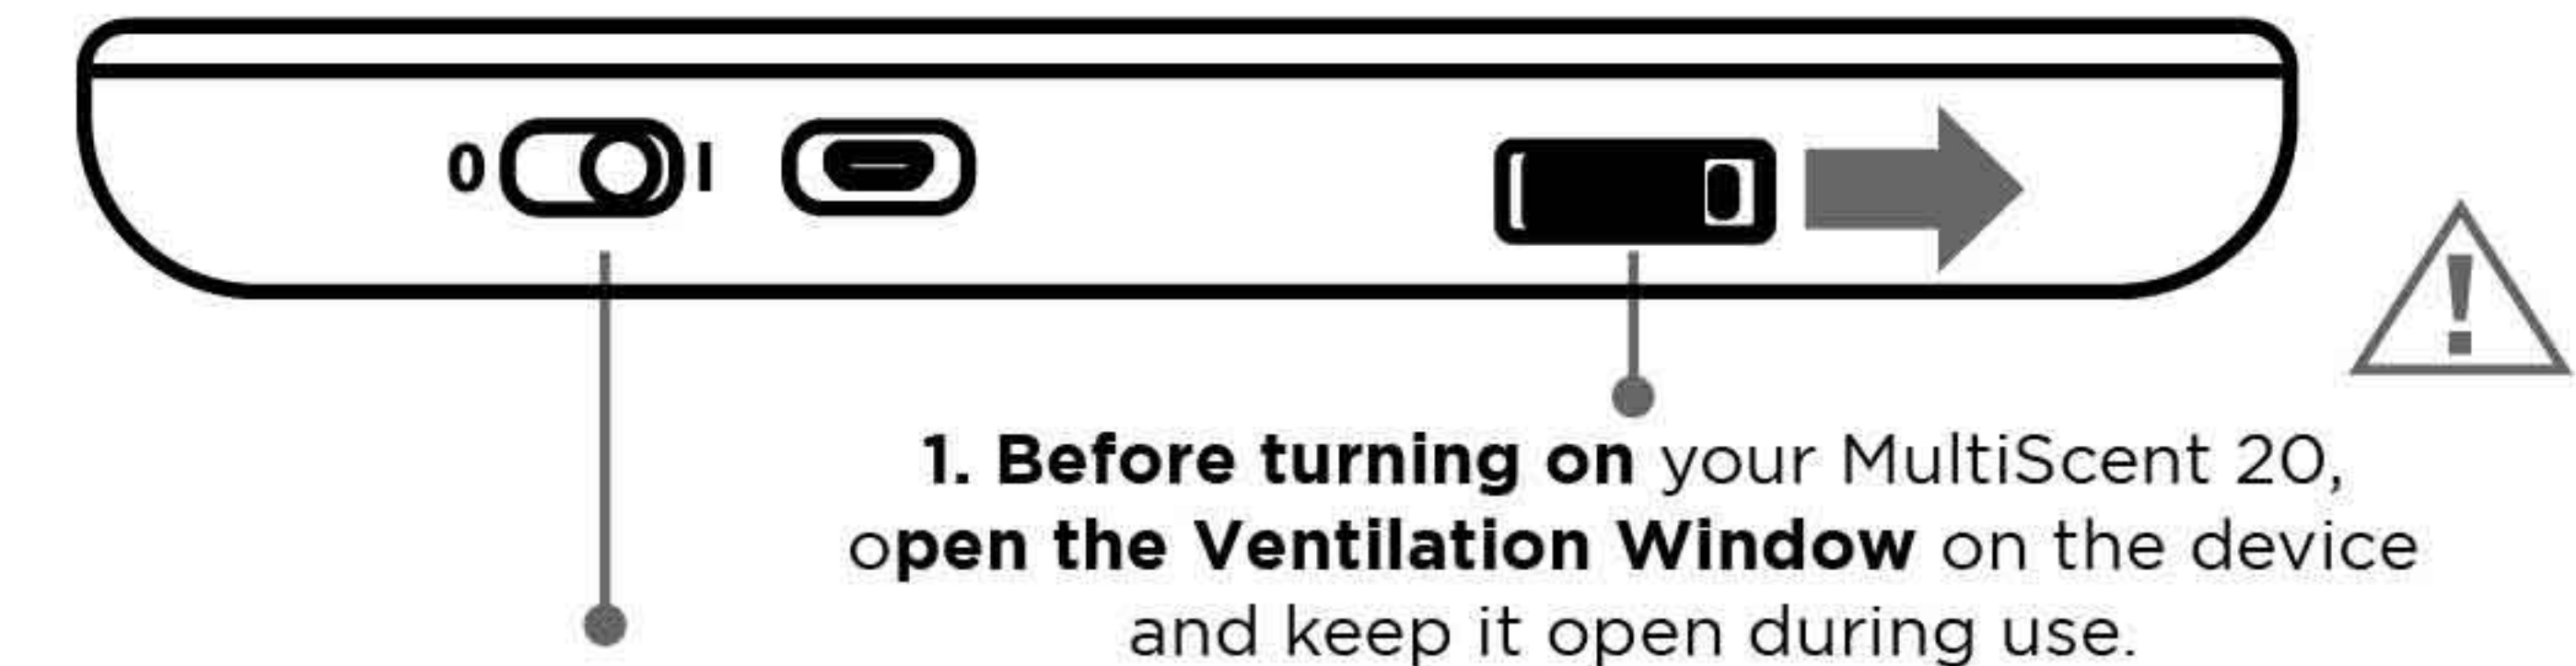


2. After opening the Ventilation Window, **turn on** your MultiScent 20 by dragging the button to the “I” **position** (“I” on).

3. After use, close the Ventilation Window and drag the button to the off (O) position


5 Inserting the fragrances in your MultiScent 20

The first time you use your MultiScent 20 you will need to insert the 20 fragrances in your device.

1. When the app tells you to insert the fragrances follow the steps on your cell phone;

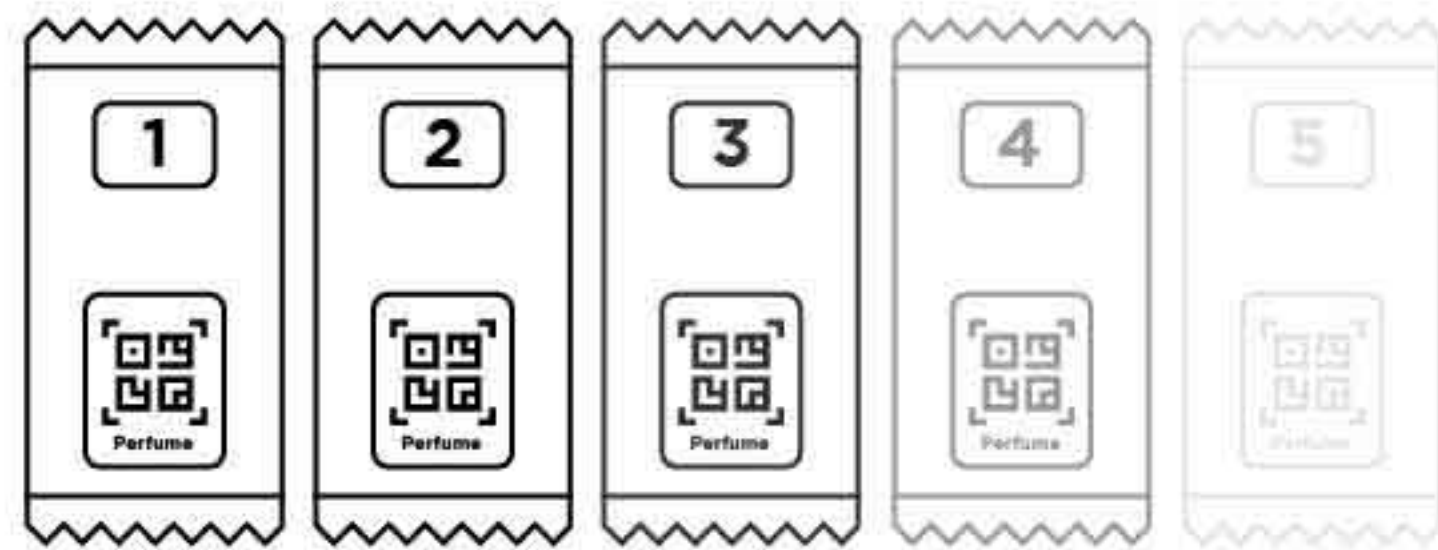



2. Arrange packages in numerical order (1, 2, 3, 4, 5...to n. 20). This will be the order in which the app will tell you to insert the capsules;

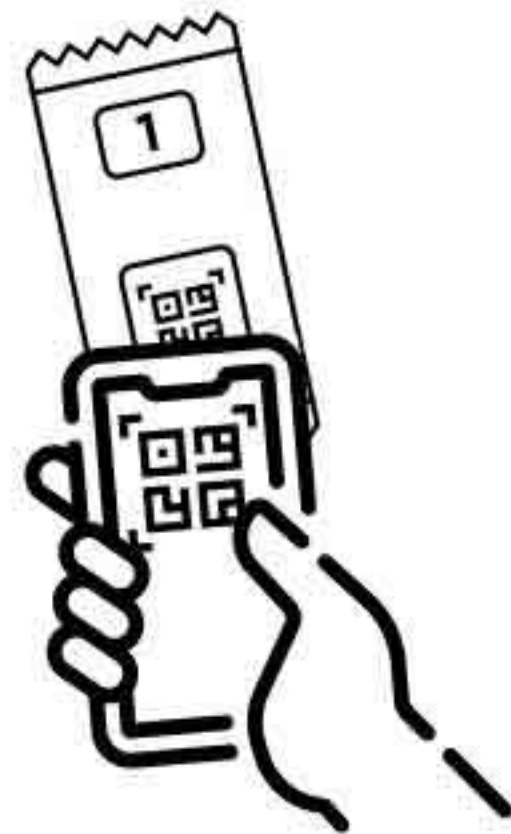


3. When the app opens the camera, scan the QR Code on the package of the capsule corresponding to the number ordered;



4. Wait for the MultiScent 20 app to recognize the QR Code and remove the capsule from the package;

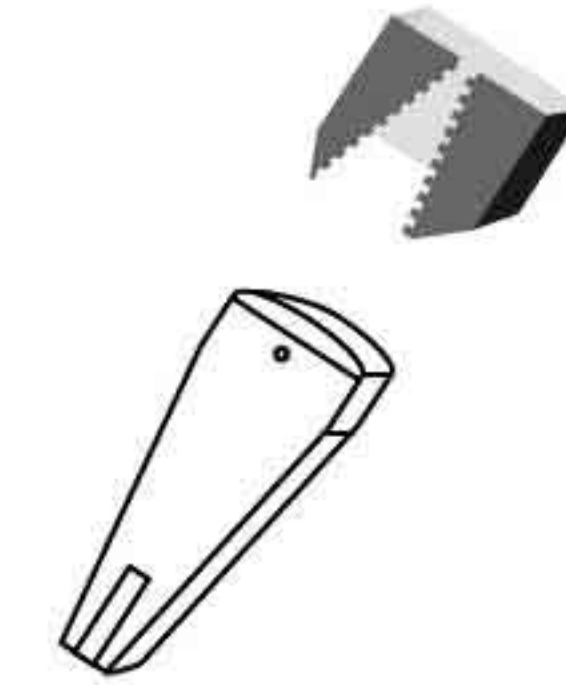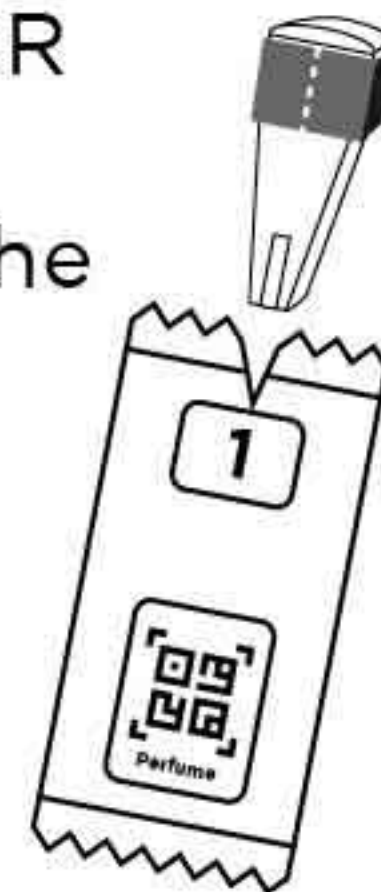


5. Remove the safety seal from the capsule;

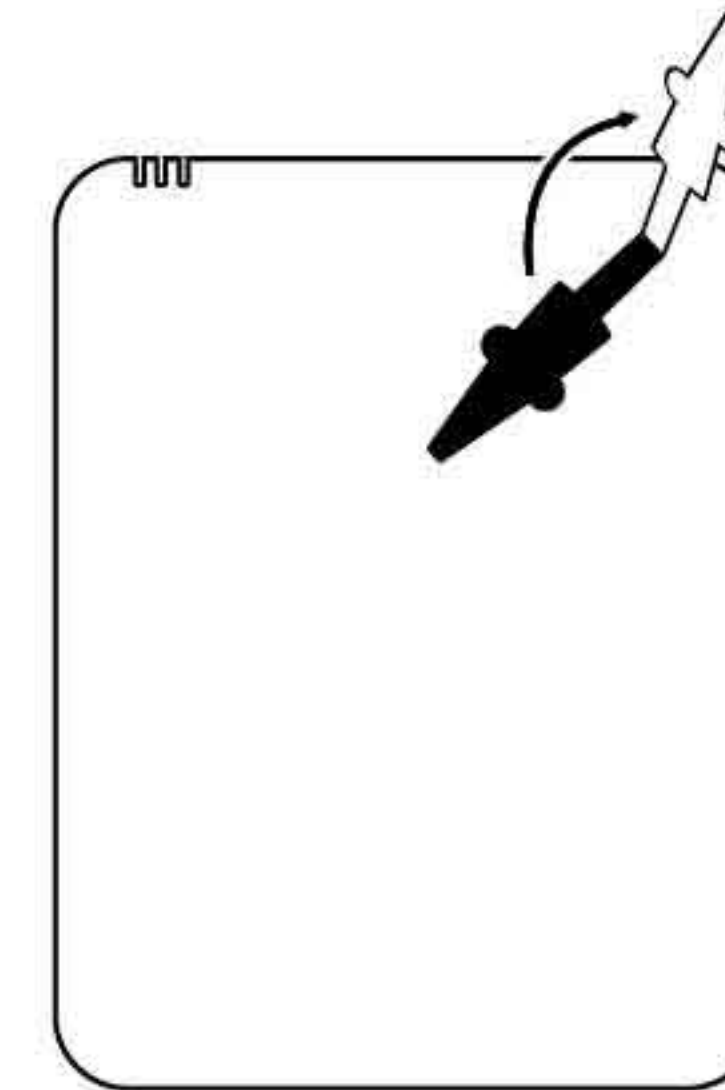

6. Open the capsule change door on the back of your MultiScent 20;



7. Holding the capsule with the plastic pin facing up, fit it inside your MultiScent 20;

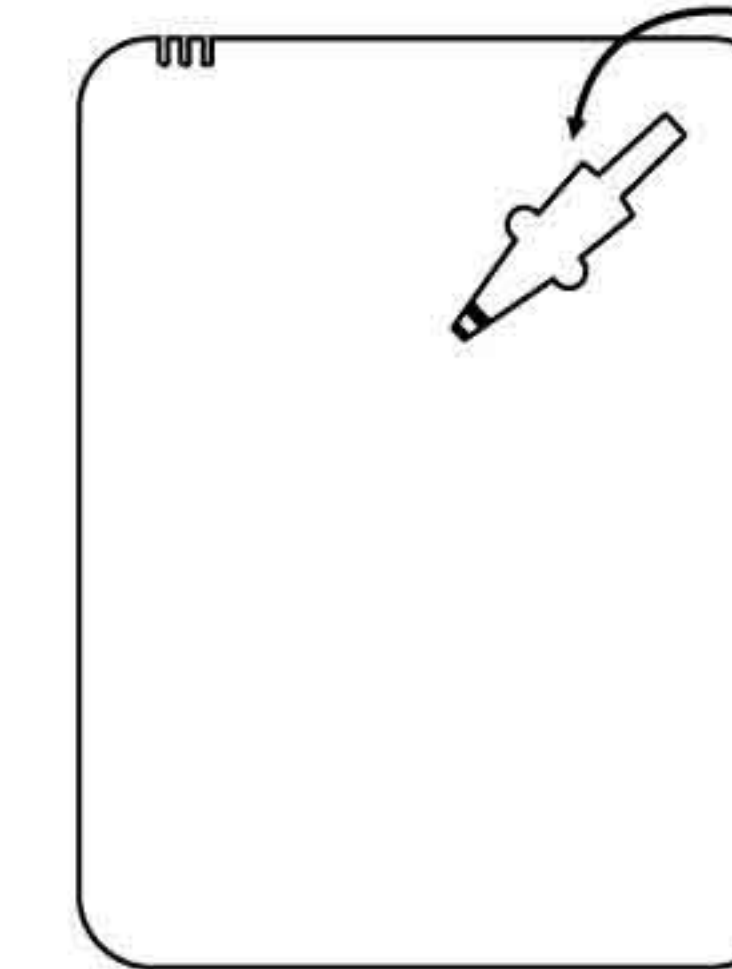

8. Close the door and confirm in the app that you have inserted the capsule.


Follow these steps for the remaining fragrances. Your MultiScent 20 will be ready to use!

Attention! Keep the exchange door closed whenever you are not inserting or removing a capsule.

6 Changing empty or expired capsules


If the app tells you to exchange the capsule of some fragrance because there are no more shots available or because there is a new fragrance collection being promoted, follow the following steps:

1. When the app tells you to change the fragrances, follow the steps indicated on your cell phone;

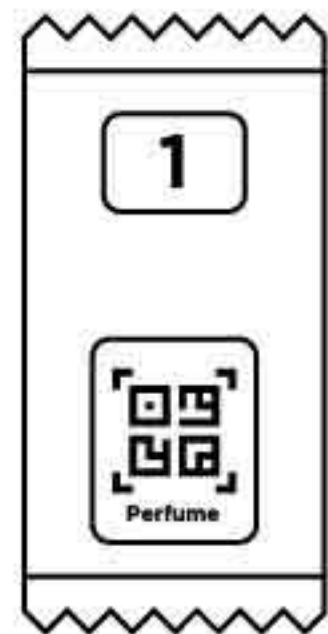


2. Separate the corresponding packaging for the exchange;



3. The moment the app opens the camera scan the QR Code of the package corresponding to the number ordered;

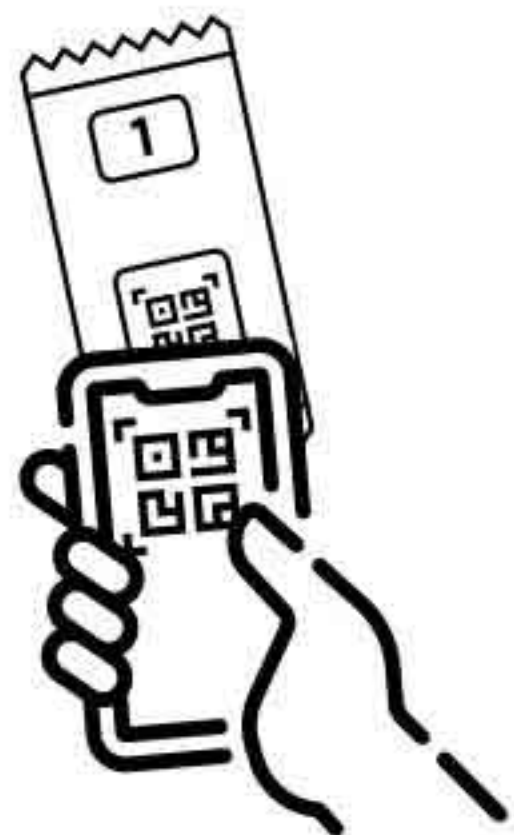


4. Wait for the MultiScent 20 app to recognize the QR Code and remove the capsule from the package;

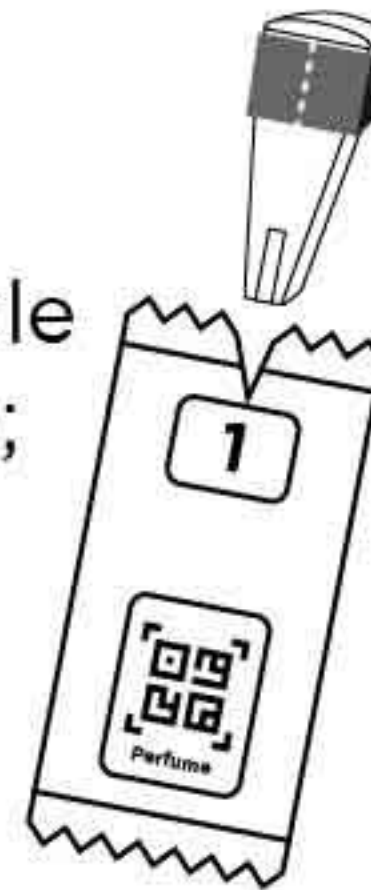


5. Remove the protective seal from the capsule;

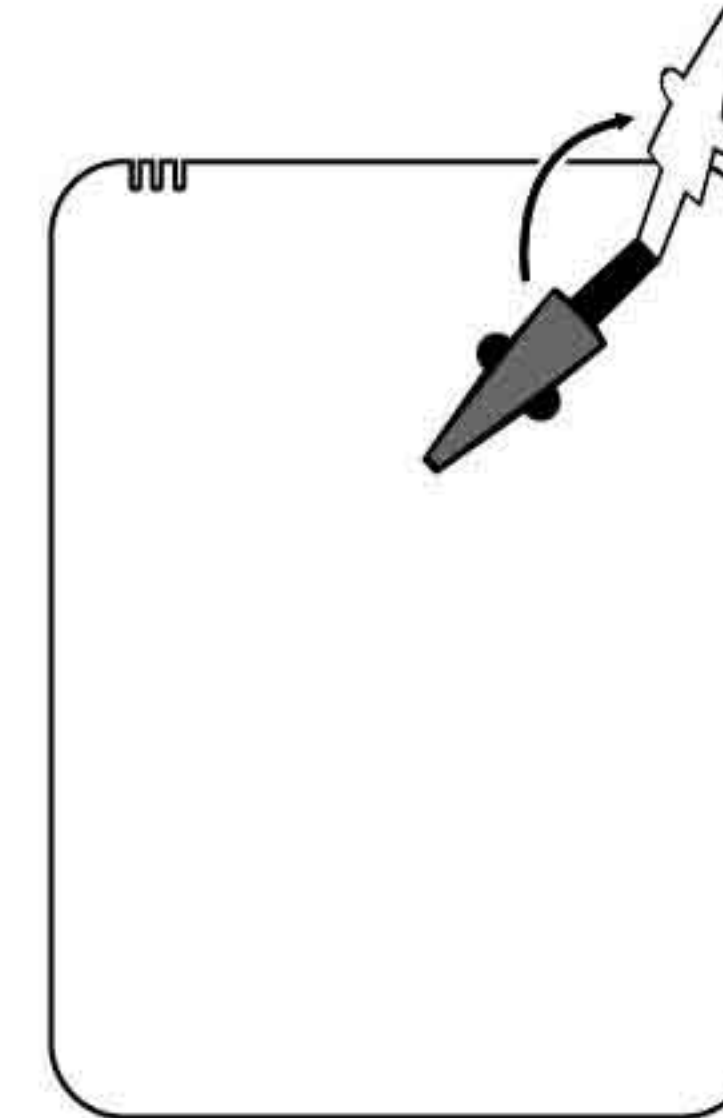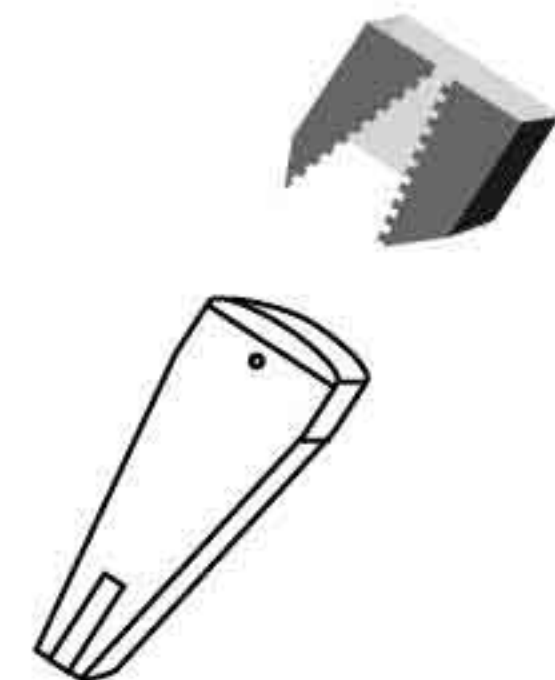


6. Open the capsule change door in the back of the MultiScent 20;

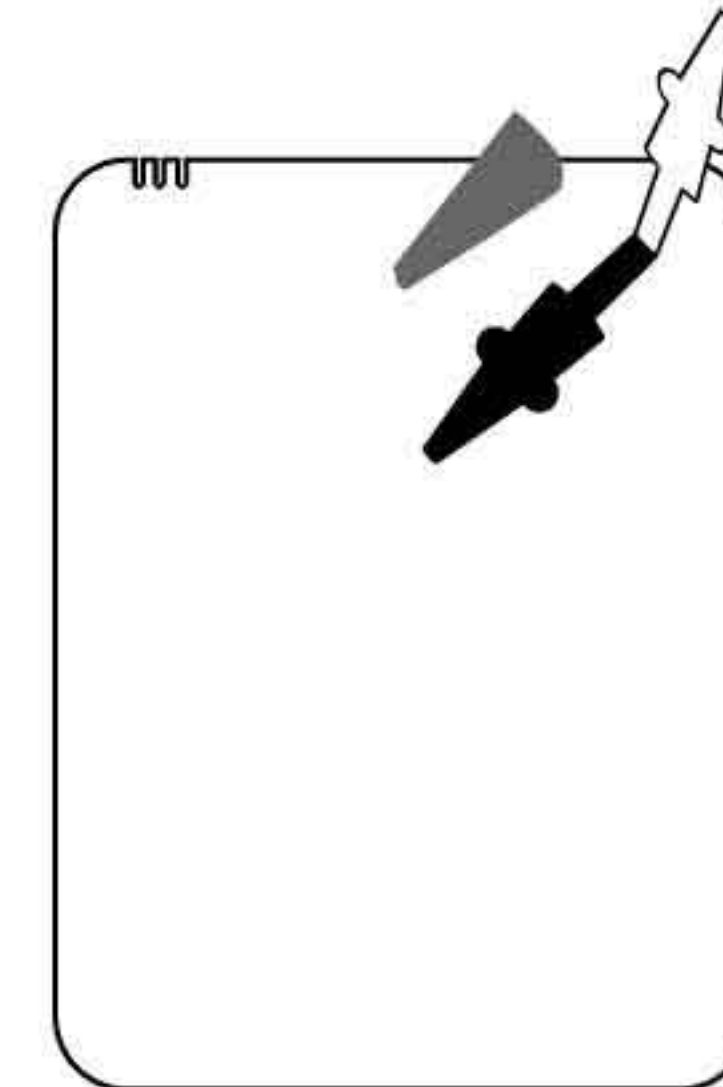

7. Remove the old capsule from the MultiScent 20 ;

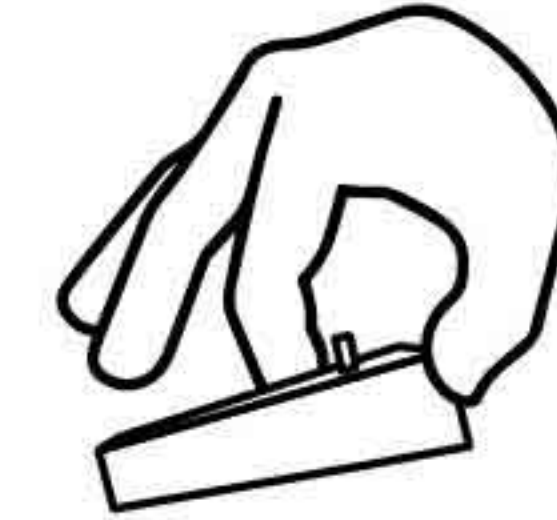

8. Holding the new capsule with the plastic pin facing up, fit the refill inside your MultiScent 20;

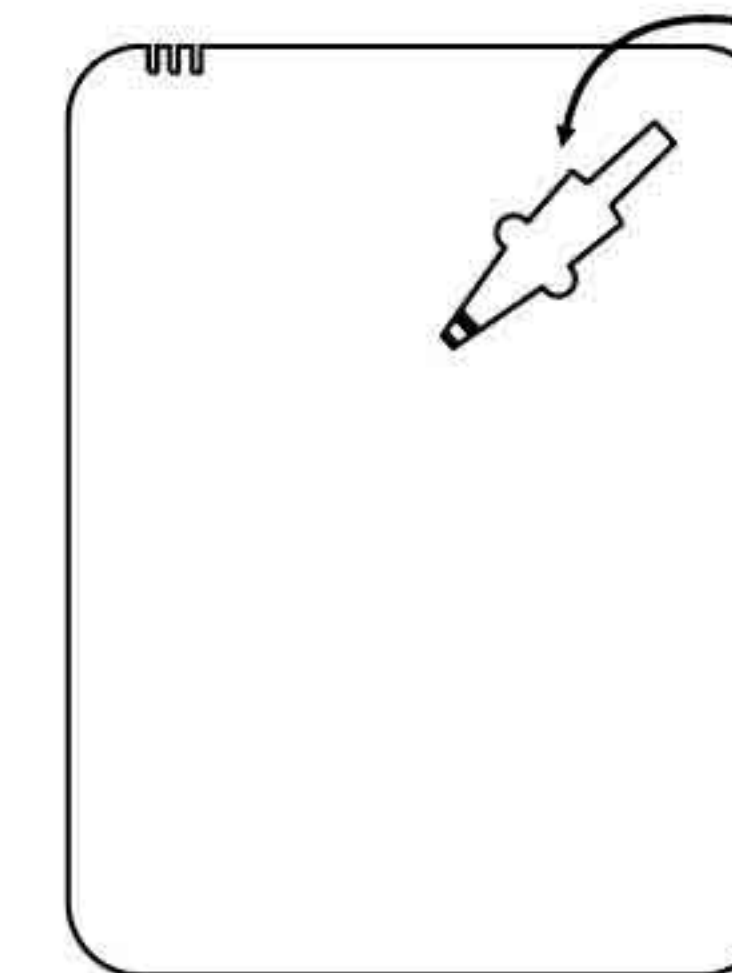


9. Close the door and confirm in the app that the change has been made.


Attention! Keep the exchange door closed whenever you are not inserting or removing a capsule.

7 Trying the fragrances in the MultiScent 20

- While using the MultiScent 20 app you can experience the fragrances touching the “Try” button
- When activated and the scent is triggered, you can feel it up to 4 in away from the device.
- No droplet or residue is released on the user and it is possible to experience the fragrances with protective masks.
- Each shot lasts about 6 seconds.

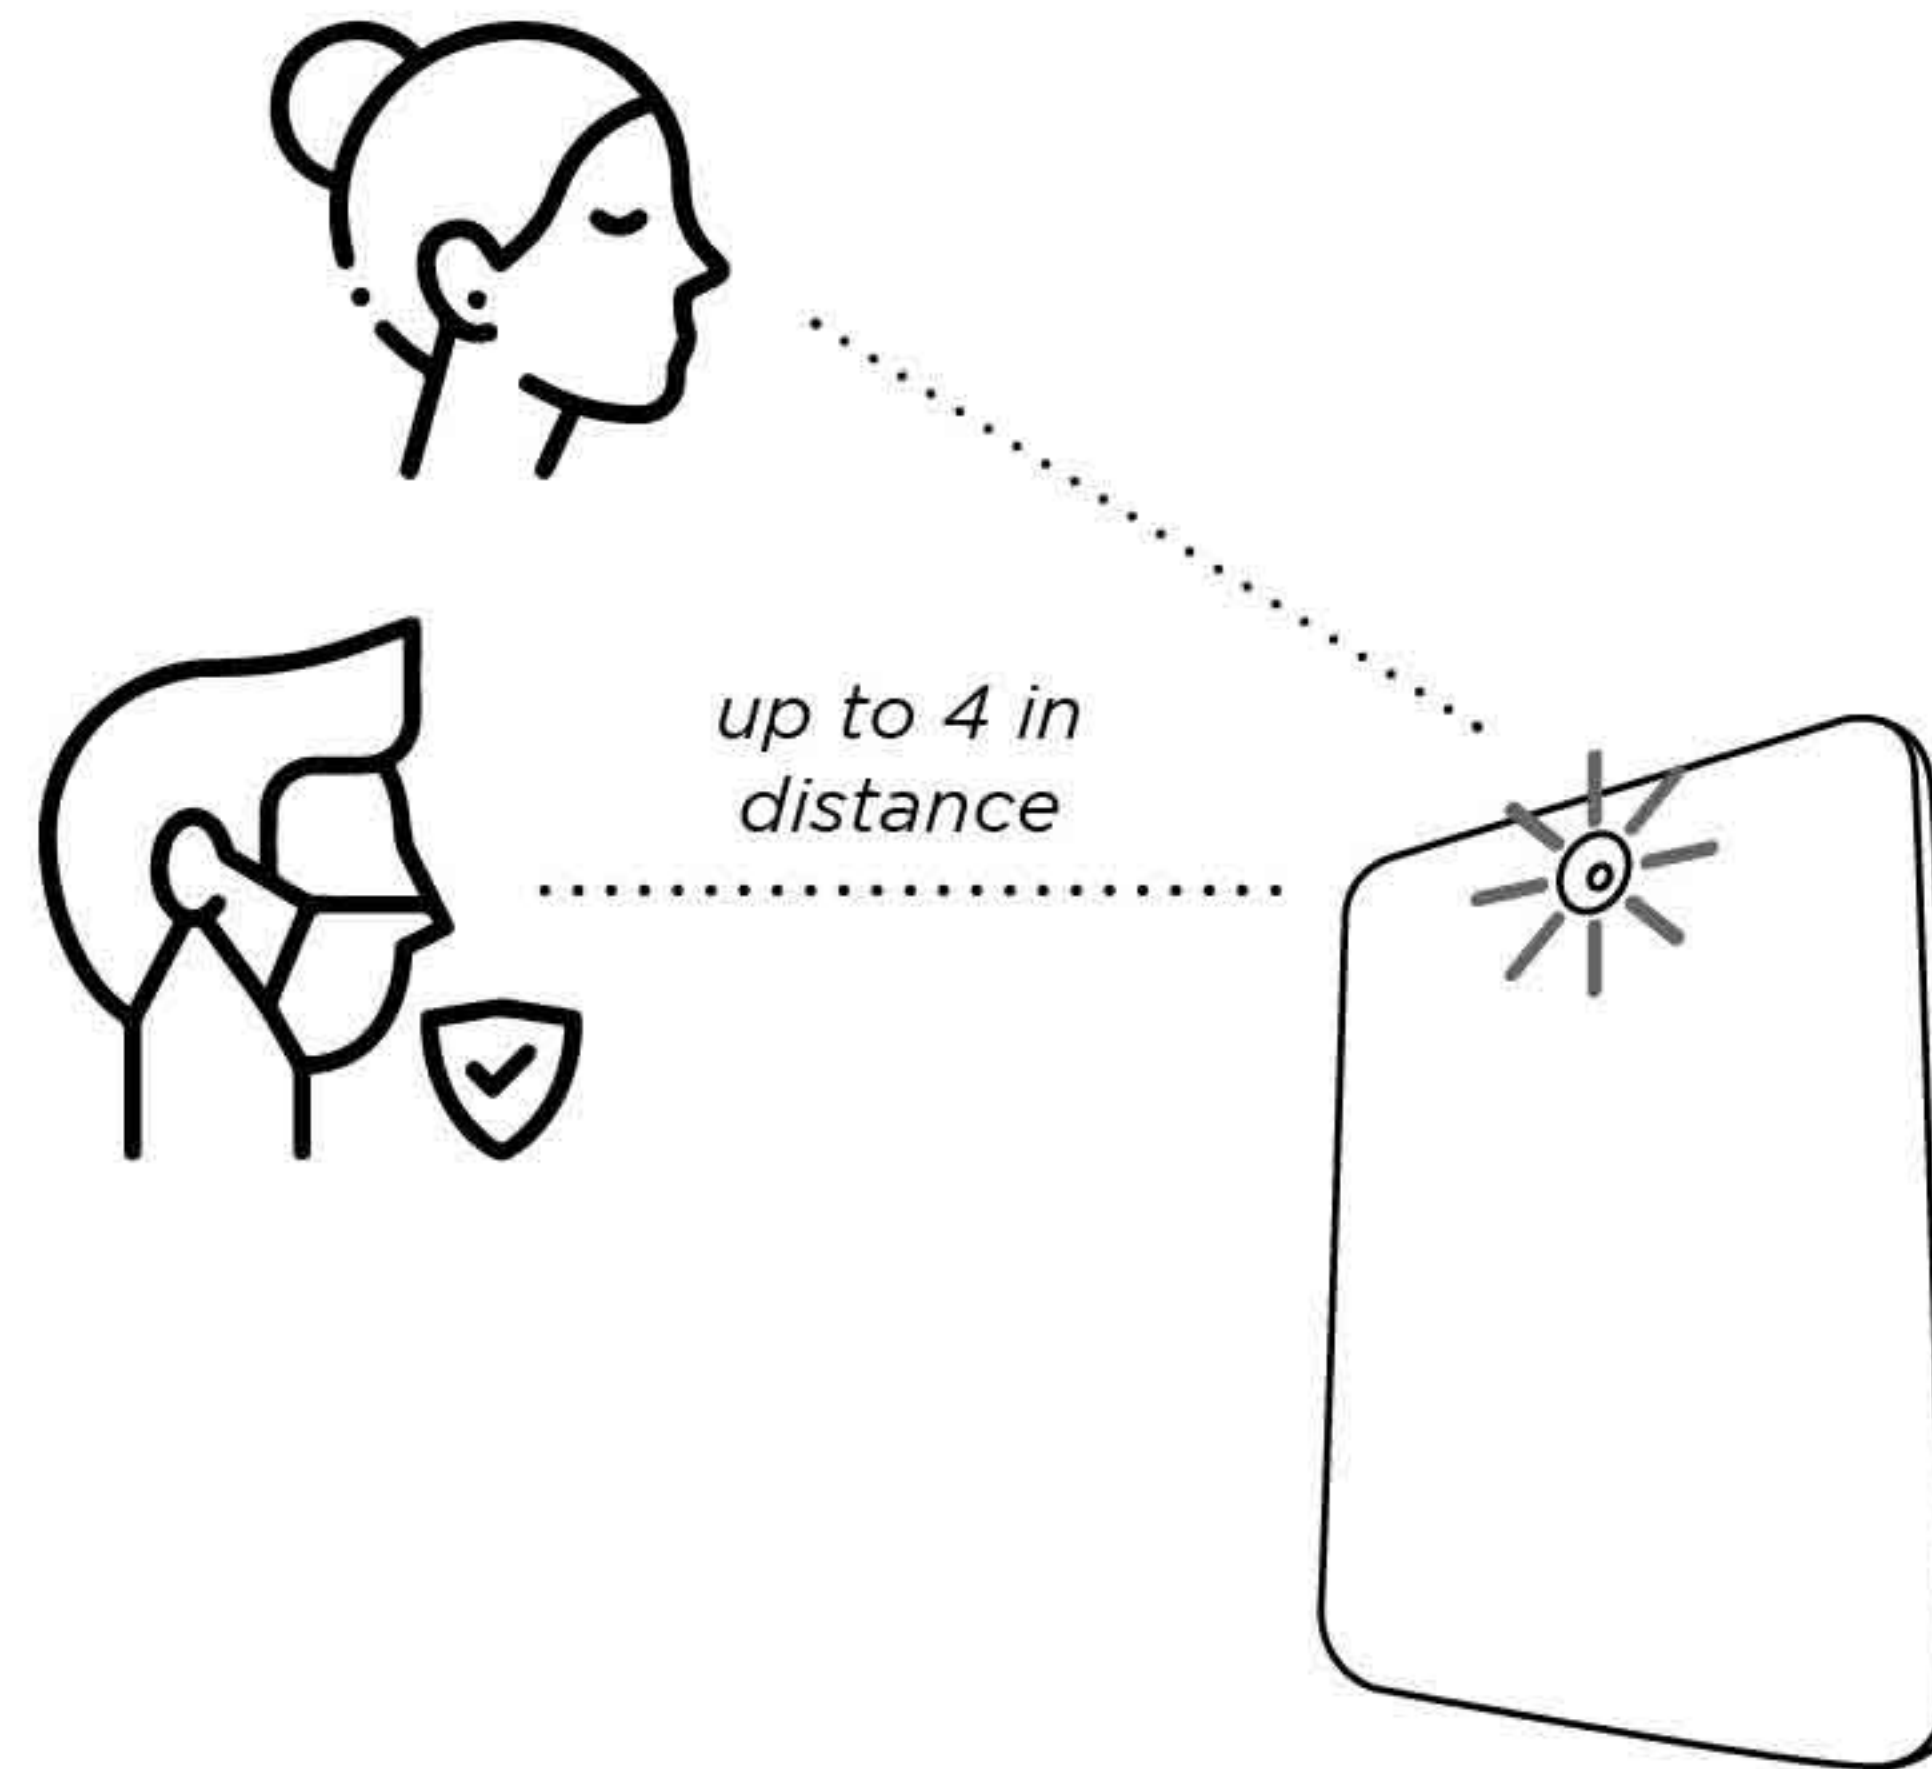

8 Turning off the MultiScent 20

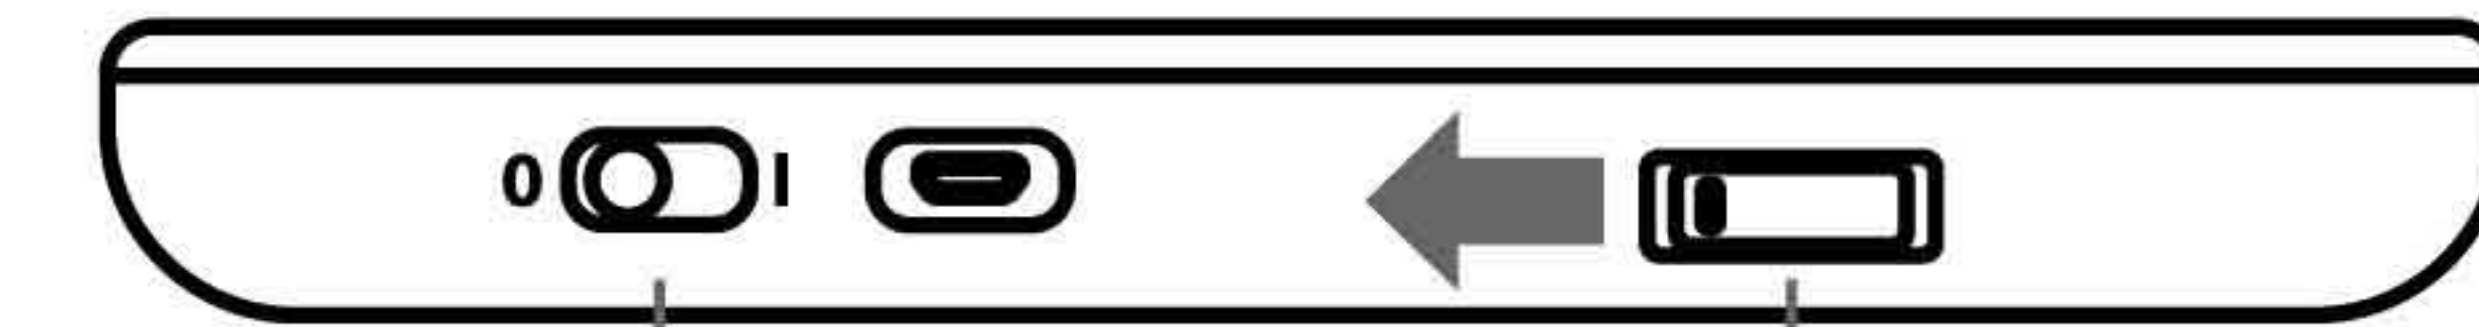

(“0” off)


**Never forget
to turn off your
MultiScent 20
after use!**



After turning off your MultiScent 20, **always close the Ventilation Window** of the device and keep it closed during rest and transport.

9 Cleaning your MultiScent 20

Clean the entire exterior of the device with a tissue moistened with **alcohol 70% after each person's use.**

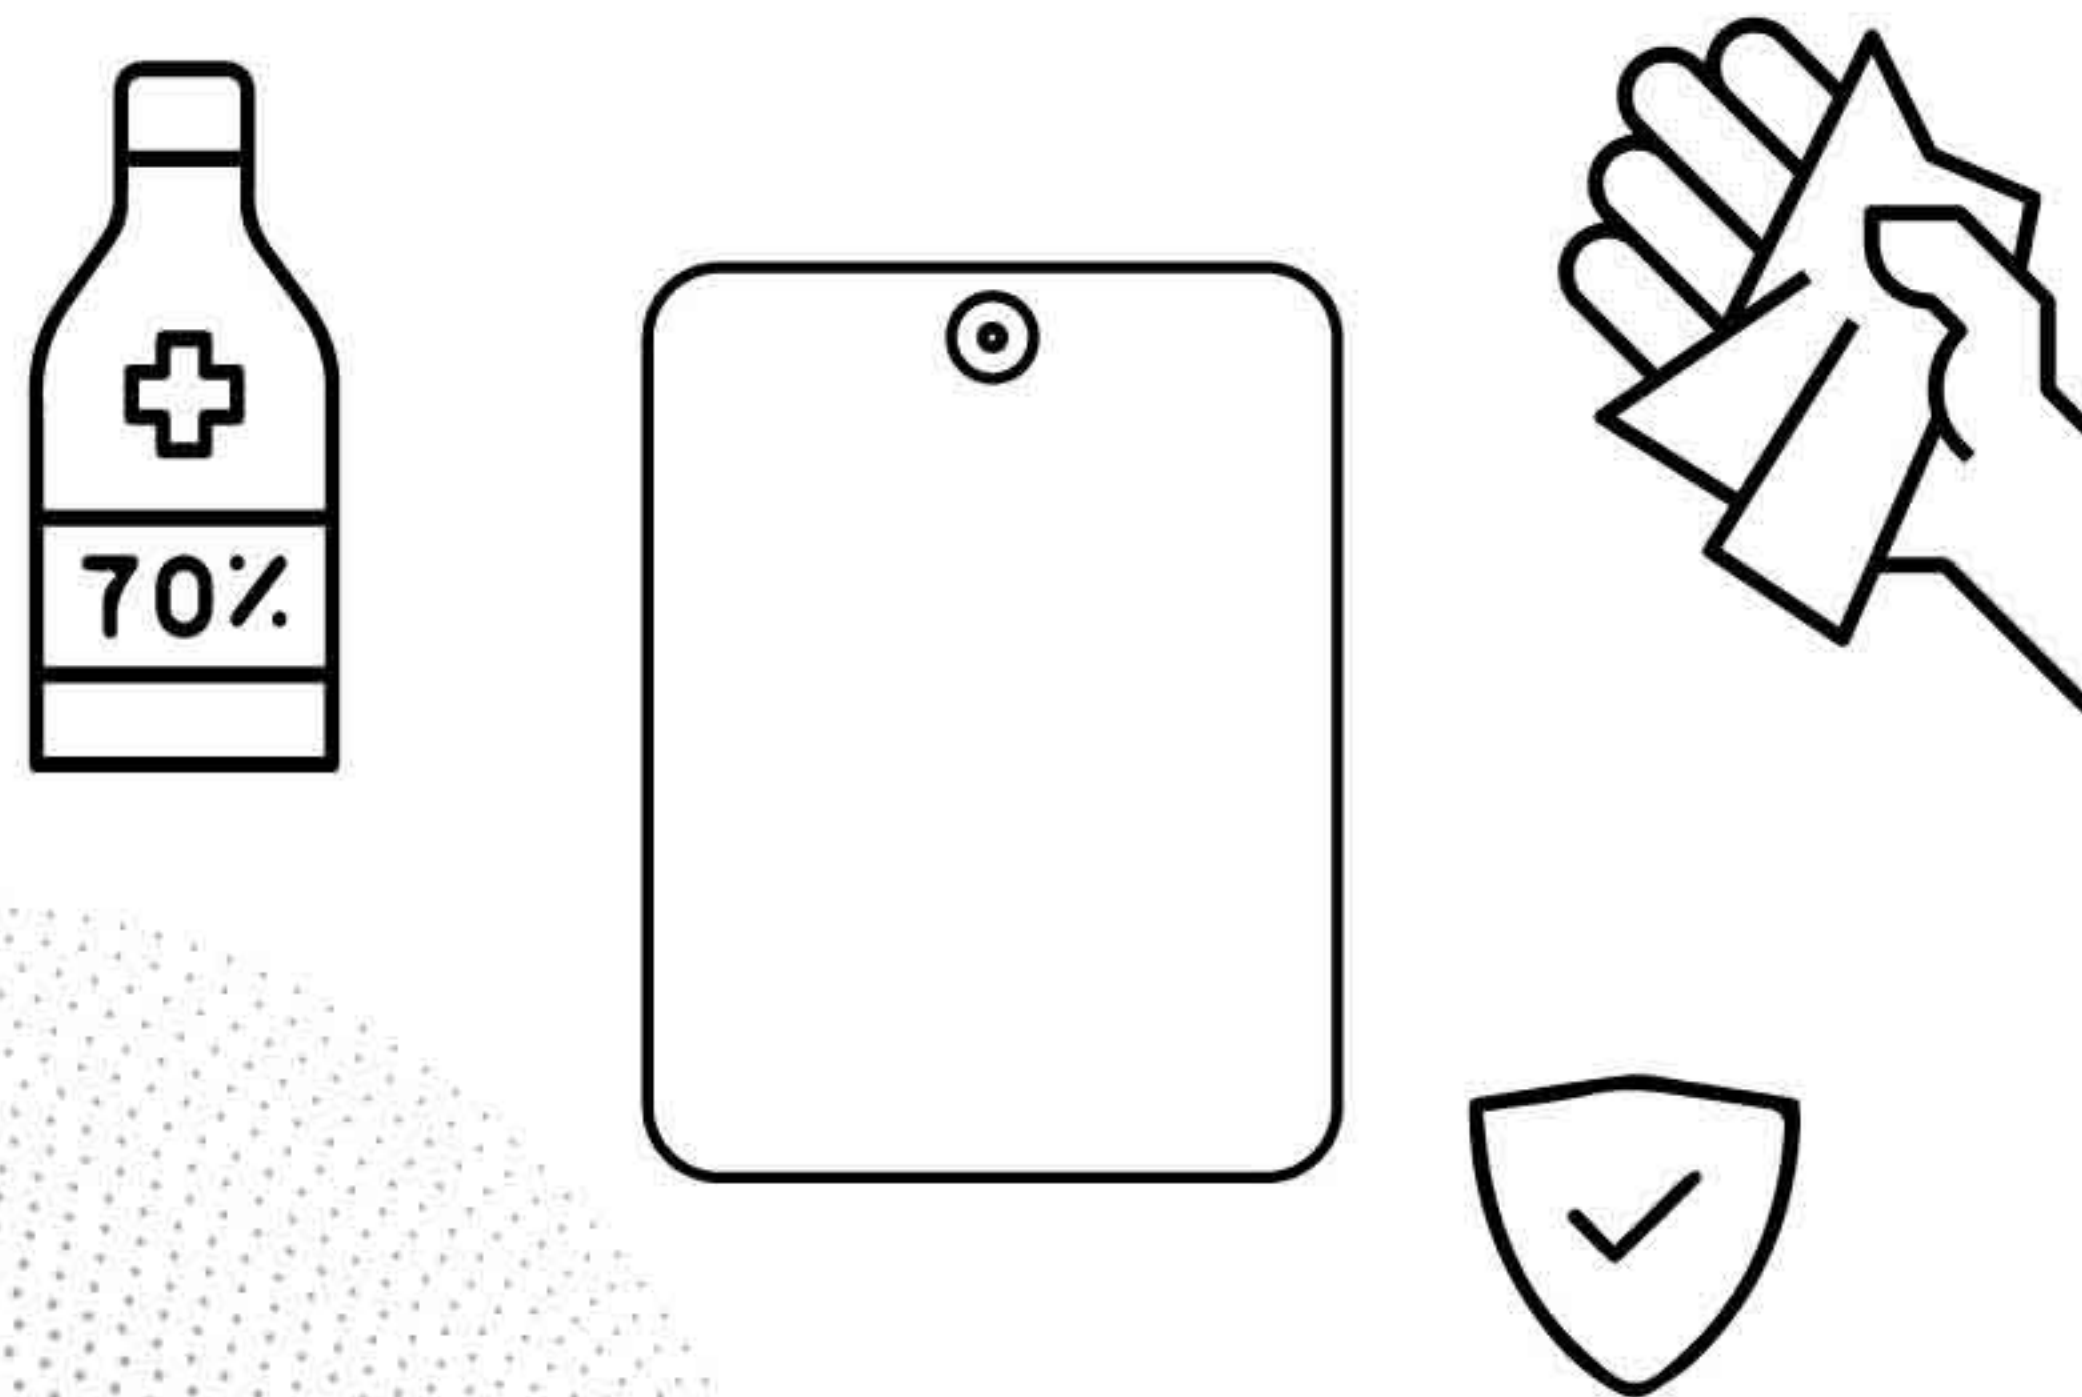

10 Troubleshooting

1. My device does not turn on.

Make sure it is charged. Make sure the on/off button is in “I” position.

2. I can't download the app

Check if your smartphone or tablet has the minimum settings to operate the app (page 8).

3. I can't connect my MultiScent 20 to the app.

Check that your device is on (position “I”) and the battery is charged. If you have already used your MultiScent 20 on your phone, turn the device on and open the app. The fragrance catalog will automatically charge in 5 seconds.

The app uses location services to operate. When installed, the app will ask your permission to use it. Make sure this option is enabled and that you have not disabled it for any reason during use.

4. The app does not recognize the capsule I am trying to insert.

Make sure you are trying to replace the correct fragrance. The app will not do the recognition if you try to put a different fragrance in the same place.

If you need further assistance, please check the service channels in the Quick Start Guide that comes with this product.

11 MultiScent 20 Guarantee Certificate

This device is guaranteed by NOAR, according to the conditions established below:

1. NOAR guarantees this Product against vices and defects, under normal conditions of use by the customer during the period of its validity which includes: 90 days of legal warranty and 09 additional months of contractual warranty.
2. The warranty period is counted from the date of issuance of the Sale Invoice (the “Warranty Period”).
3. When the Product or its part is exchanged by NOAR the discarded item (replaced) will become the property of NOAR.
4. In case of reimbursement of the price, the Product whose value has been reimbursed, must be returned to NOAR and will become the property of NOAR.
5. NOAR is not responsible for damages resulting from not following the instructions related to the use of the product or even for updates made by the customer.
6. This warranty does not apply to: (a) external damages in its appearance, including, without limitation, scratches, dents, broken plastic, etc; (b) damages caused by accident, misuse, contact of corrosive liquids, abrasive or not, fire, earthquake or other causes of external origin; (c) damages caused by improper use of the product in disagreement with the instructions and the use recommendations described by NOAR; (d) damage caused by services (including upgrades and expansions) provided by any person other than an authorized NOAR service provider; (e) the part that has been modified so as to alter the functionality or capability of the Product without the written permission of NOAR; (f) defects due to natural wear and tear resulting from use or of a different nature that are caused by normal aging of the Product; or (g) if NOAR’s serial number has been removed or disfigured.

Important: Product disassembly should only be done by NOAR or an authorized NOAR service provider. Opening the Product may cause damage not covered by this warranty.

The Product or a replacement Product will be returned to you with the same factory setting as the original Product on the date it was purchased, subject to applicable updates.

12 Technical support and doubts

For warranty and technical support guidance or in case of doubt, check the service channels available in the Quick Start Guide that comes with this product.

FCC Warning:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

13 Technical specifications



MultiScent²⁰ by NOAR

Dimensions:

21,5cm x 16,1cm x 2,1 cm (length x width x height)

Weight:

445 g (no load) / 492 g (loaded)

Power:

3.7 VDC / 1800 mAh (internal battery)

Wireless:

Bluetooth LE (2.4 GHz)

14 International Certifications



This product is homologated by ANATEL, in accordance with the procedures regulated by **Resolution n° 715/2019 ANATEL**, and meets applicable technical requirements.

Incorporates the product homologated by ANATEL under the number **06727-20-13044**.

For more informations, please refer to the ANATEL website: <https://sistemas.anatel.gov.br/sch>

This equipment is not entitled to protection against harmful interference and may not cause interference in duly authorized systems. (Resolution n° 680/2017 ANATEL)



Hereby, a NOAR BRASIL declares that the MultiScent20 is in compliance with the European Directives **2014/53/EU (RED)** and **2011/65/EU (RoHS)**.

The full text of the European Declaration of Conformity is available at the following internet address: www.noarbrasil.com.br/certifications




This device complies with part 15 of the FCC Rules.

FCC ID: 2A2JH-GC840640

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

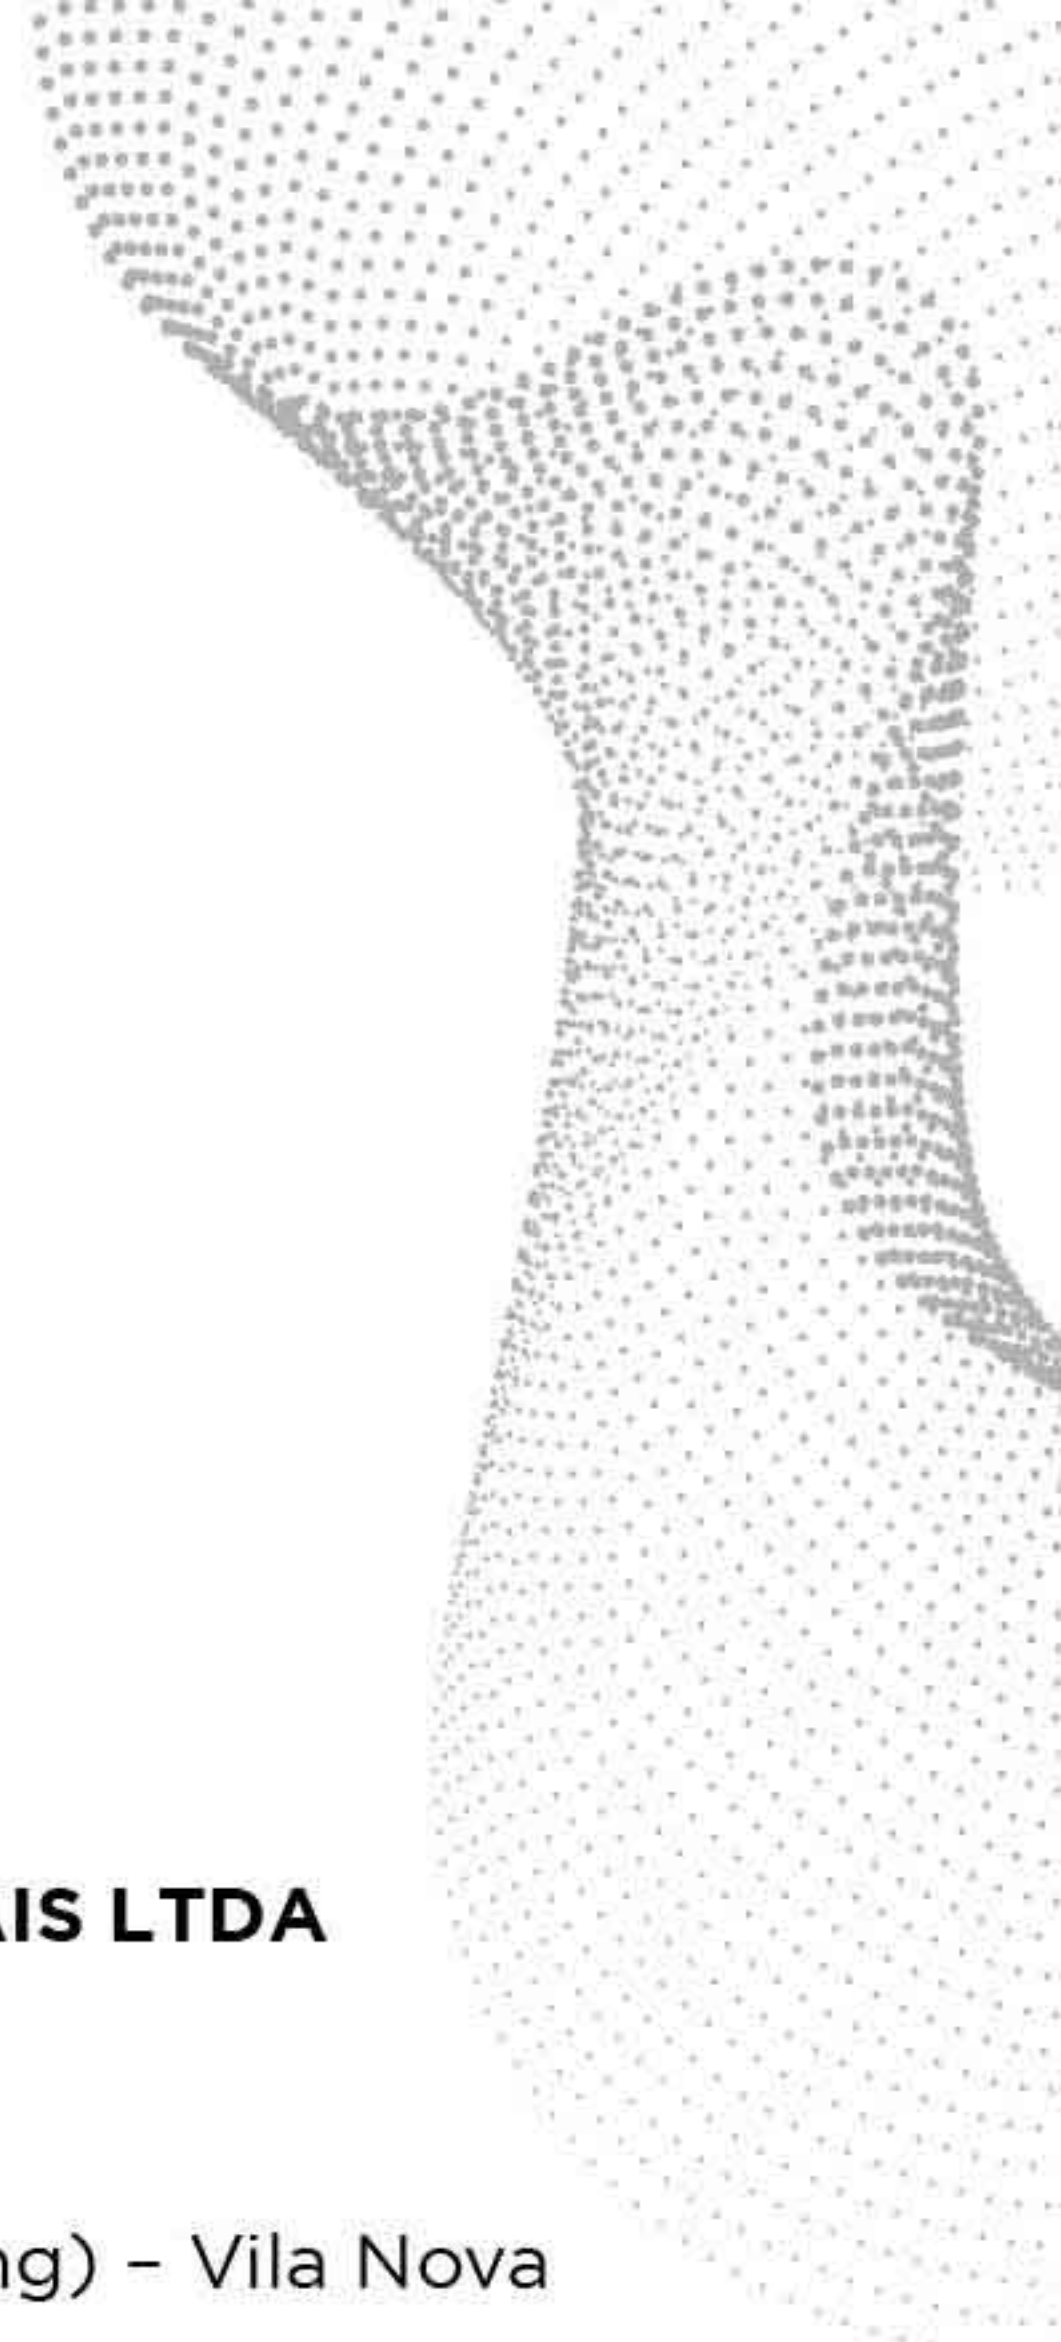

NOAR[®]

NOAR BRASIL INDUSTRIA E COMERCIO DE FRAGRANCIAS DIGITAIS LTDA

Tax ID: 36.197.647/0001-00

Address: Dr. Sodré Street, 122 – Set 11 (S. Luiz Business Center Building) – Vila Nova

Conceição – ZIP: 04.535-110 – São Paulo/SP – Brazil

Contact: contato@noarbrasil.com.br

Made in Brazil