

User Manual

DOG TRAINING

L-818

COLLAR



## I . Package Contents



Remote Transmitter



Receiver



Collar



Static Test Light



Power Adapter



USB Cable  
(for Receiver&Transmitter)



Rubber Caps



Short/Long Contact Points  
(for Short/Long haired or small/large dog)



Manual

## II . Product Overview


### Remote Transmitter



### Display Screen



### Receiver

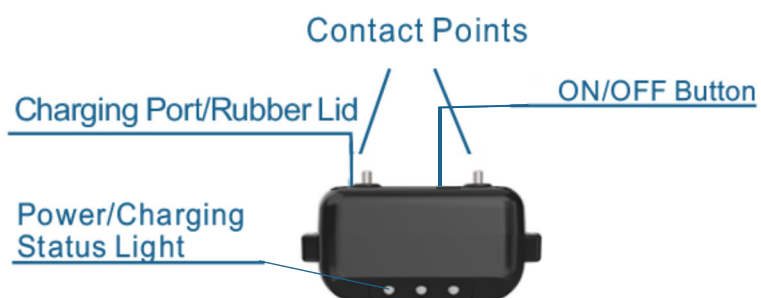

### III. Setting Up

1. Charging the transmitter and receiver for 2 hours.

**Remote Transmitter:** Charge the device until the red LED turns green and the battery bar on the display screen is full.

**Receiver:** Remove the rubber lid, charge the device until the red LED turns green.

2. Pair the remote transmitter with receiver.

**2.1** Turn on the remote transmitter: Press the Channel Switch on the remote transmitter, choose channel 1 or 2 or 3;

**2.2** Turn on the receiver and pair: Press the ON/OFF Button, then press and hold the ON/OFF Button for 3 secs, the blue LED will flash frequently. Press the Vibrate Button on the remote transmitter, you will hear “Beep” sound if pairing is successful.

**2.3** If you have 2 or 3 receivers, please choose different channel and repeat above steps.

### IV. Turn on/off the receiver

1. Press the ON/OFF Button once, you will hear “Beep” sound if turn on the receiver successfully.

2. Press the ON/OFF Button, the blue LED will flash once when the power is off. (To have a longer lifetime, please turn off the receiver while charging and no using.)

### V. Turn on/off the receiver

1. Press the any button to turn on the remote transmitter.

2. This remote transmitter doesn't need to turn off, it will turn to standby mode if you don't operate for 5 minutes.

## VI. Training Mode

1. **Static Mode:** Press the Static Button, the receiver will give a static stimulation to the wearer. This mode can be tested by static test light. There are 0-100 intensity levels to adjust by Up/Down Button. (To protect your dog better, we don't recommend using this mode frequently.)
2. **Vibrate Mode:** Press the Vibrate Button, the receiver will vibrate once. Hold the button, the vibration will continue. There are 0-100 intensity levels to adjust by Up/Down Button.
3. **Sound Mode:** Press the Sound Button, the receiver will give a "Beep" sound. Hold the button, the sound will continue.
4. **LED Flashlight:** Press the LED Flashlight Button, the LED on the remote transmitter will turn on; Press the button again to turn off.
5. **Channel Switch:** Press Channel Switch Button to choose which receiver you want to control.

## VII. Static Test Light Instructions

1. Pair the receiver with remote transmitter successfully.
2. Hold the Static Test Light contacts to the contact points.
3. Press Static Button on the remote transmitter, the Static Test Light will flash.
4. Save the Static Test Light for future test.





## VIII. Fit the Receiver Collar

1. Make sure the receiver has turned off.
2. Thread the collar through the receiver.
3. Fit the short/long contact points on the receiver. The rubber caps can weaken the static stimulation and protect your dog from direct contact with metal electrodes.
4. Place the receiver collar on the dog's neck. Center the Contact Points underneath your dog's neck, touching the skin. If your dog has thick fur, please separate the fur with a comb to enable them to reach the skin.
5. The tightness is at most fitting if one finger can be inserted underneath. Allow your dog to wear the receiver collar for several minutes, then recheck the fit to make sure a comfortable wearing experience.
6. Trim the collar as follows:
  - a. Mark the desired length of the collar with a pen. If your dog is young and you expect him/her to grow, you need to leave excess strap to adjust the collar fastening.
  - b. Remove the Receiver Collar from your pet and cut off the excess.
  - c. For the Little Dog Receiver Collar: Before placing the Little Dog Receiver Collar back on your pet, seal the edge of the cut collar by applying a flame along the frayed edge.

### **CAUTION:**

1. Do not leave the collar on the dog for more than 12 hours per day, it will cause rash or discomfort to your dog. If possible, take off the collar every 1 to 2 hours.

2. Check the fit to prevent excessive pressure; follow the instructions in this manual.
3. Never connect a lead/leash to the electronic collar; it will cause excessive pressure on the contacts and hurt your dog.
4. Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
5. Examine the contact area daily for signs of a rash or a sore.
6. If a rash or sore is found, discontinue use of the collar until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
7. Static stimulation is not a pleasant experience for any dog. Punishment is a harsh way to train a dog. Always praise and encourage your dog for good behavior.

## IX. Training Tips

1. Do not use the device on dogs aged below 6-month, less than 8lbs in weight, old, pregnant, easily frightened, aggressive, in heat, old, and dogs not in best of health.
2. If your pet reacts to the tones by hiding or acting fearful, redirect his attention to a simple and appropriate behavior, such as the "sit" command.
3. Reward your dog with food will usually help to achieve the best result.
4. Use verbal commands first, and supplement with a corrective stimulus only as needed. Be consistent with your verbal commands using the same words every time. Work with your pet on one behavior at a time to avoid confusion and frustration.

5. Use as little stimulus as possible and only to reinforce verbal commands when necessary. Do not over correct your dog.
6. Other pets in hearing range will be affected by the training tones. Therefore, training sessions should be conducted out of hearing range of other pets.
7. Do not rely on this device solely to train your dog. Some dogs will not respond to this product. We cannot guarantee the effectiveness of this or any trainer on your dog.
8. If your dog shows signs of growling, snarling, biting or aggression while using the collar, discontinue use immediately and contact a professional trainer for device.

## X. Find the Best Stimulation Level for Your Pet

**Important:** Always start at the lowest level and work your way up. This Training Collar has 100 different stimulation levels. This allows you to choose the Stimulation that is best for your pet. Once you have placed the Receiver Collar on your pet, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level.

A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

Follow the steps below to find your pet's Recognition Level:

1. Starting at Level 1 on the Digital Display, press the Stimulation button continuously for 1 to 2 seconds.
2. If your pet shows no reaction, repeat the Stimulation level several times before moving up to the next level.