

RFID Multifunction System

Operation Manual Ver 1.0

Version BR-RW-0002

Manufacturer and publisher

Brilliant Network & Automation Integrated System Co.,Ltd

**Add: No.41, Keyi St., Zhunan Township, Miaoli County 350,
Taiwan, R.O.C.**

Tel: 886-37-580708

Fax: 886-37-580728

Email : services@brillian.com.tw

Website : <http://www.brillian.com.tw>

The reproduction of any part of this user manual, in any form (by photocopying, microfilming or any other process) or the processing and distribution of the contents by electronic means is prohibited without the expressed written consent of Brilliant.

It is prohibited to copy the software or use it for other purposes. It is expressly prohibited to distribute copies of the software to third parties. Violators will be held liable for damage.

Contents

1	Brief introduction of equipment	- 1 -
2	Description of safety rule of BR-RW-0002	- 2 -
3	Description of starting steps	- 3 -
4	Description of stopping steps	- 3 -
5	Facility Requirement&SPEC	- 3 -
6	FCC Rules	- 3 -
7	BR-RW-0002	- 5 -
8	BR-RW-0002 Hardware	- 6 -
9	Operation Description	- 6 -
10	Periodical Maintenance	- 7 -

1 Brief introduction of equipment

Brilliant Material Handling Solution(BMHS)

We provide a FAB semi-automatic material handling solution. Through a material storage devices, integrating the BMHS system and database, product locations and determine the transmission route, optimal throughput and increase productivity.

eRack management collects all eRack status information, exchanges information on behalf of all eRacks and MES. Provides admin search queries, work order inquiries, statistical analysis, etc.

The eRack shelf can read the RFID tag on the foup by RFID antenna, transfer the carrierID data to the background for unified management, and then receive the foup information from the background to the operator.

Feature of Product

- The BMHS system centrally monitoring shelves of E-Rack.
- Integrate MES and BMHS real time management systems to control all products in the factory.
- Significantly improve productivity.
- Flexible system' s configuration and higher utilization rate.
- Provide various statistical data to facilitate analysis and decision-making.
- RFID Reader helps to confirm whether the products and sites are correct before assisting production, which greatly reduce errors.

2 Description of safety rule of BR-RW-0002

2.1 Instruction for use °

2.1.1 This manual is only written for Purge System Module °

2.1.2 Non-qualified or non-professional personnel are not allowed to operate or maintain the machine °

2.1.3 “Operator” should read carefully the software operation in advance °

2.1.4 “Maintainer” , in addition to getting familiar with software operation, should read carefully the maintenance manual and circuit diagram °

2.1.5 Before careful reading of operation manual or before thorough understanding of machine function, it is not allowed to operate the machine singly, and it needs an experienced guy standing beside for instruction °

2.2 Instruction for transport

When transporting or moving a machine, it is suggested to use a cart for the transport, please also wear steel shoes for personal safety. The cart should be able to carry a load of more than 100Kg


2.3 For scarping of equipment or disposal of waste, please follow the local regulations


2.4 Instruction for illuminance in the work area: Please follow the lighting environment provided by the plant of the client send.

2.5 The machine is not suitable to work in explosive circumstances

2.6 Before ex-factory, the level of noise should be less than 80dB (A).

2.7 About “Warnings and Cautions”

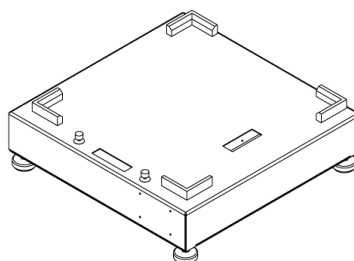

	<p>CAUTION</p> <p>1)When breaker power is ON, please do not operate if you are not in-charge. 2)Always turn off the breaker before repair, checking the machine and maintenance.</p> <p>警告</p> <p>1.電源供應中，非專責人員請勿操作，避免感電危害。 2.檢查、維修、保養前，請關閉電源。</p>	<ol style="list-style-type: none"> 1. When power is supplied, non-professional personnel should not operate it to avoid electric shock hazard. 2. Before checking, maintenance and repair, please turn off the power.
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

3 Description of starting steps

3.1 Adapter to be AC 100~230V

4 Description of stopping steps

4.1 Please remove Adapter

5 Facility Requirement&SPEC

Product Name	RFID Multifunction System
Model Type	BR-RW-0002
Rating(Adapter)	I/P: 100~240VAC, 50/60Hz, 0.4A O/P : DC15V,1A
Length X Width X Height(mm)	350 X 66 X 345
Weight	kg
Frequency	134.2KHz

6 FCC Rules

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.




This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual,

may cause harmful interference to radio communications.


Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

7 BR-RW-0002

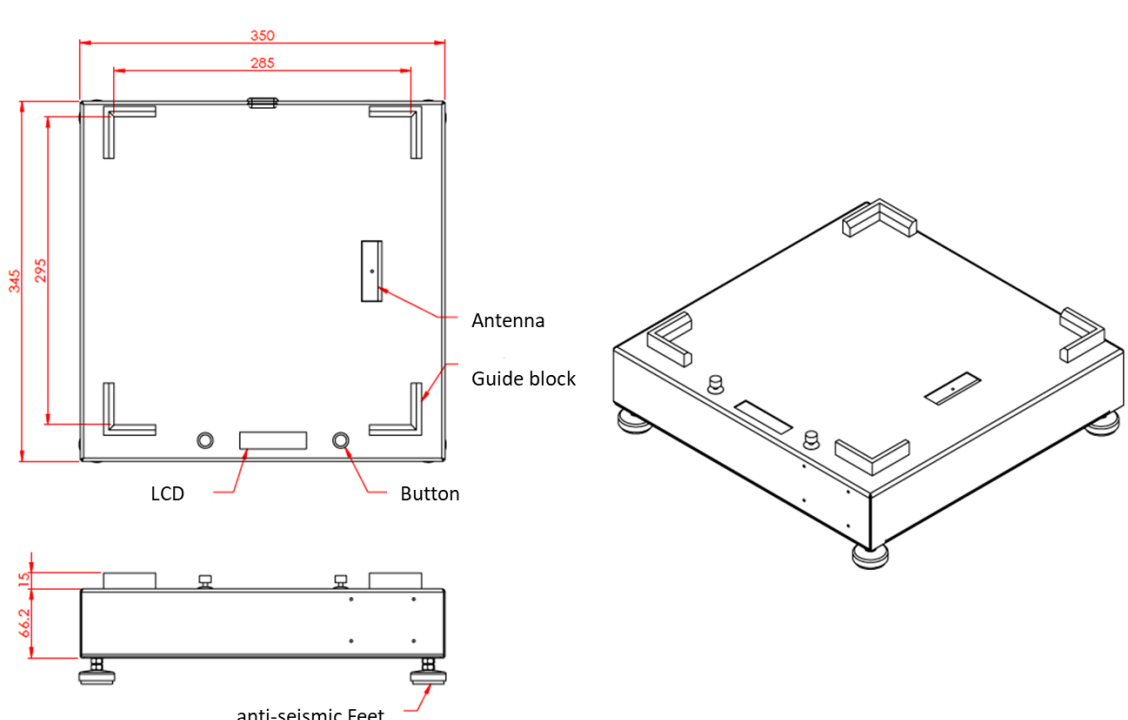Module	Illustration
Front-1	 <p>The technical drawing illustrates the Front-1 module from three perspectives: top, front, and isometric. The top view shows a square frame with dimensions 350 (width) and 345 (height). Internal dimensions are 285 (width) and 295 (height). Labels point to the Antenna, Guide block, LCD, and Button. The front view shows a rectangular profile with dimensions 15 (height) and 66.2 (width), and is labeled with anti-seismic Feet. The isometric view shows the module's 3D structure with four feet.</p>

8 BR-RW-0002 Hardware

8.1 Hardware Method

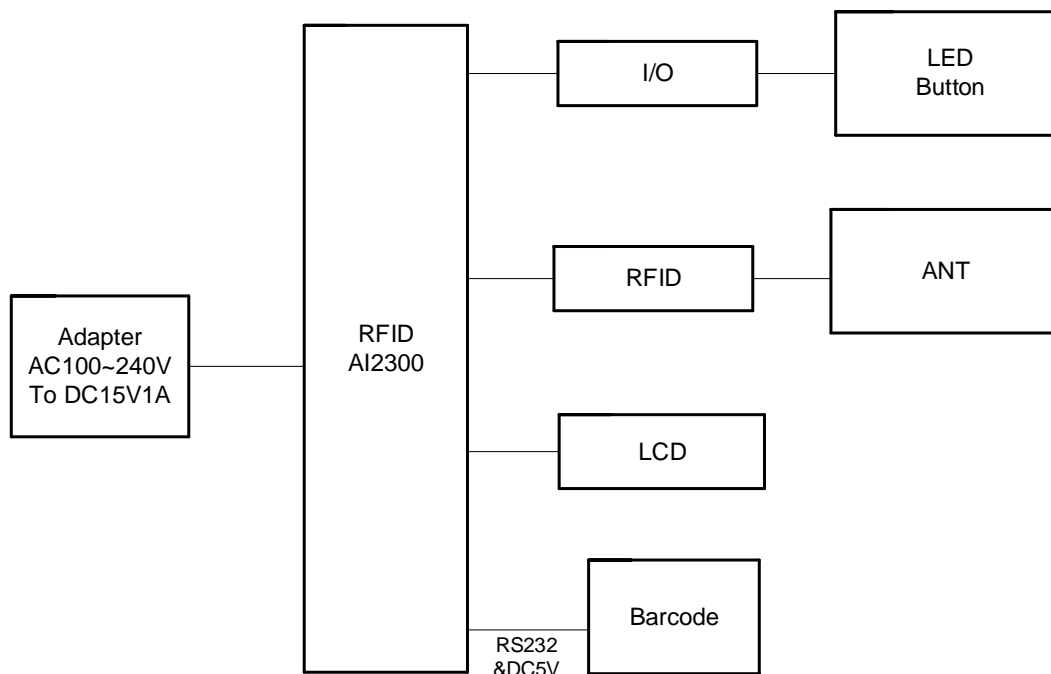

9 Operation Description

Put a POD fixed on the goods which you need to get goods information. The Transponder has a data record for the good During the Host computer sent a order message to the CIDRW through RS232 or HSMS The CIDRW will sent back the goods information which read from the Transponder by radio frequency.

10 Periodical Maintenance

BR-RW0002 Maintenance Table					
Machine Tool :		<input type="checkbox"/> Three months	Date :	Operator :	
Item	Maintenance Content	Cycle	Action	Result	Remark
Plate Clean					
1	Clean Plate	Three months	Use DI Water & Cleanroom wiper Clean Plate	<input type="checkbox"/> OK <input type="checkbox"/> NG	
2	Reader Test	Three months	Put the POD on Plate use button Check Reader Function	<input type="checkbox"/> OK <input type="checkbox"/> NG	
Remark :					

10.1 Cleaning Plate

10.1.1 Purpose : Cleaning Plate Particle

Material : NA

Manual tool : Cleanroom wiper 、 DI Water

Notice : Before action, please confirm whether the machine is down

PM Step : Cleanroom wiper cloth into the DI Water from inside to outside and from top to clean the Plate surface.

