




HEAT EXPERIENCE

9V OUTDOOR SERIES


USER MANUAL
BRUKSANVISNING
ANVÄNDARMANUAL
BETRIEBSANLEITUNG
KÄYTTÖOHJE
MANUEL UTILISATEUR
MANUAL DE USUARIO
MANUALE UTENTE
MANUAL DO USUÁRIO

FRONT

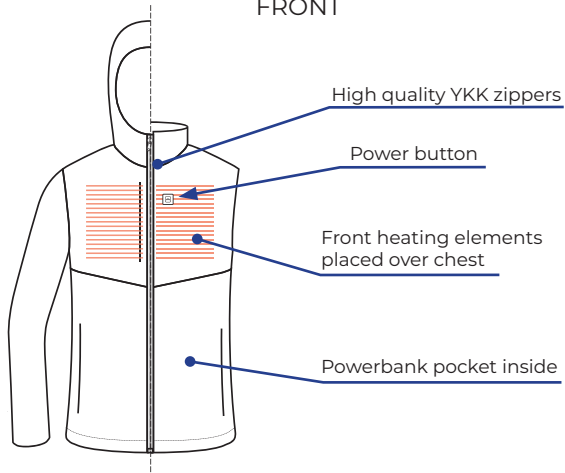

BACK

EN

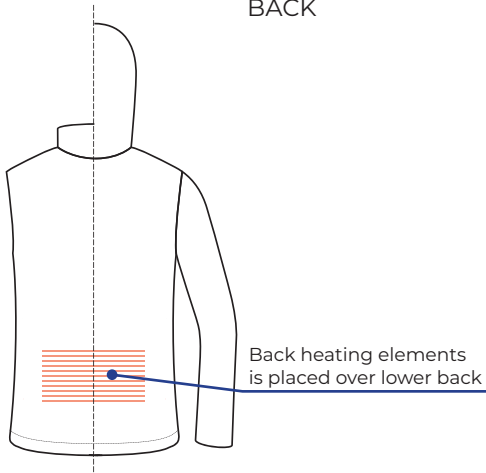

BEFORE USE

Congratulations on your new Heat Experience Heated Hybrid Jacket. Before you start using it, there are some things you should know.

The battery should be fully charged before first use, or after a long period of no use (2 months or more).

Charge the battery by connecting it to a charger. Do not charge unattended.

The heat can be adjusted either using the button, or our app. To download the Heat Experience Remote App, scan the qr-code on the back of this document, or visit <https://heatexperience.no/app/>

We recommend that you get to know how the product works before you head out on longer adventures.

GETTING STARTED

Open the zipper on the powerbank pocket, placed on the inside. Connect the powerbank to the cable before inserting it into the pocket. Close the pocket zipper.


Note: Do not turn the powerbank on before connecting, this will possibly lead to the power switching off after a few minutes.

EN

Press and hold the power button for ~5 seconds, until the light turns on. The heating system goes directly to boost mode, which is the warmest heating level. Press the button to switch between the four heating levels. The white blinking light indicates the system is ready for bluetooth connection.

The heating level can also be adjusted using our app, which gives you even more possibilities to fine-tune the heat, and a broader range of adjustment. Download and open the app, activate bluetooth on your phone, then select "add new product". Note that location services needs to be activated to use the app. The app will not collect or save any personal data.

1. CHARGE POWERBANK

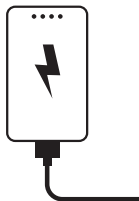

2. CONNECT POWERBANK



3. HOLD BUTTON 5 SEC. TO TURN ON (AND OFF)



4. - ALT. 1. - POWER BUTTON CONTROL

short press to select heat level




EN

4. - ALT. 2. - APP CONTROL

- download and open app
- activate bluetooth on phone
- select "add new product"
- choose correct product

*Location services needs to be activated to use the app. We do not collect or save any personal information.

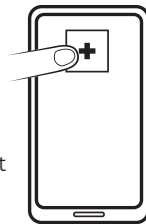

CARE AND MAINTENANCE

Before washing the garment, remember to remove the powerbank and add the protection cap to the usb cable.

Follow the instructions on the care label, to ensure maximum lifespan of your heated product.

Hang dry the garment. Remove the protection cap after washing to let the connection dry properly before use.

Allow to dry after use, and store the product disconnected from powerbank and charger. Charge powerbank to about 50% for long term storage. Allow product to cool down before storing.

A spare powerbank is a good idea if you use your product for prolonged time, remember to keep the extra powerbank at a temperature as close to room temperature as possible. A cold powerbank will have reduced output.

CAUTION

- Keep out of high temperatures. The polymer lithium battery may explode or be damaged if exposed to high temperatures or fire.
- Do not charge unattended, use only original charger. Disconnect charger after use.
- Battery may explode if disposed of in fire.
- Do not crush or disassemble.
- All components should be recycled in according to local laws and regulations.
- Keep the heated garment away from children - not to be used by very young children (0-3 years). Not to be used by children over the age of three, unless the controls have been pre set by a guardian, or unless the child is adequately instructed on how to operate the controls safely.
- Should not be used by users unable to feel changes in temperature. If you experience any signs of burns or discomfort, please check product before further use.
- This appliance is not intended for medical use in hospitals
- Always disconnect battery when not in use.
- When storing the appliance, allow it to cool down beforehand.

EN

- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, stop using the product and contact the supplier for further information.
- Do not insert pins.
- Electronic Equipment are known to interfere with avalanche beacon reception. Switch off while searching. Read your beacon instructions for more information.

OPERATION WITH POWER BUTTON

Level	Temperature*	Indicator light	Duration*
LOW	~35°C/95°F	●○○○	7 hours
MEDIUM	~40°C/104°F	●●○○	4,5 hours
HIGH	~45°C/113°F	●●●○	2,5 hours
BOOST	~50°C/122°F	●●●●	1,5 hours

EN

*Duration based on using a 10.000mAh powerbank.

*This product is designed to work with powerbanks with 9V PowerDelivery (PD) compatability. Any other type of powerbank might cause a lower temperature output, or no function at all.

*The duration and given temperature will vary depending on ambient temperature and conditions.

OPERATION WITH APP

By using the Heat Experience app, you can take full control over your heating system. The app will allow you to fine tune the temperature to your needs, and also gives you the possibility to maximize the run time by lowering the output below what is possible using the power button.

Using the app the temperature can be adjusted from approximately 50°C to 20°C. At the lowest output this will give you operating times over 10 hours, given reasonable circumstances.

*Duration based on using a 10.000mAh powerbank.

*This product is designed to work with powerbanks with 9V PowerDelivery (PD) compatability. Any other type of powerbank might cause a lower temperature output, or no function at all.

*The duration and given temperature will vary depending on ambient temperature and conditions.

Scan this code with your mobile phone
to download the app.



www.heatexperience.app

© HEAT EXPERIENCE 2022

HeatX Battery Heated Garments

Turn your layers
ON and OFF



CONTACT

Do you have any more questions, feel free to reach out;

e-mail: contact@heatx.eu

EN

Address:

Heatexp AS
Østre Rosten 102b
7075 Tiller
NORWAY

Read more about Heat Experience, discover new products, and get inspired on our webpage www.heatexperience.eu

Follow us on social media:

facebook.com/theheatexperience

Instagram: Heat Experience

We hope you enjoy your product.
Kind regards, The Heat Experience Team.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.

Pour télécharger ce manuel de l'utilisateur dans une autre langue, rendez-vous sur heatx.eu/support.

Para descargar este manual de usuario en otro idioma, visite heatx.eu/support.

Per scaricare questo manuale utente in un'altra lingua, visita heatx.eu/support.

Para baixar este manual do usuário em outro idioma, acesse heatx.eu/support.

För att ladda ner den här bruksanvisningen på ett annat språk, besök heatx.eu/support

COPYRIGHT HEAT EXPERIENCE 2022