


10. 20 dB Bandwidth

10.1 Block Diagram Of Test Setup

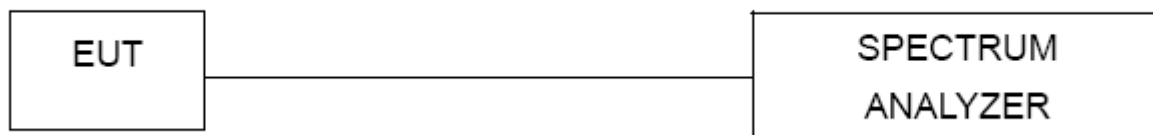

10.2 Limit

N/A

10.3 Test procedure

1. Set RBW = 30kHz.
2. Set the video bandwidth (VBW) $\geq 3 \times$ RBW.
3. Detector = Peak.
4. Trace mode = max hold.
5. Sweep = auto couple.
6. Allow the trace to stabilize.
7. Measure the maximum width of the emission that is constrained by the frequencies associated with the two outermost amplitude points (upper and lower frequencies) that are attenuated by 6 dB relative to the maximum level measured in the fundamental emission.

10.4 Test Result

Temperature:	26 °C	Relative Humidity:	54%RH
Pressure:	101KPa	Test Voltage :	DC 3.7V


Condition	Mode	Frequency (MHz)	-20dB Bandwidth (MHz)	Verdict
NVNT	1-DH1	2402	0.861	Pass
NVNT	1-DH1	2441	0.881	Pass
NVNT	1-DH1	2480	0.840	Pass
NVNT	2-DH1	2402	1.249	Pass
NVNT	2-DH1	2441	1.255	Pass
NVNT	2-DH1	2480	1.262	Pass
NVNT	3-DH1	2402	1.214	Pass
NVNT	3-DH1	2441	1.214	Pass
NVNT	3-DH1	2480	1.222	Pass









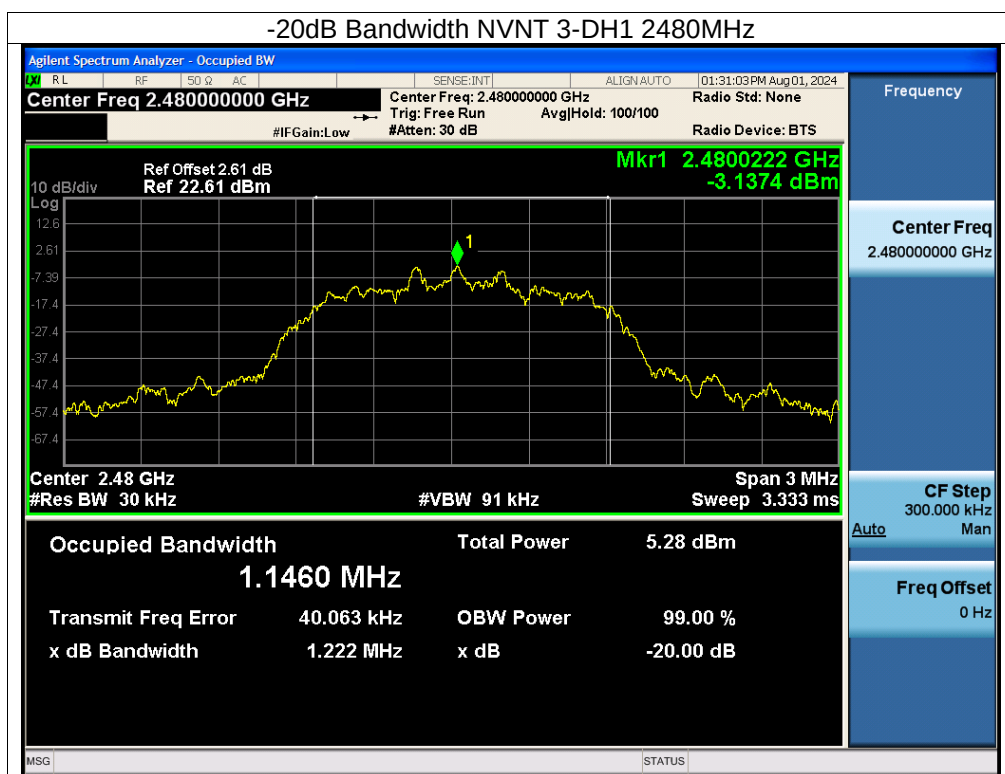

11. Maximum Peak Output Power

11.1 Block Diagram Of Test Setup



11.2 Limit

FCC Part15 (15.247) , Subpart C				
Section	Test Item	Limit	Frequency Range (MHz)	Result
15.247(b)(1)	Peak Output Power	0.125 watt or 21dBm	2400-2483.5	PASS


11.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 2MHz. VBW = 6MHz. Sweep = auto; Detector Function = Peak.
3. Keep the EUT in transmitting at lowest, medium and highest channel individually. Record the max value.


11.4 Test Result


Temperature:	26 °C	Relative Humidity:	54%RH
Pressure:	101KPa	Test Voltage :	DC 3.7V

Condition	Mode	Frequency (MHz)	Conducted Power (dBm)	Limit (dBm)	Verdict
NVNT	1-DH1	2402	0.52	21	Pass
NVNT	1-DH1	2441	0.24	21	Pass
NVNT	1-DH1	2480	-0.69	21	Pass
NVNT	2-DH1	2402	1.35	21	Pass
NVNT	2-DH1	2441	1.07	21	Pass
NVNT	2-DH1	2480	-0.03	21	Pass
NVNT	3-DH1	2402	1.98	21	Pass
NVNT	3-DH1	2441	1.66	21	Pass
NVNT	3-DH1	2480	0.55	21	Pass

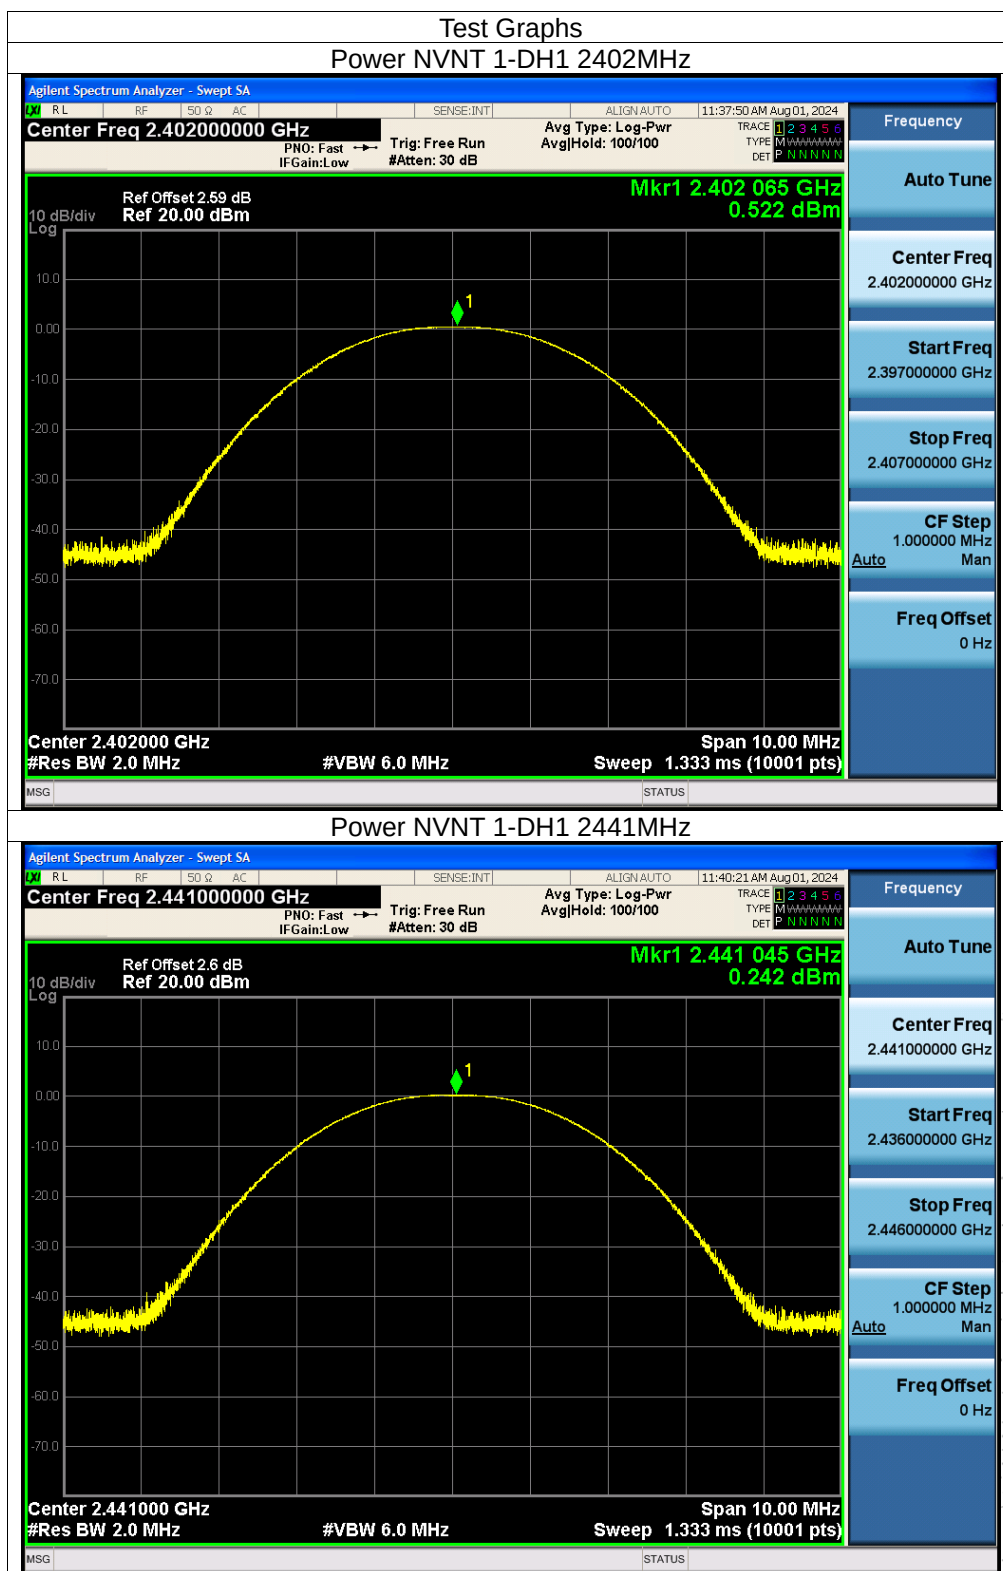


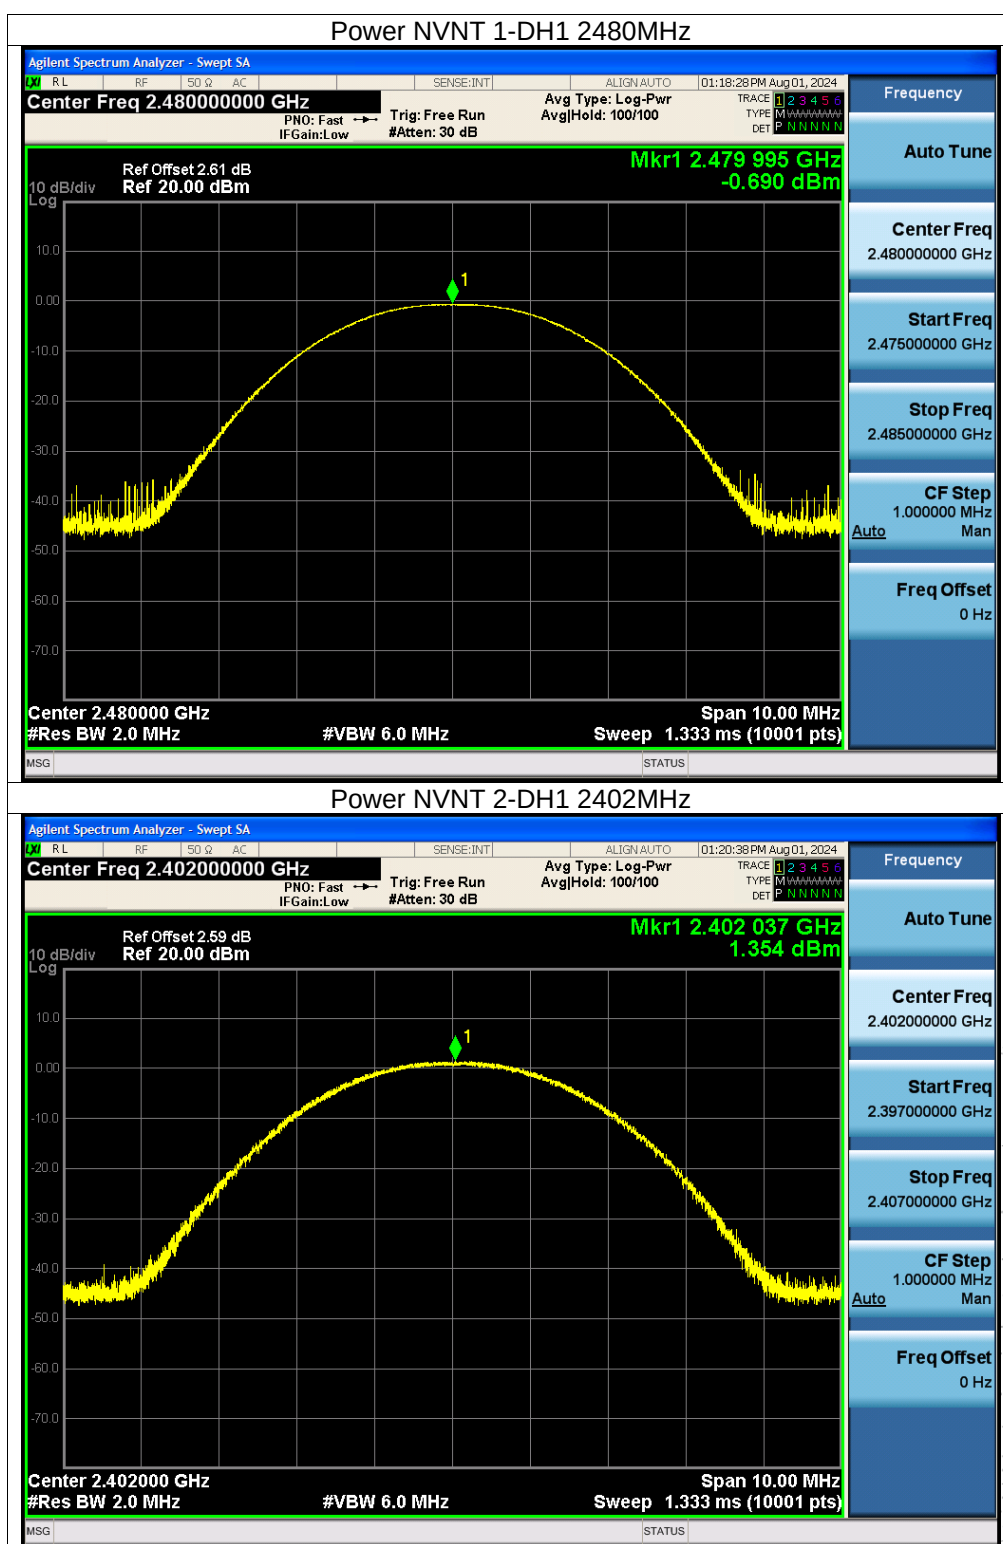

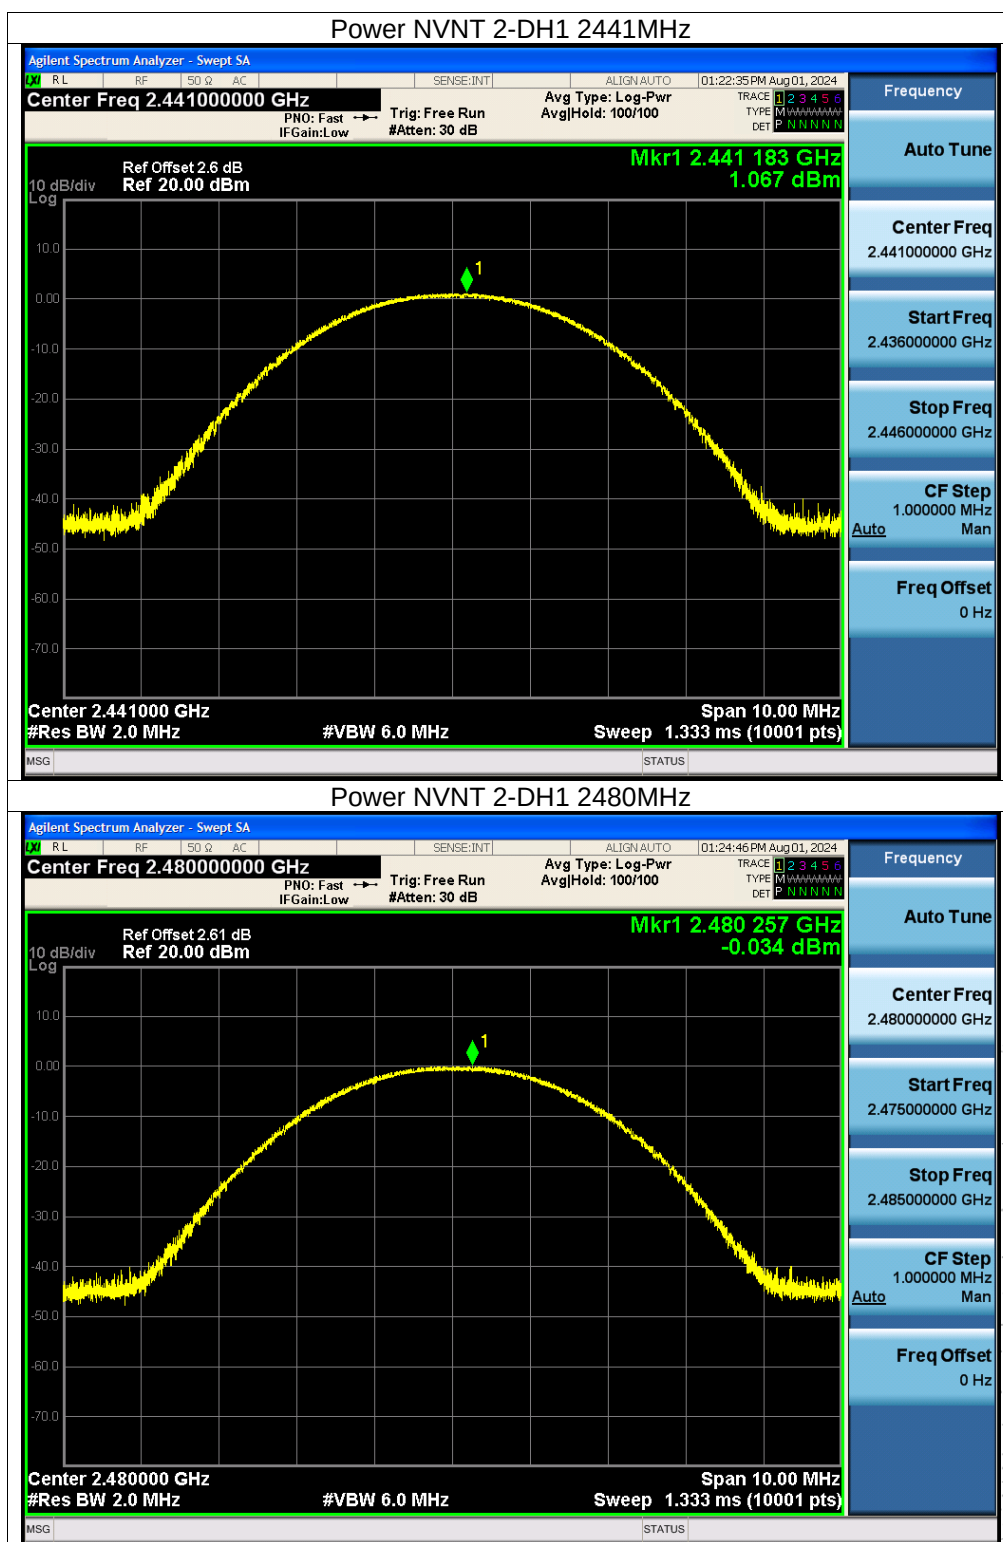

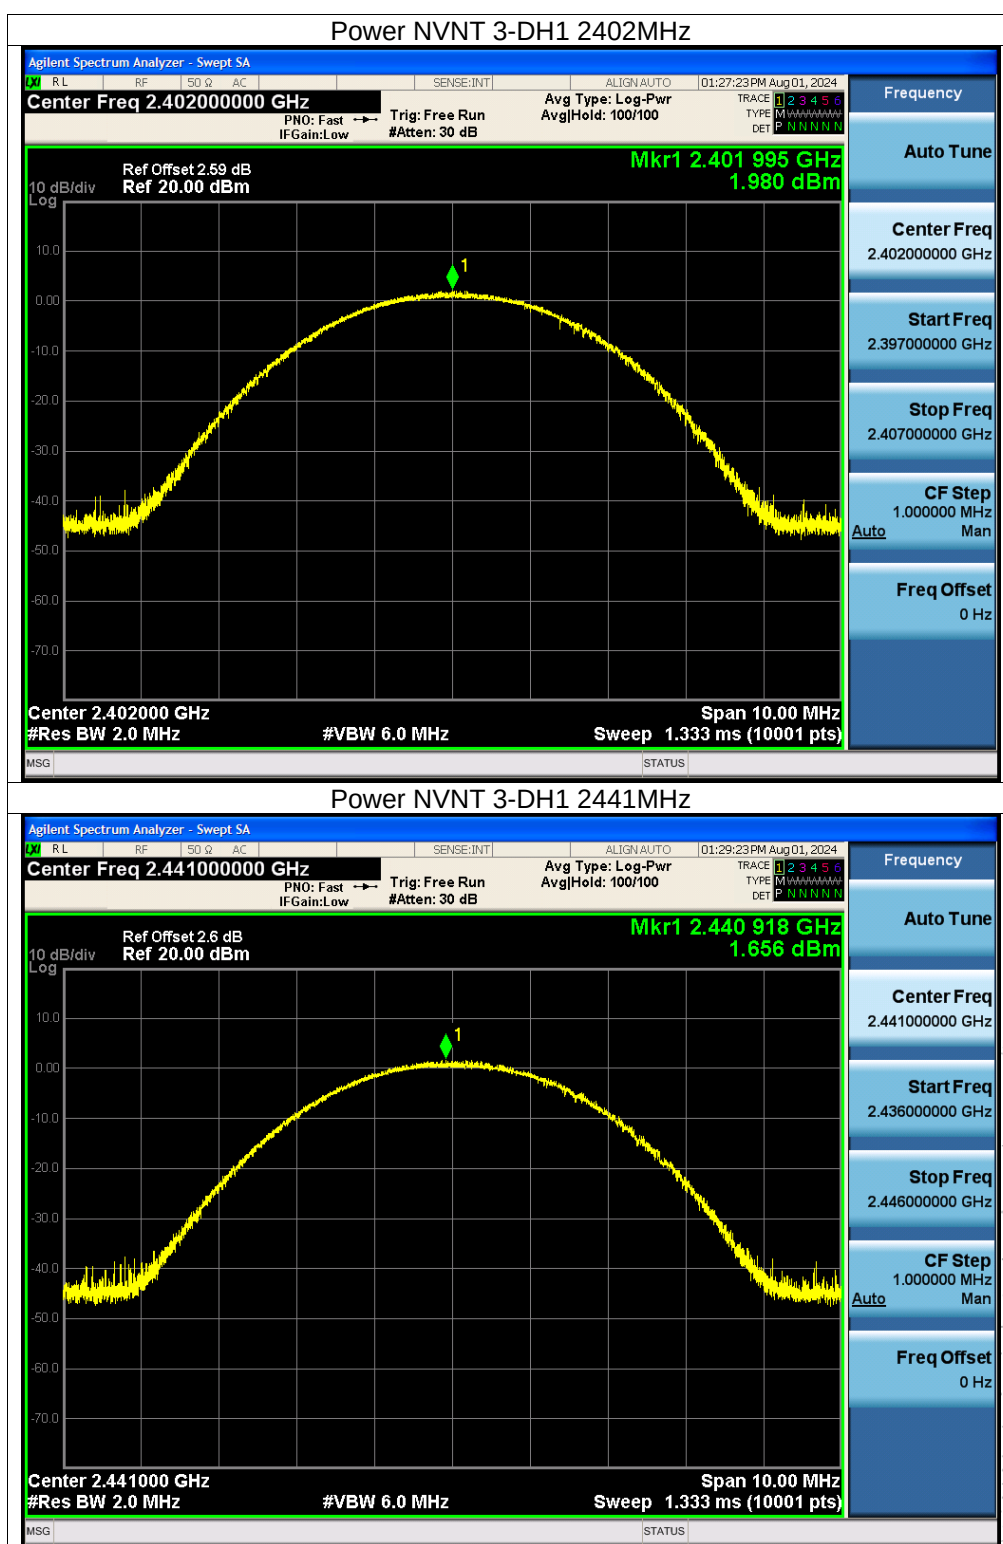

STING
ED

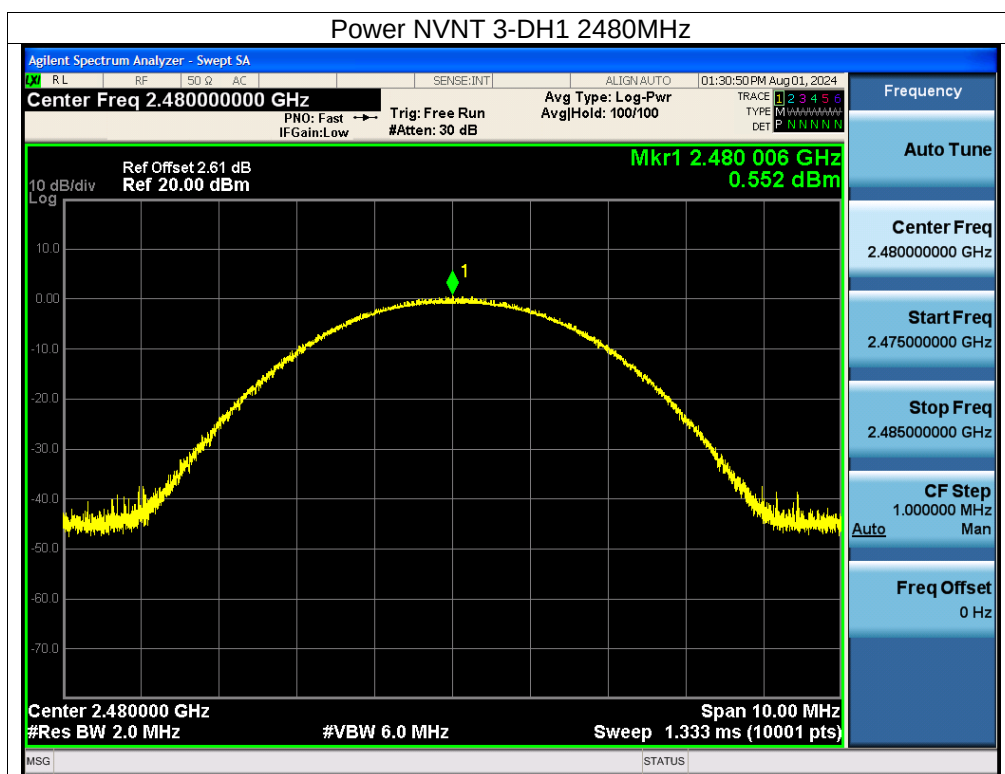

CO., LTD.

12. Hopping Channel Separation

12.1 Block Diagram Of Test Setup



12.2 Limit


Frequency hopping systems shall have hopping channel carrier frequencies separated by a minimum of 25 kHz or the 20 dB bandwidth of the hopping channel, whichever is greater. Alternatively, frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, whichever is greater, provided the systems operate with an output power no greater than 0.125W.


12.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 30kHz. VBW = 100kHz , Span = 2.0MHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. Use the marker-delta function to determine the separation between the peaks of the adjacent channels. The limit is specified in one of the subparagraphs of this Section Submit this plot.


12.4 Test Result

Mode	Test Channel	Separation (MHz)	Limit(MHz)	Result
1-DH1	Low	1.000	0.574	PASS
1-DH1	Middle	1.004	0.587	PASS
1-DH1	High	0.998	0.560	PASS
2-DH1	Low	0.998	0.833	PASS
2-DH1	Middle	0.998	0.837	PASS
2-DH1	High	1.000	0.841	PASS
3-DH1	Low	1.004	0.809	PASS
3-DH1	Middle	1.000	0.809	PASS
3-DH1	High	0.998	0.815	PASS

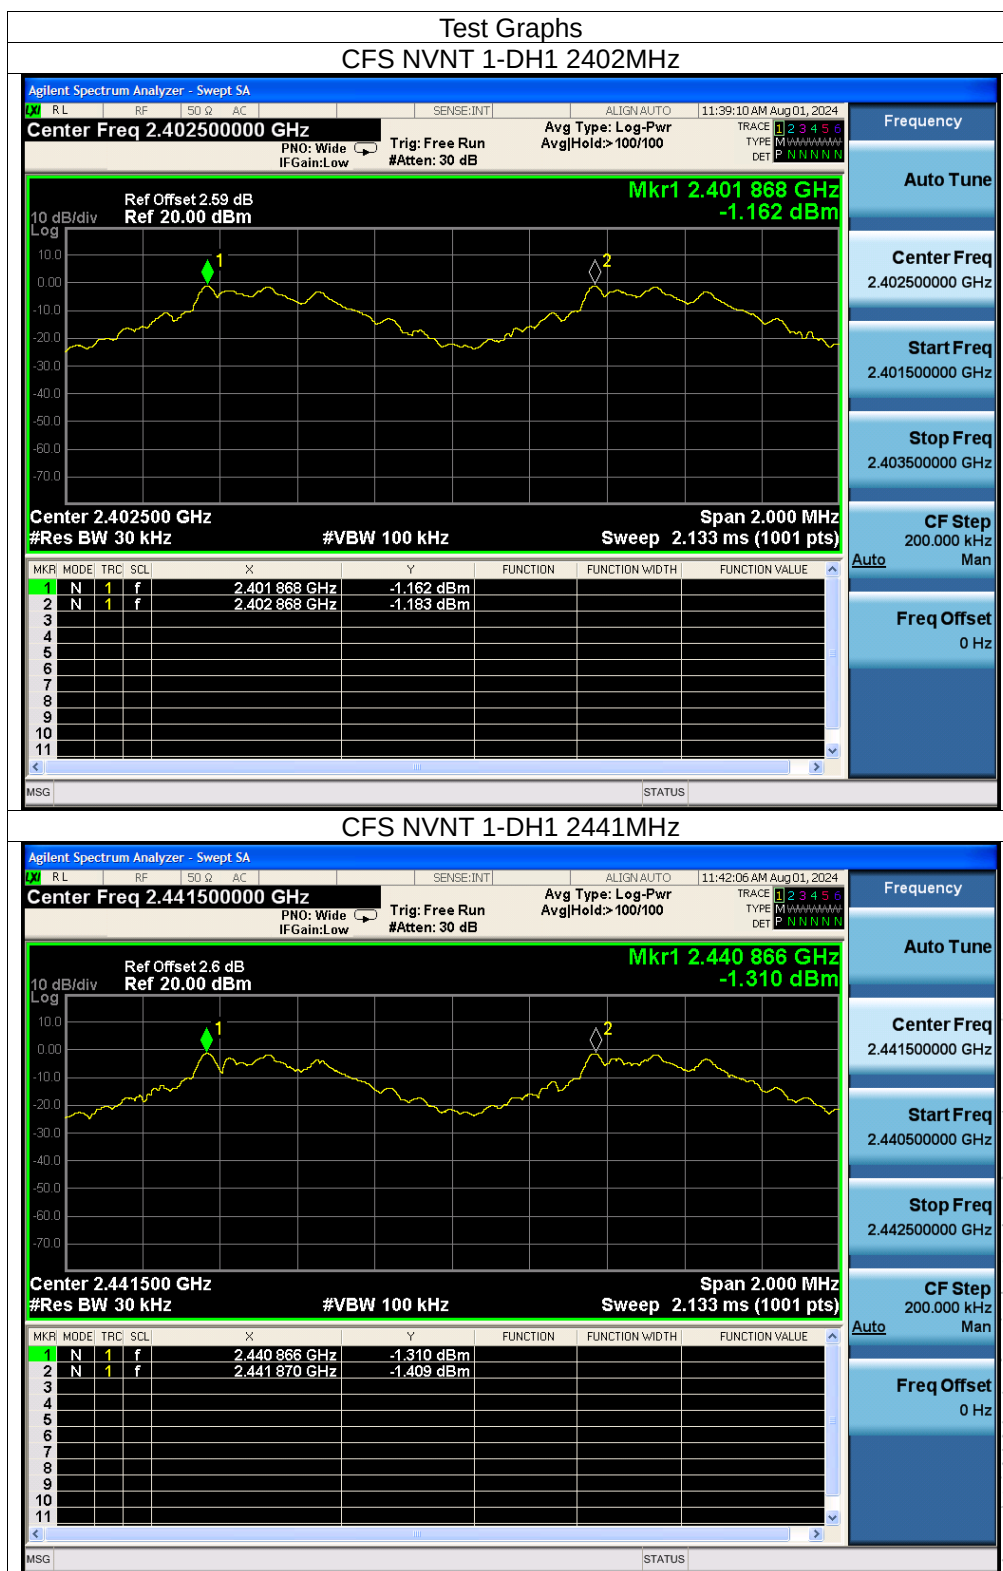


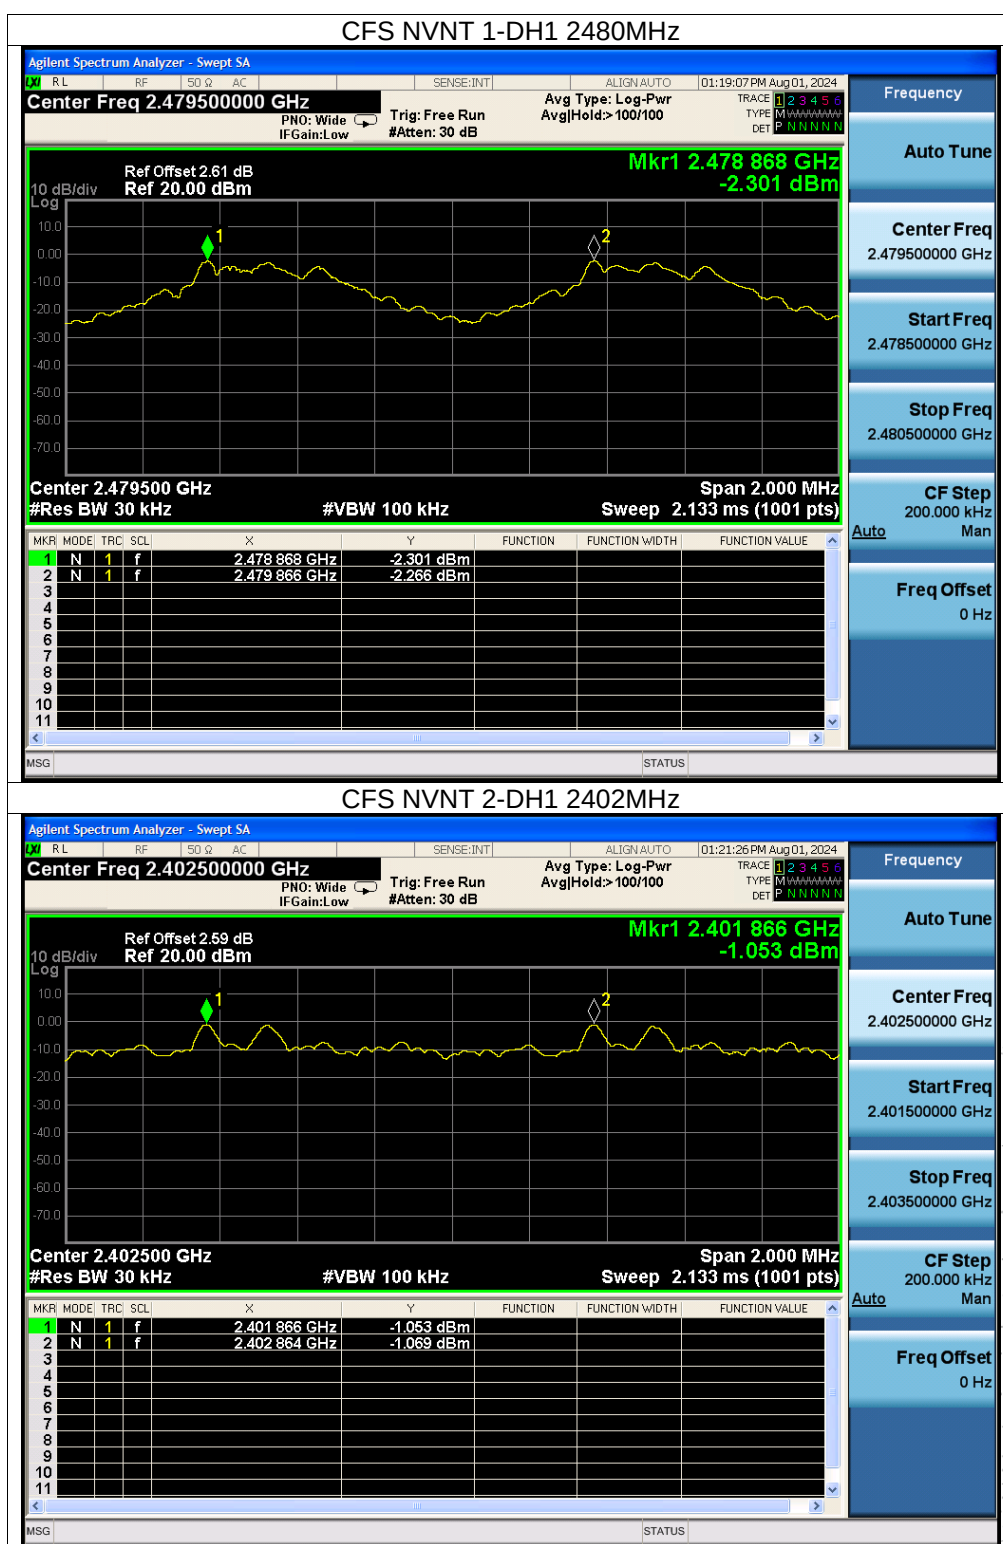

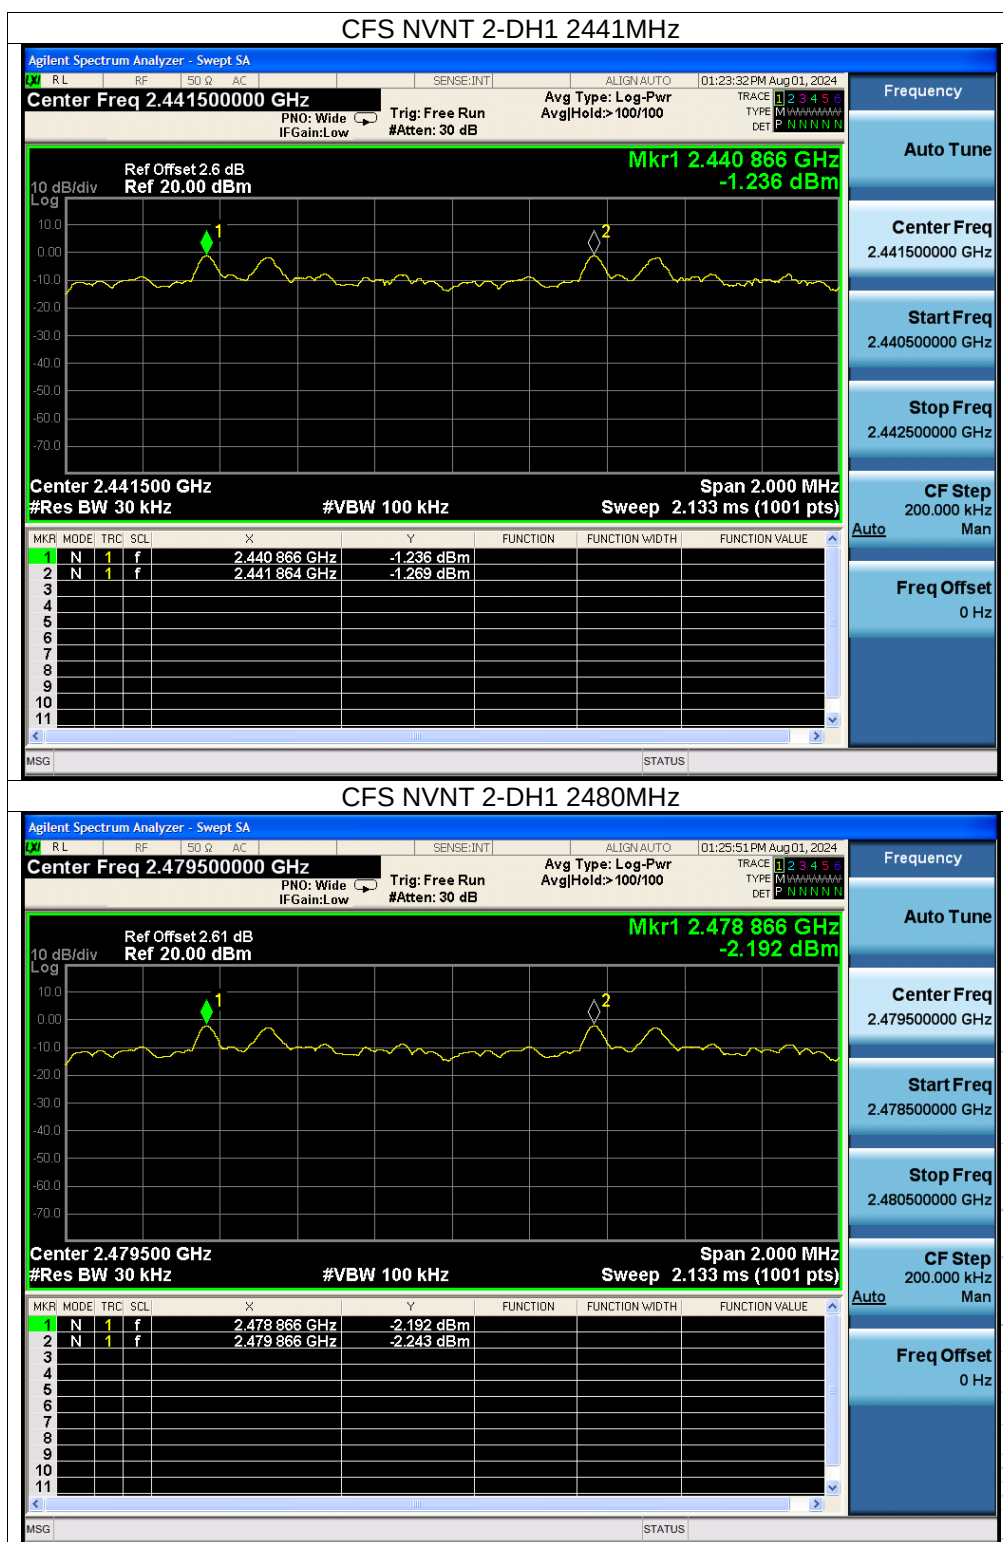

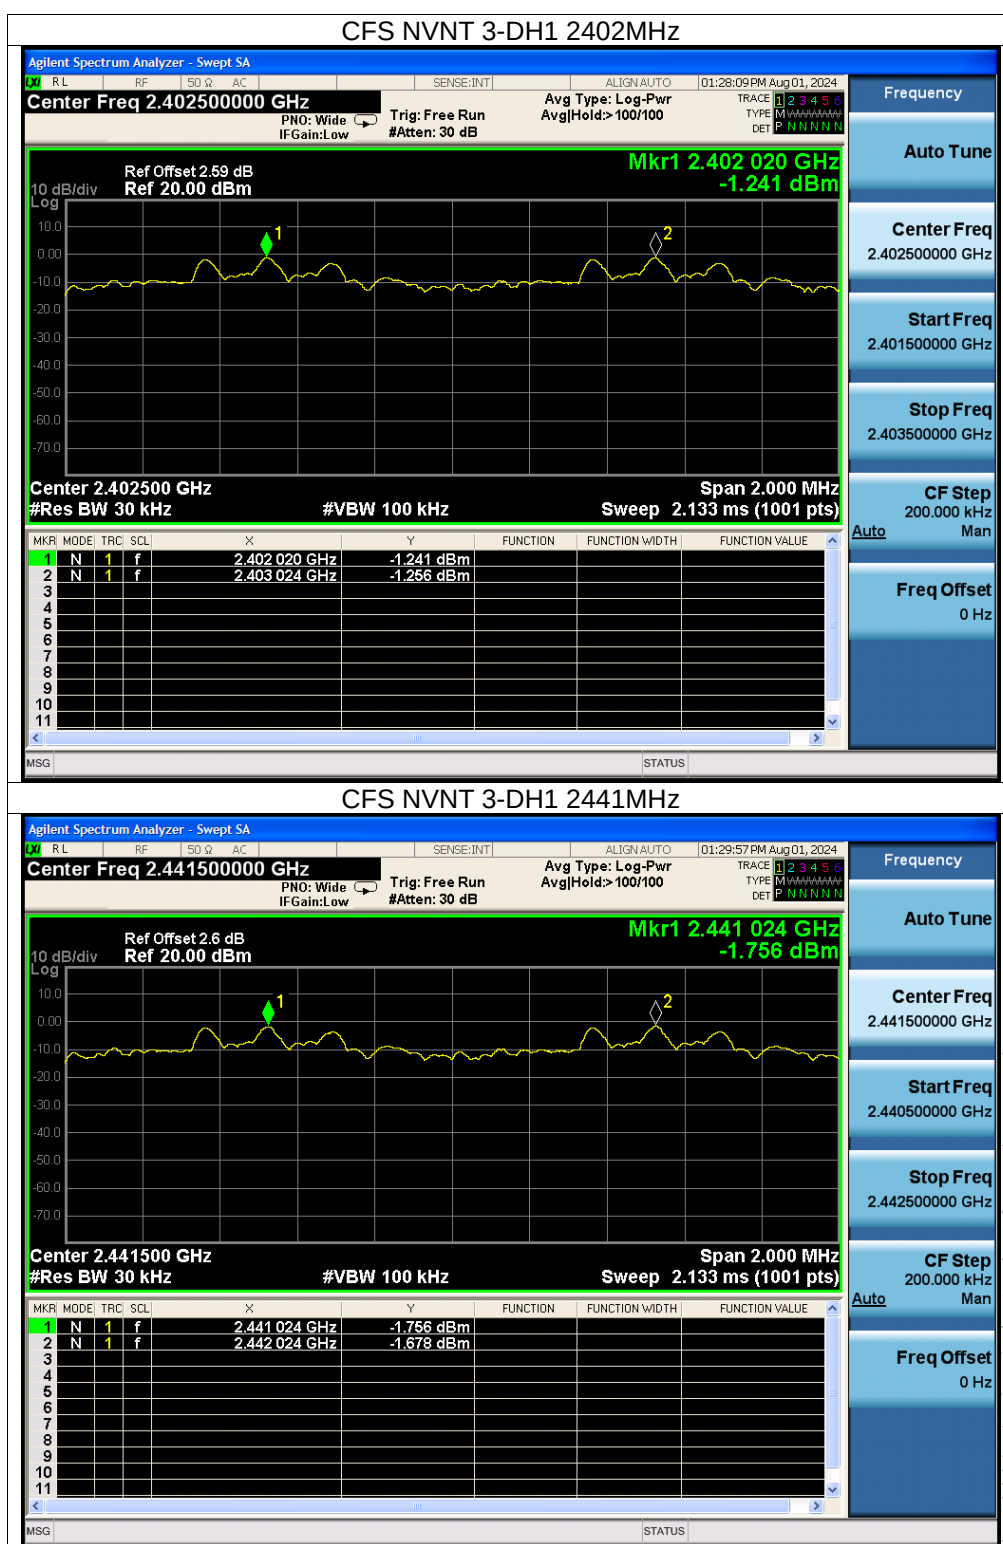

STING
ED

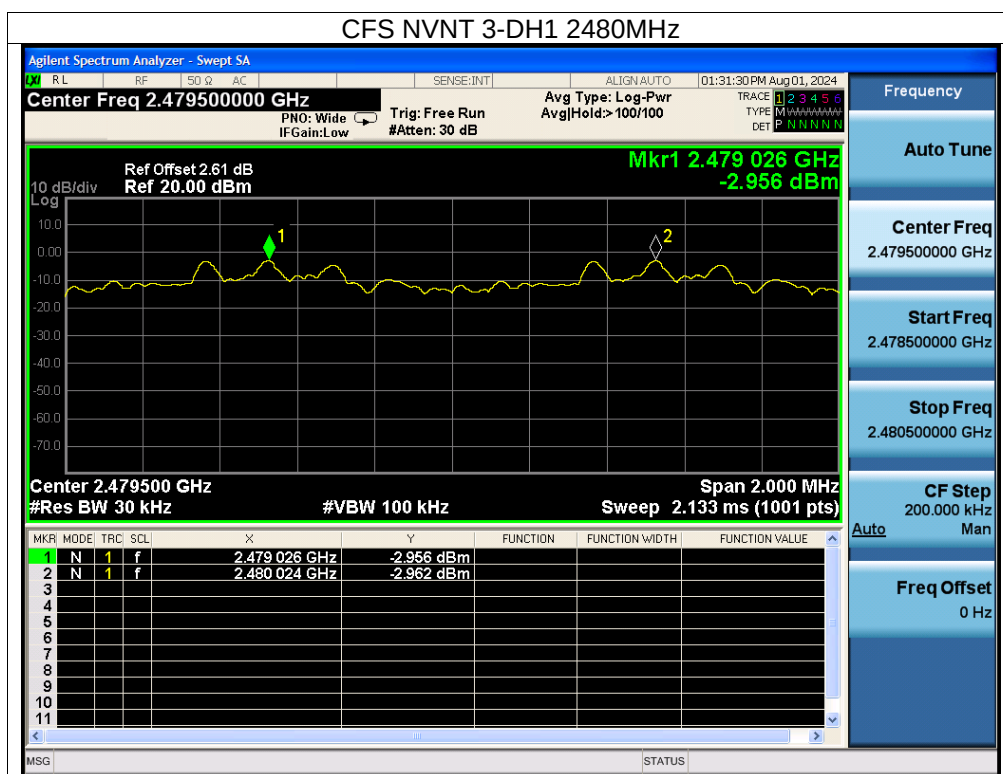

13. Number Of Hopping Frequency

13.1 Block Diagram Of Test Setup



13.2 Limit


Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.


13.3 Test procedure

1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 100kHz. VBW = 300kHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. It may prove necessary to break the span up to sections. in order to clearly show all of the hopping frequencies. The limit is specified in one of the subparagraphs of this Section.
4. Set the spectrum analyzer: Start Frequency = 2.4GHz, Stop Frequency = 2.4835GHz. Sweep=auto;

13.4 Test Result

Condition	Mode	Hopping Number	Limit	Verdict
NVNT	1-DH1	79	15	Pass
NVNT	2-DH1	79	15	Pass
NVNT	3-DH1	79	15	Pass

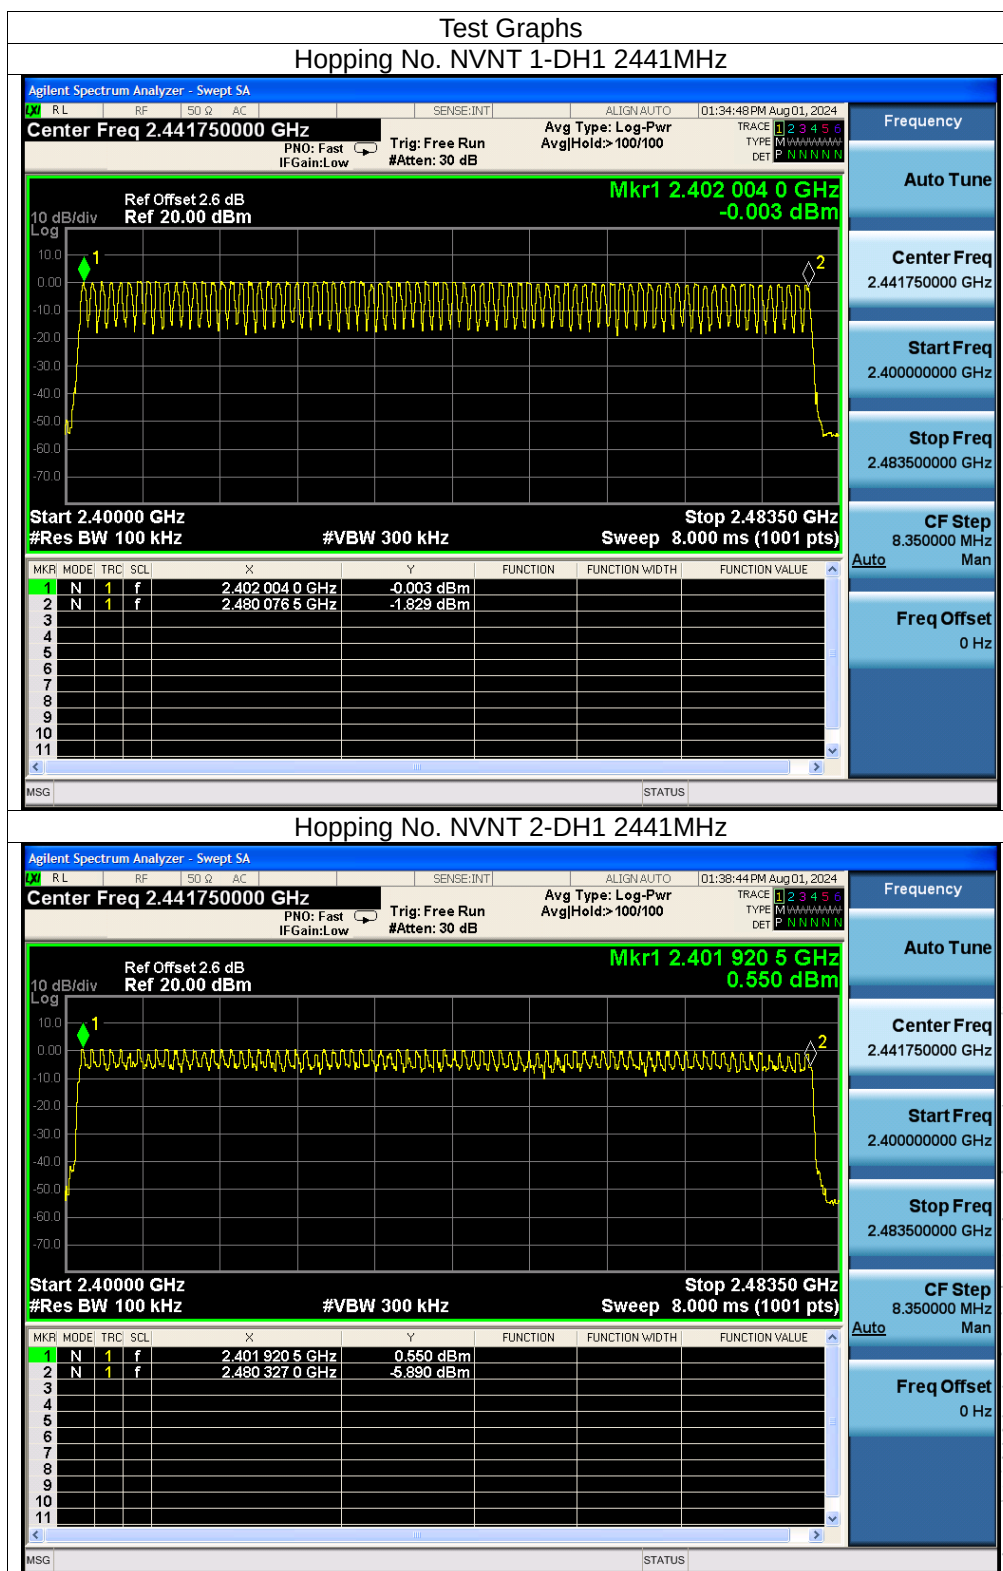


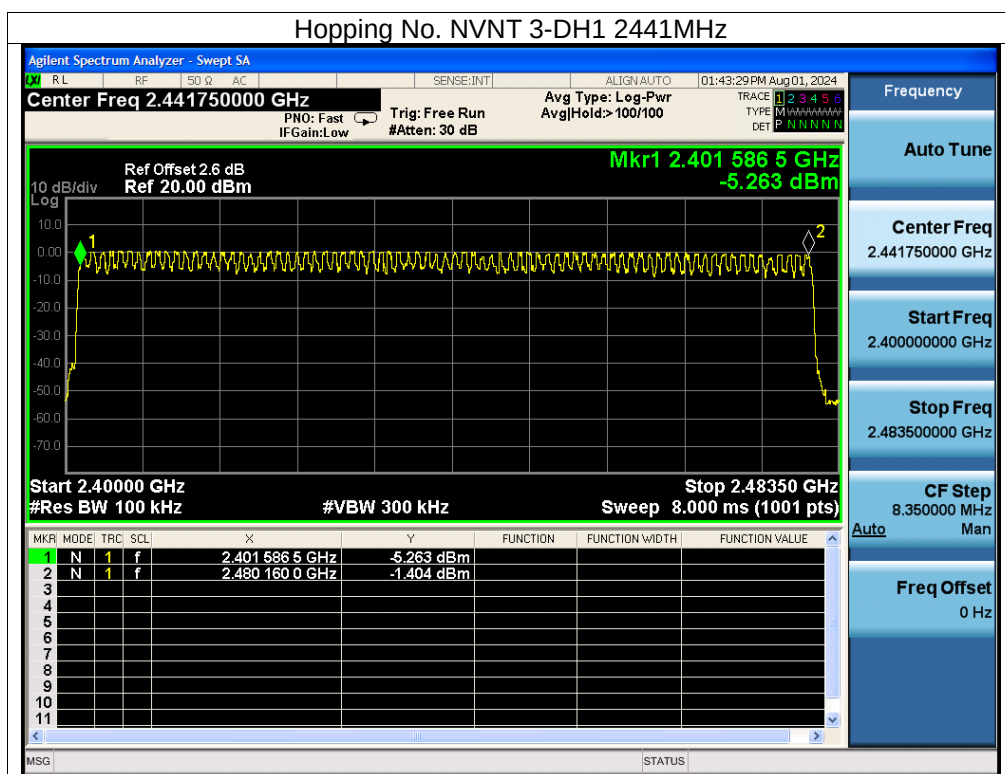

TC
BC
PPR
Report

14. Dwell Time

14.1 Block Diagram Of Test Setup

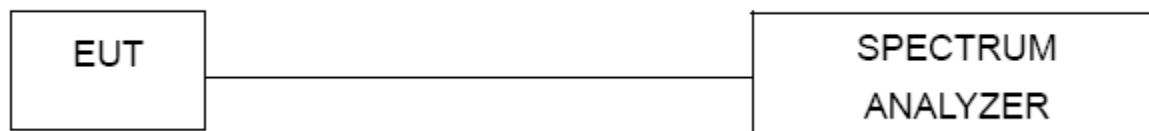

14.2 Limit

Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels. The average time of occupancy on any channel shall not be greater than 0.4 seconds within a period of 0.4 seconds multiplied by the number of hopping channels employed. Frequency hopping systems may avoid or suppress transmissions on a particular hopping frequency provided that a minimum of 15 channels are used.


14.3 Test procedure

1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set spectrum analyzer span = 0. Centred on a hopping channel;
3. Set RBW = 1MHz and VBW = 3MHz. Sweep = as necessary to capture the entire dwell time per hopping channel. Set the EUT for DH5, DH3 and DH1 packet transmitting.
4. Use the marker-delta function to determine the dwell time. If this value varies with different modes of operation (e.g.. data rate. modulation format. etc.). repeat this test for each variation. The limit is specified in one of the subparagraphs of this Section. Submit this plot(s).



14.4 Test Result

Mode	Frequency (MHz)	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
1-DH1	2441	0.383	121.794	318	31600	400	Pass
1-DH3	2441	1.639	254.045	155	31600	400	Pass
1-DH5	2441	2.887	337.779	117	31600	400	Pass
2-DH1	2441	0.393	125.76	320	31600	400	Pass
2-DH3	2441	1.637	255.372	156	31600	400	Pass
2-DH5	2441	2.886	314.574	109	31600	400	Pass
3-DH1	2441	0.392	123.872	316	31600	400	Pass
3-DH3	2441	1.643	256.308	156	31600	400	Pass
3-DH5	2441	2.894	295.188	102	31600	400	Pass



Note: Total Dwell Time (ms) = Pulse Time (ms)*Burst Count


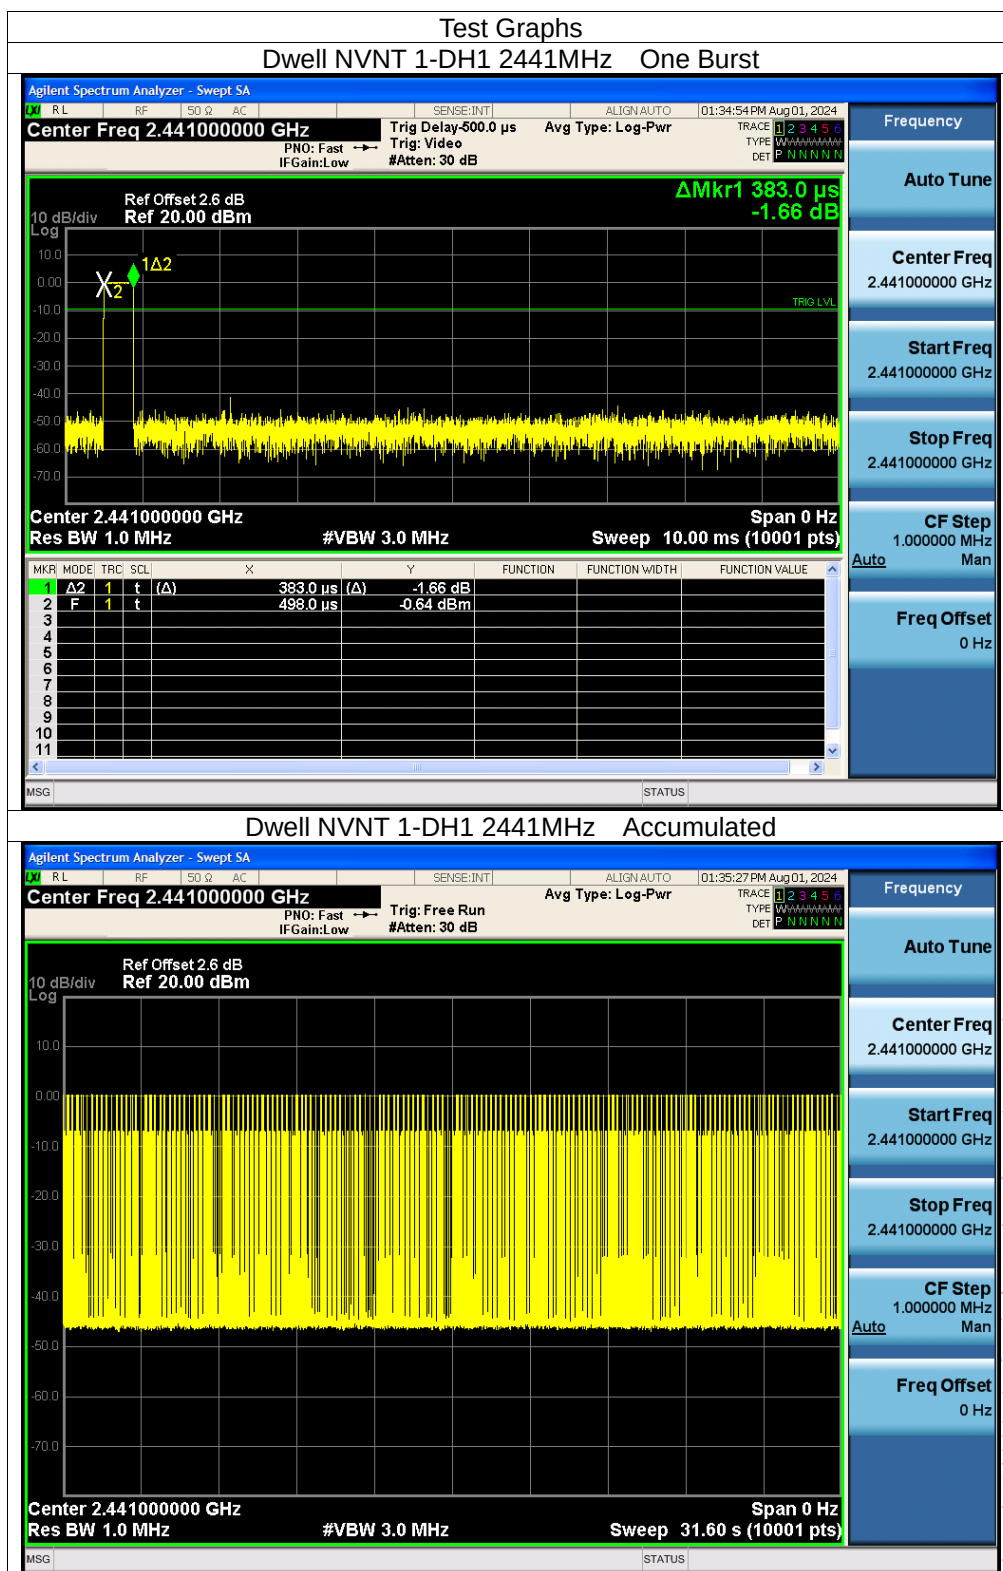




STING
ED
AI

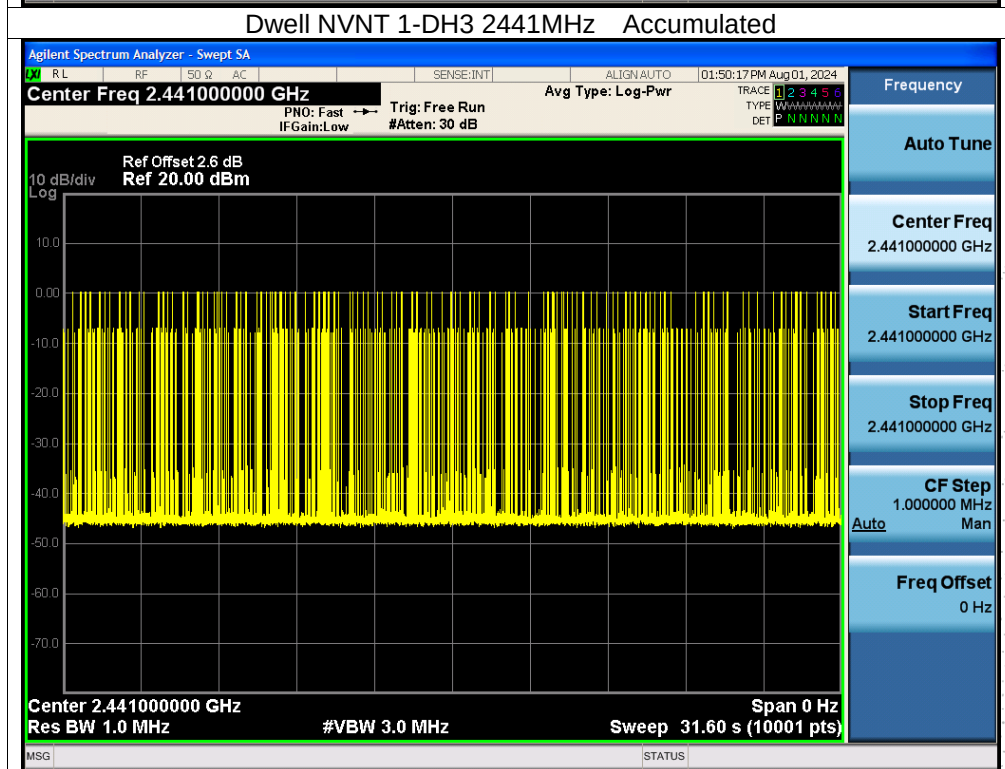
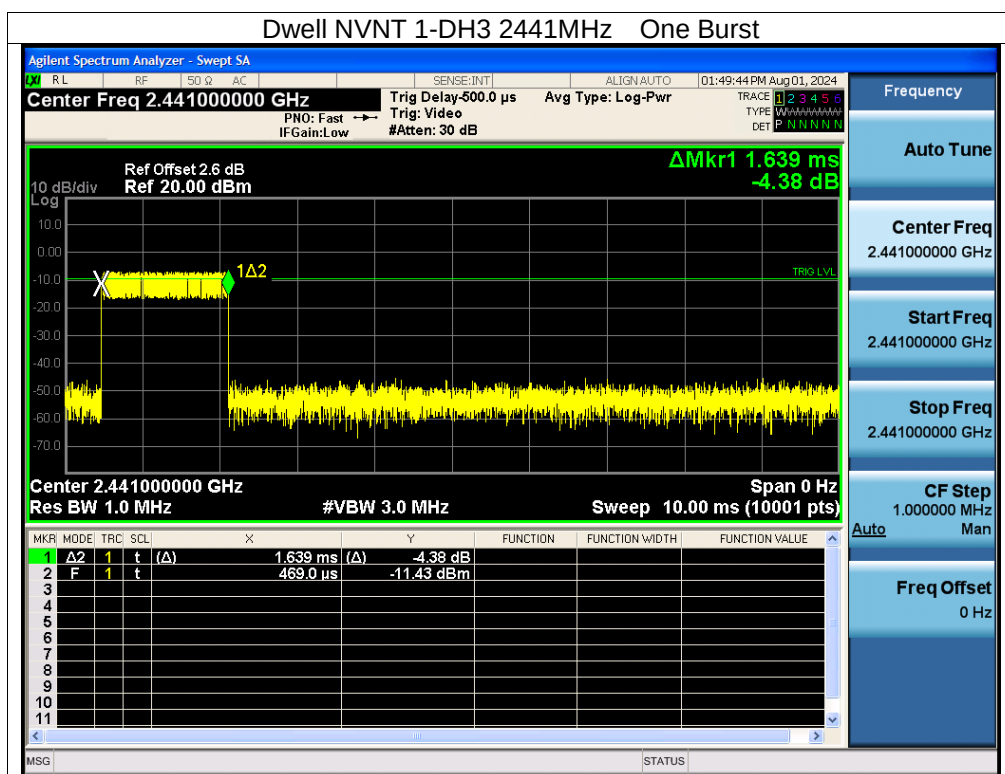




CO. LTD

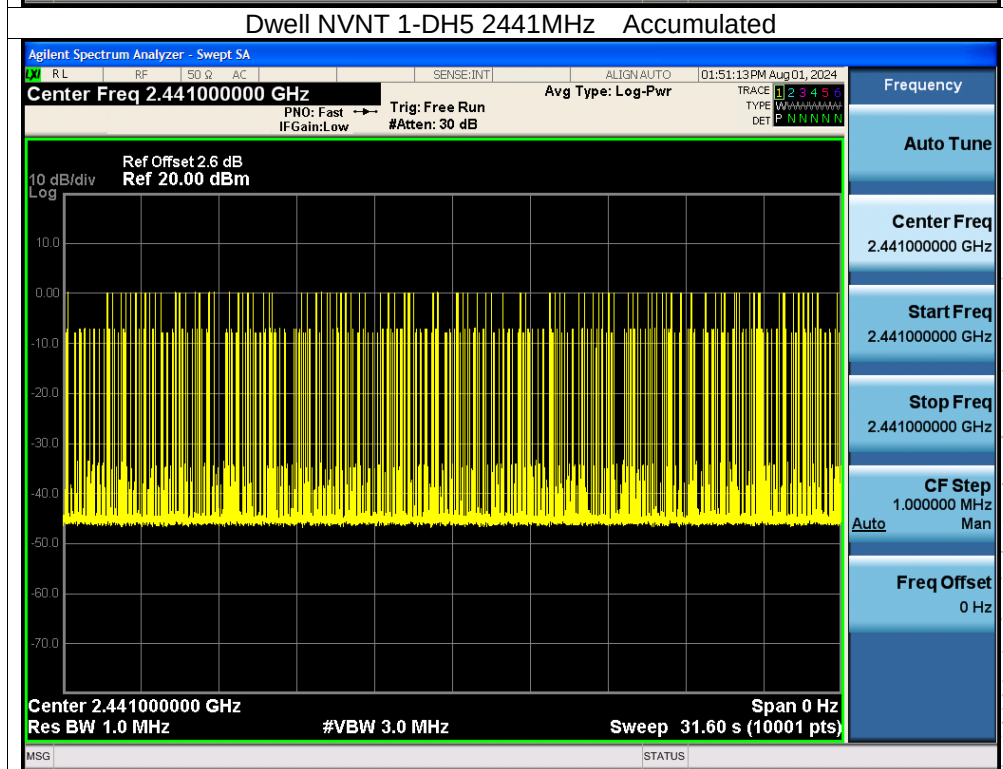
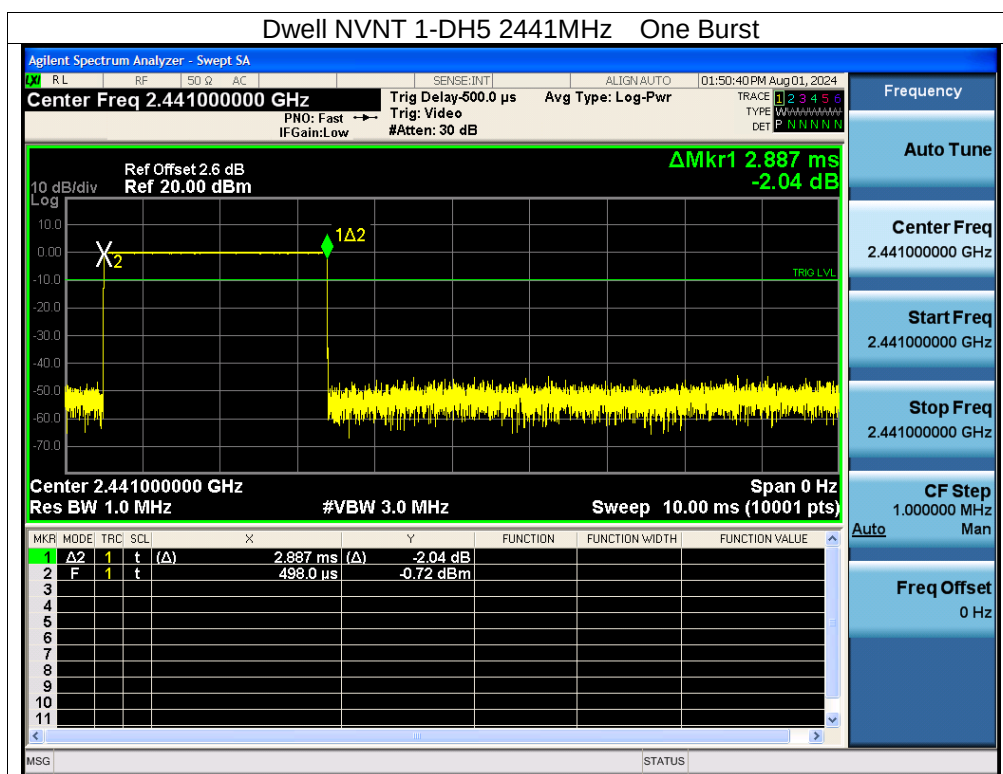


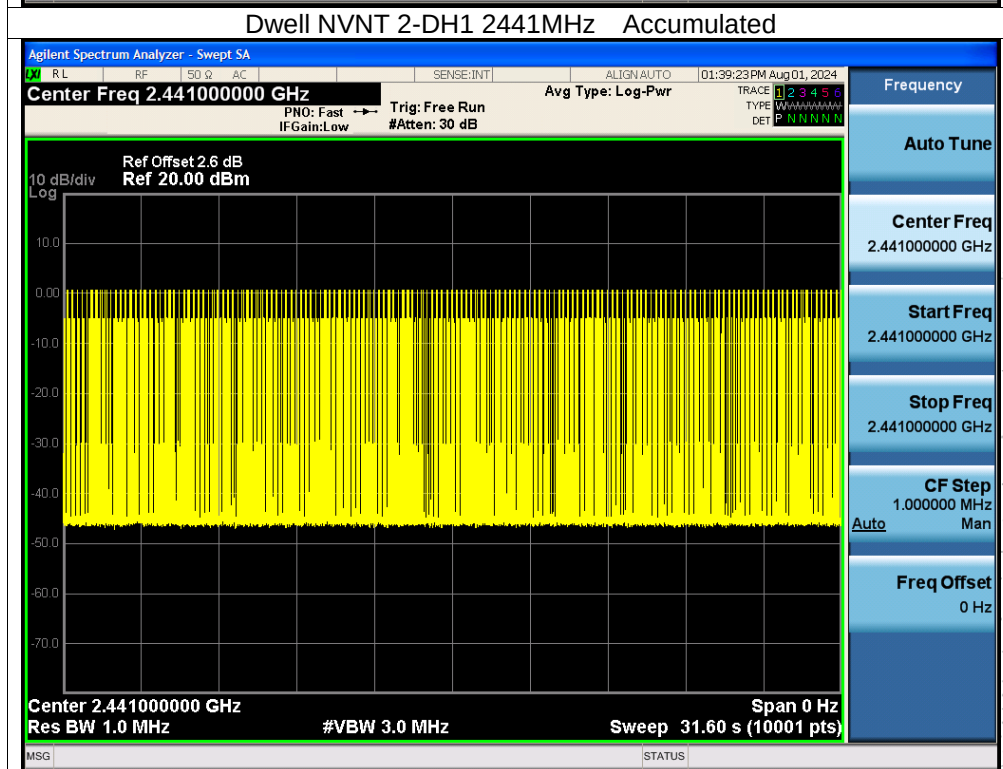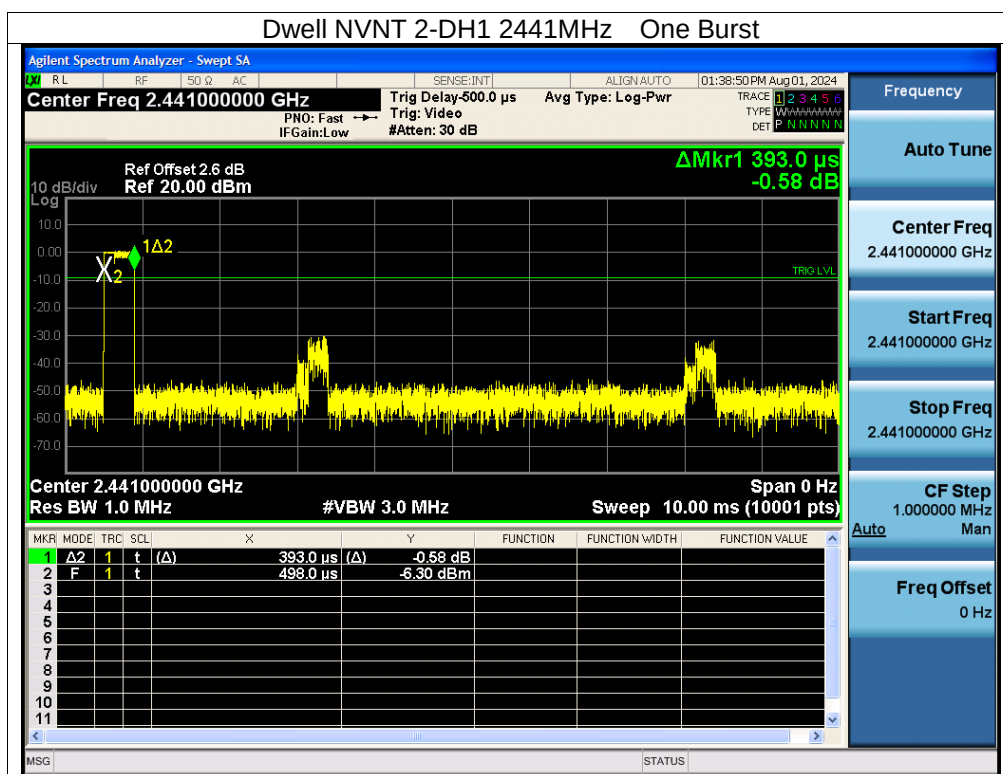

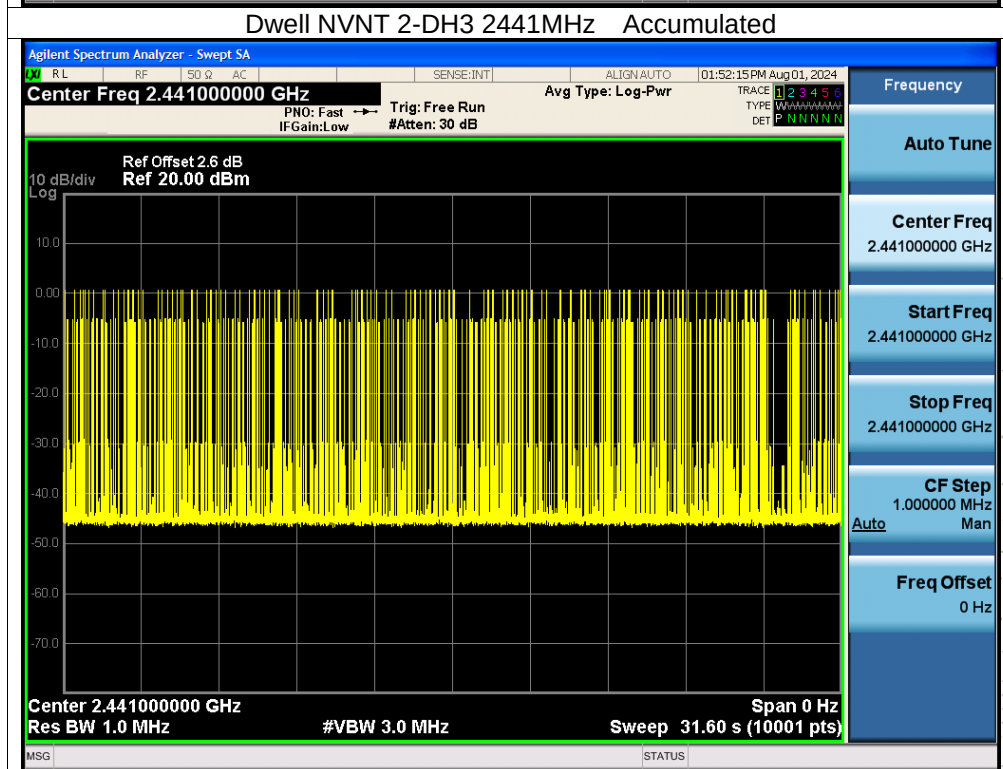
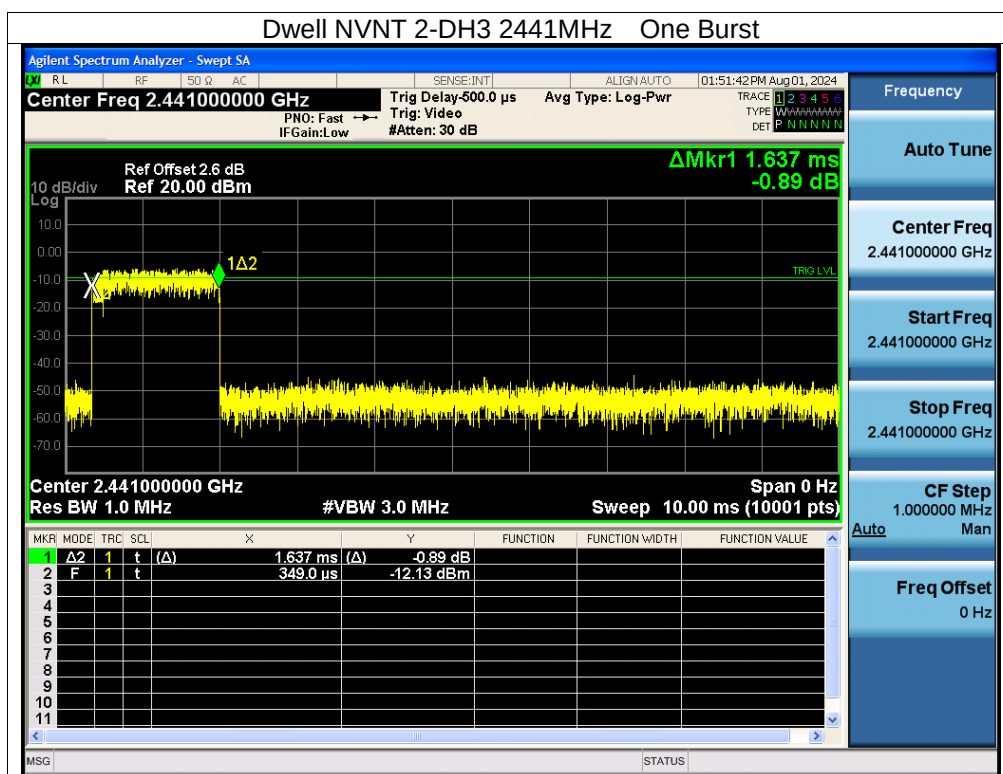


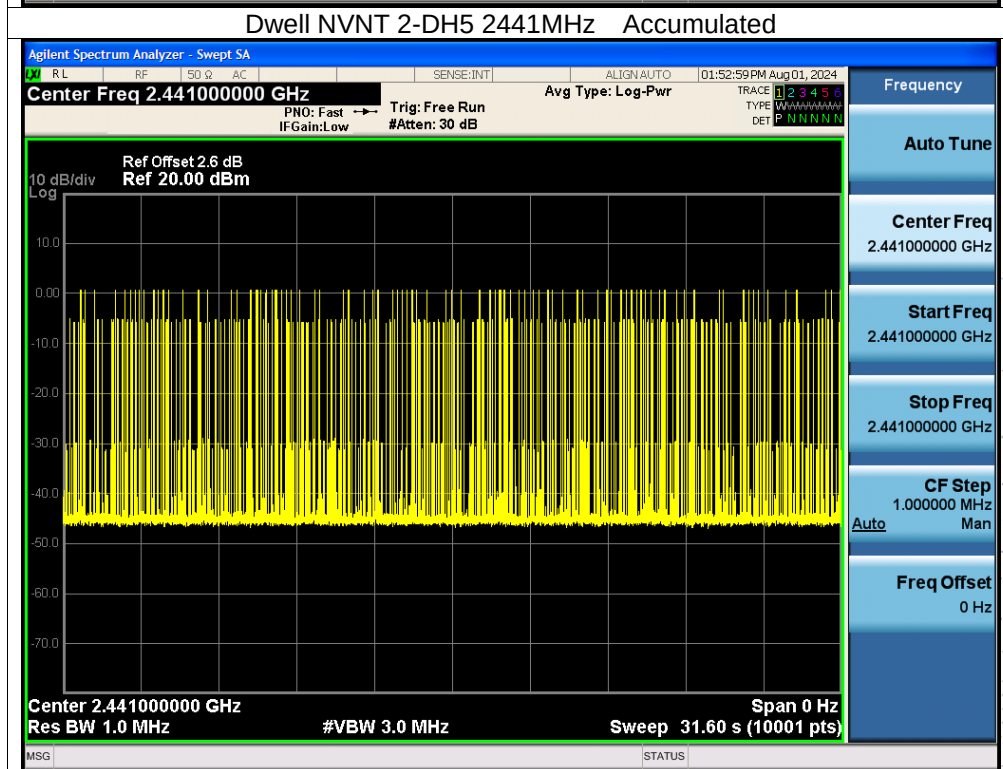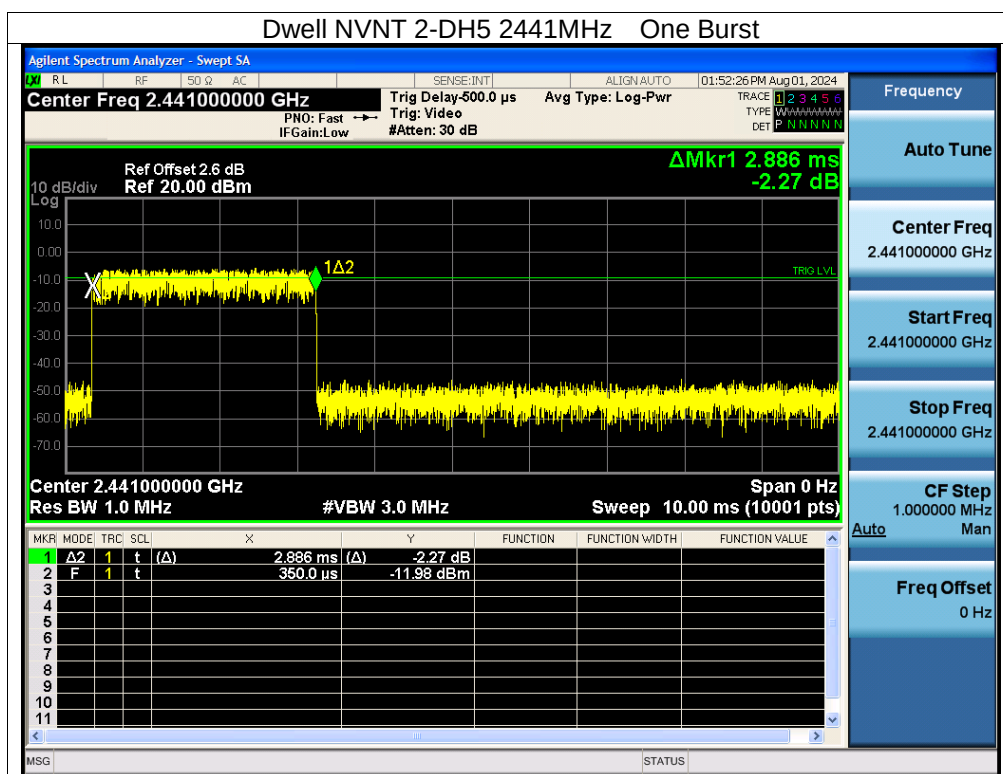

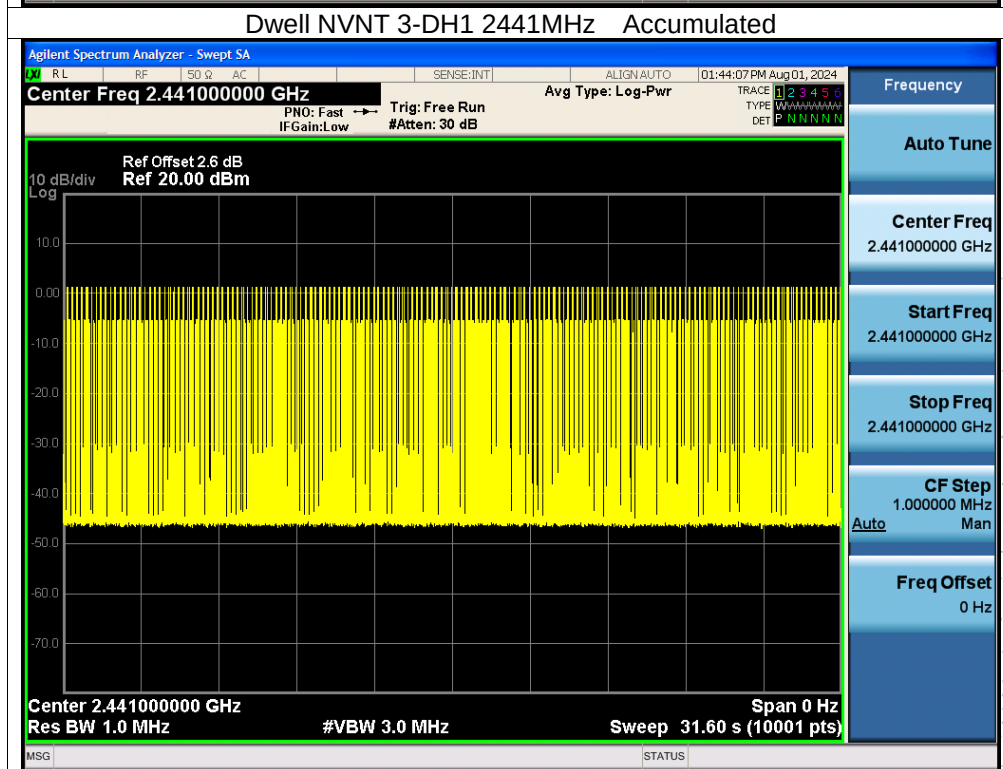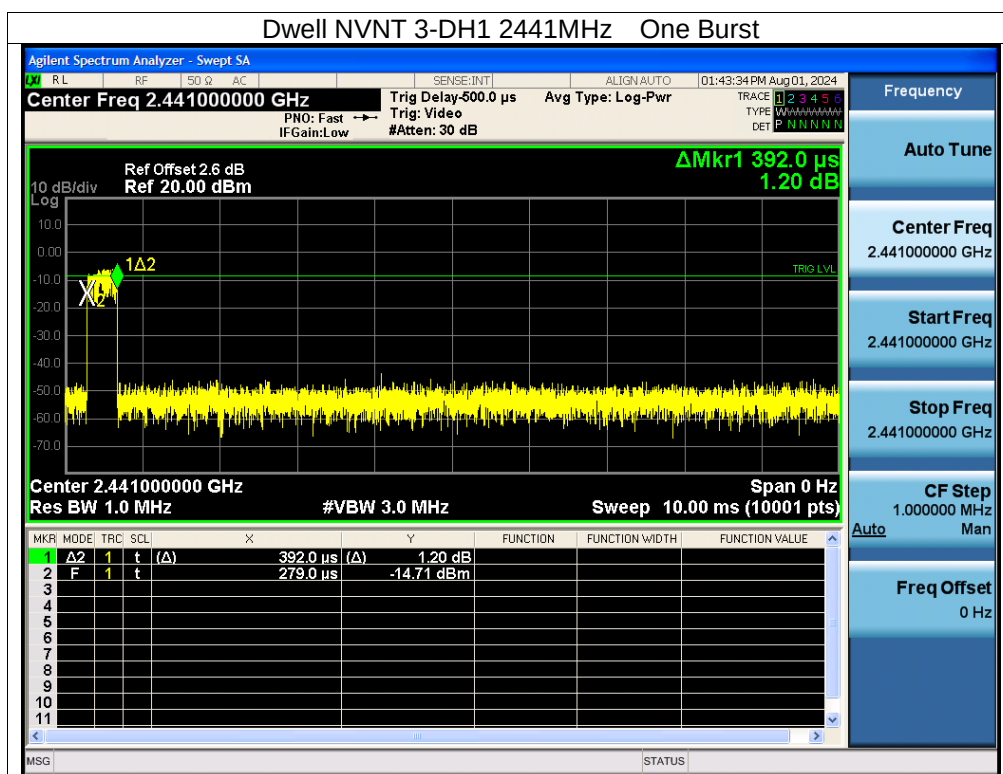

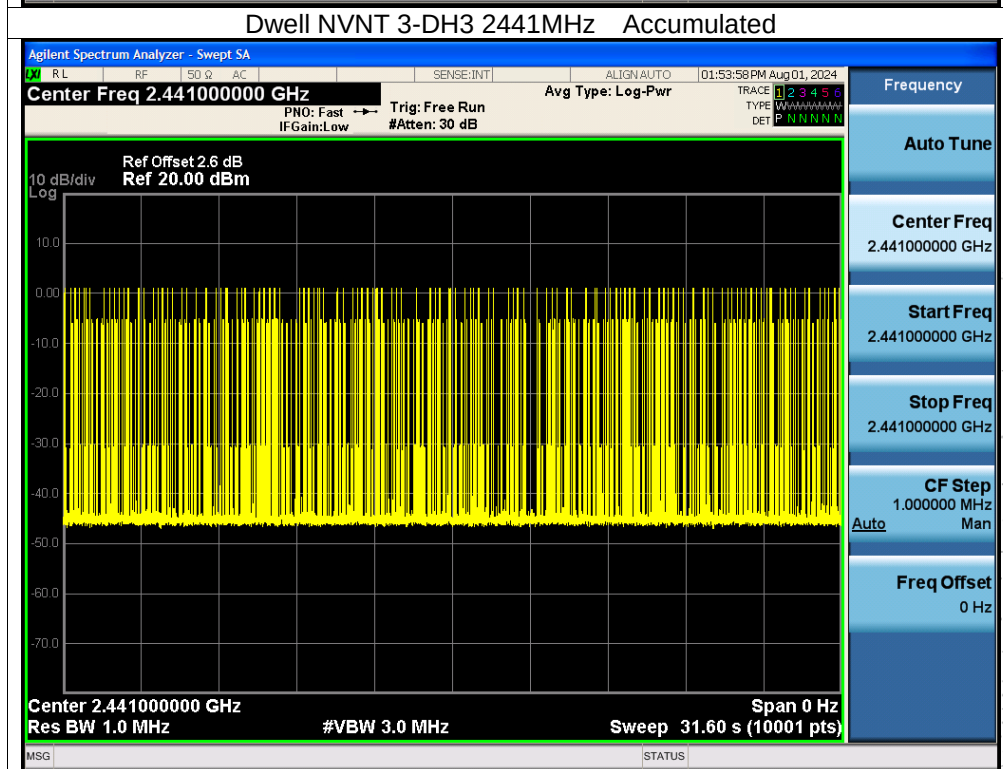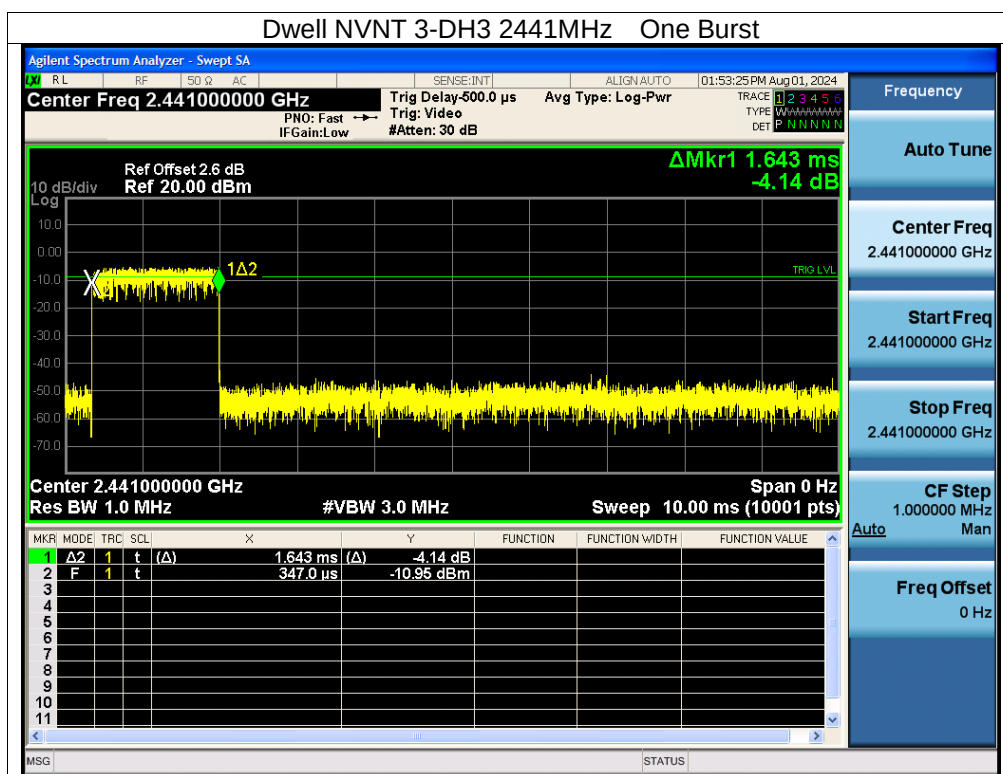

CO., LTD.

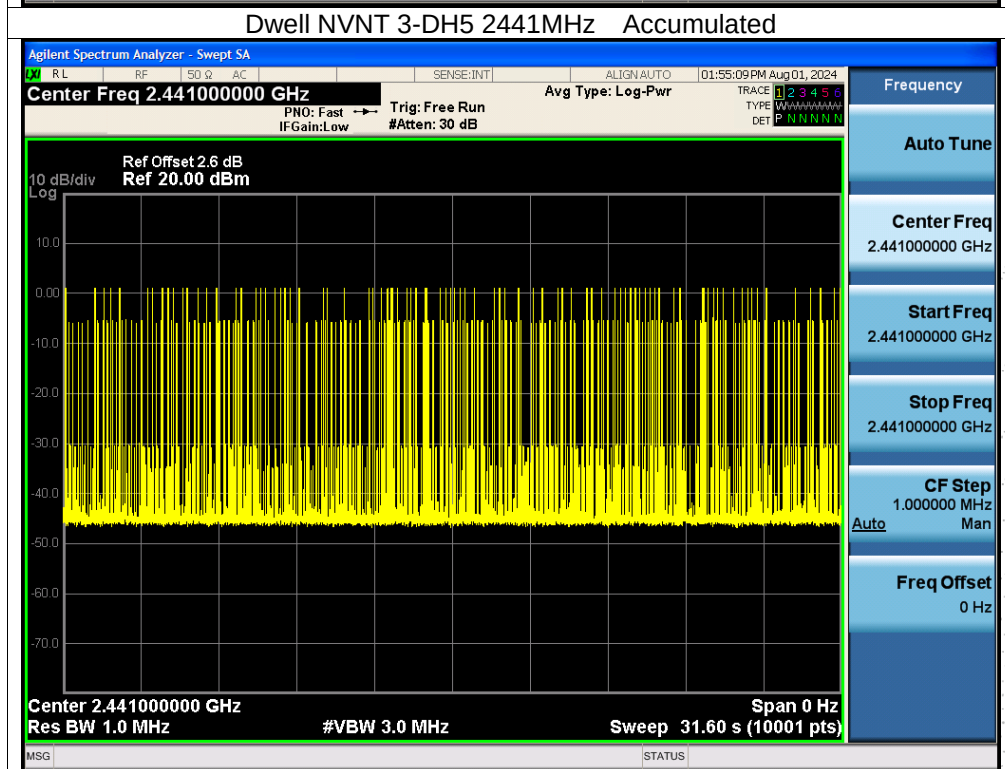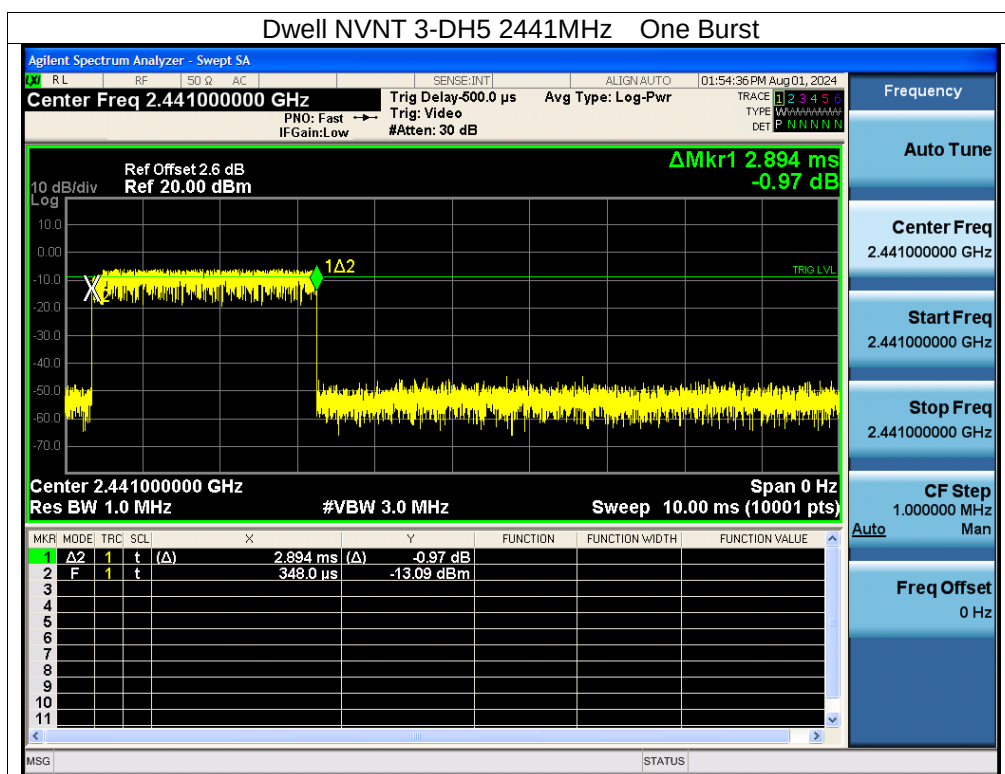

15. Antenna Requirement

15.1 Limit

15.203 requirement: For intentional device, according to 15.203: an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.

15.2 Test Result

The EUT antenna is Internal antenna, fulfill the requirement of this section.



16. EUT Photographs

EUT Photo



NOTE: Appendix-Photographs Of EUT Constructional Details

TC
BC
PPR
Report



17. EUT Test Setup Photographs

Conducted emissions



TEST
TO
OVER
t See

Radiated Measurement Photos

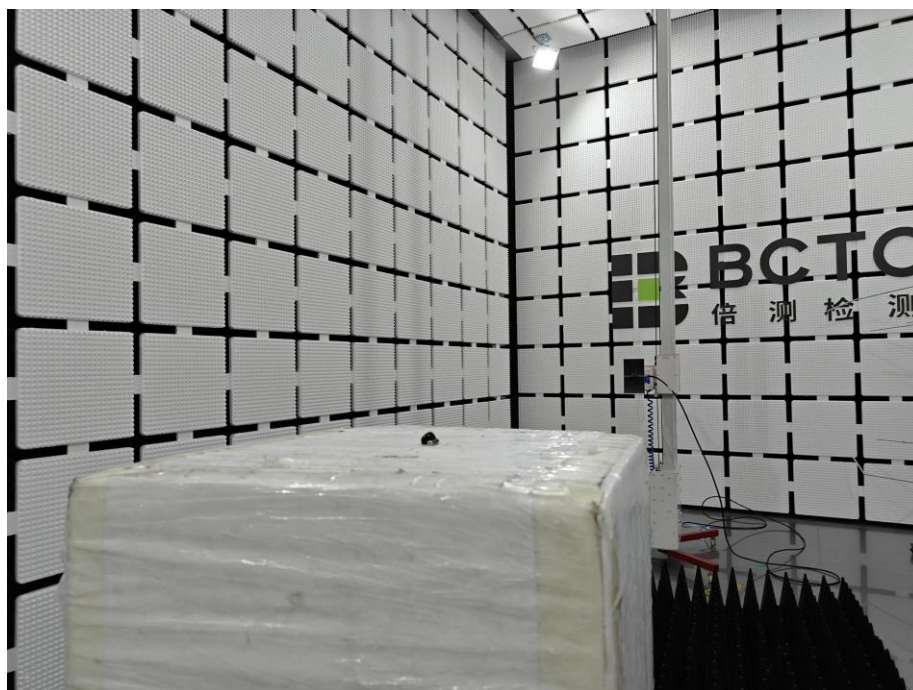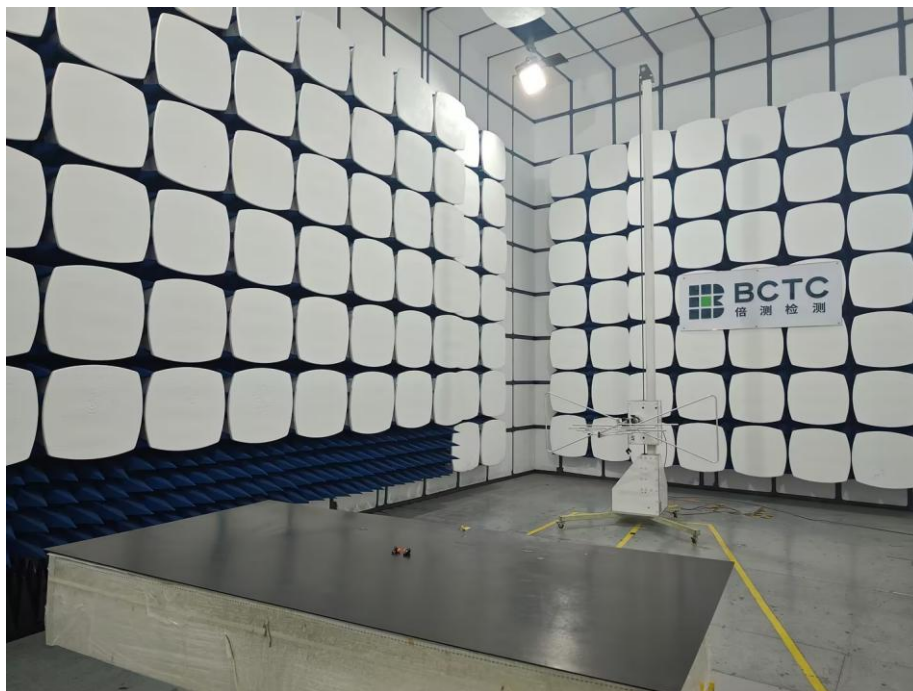

STATEMENT

1. The equipment lists are traceable to the national reference standards.
2. The test report can not be partially copied unless prior written approval is issued from our lab.
3. The test report is invalid without the "special seal for inspection and testing".
4. The test report is invalid without the signature of the approver.
5. The test process and test result is only related to the Unit Under Test.
6. Sample information is provided by the client and the laboratory is not responsible for its authenticity.
7. The quality system of our laboratory is in accordance with ISO/IEC17025.
8. If there is any objection to this test report, the client should inform issuing laboratory within 15 days from the date of receiving test report.

Address:

1-2/F., Building B, Pengzhou Industrial Park, No.158, Fuyuan 1st Road, Zhancheng, Fuhai Subdistrict, Bao'an District, Shenzhen, Guangdong, China

TEL: 400-788-9558

P.C.: 518103

FAX: 0755-33229357

Website: <http://www.chnbctc.com>

Consultation E-mail: bctc@bctc-lab.com.cn

Complaint/Advice E-mail: advice@bctc-lab.com.cn

***** END *****