


GLOCUSENT 5W HEADBOARD CLIP ON LIGHT

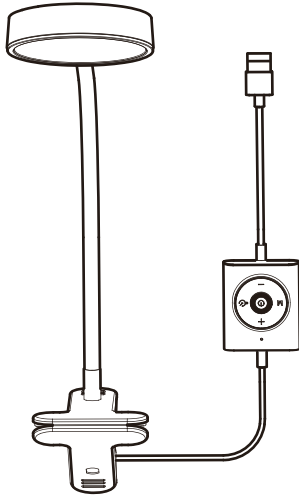

AC Adapter Included

 **glocusent** | Light Up Your Chapters

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

Equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a Particular installation.If thise quipment does

cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Catalogue

English ----- 1

Deutsch ----- 9

Français ----- 12

Italiano ----- 15

Español ----- 18

About Glocusent ----- 21

Scan the QR Code for 36-month
upgraded VIP warranty



For Customer Service

www.glocusent.com | service@glocusent.com

Words from The Product Designer

Hi friends,

This is Mason from Glocusent (again). It's always a pleasure to connect with you through our thoughtfully designed products.

Glocusent has been a trusted name in the LED light industry, particularly in the book light category, for over 5 years. We've observed that many of our customers are readers, artists, photographers, architects, and hobbyists, and we believe our Clamp Light will be an excellent addition to your workspace.



This versatile light features a sturdy, heavy-duty clamp that allows you to attach it securely to tables, beams, easels, pianos, headboards, and more. Designed with precision, the Glocusent Clamp Light can be directed like a spotlight, making it an ideal choice for artists and creators who need to illuminate specific areas of their workspace. Additionally, its higher brightness levels ensure it can illuminate broader areas, making it perfect for both focused tasks and ambient lighting.

What makes this Clamp Light even more user-friendly is the inclusion of a remote control. You can now adjust brightness, color temperature, and settings effortlessly

from a distance, giving you complete control over your lighting environment without interrupting your workflow or relaxation time.

We're excited to see how this Clamp Light will inspire your creativity and enhance your projects. Don't forget to tag us on social media and share your fabulous creations under the glow of the Glocusent Clamp Light!

Thank you for your continued support,
Mason

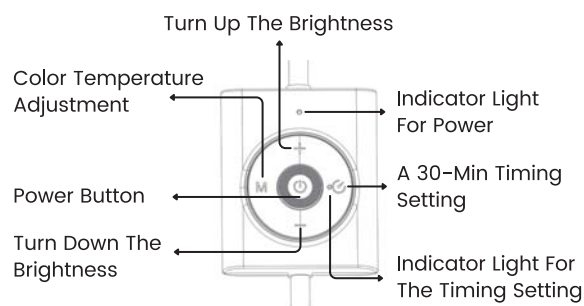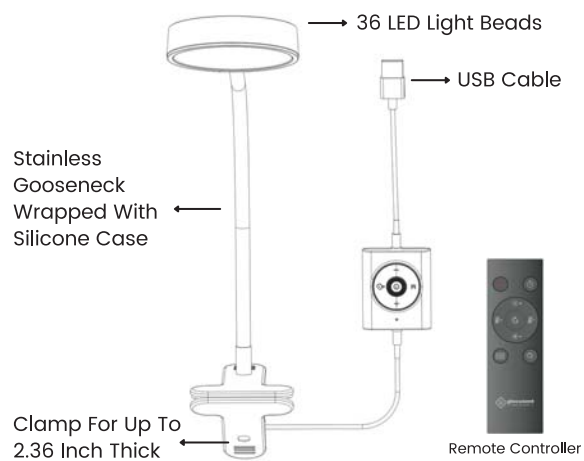

Instruction

Turn on

 Press the Button to Turn On or Off

Brightness Level

+

Turn Up the Brightness Level

10%

30%

50%

75%

100%

Turn Down the Brightness Level

-

Color Temperature

M

Press Once

 Amber Mode

Press Twice

 Mild Mode

Press Three Times



 Natural Mode

Timing Setting

 Press the Button to Turn On or Off a Timing Setting for 0.5 Hour

Remote Instruction

Battery Insulating Pull Tab Pull It Before Use

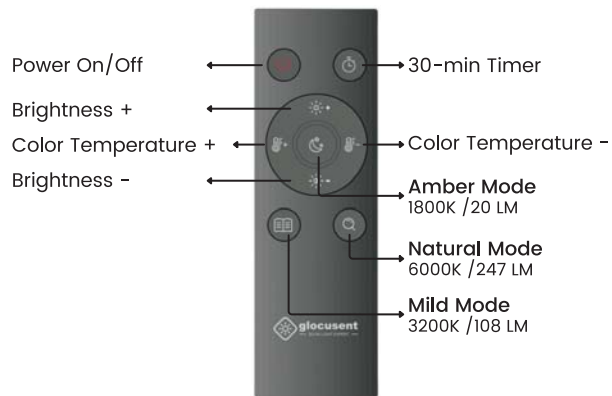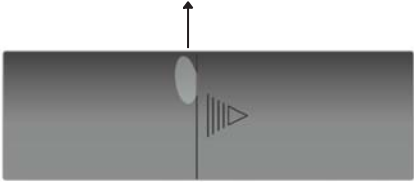

- A red indicator light will flash when the signal is sent.

Precautions

- Use 5V $\Rightarrow$ 2A output wall plug to make sure the clamp light is working at its full capacity.
- Please do not use a charger exceeding 5V-high voltage may cause damage.
- Please use the original plug provided, or a third-party certified plug. Using a non-certified plug may result in unstable voltage and flickering light.
- When using this product, please be advised not to cover the lamp with materials such as cloth.
- Do not expose the lamp head to fire under any circumstances when using this product.
- Note: The power indicator light will turn green when the clamp light is connected with the power.
- An indicator light will turn green when the 30-min timing setting is on.
- Please avoid placing in an extreme temperature environment (either too hot or too cold).
- Disposal: When you are ready to dispose of the product after wearing it out, please make sure to follow the instructions of your local government for environmental and safety purposes

Features

- 3 color temperatures:

Amber Mode 1800K–Blue-light-blocking promotes the production of melatonin after reading and before sleep.

Mild Mode 3200K–Soft and gentle light for general readings

Natural Mode 6000K–Restore the noon light for the best concentration.



- 5 brightness levels,with the brightest level up to 247lm.
- Smart lamp head: Glocusent designers carefully designed the lamp head with lots of effort to make sure the lighting source is distributed evenly from the LED beads. so the light can be soft and cozy enough to better avoid your eye strain.
- Timing function: 30-minute timing to turn the light off automatically. You can peacefully leave the book aside and go to dreamland.
- The sturdy clamp can be opened to a maximum of 2.36 inches in width, which allows for use for all kinds of thick surfaces.
- The gooseneck is able to be bent at 360 degrees with memory function, which means it will not bounce back when you fix the neck on your comfortable positions.
- 78.74-inch (2-meter) long cable, easily move around the light wherever within 78.74-inch (2-meter) area.

Product Specifications

Model	GLCSNTBL201
Brightness	20lm - 247lm
Color Temperature	1800K, 3200K, 6000K
LED Beads	36
Dimensions	3.7*2.9*22.5 IN/9.5*7.4*57.2 cm
Weight	12.2 oz / 347 g
Certificate	FCC, PSE, CE, C-TICK
Input	5V $\overline{=}$ 2A

Include

Glocusent 5W Headboard Clip On Light (w/Controller & 78 inch cord)	x 1
USB AC Adapter (5V $\overline{=}$ 2A)	x 1
Remote Control	x 1
User Manual	x 1
Bookmark	x 1

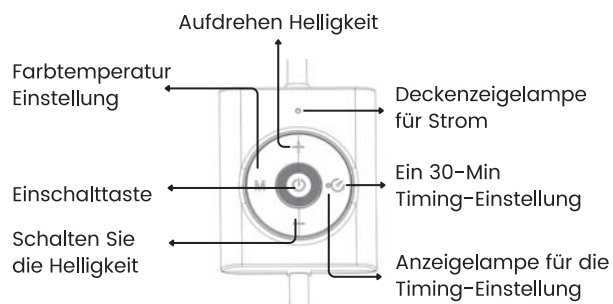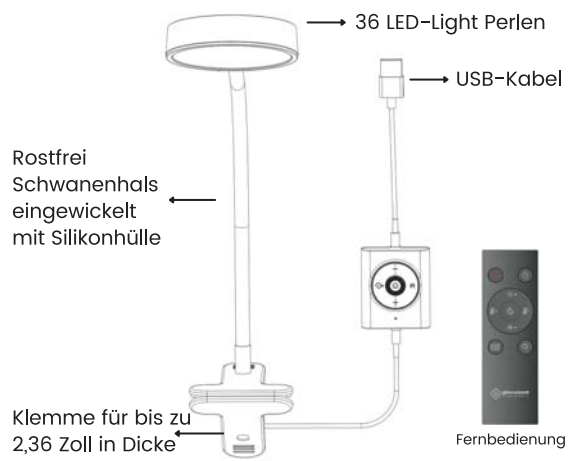


Anleitung

Einschalten

 → Drücken Sie die Taste zum Einordnen

Helligkeitsstufen

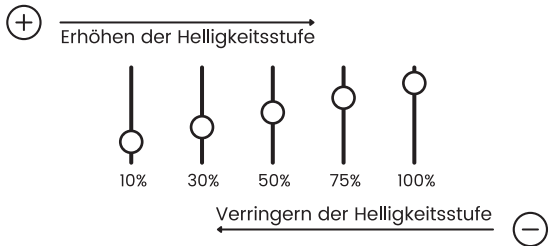

Farbtemperatur





Einstellung der Zeitschaltuhr



 → Drücken Sie die Taste, um eine Zeiteinstellung für 0.5 Stunden einordnen auszuschalten

Anleitung zur Fernbedienung

Isolierlasche Für Den Akku Vor Der Verwendung Herausziehen

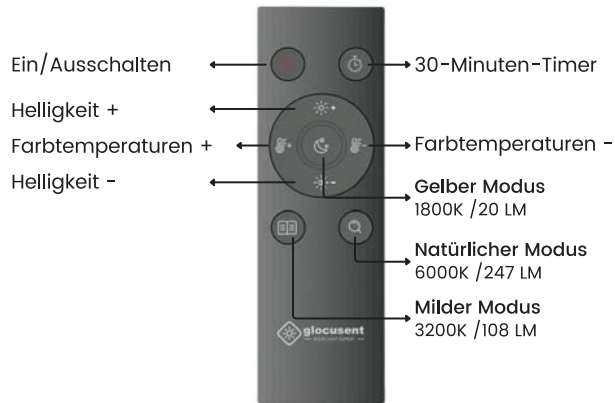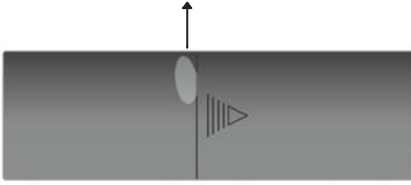

- Eine rote Kontrollleuchte blinkt, wenn das Signal gesendet wird.

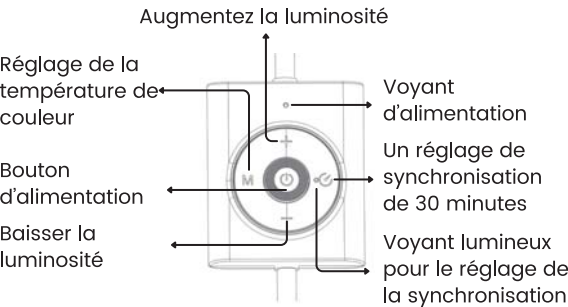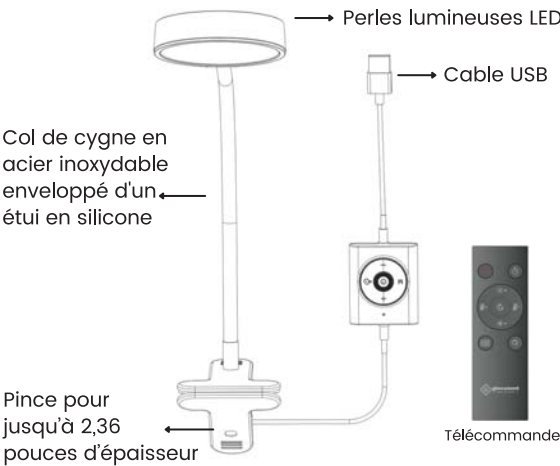


Instruction

Allumer

 → Appuyez sur le bouton pour allumer ou éteindre

Niveaux de luminosité

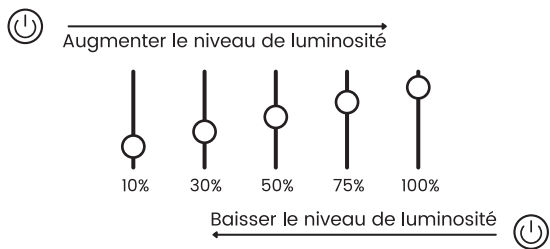

Température de couleur

Appuyez une fois →  Mode ambre

 Appuyez deux fois →  Mode doux


Appuyez trois fois →  Mode naturel

Réglage de synchronisation

 → Appuyez sur le bouton « on » ou « off » pour activer ou désactiver un réglage de synchronisation pour 0,5 heure

Instructions de la télécommande

Tirette d'Isolation De La Batterie
Tirez-la Avant De l'Utiliser

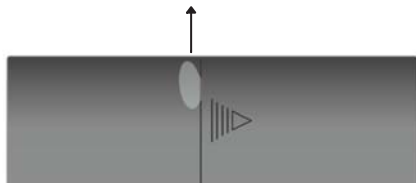

Mise sous Tension/
Hors Tension

Luminosité +
Température
s des Couleurs +
Luminosité -

Minuterie de 30
Minutes

Températures de
Couleur -


Mode ambre
1800K / 20 LM

Mode naturel
6000K / 247 LM

Mode doux
3200K / 108 LM



- Un témoin lumineux rouge clignote lorsque le signal est envoyé.

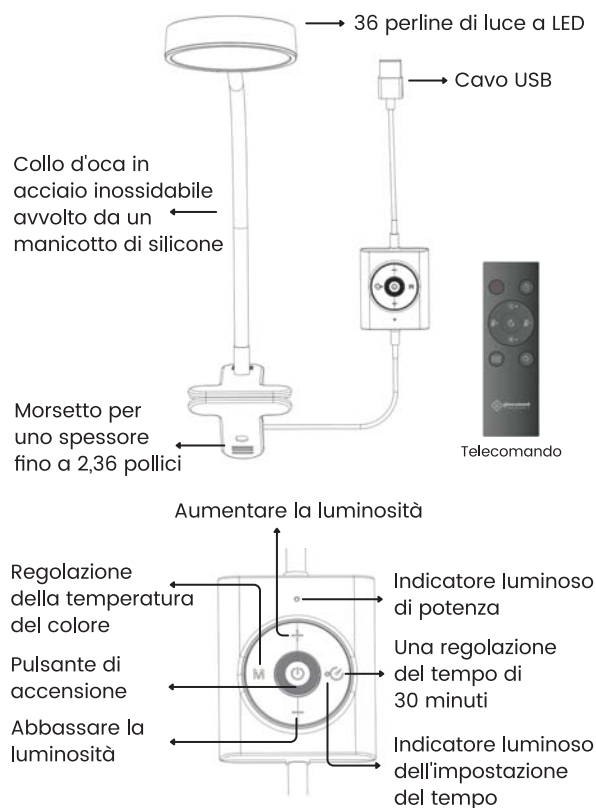


Istruzioni


Accendere




Livelli di luminosità

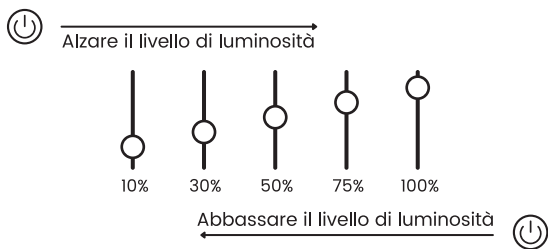

Colori della temperatura


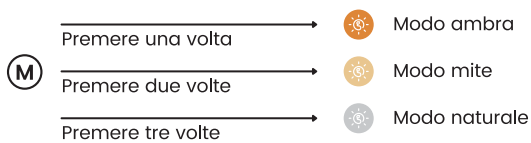


Impostazione del tempo




Istruzioni di telecomando

Linguetta Isolante Della
Batteria Rimuovere Prima Dell'Uso

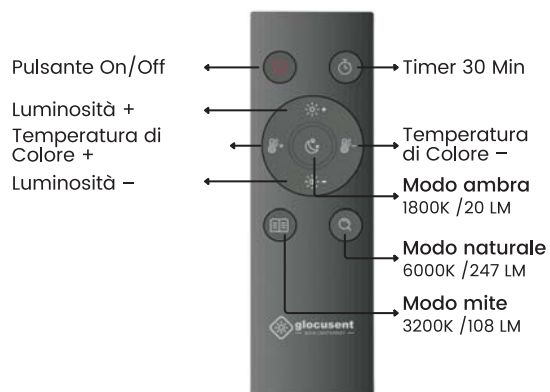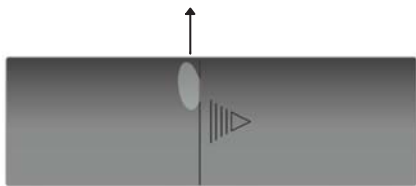

- Una spia rosso lampeggerà quando viene inviato il segnale.

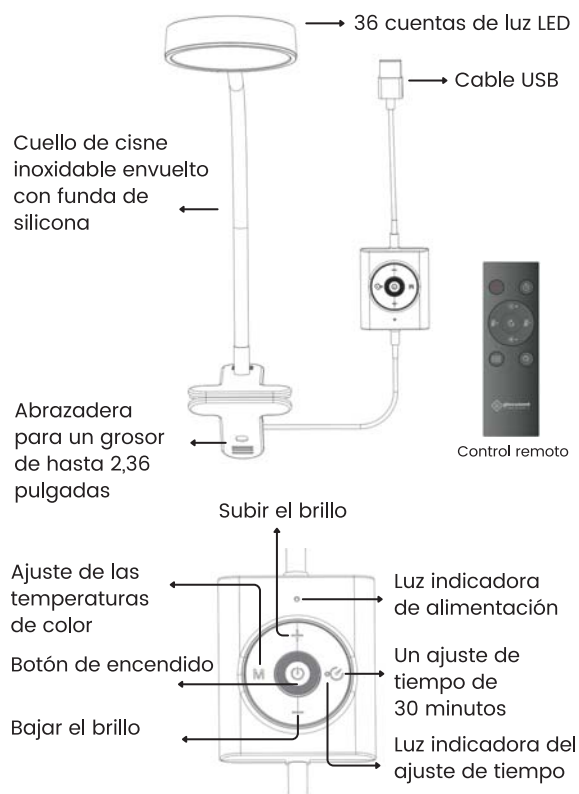

Instrucciones

Encender

 → Presionar el botón para encender o apagar

Niveles de brillo

 → Subir el nivel de brillo

10% 30% 50% 75% 100%

← Bajar el nivel de brillo 

Temperaturas de color

Presionar una vez  Modo ámbar

Presionar dos veces  Modo suave



Presionar tres veces  Modo natural

Ajuste del tiempo

 → Presionar el botón para activar o desactivar un ajuste de tiempo de 0,5 horas

Instrucciones de control remoto

Tira De Aislamiento De
Batería Retírese antes de usar

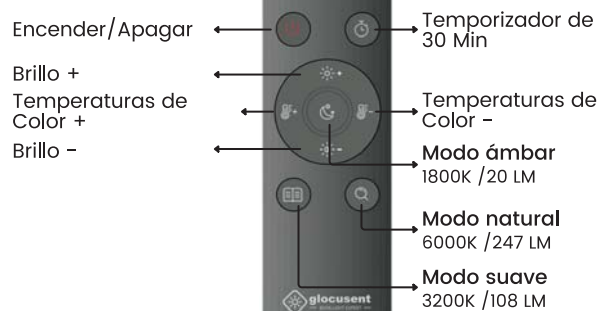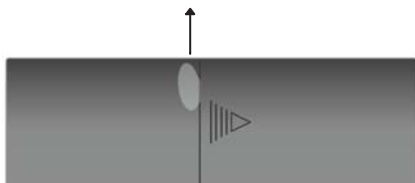

- Cuando se envíe la señal, la luz indicadora rojo se encenderá como señal.

About Glocusent

Ever since we saw our first sunrise illuminate the beautiful Colorado Springs, we've become a lighting product company that believes that light is a critical element to capturing the magic in moments. No progress was ever made in the dark, and we're here to deliver that light to ensure that our users are always progressing. At Glocusent, we refer to three core principles: glory, focus, and moments.

Glory: We're about bringing light to your life, and we believe life is filled with glory, whether that's in your career or with your family. Let us shine a light on that glory.

Focus: Our team at Glocusent is focused on creating innovative lights and lamps that are convenient, smart, and tailored to its user. In the wise words of Roy T. Bennett, "Life is short; focus on what really matters; you should change your priorities over time." With our lights, you can focus on what matters.

Moment: Moments are fleeting. Your lives are filled with beauty, romance, and happiness. Our innovative lights are there to help you capture the moments.



Verification of Compliance

Verification No.: TMC211012121-E
 Name and address of Applicant: **glocusent co., ltd**
 1624 Market Street ste 226#79525 Denver, Colorado
 Name and address of Manufacturer: **Shenzhen Glocusent Technology Co., Ltd**
 Room 1502, Building 13, Keenstar Building, Xixian Street, Bao'an District, Shenzhen
 Product name: **Clip on Light A12**
 Rated: **SV --- 1A 10W**
 Product model(s): **GLCSNTBL201, GLCSNTBL202**
 Product trademark: **GLOCUSENT**
 This verification confirms that the product meets the requirements of the following standard.
 The conformity was demonstrated based on following standard(s) listed by European Commission as harmonized with EMC Directive 2014/53/EU
 EN IEC 55015:2019+A11:2020
 IEC 61547:2020
 EN IEC 61000-3-2:2019
 EN 61000-3-3:2013+A1:2019
 The verification has been carried out in accordance with individual rules and conditions agreed with the applicant. Evaluation has been carried out in accordance with:
 Test report(s) No.: TMC211012121-E
 Test conducted by: TMC Testing Services (Shenzhen) Co., Ltd.
 Verification issue date: October 28, 2021
 Notes:
 This verification refers to the above mentioned product and its conformity in regards of above mentioned standard(s) was proven on test sample.
 This verification does not imply meeting all essential requirements, assessment of the series-production or any other restricted Notified Bodies conformity assessment procedure appropriate for the product.
 This verification holder shall use this verification in connection to verification of conformity and technical data relevant for the product the verification was issued.
 TMC Testing Services (Shenzhen) Co., Ltd.
 186-755-86642861 | info@tmc-lab.com | www.tmc-lab.com
 1st Floor, Block A1, Zone A, Xinshidai Gongrong Industrial Park, Nr. 2, Shihuan Road, Shihuan Street, Bao'an District, Shenzhen, China



TMC



Points de collecte sur www.quefairedesdechets.fr
 Privilégiez la réparation ou le don de votre appareil !



Warning: To avoid danger of suffocation, keep this bag away from children and babies. Do not use this bag in cribs, beds, baby carriages or playpens. This bag is not a toy.

Glocusent Customer Support

Have questions, concerns, or feedback about Glocusent 5W Headboard Clip on Light (A12)? Email us at service@glocusent.com. Our team will respond to your email in a swift time.

You're currently covered by our 24-month worry-free warranty. But there's more! You can easily bump that up to a 36-month VIP Service warranty. It's all on us-either a replacement, a full refund or a chance to try out our new products. Simply swing by our website and register your purchase to make the upgrade, we've got your back.

www.glocusent.com/pages/warranty

Alternatively, you can scan the QR code below to register your purchase:



————— **For Customer Service** —————

www.glocusent.com | service@glocusent.com