


Shenzhen Anbotek Compliance Laboratory Limited

Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.

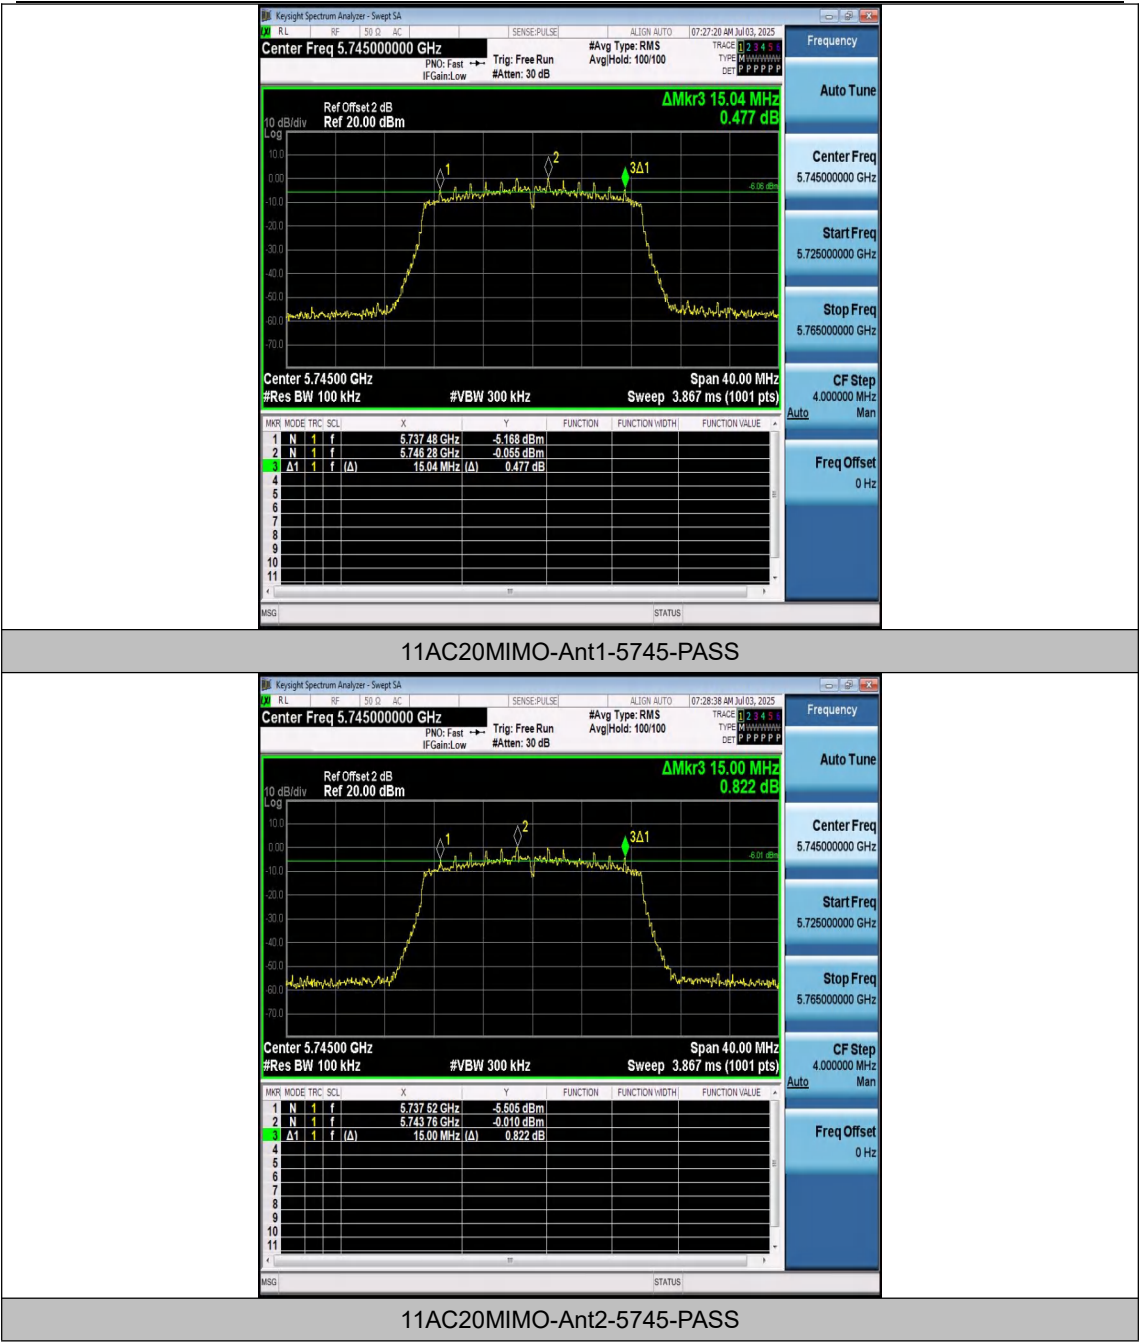



Shenzhen Anbotek Compliance Laboratory Limited


Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.


Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

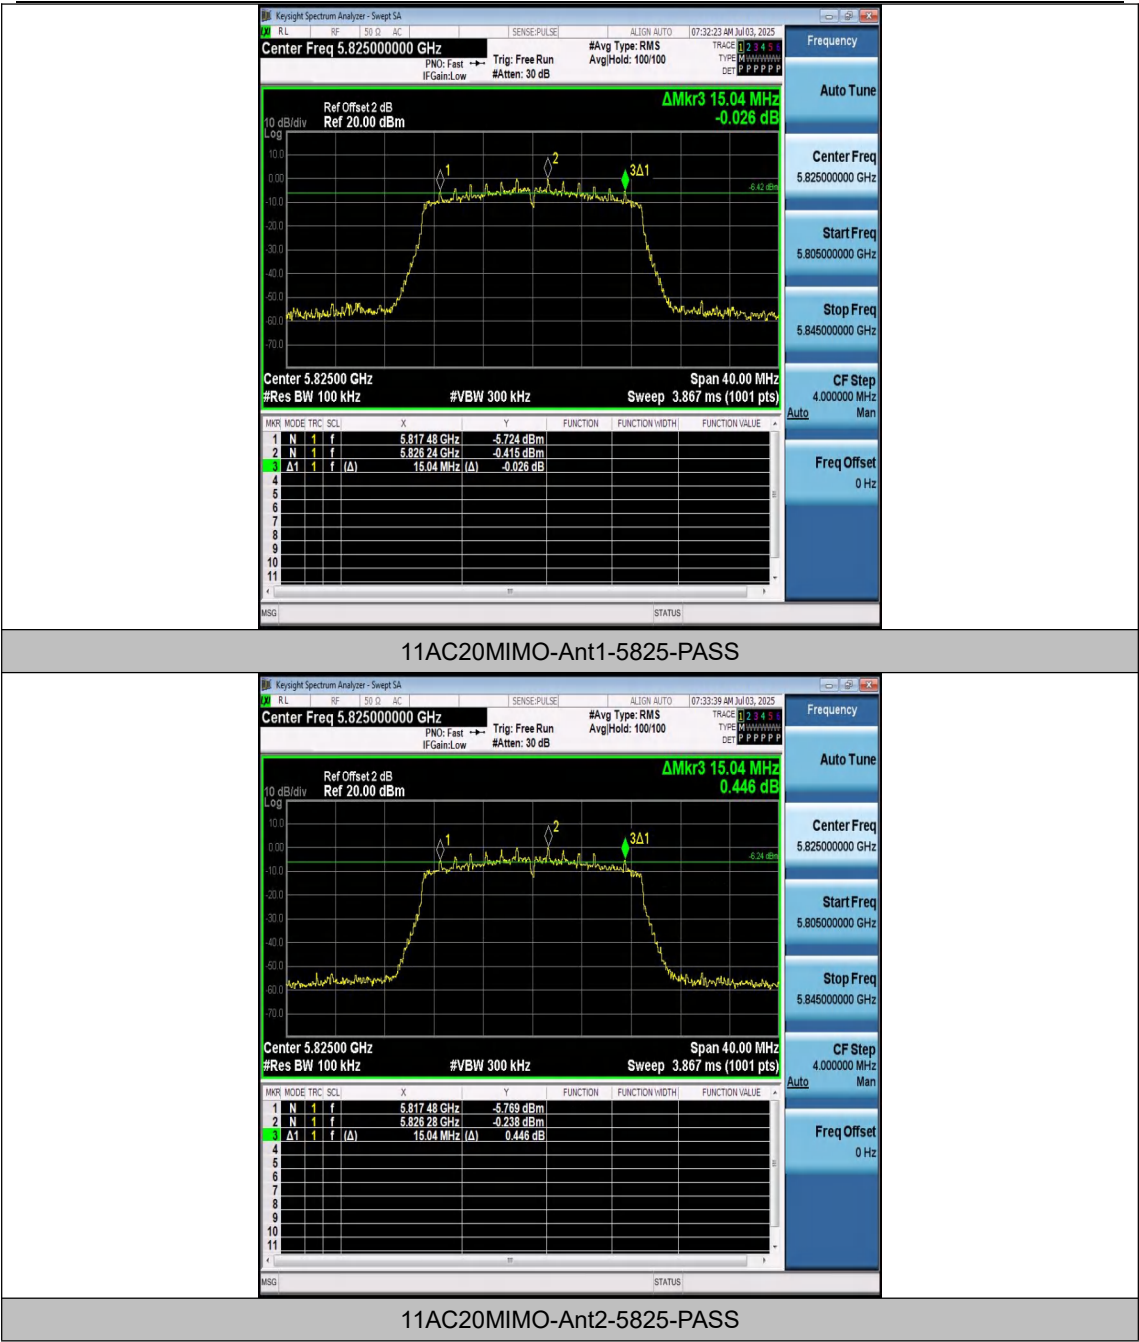

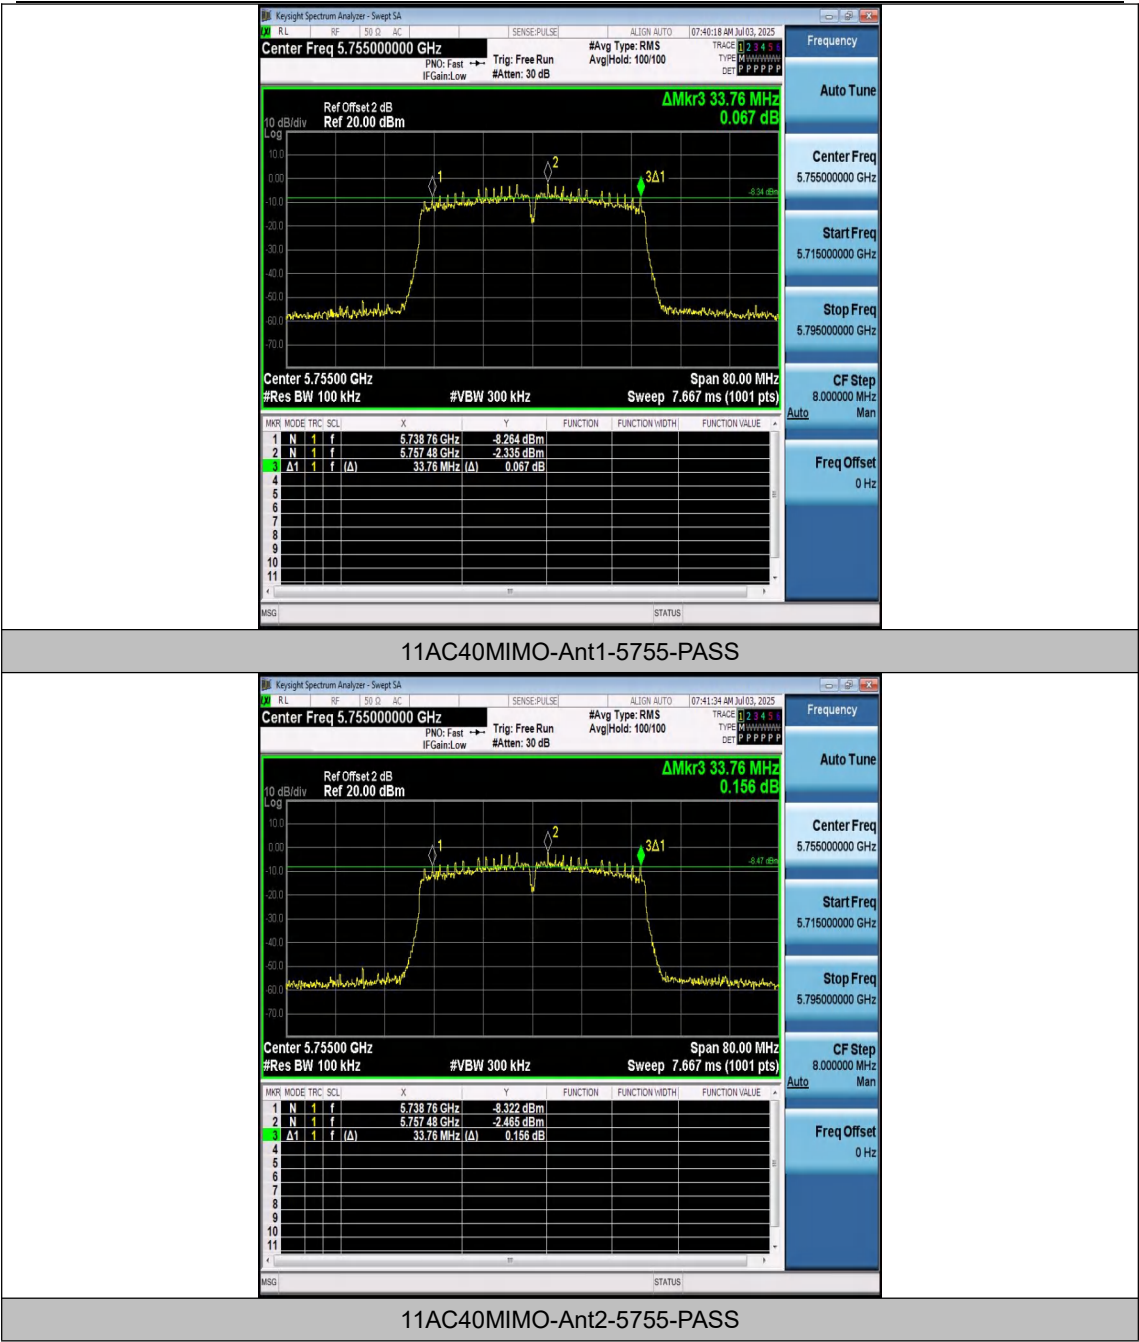

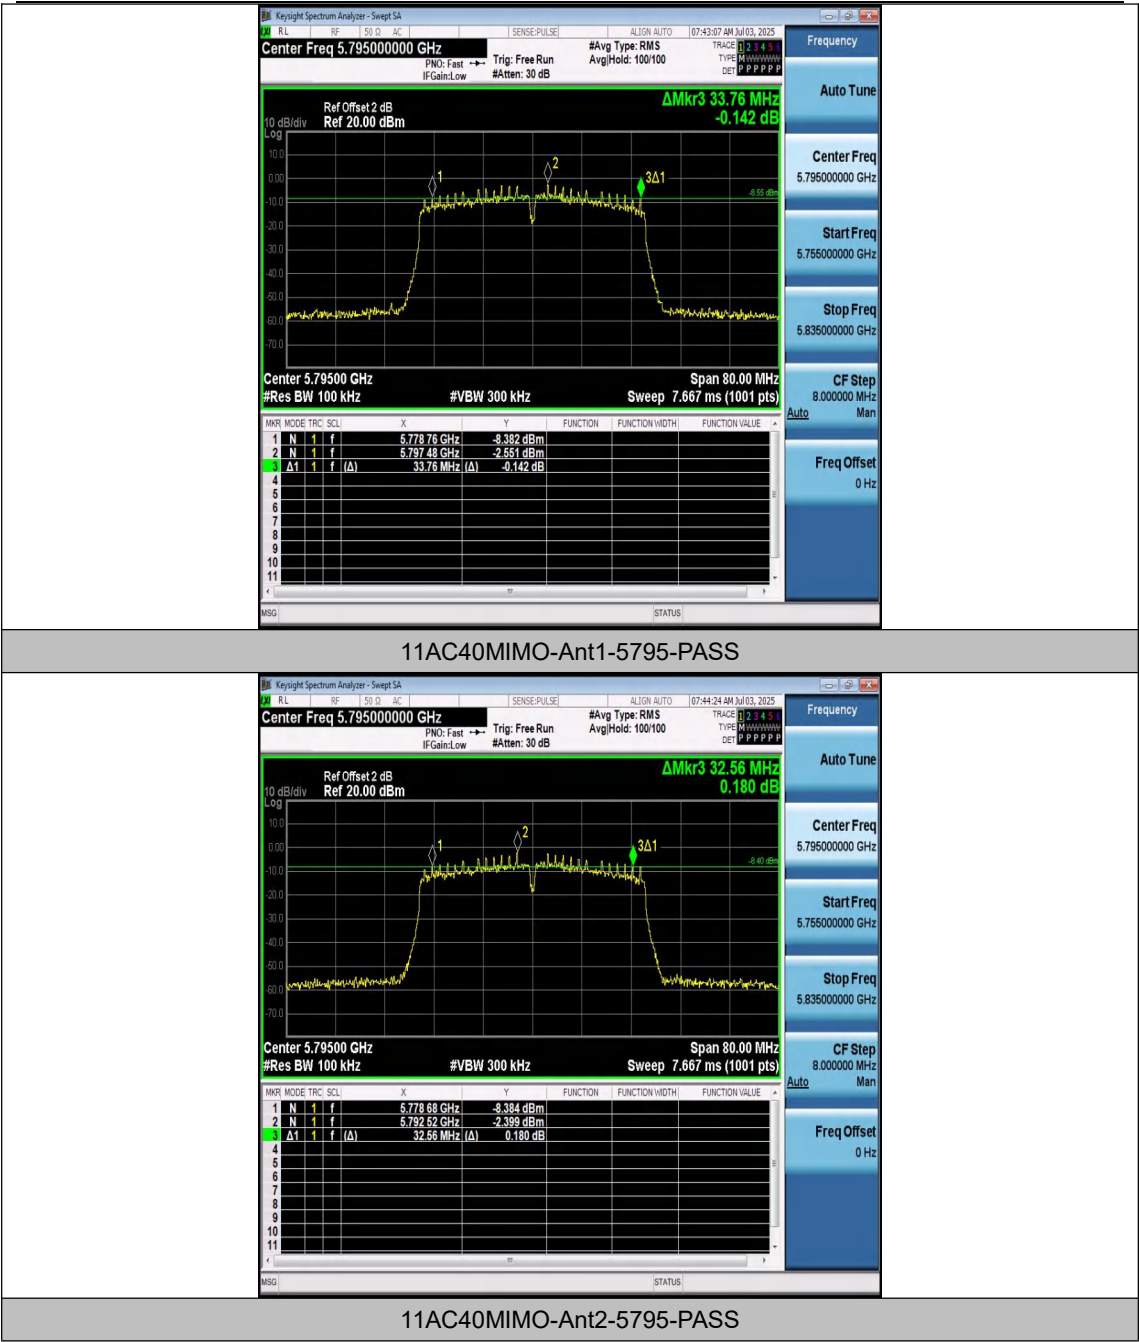

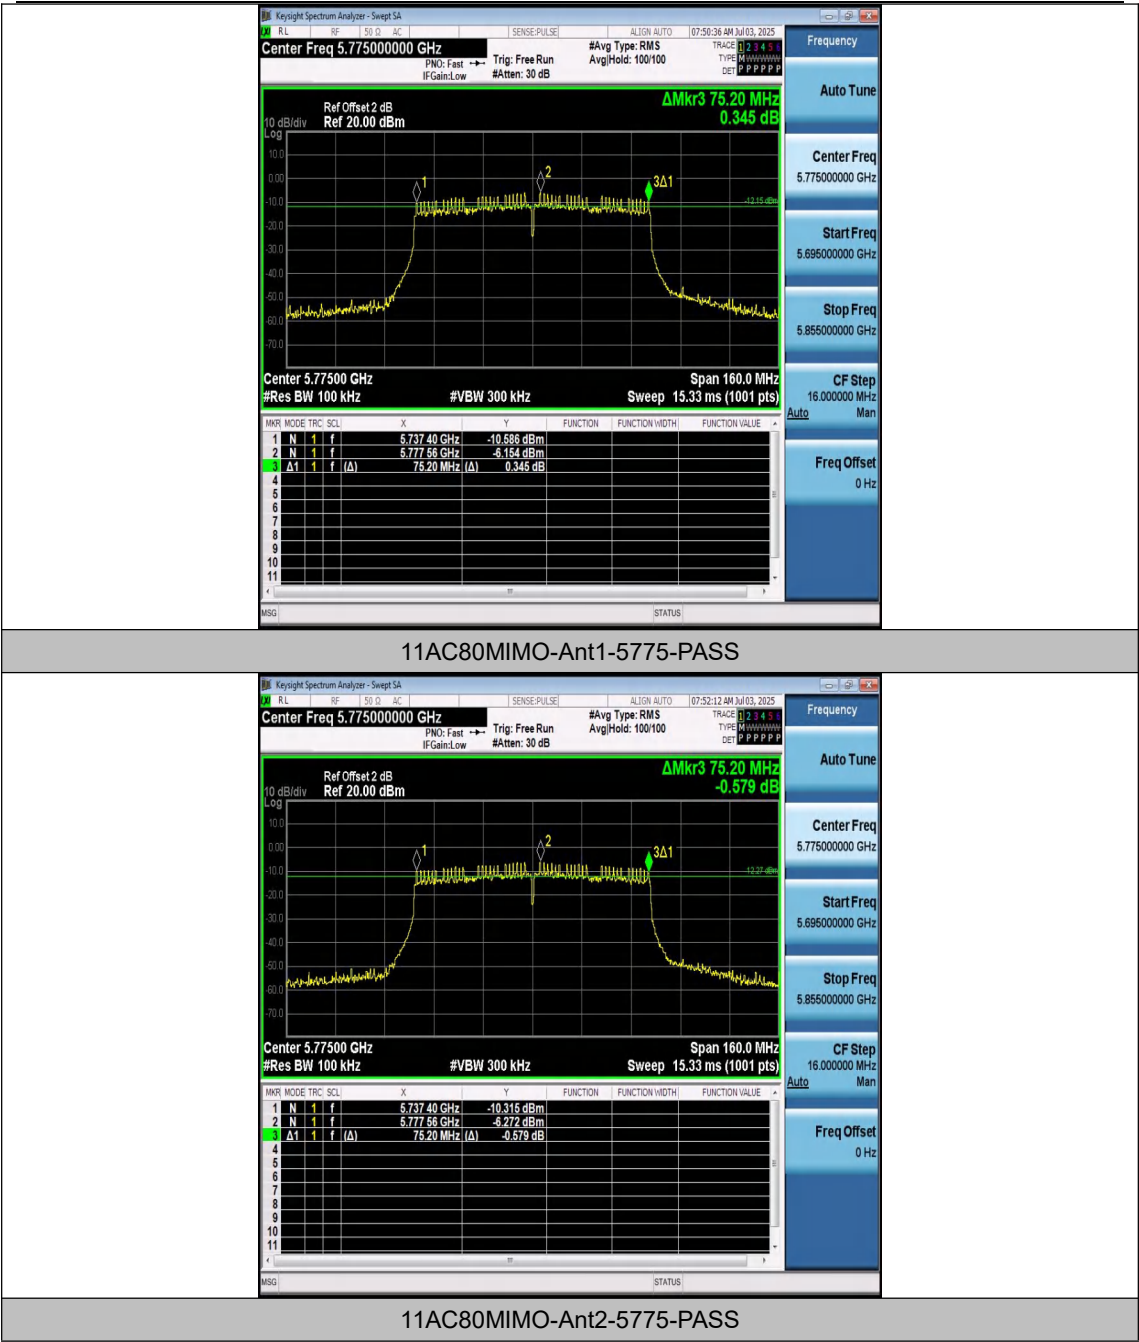

Appendix B: Duty Cycle

Test Result

Test Mode	Antenna	Frequency[MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]	Dc Factor [dB]	1/T
11A	Ant1	5180	0.33	0.34	97.06	0.13	3.03
11A	Ant2	5180	0.33	0.35	94.29	0.26	3.03
11A	Ant1	5220	0.34	0.35	97.14	0.13	2.94
11A	Ant2	5220	0.33	0.34	97.06	0.13	3.03
11A	Ant1	5240	0.33	0.34	97.06	0.13	3.03
11A	Ant2	5240	0.33	0.35	94.29	0.26	3.03
11A	Ant1	5745	0.34	0.35	97.14	0.13	2.94
11A	Ant2	5745	0.34	0.35	97.14	0.13	2.94
11A	Ant1	5785	0.33	0.35	94.29	0.26	3.03
11A	Ant2	5785	0.34	0.35	97.14	0.13	2.94
11A	Ant1	5825	0.34	0.35	97.14	0.13	2.94
11A	Ant2	5825	0.33	0.35	94.29	0.26	3.03
11N20MIMO	Ant1	5180	0.32	0.33	96.97	0.13	3.13
11N20MIMO	Ant2	5180	0.33	0.34	97.06	0.13	3.03
11N20MIMO	Ant1	5220	0.33	0.34	97.06	0.13	3.03
11N20MIMO	Ant2	5220	0.32	0.34	94.12	0.26	3.13
11N20MIMO	Ant1	5240	0.33	0.34	97.06	0.13	3.03
11N20MIMO	Ant2	5240	0.32	0.33	96.97	0.13	3.13
11N20MIMO	Ant1	5745	0.32	0.33	96.97	0.13	3.13
11N20MIMO	Ant2	5745	0.32	0.34	94.12	0.26	3.13
11N20MIMO	Ant1	5785	0.33	0.34	97.06	0.13	3.03
11N20MIMO	Ant2	5785	0.33	0.34	97.06	0.13	3.03
11N20MIMO	Ant1	5825	0.32	0.34	94.12	0.26	3.13
11N20MIMO	Ant2	5825	0.33	0.34	97.06	0.13	3.03
11N40MIMO	Ant1	5190	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant2	5190	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant1	5230	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant2	5230	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant1	5755	0.17	0.19	89.47	0.48	5.88
11N40MIMO	Ant2	5755	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant1	5795	0.18	0.19	94.74	0.23	5.56
11N40MIMO	Ant2	5795	0.18	0.19	94.74	0.23	5.56
11AC20MIMO	Ant1	5180	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant2	5180	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant1	5220	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant2	5220	0.33	0.34	97.06	0.13	3.03

Shenzhen Anbotek Compliance Laboratory Limited

Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.

Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com


11AC20MIMO	Ant1	5240	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant2	5240	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant1	5745	0.33	0.35	94.29	0.26	3.03
11AC20MIMO	Ant2	5745	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant1	5785	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant2	5785	0.32	0.34	94.12	0.26	3.13
11AC20MIMO	Ant1	5825	0.33	0.34	97.06	0.13	3.03
11AC20MIMO	Ant2	5825	0.33	0.34	97.06	0.13	3.03
11AC40MIMO	Ant1	5190	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant2	5190	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant1	5230	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant2	5230	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant1	5755	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant2	5755	0.18	0.19	94.74	0.23	5.56
11AC40MIMO	Ant1	5795	0.18	0.20	90.00	0.46	5.56
11AC40MIMO	Ant2	5795	0.18	0.20	90.00	0.46	5.56
11AC80MIMO	Ant1	5210	0.10	0.11	90.91	0.41	10.00
11AC80MIMO	Ant2	5210	0.11	0.12	91.67	0.38	9.09
11AC80MIMO	Ant1	5775	0.10	0.11	90.91	0.41	10.00
11AC80MIMO	Ant2	5775	0.10	0.12	83.33	0.79	10.00

Shenzhen Anbotek Compliance Laboratory Limited

Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.

Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com


Test Graphs

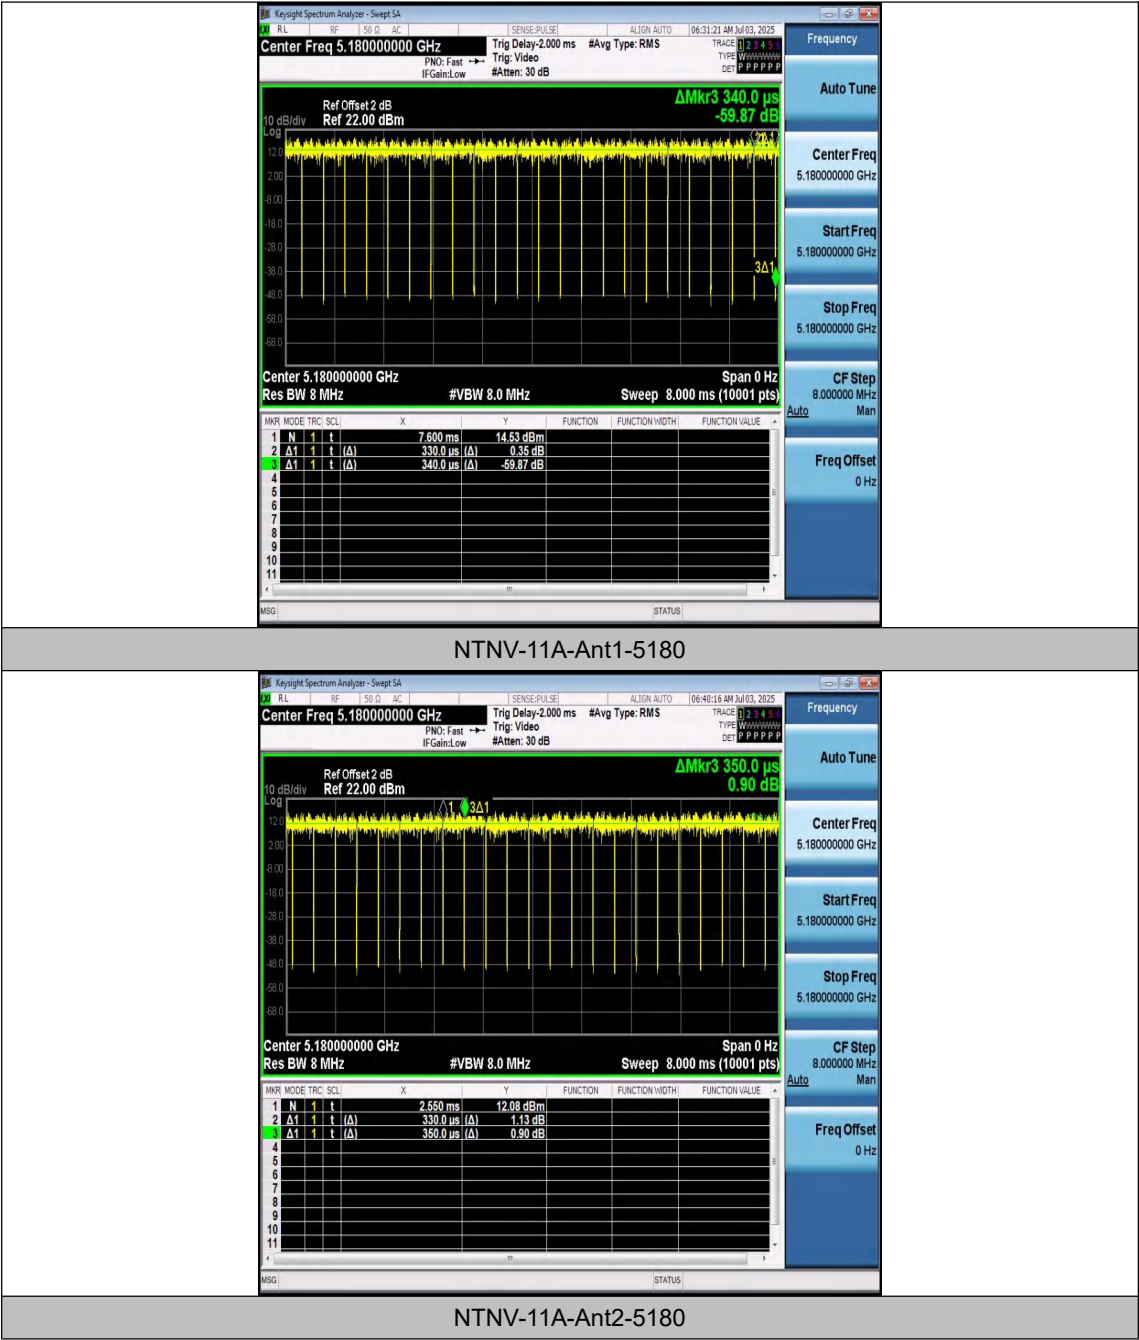



Shenzhen Anbotek Compliance Laboratory Limited


Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.


Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

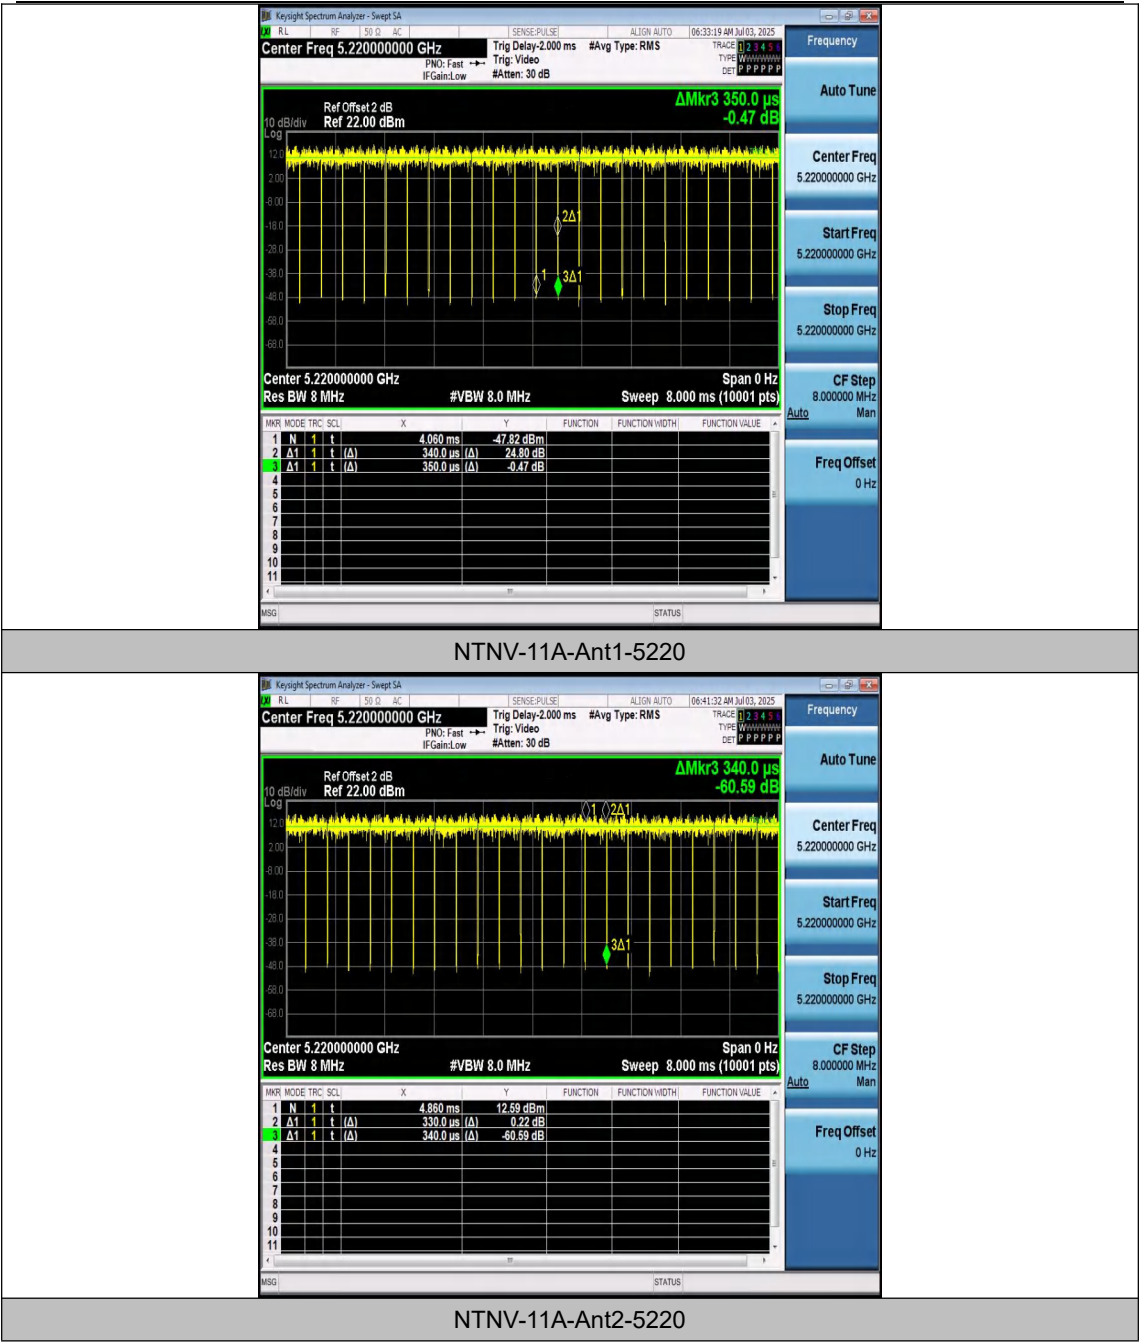


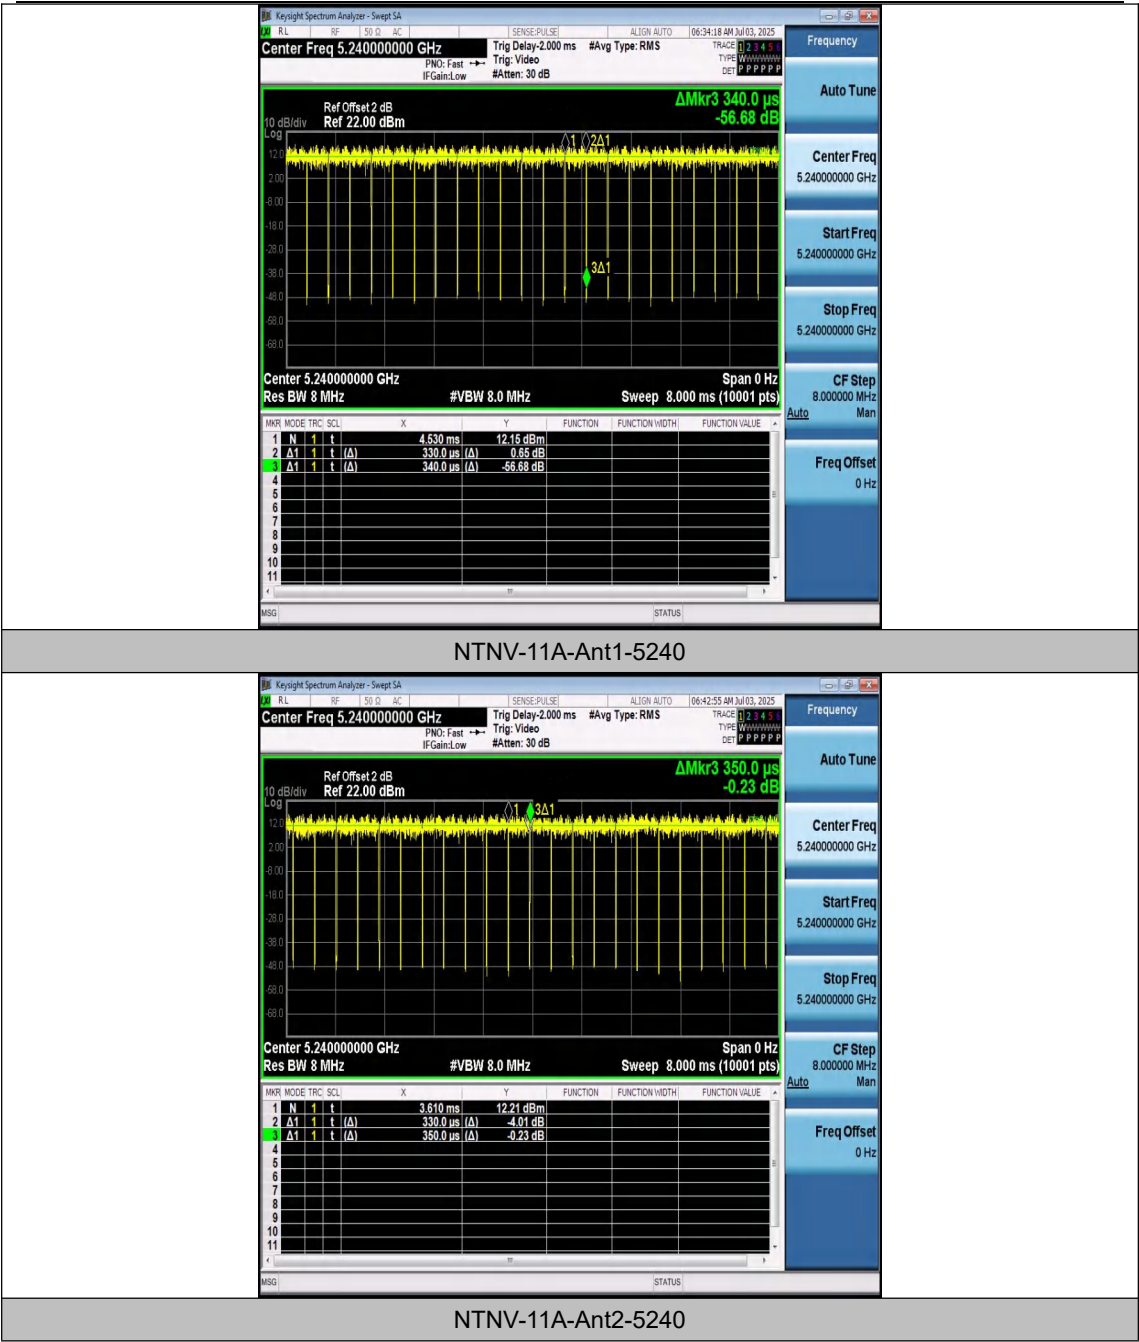

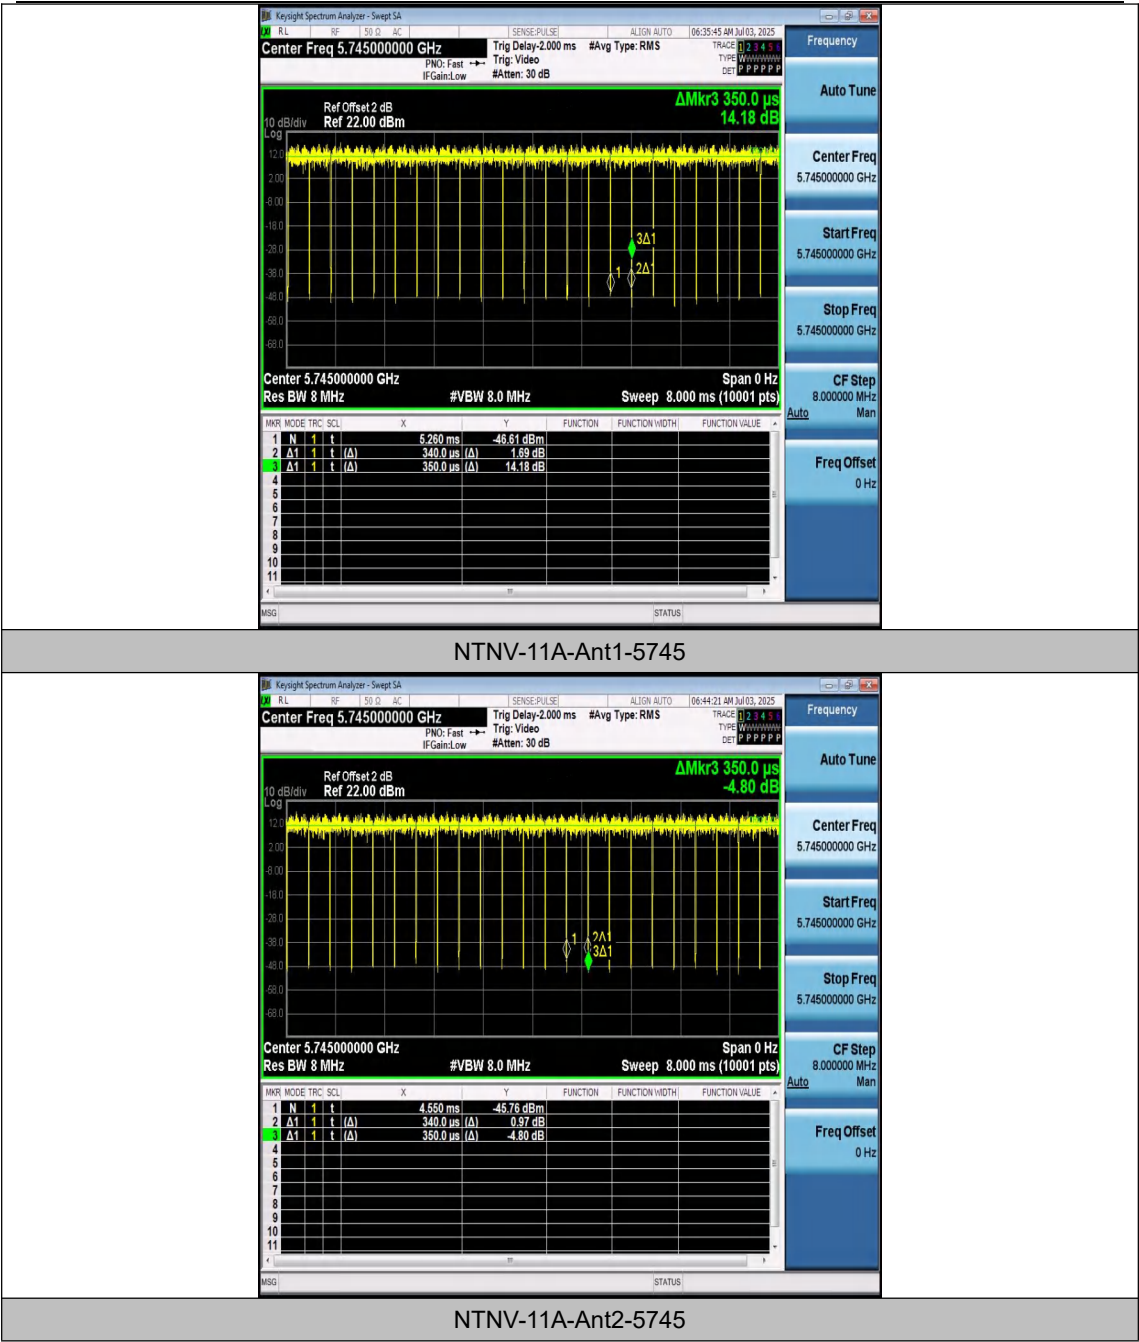

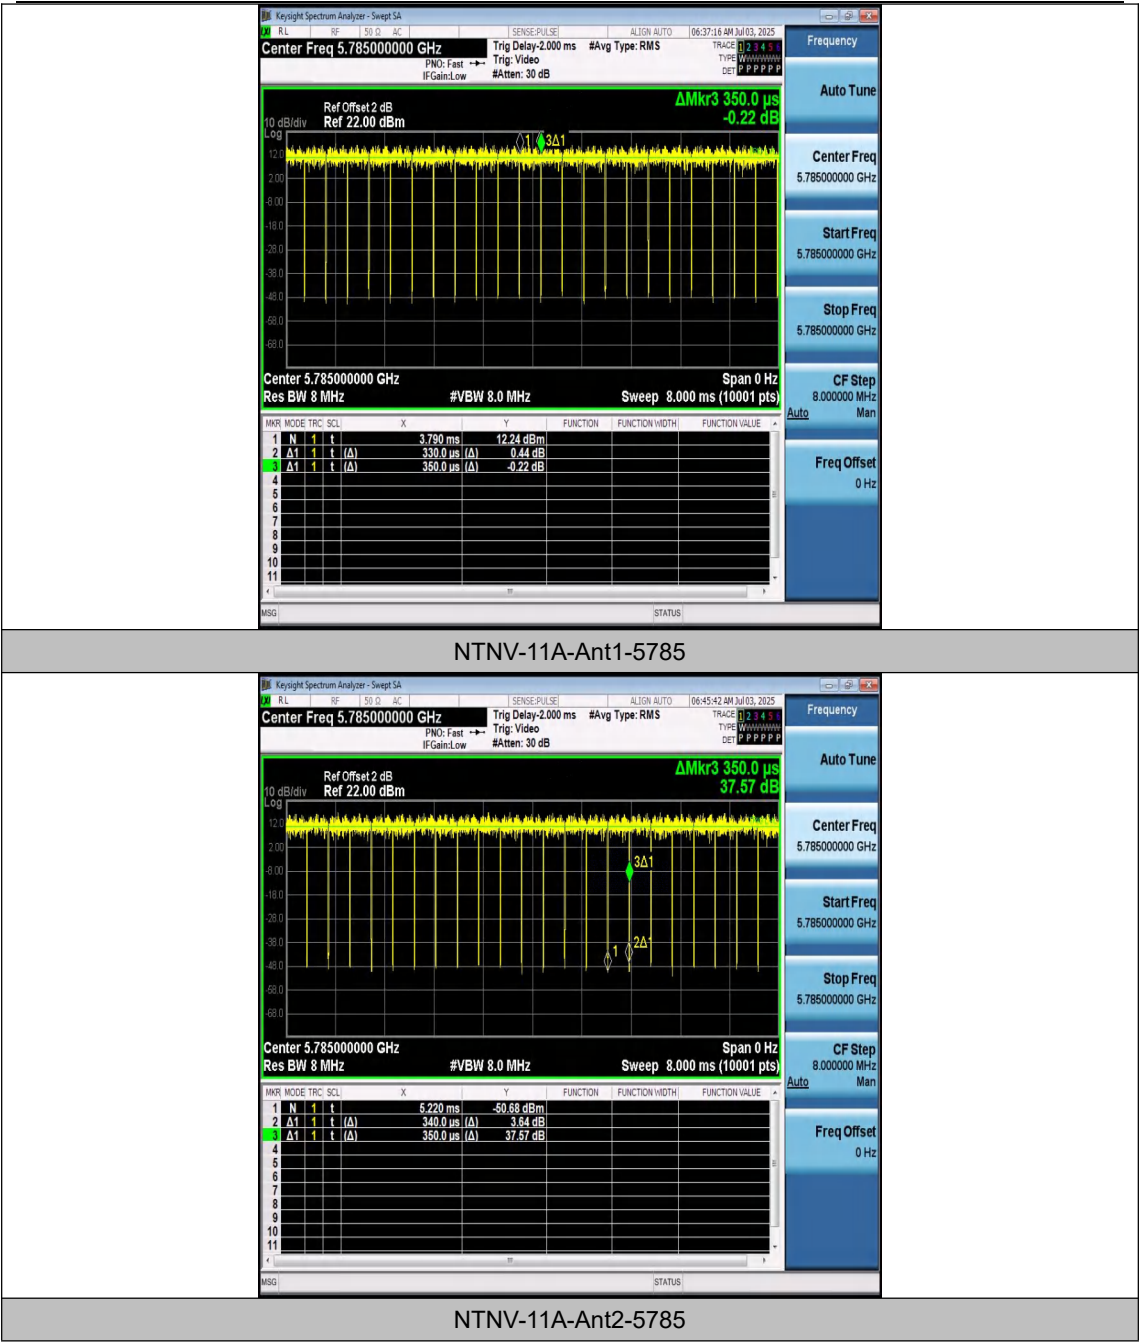

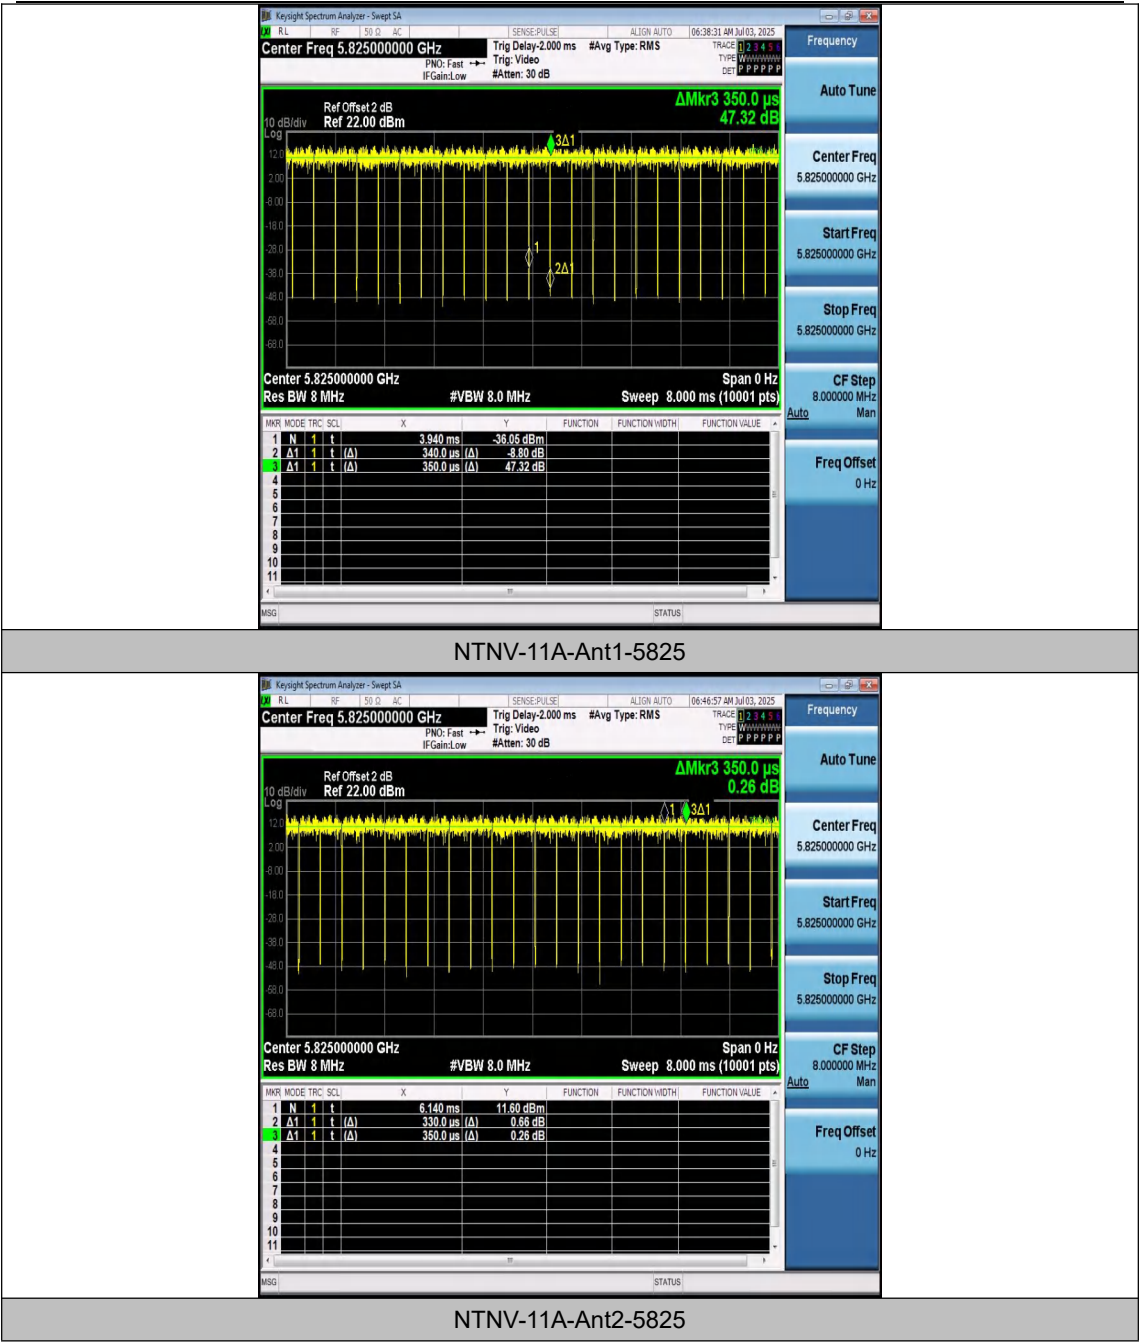


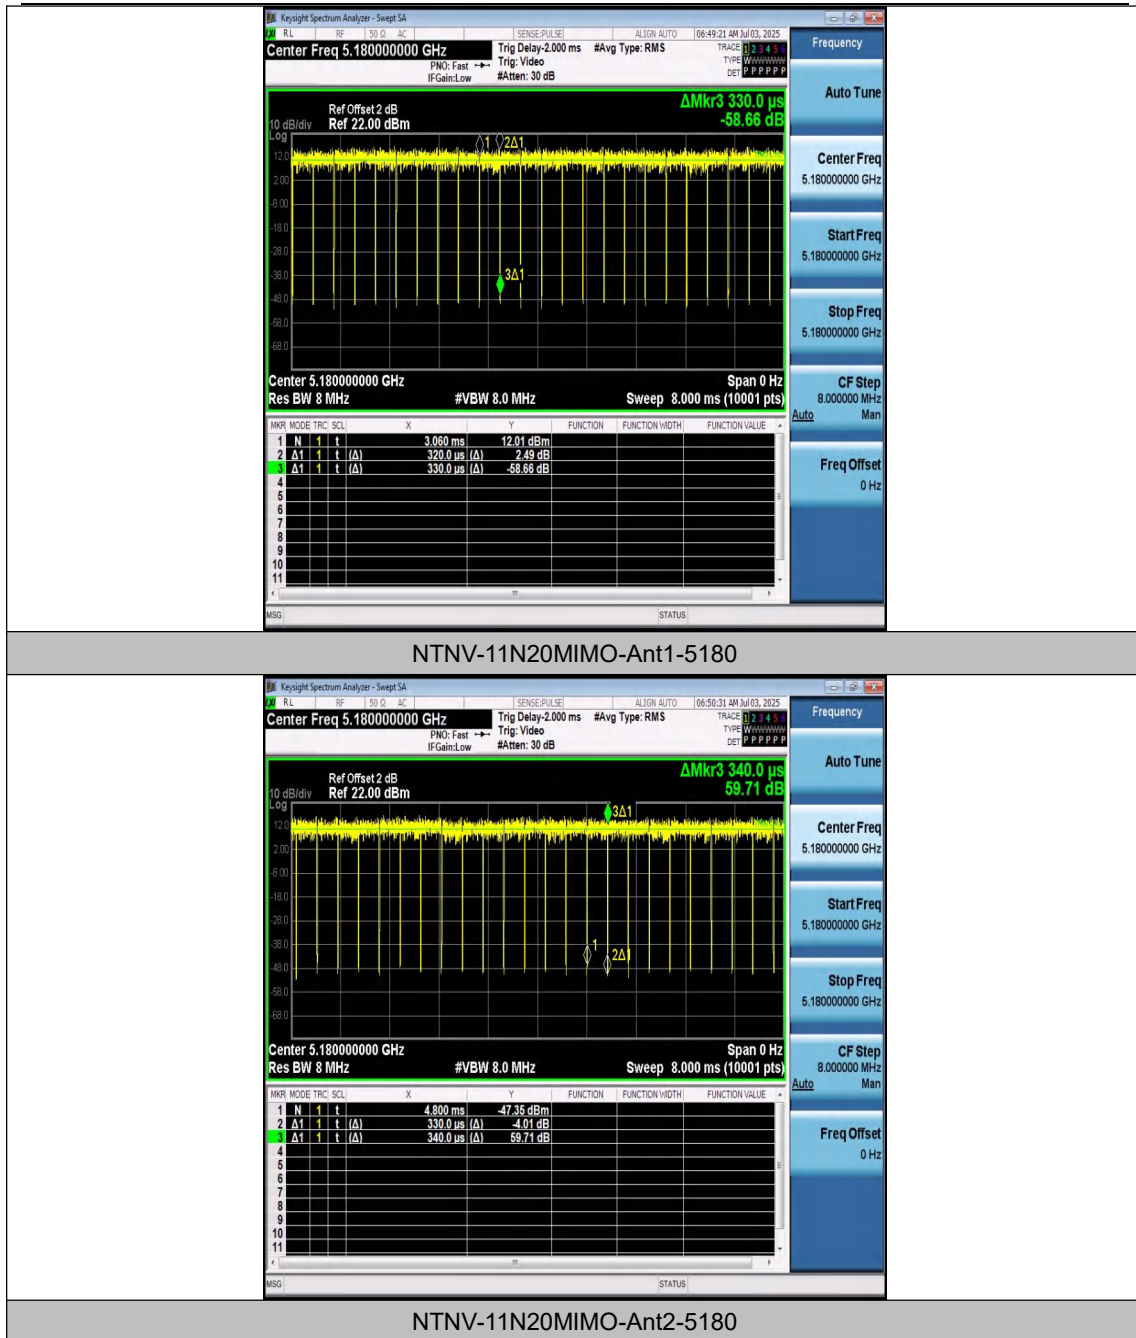



Shenzhen Anbotek Compliance Laboratory Limited


Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.


Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

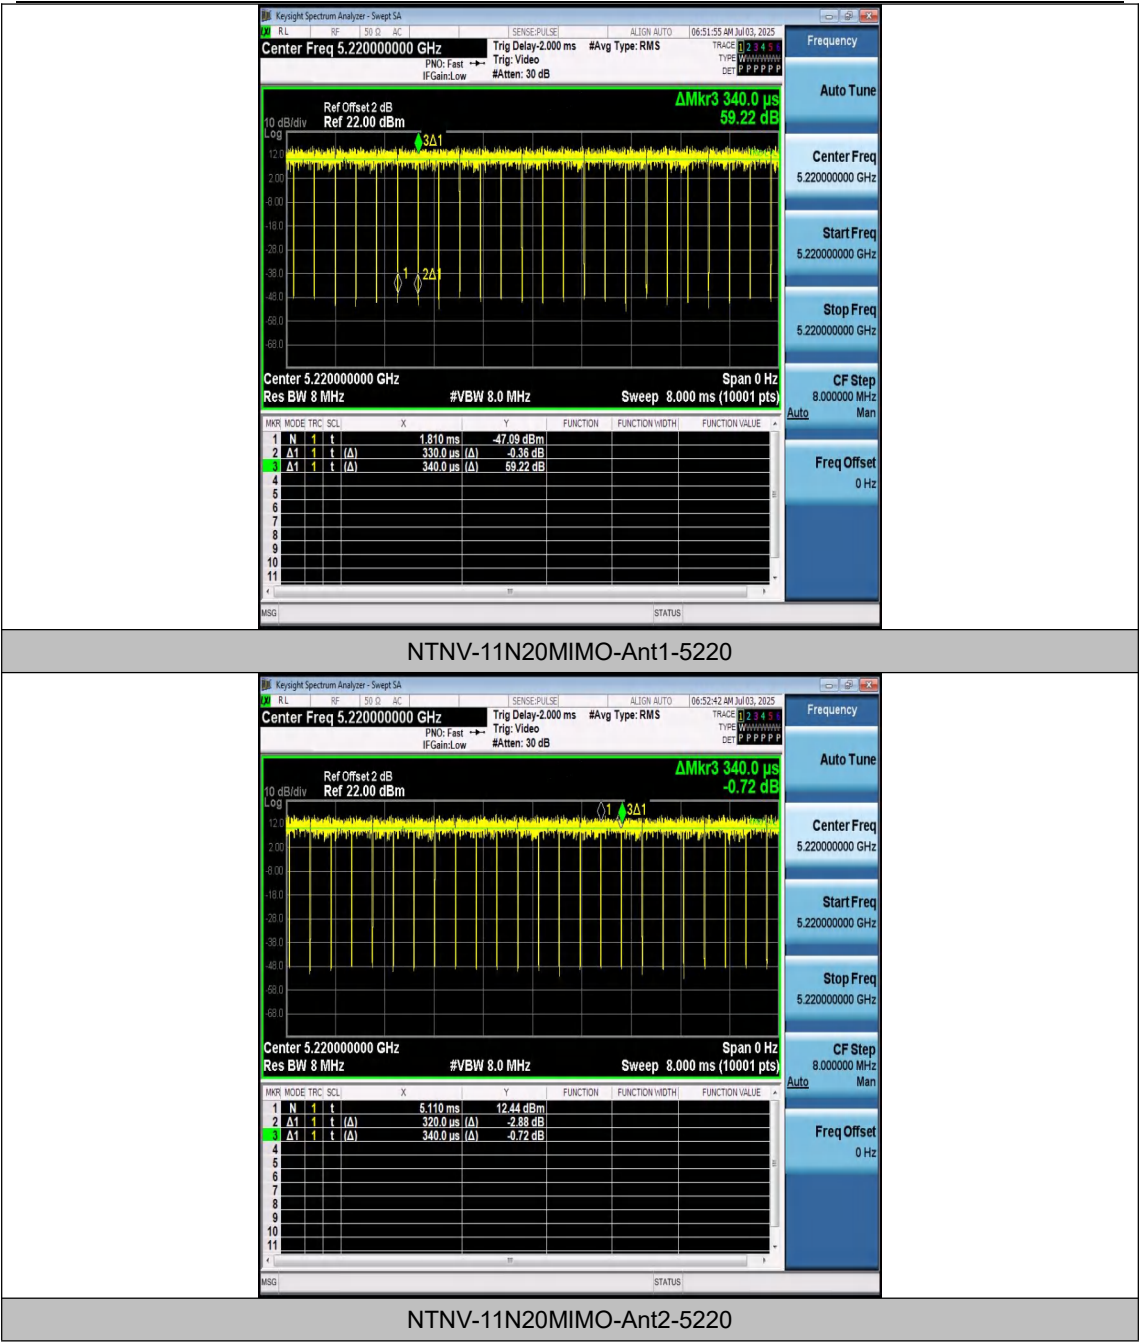


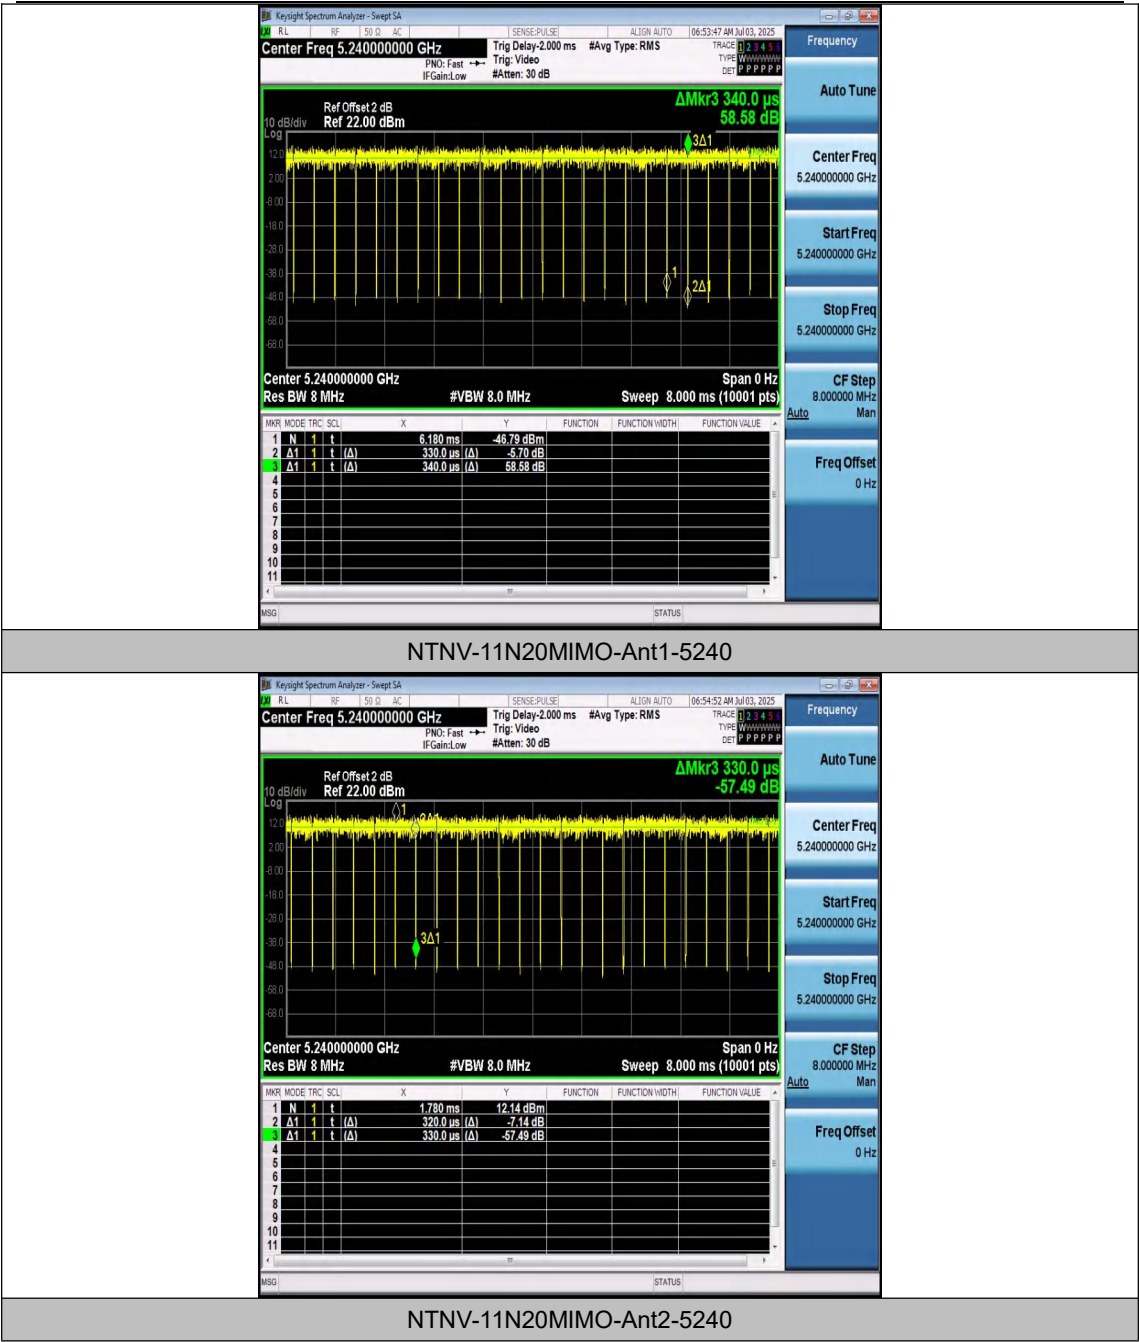


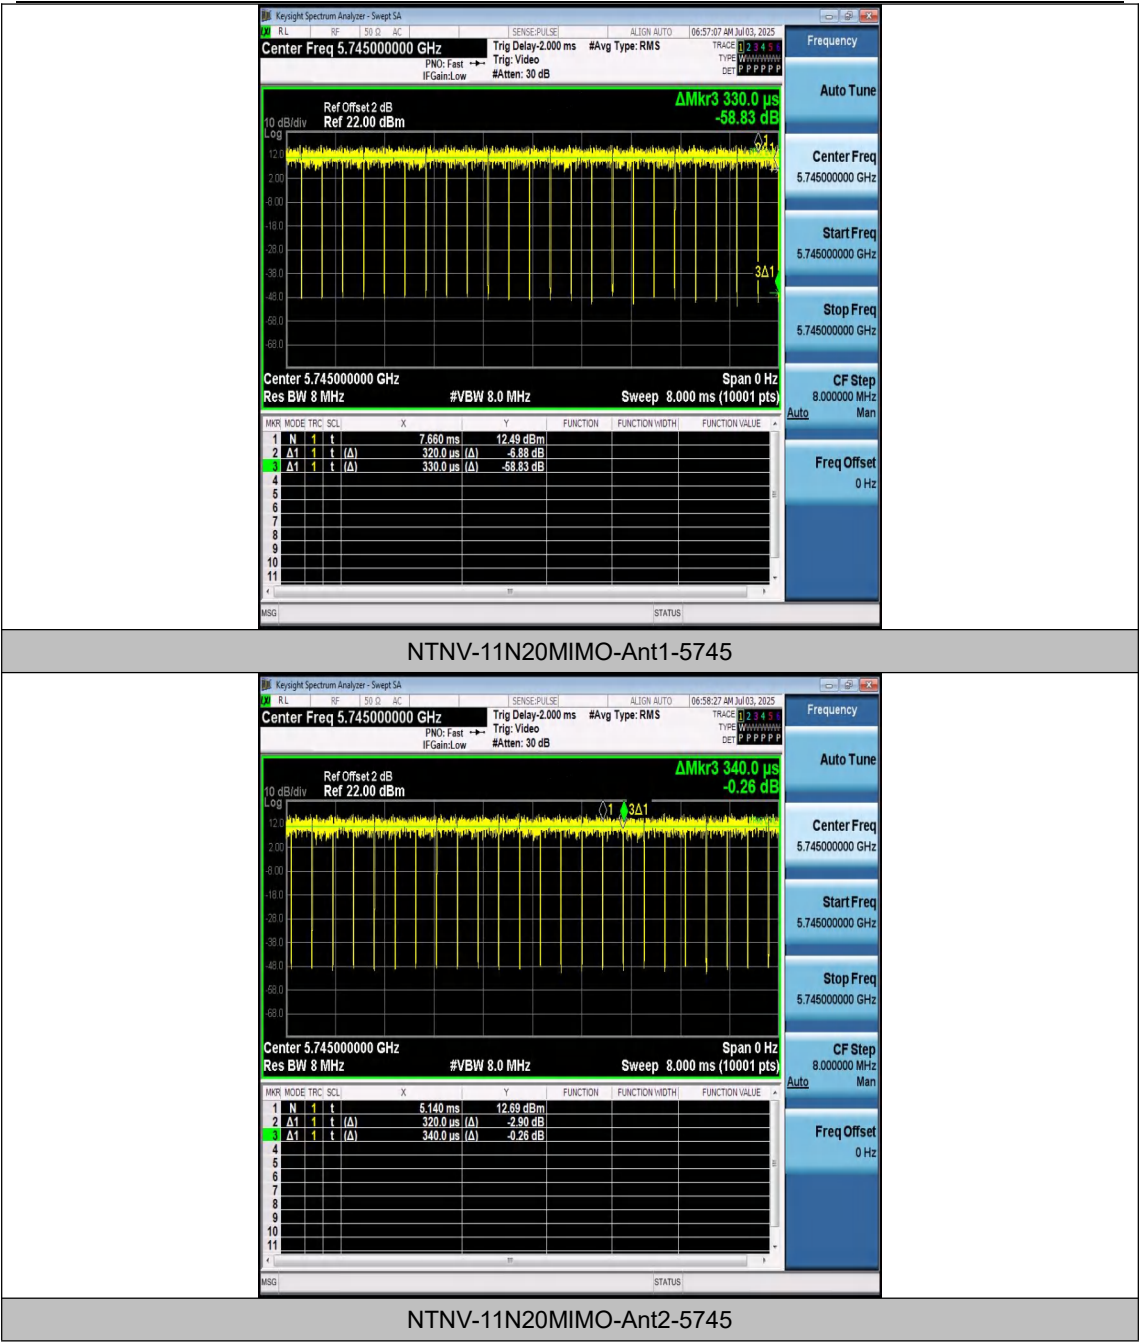


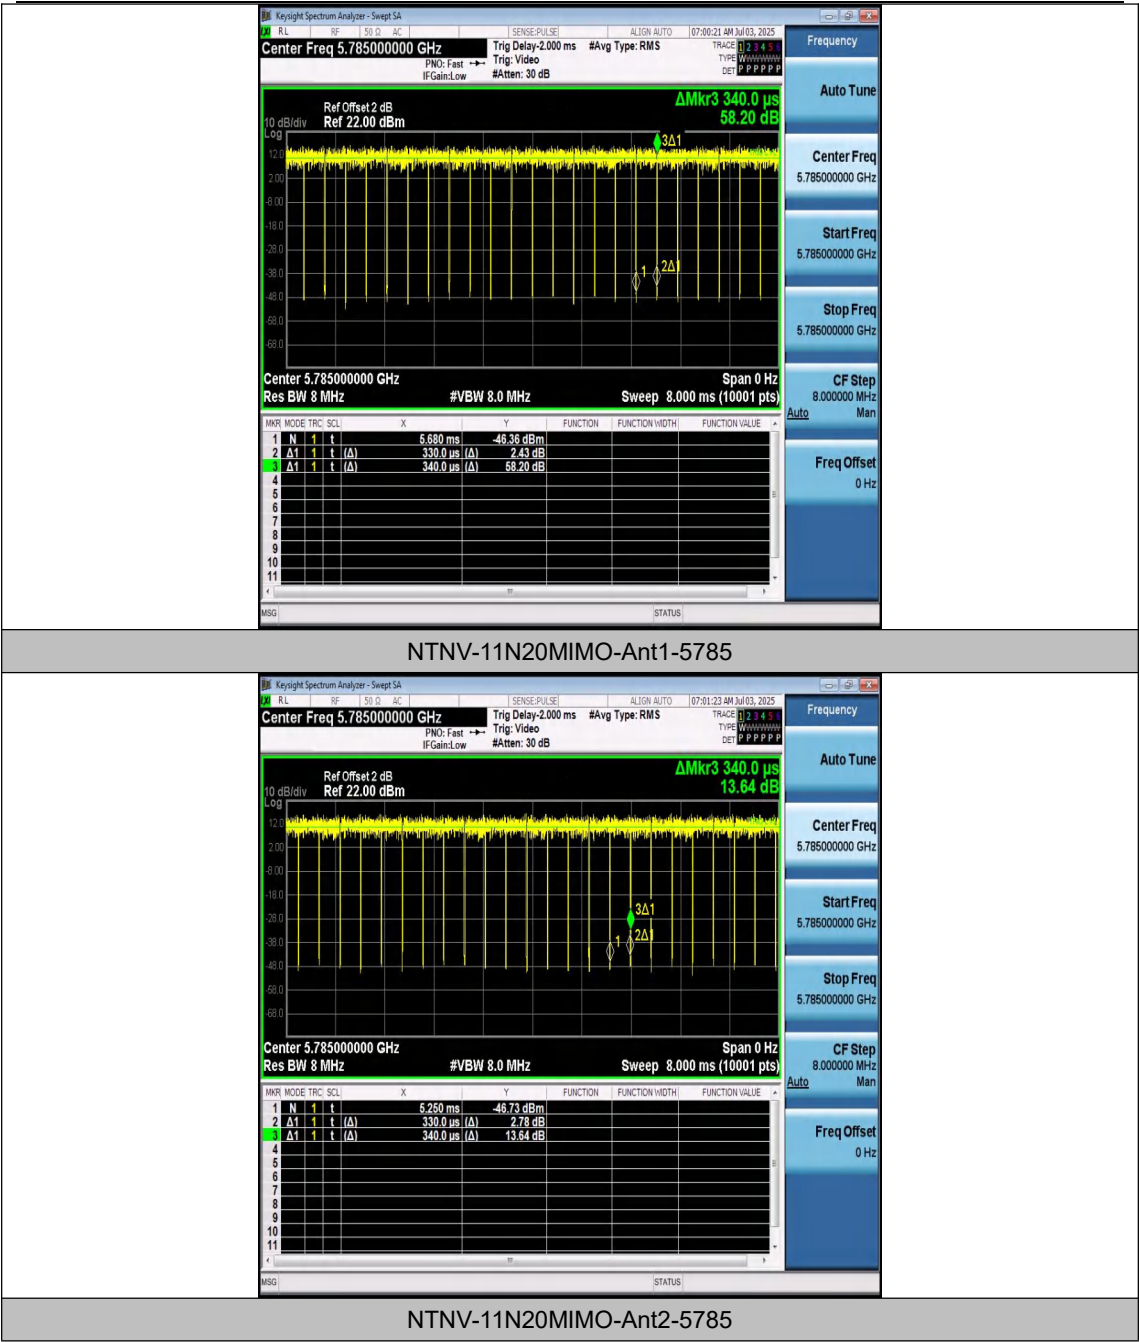


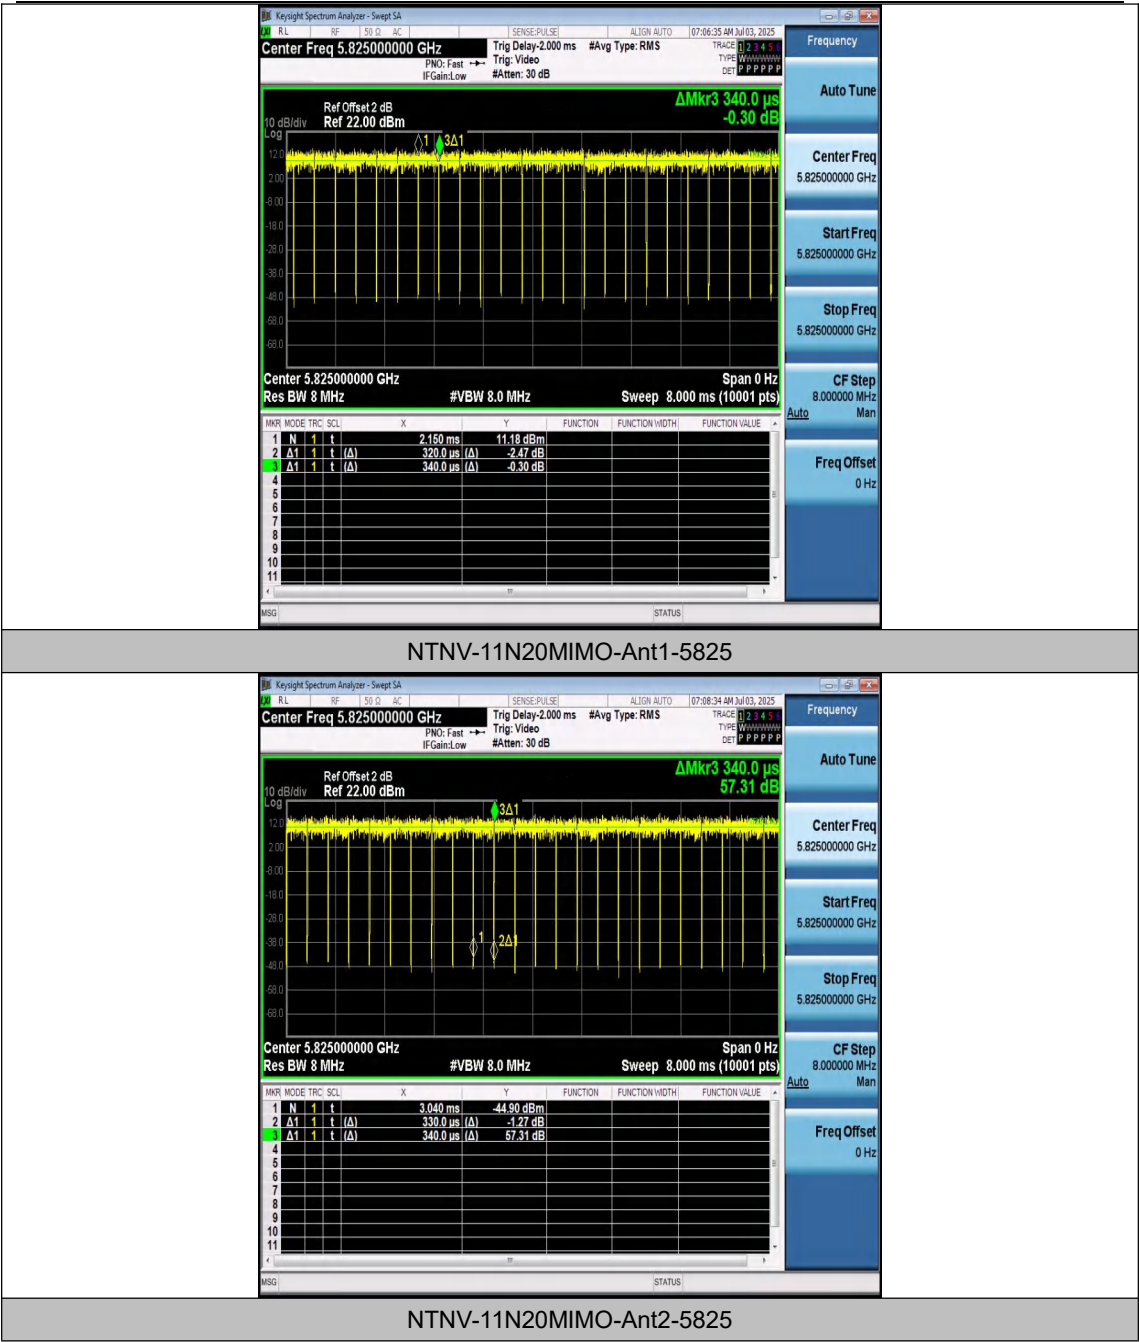


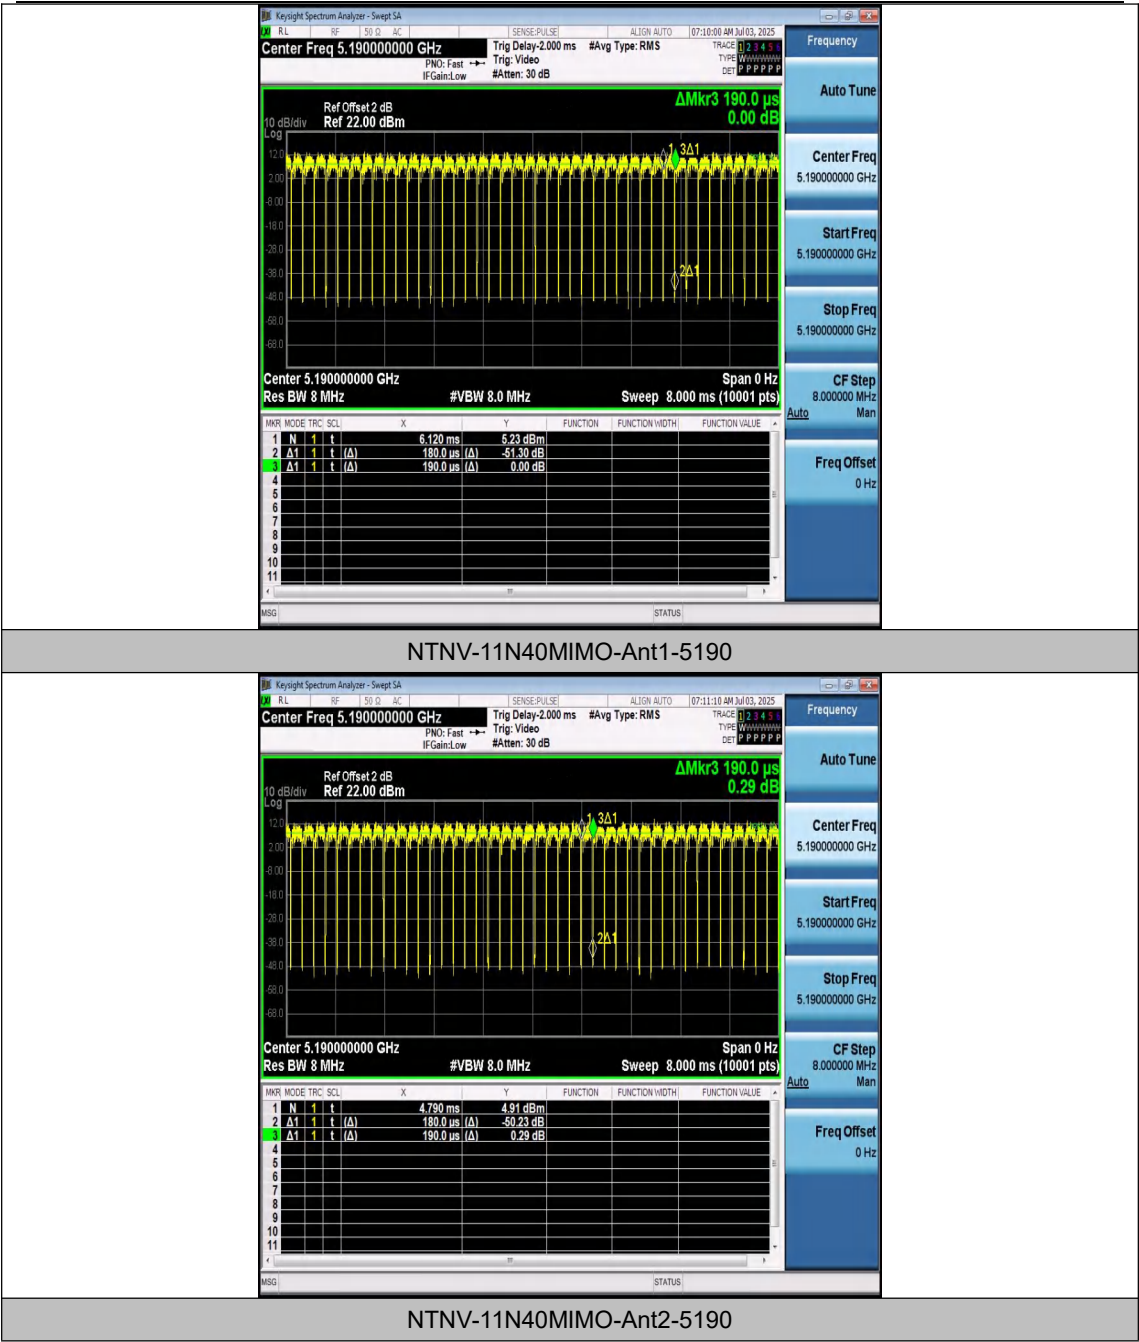


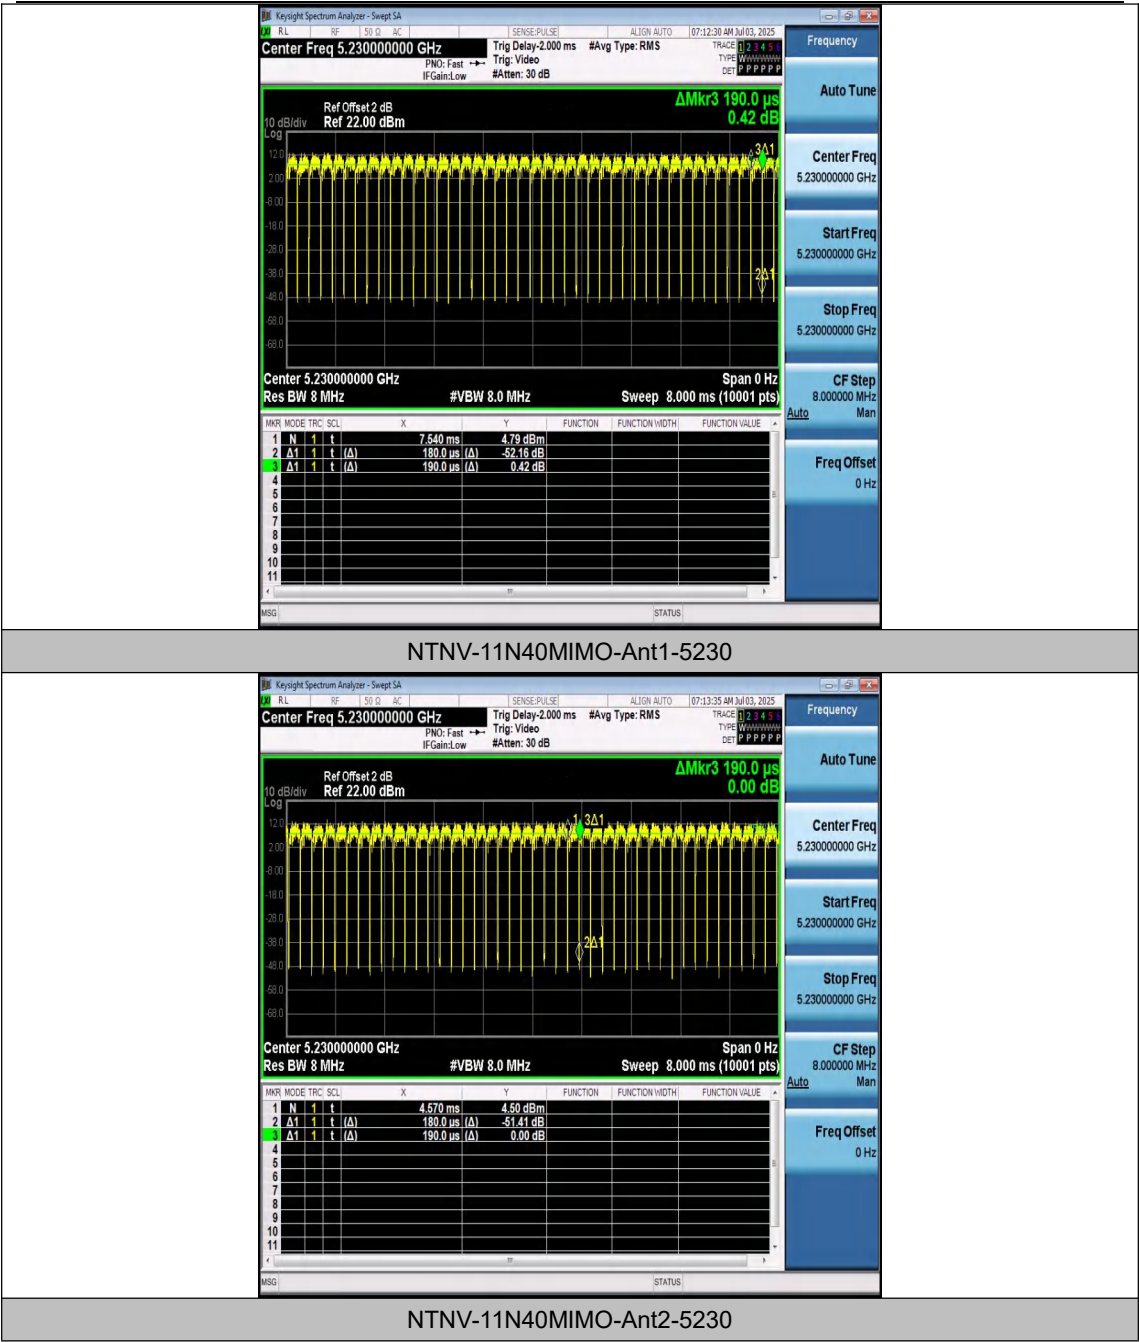

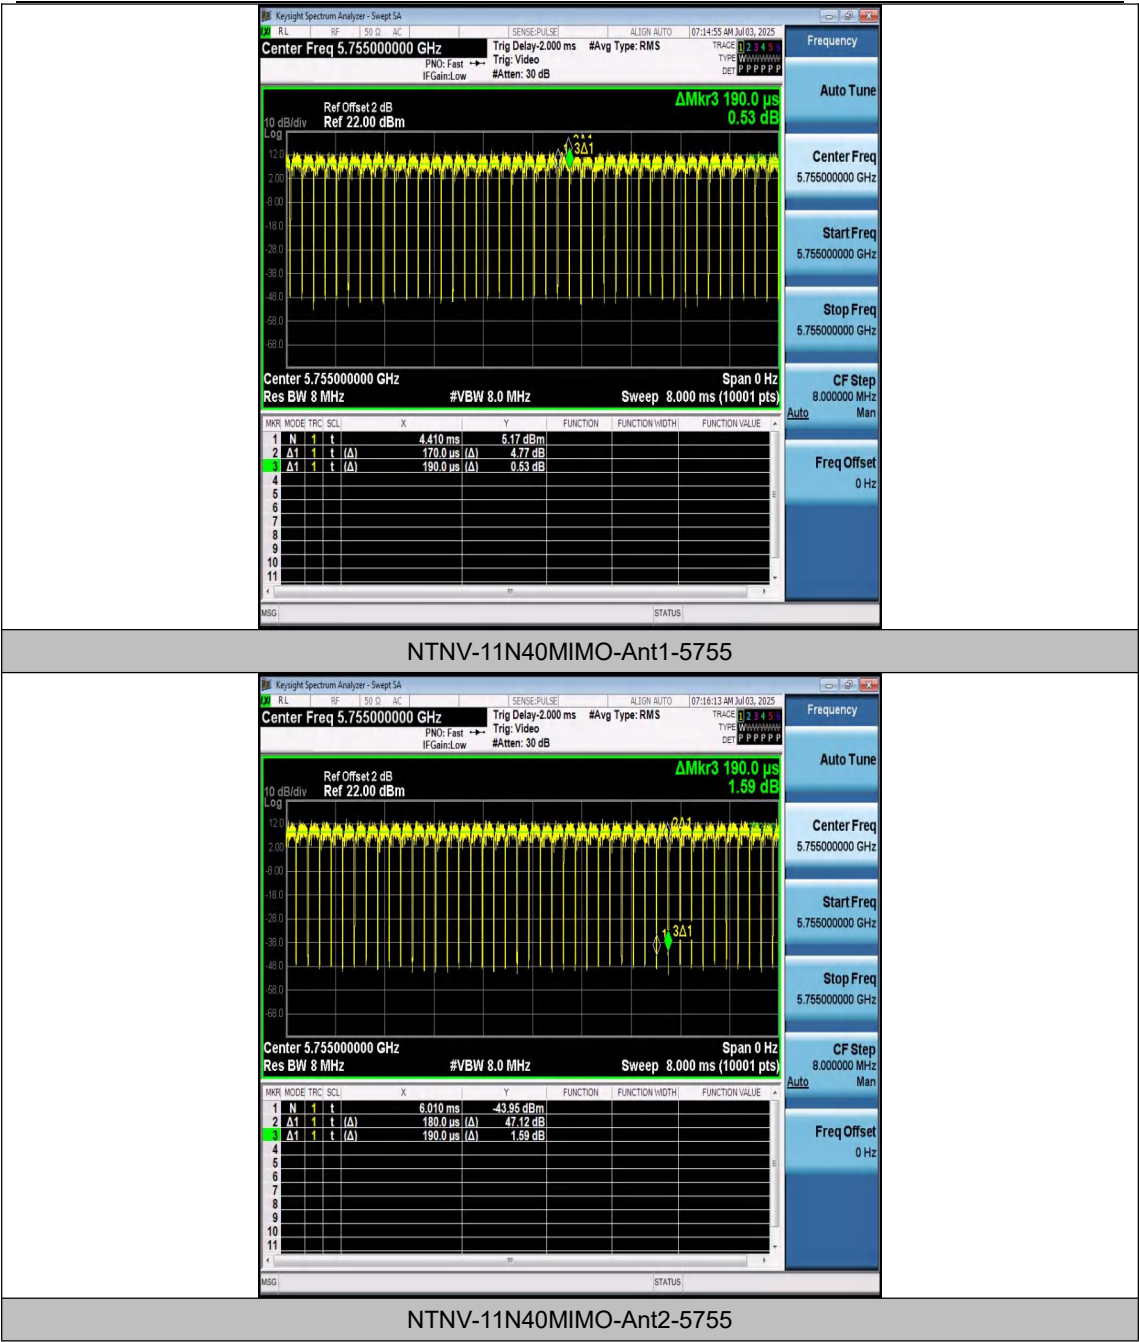

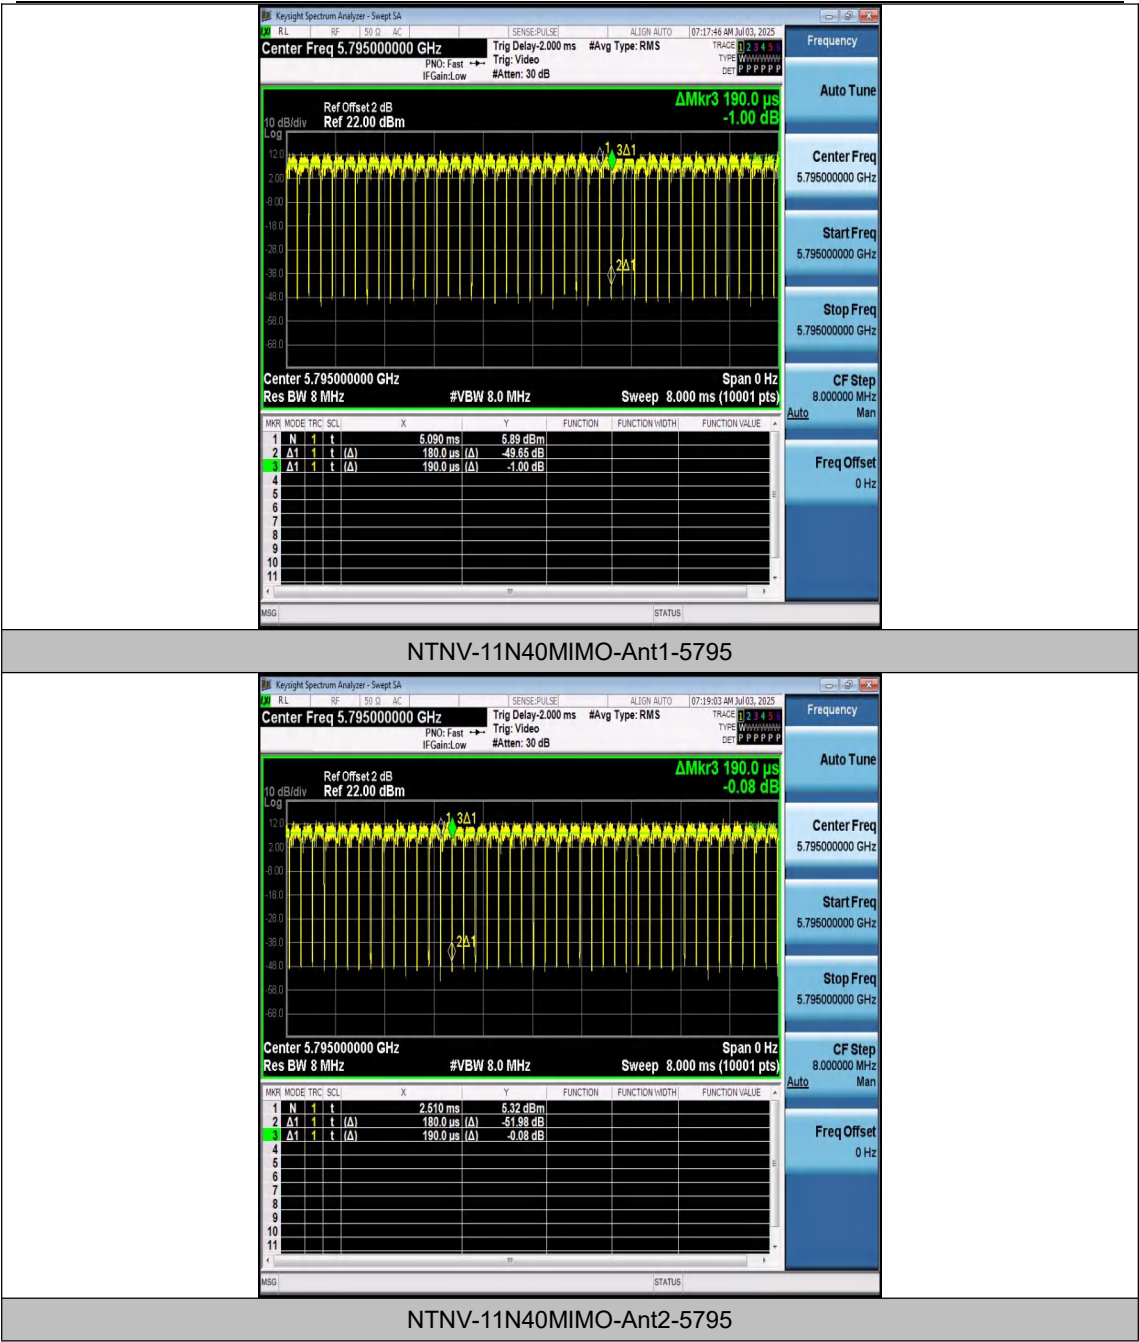

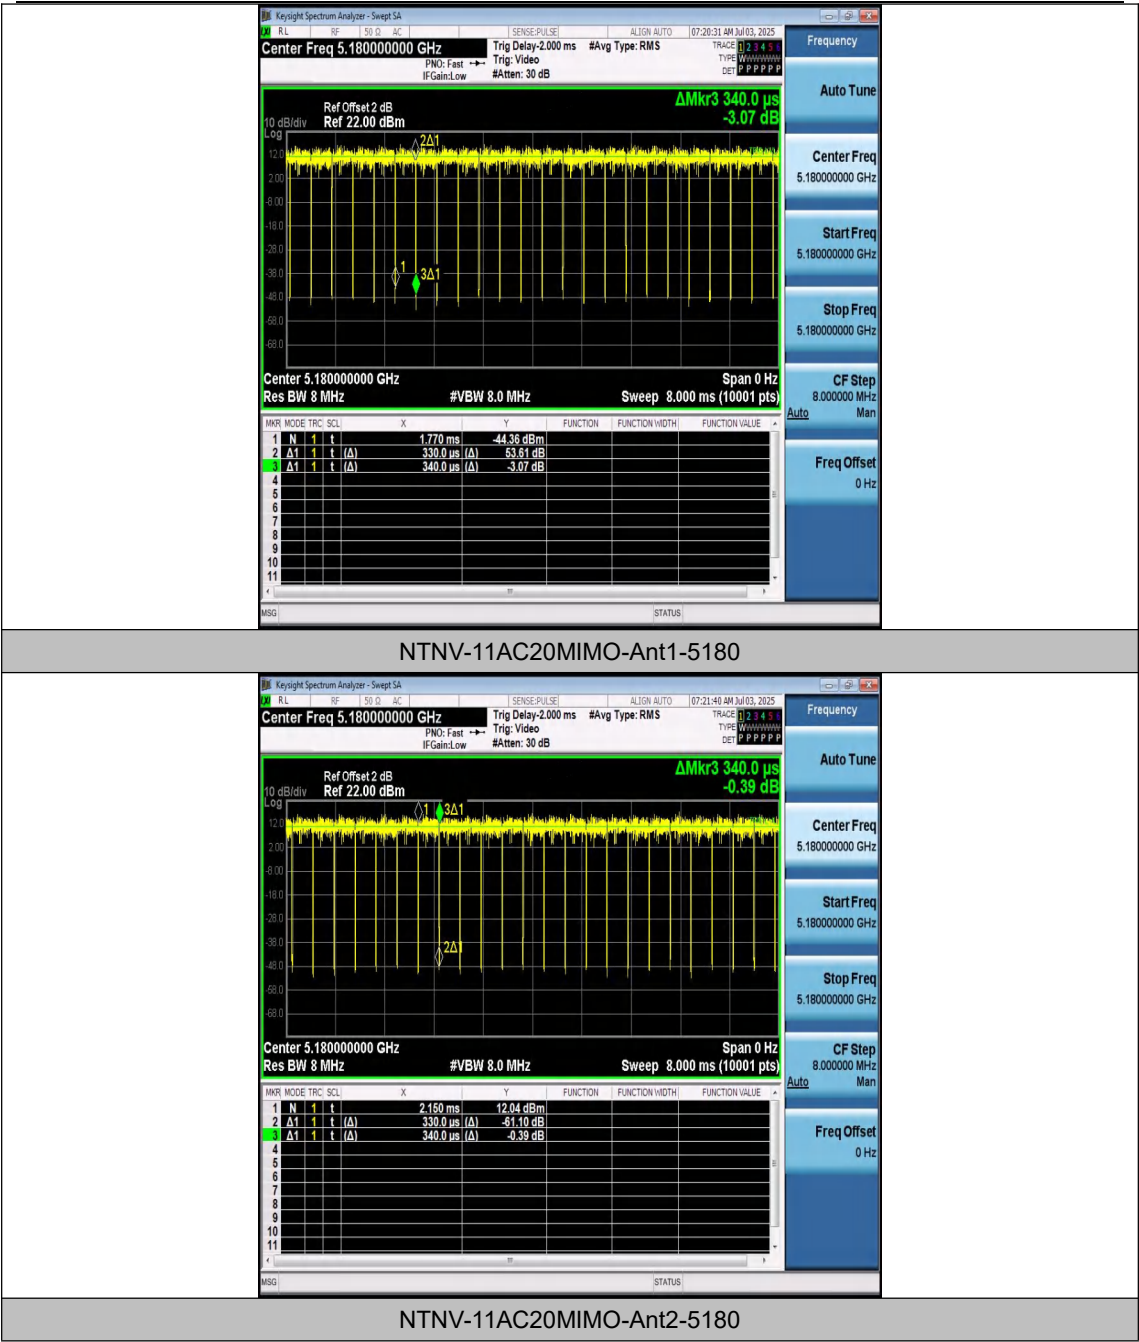


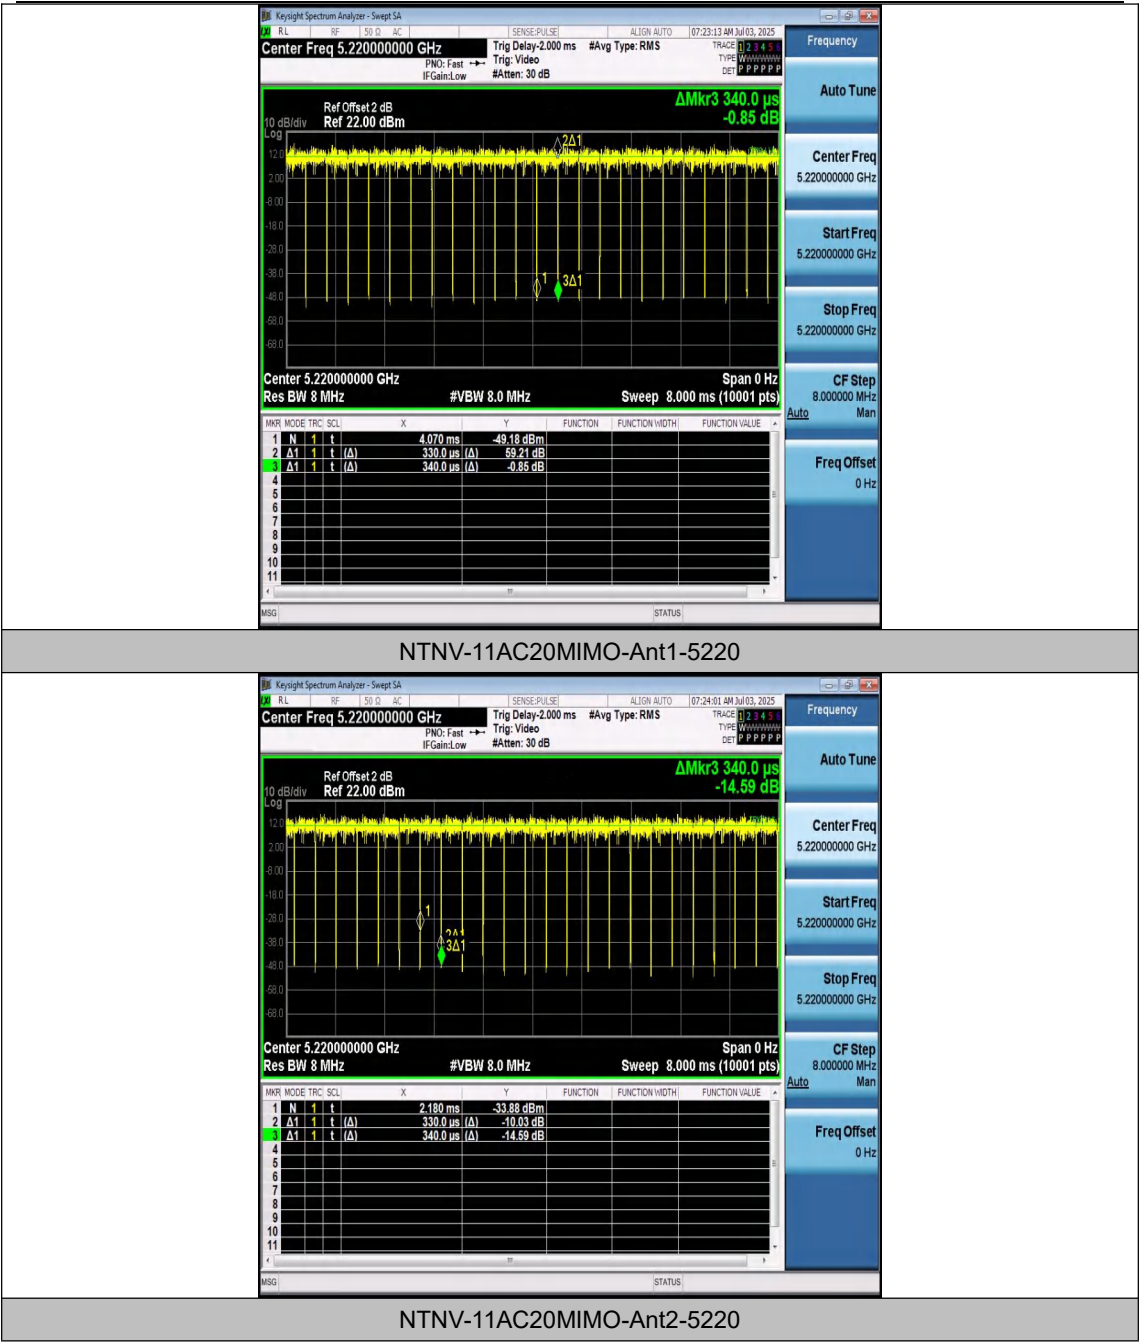



Shenzhen Anbotek Compliance Laboratory Limited


Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.


Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

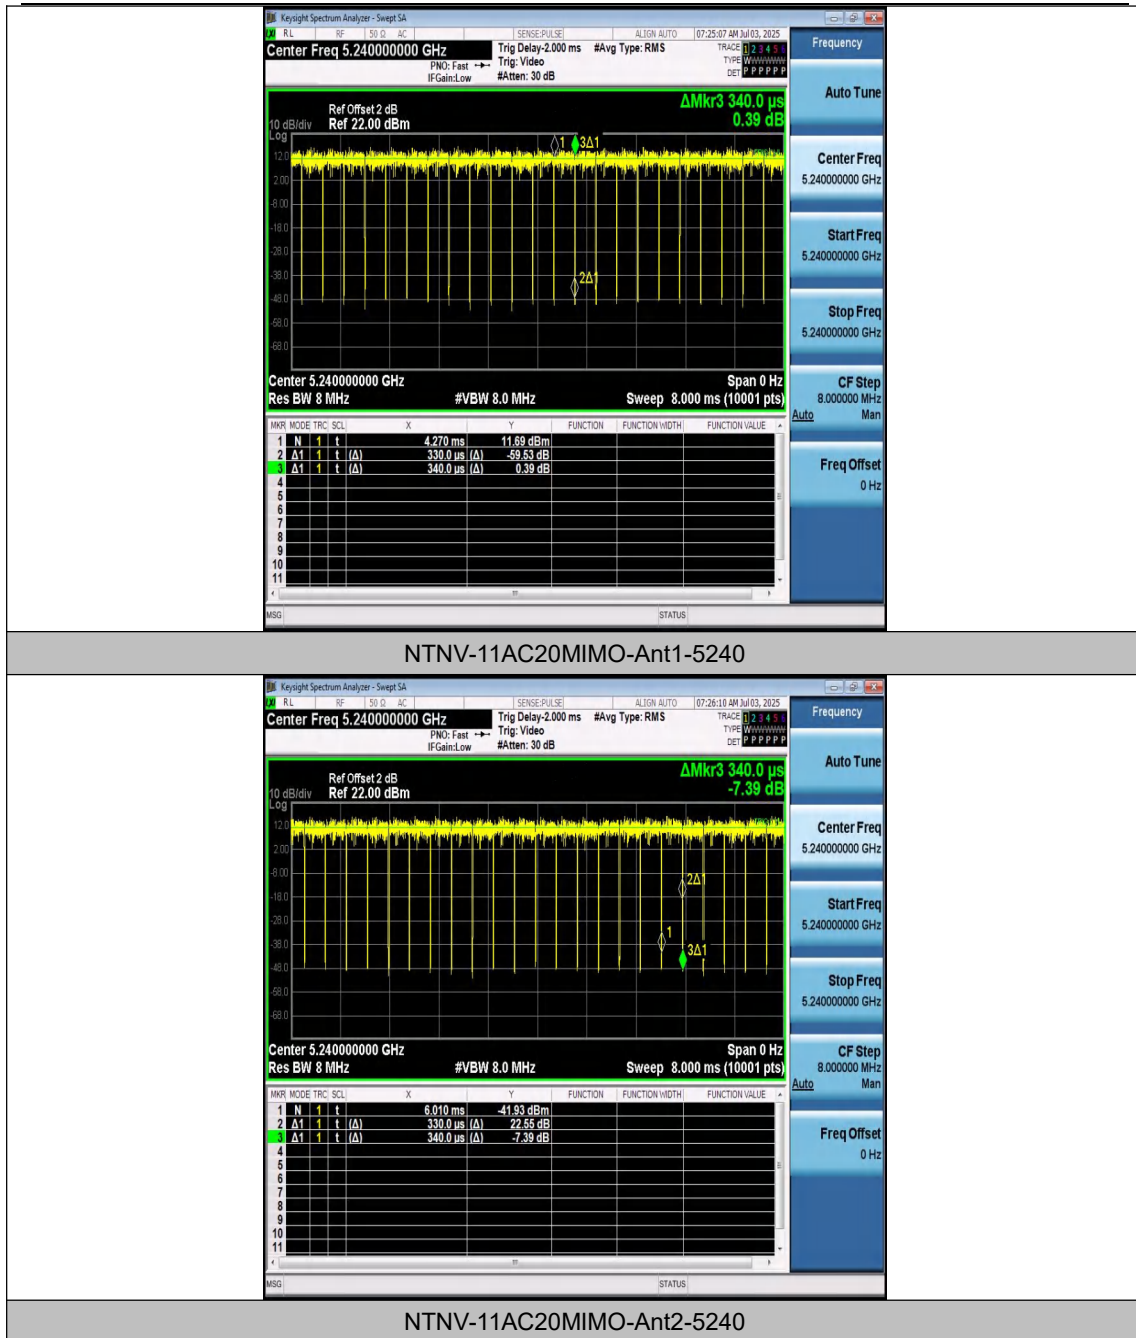


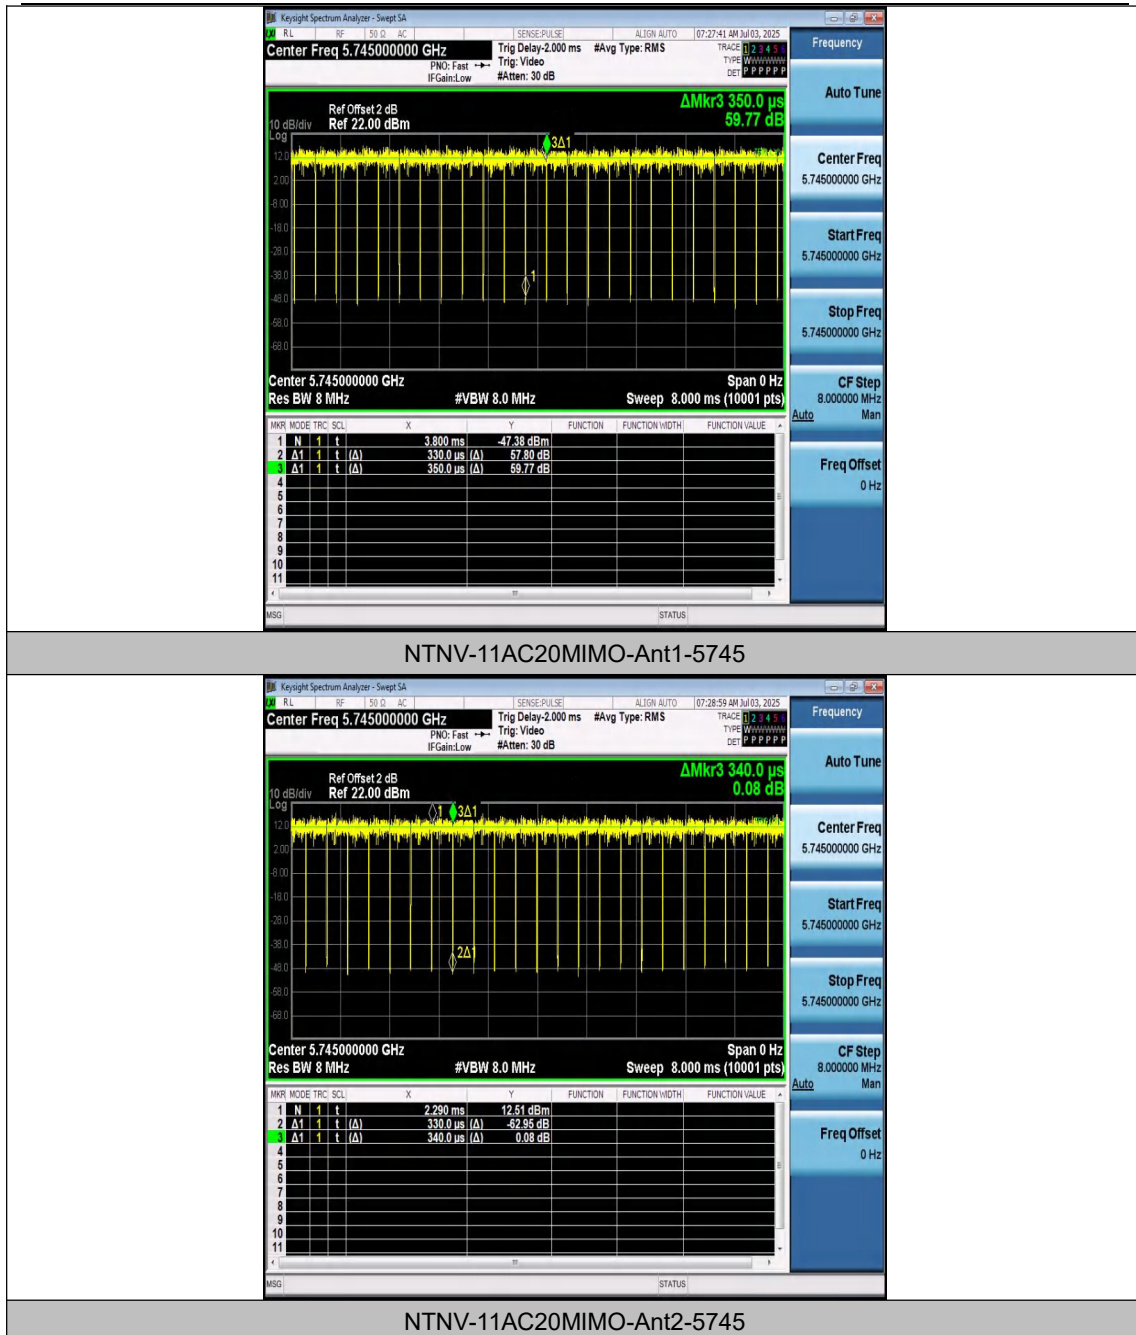

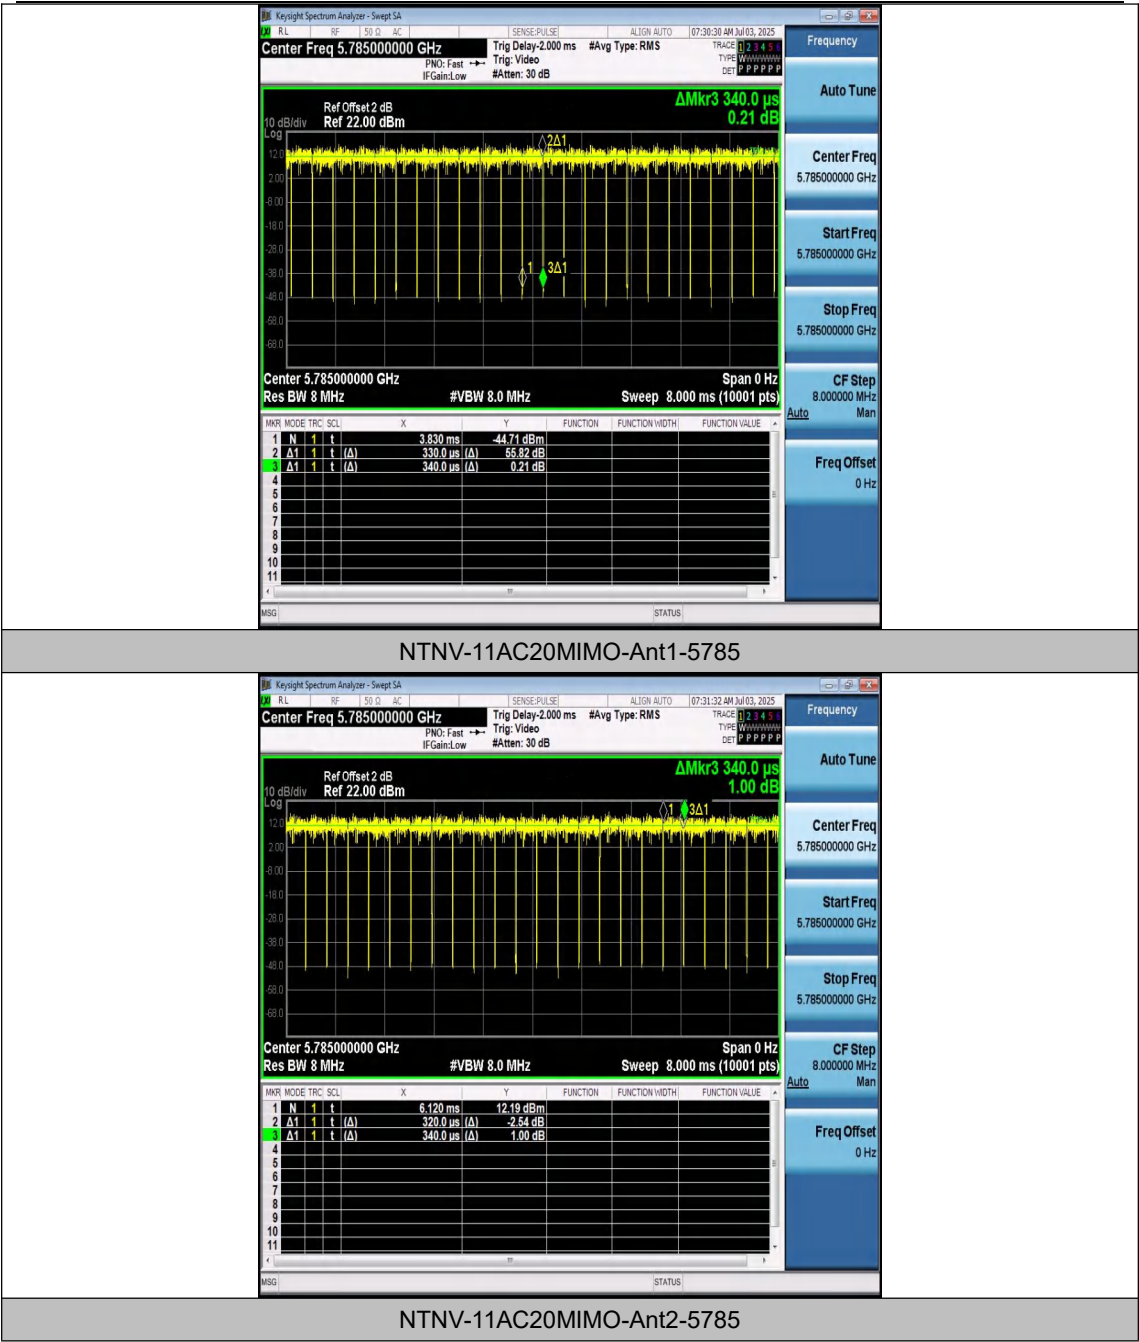

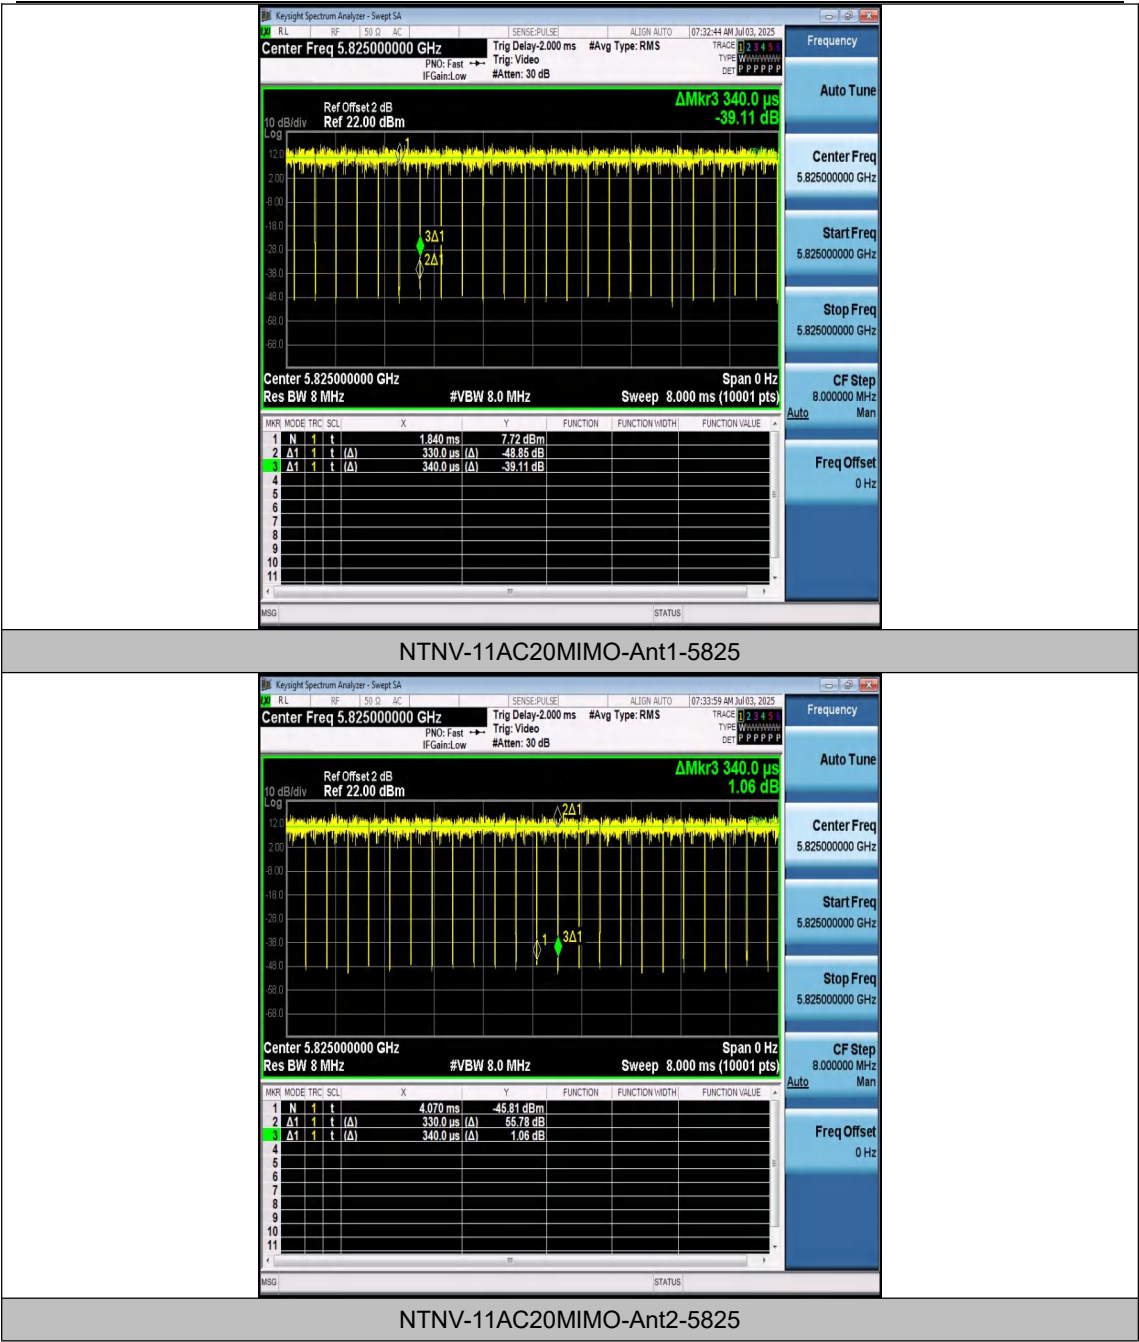

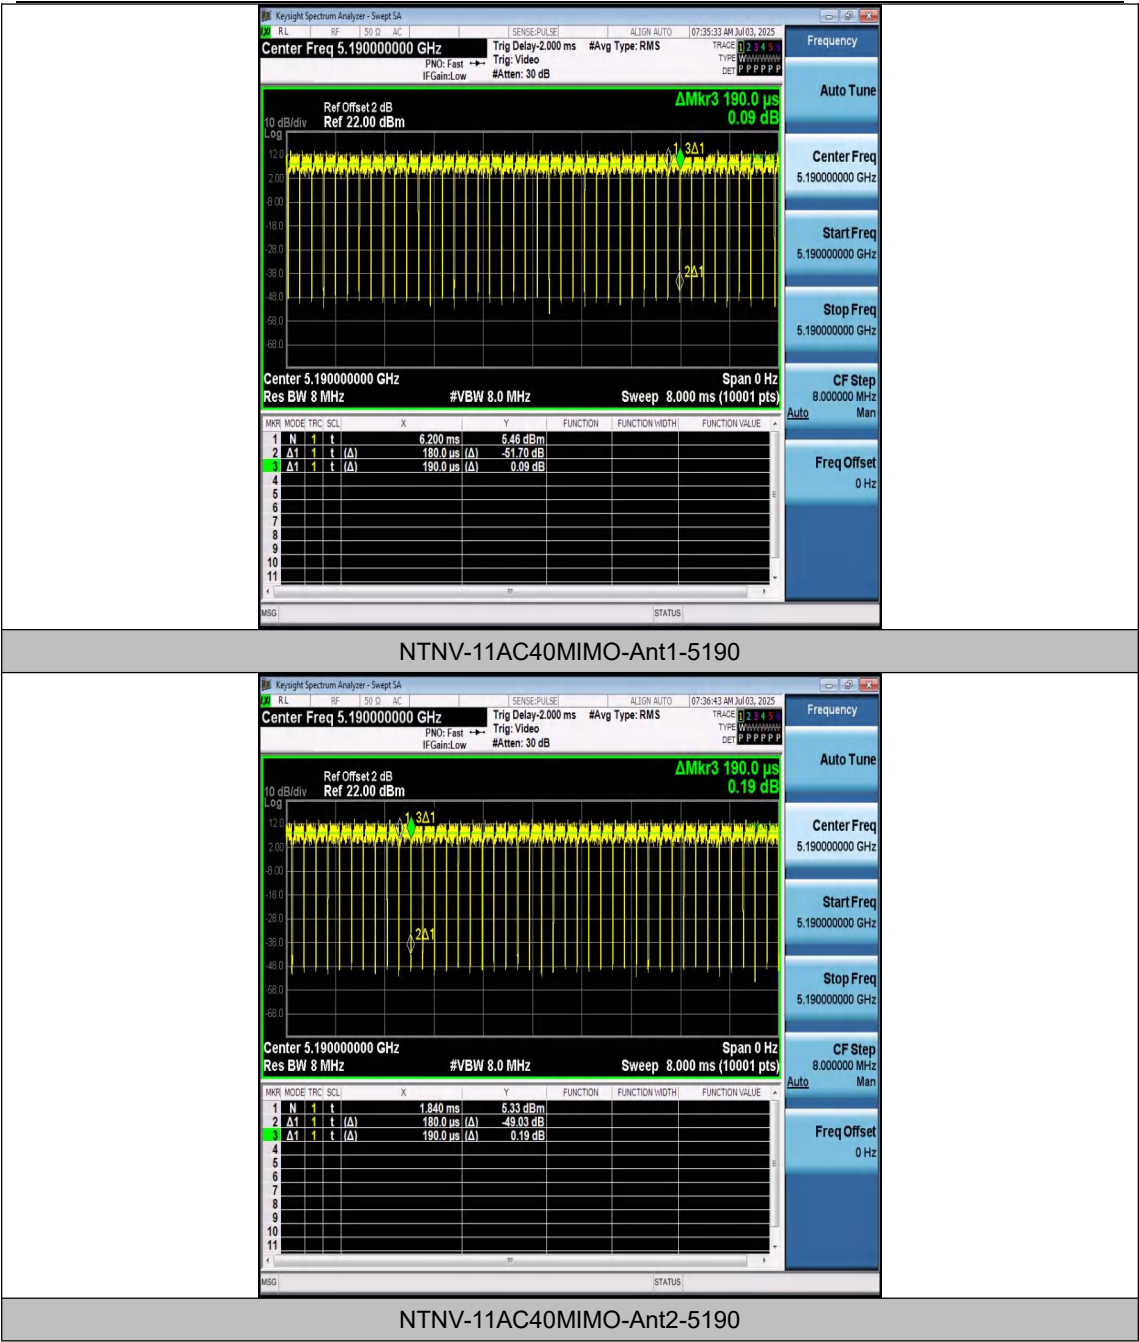

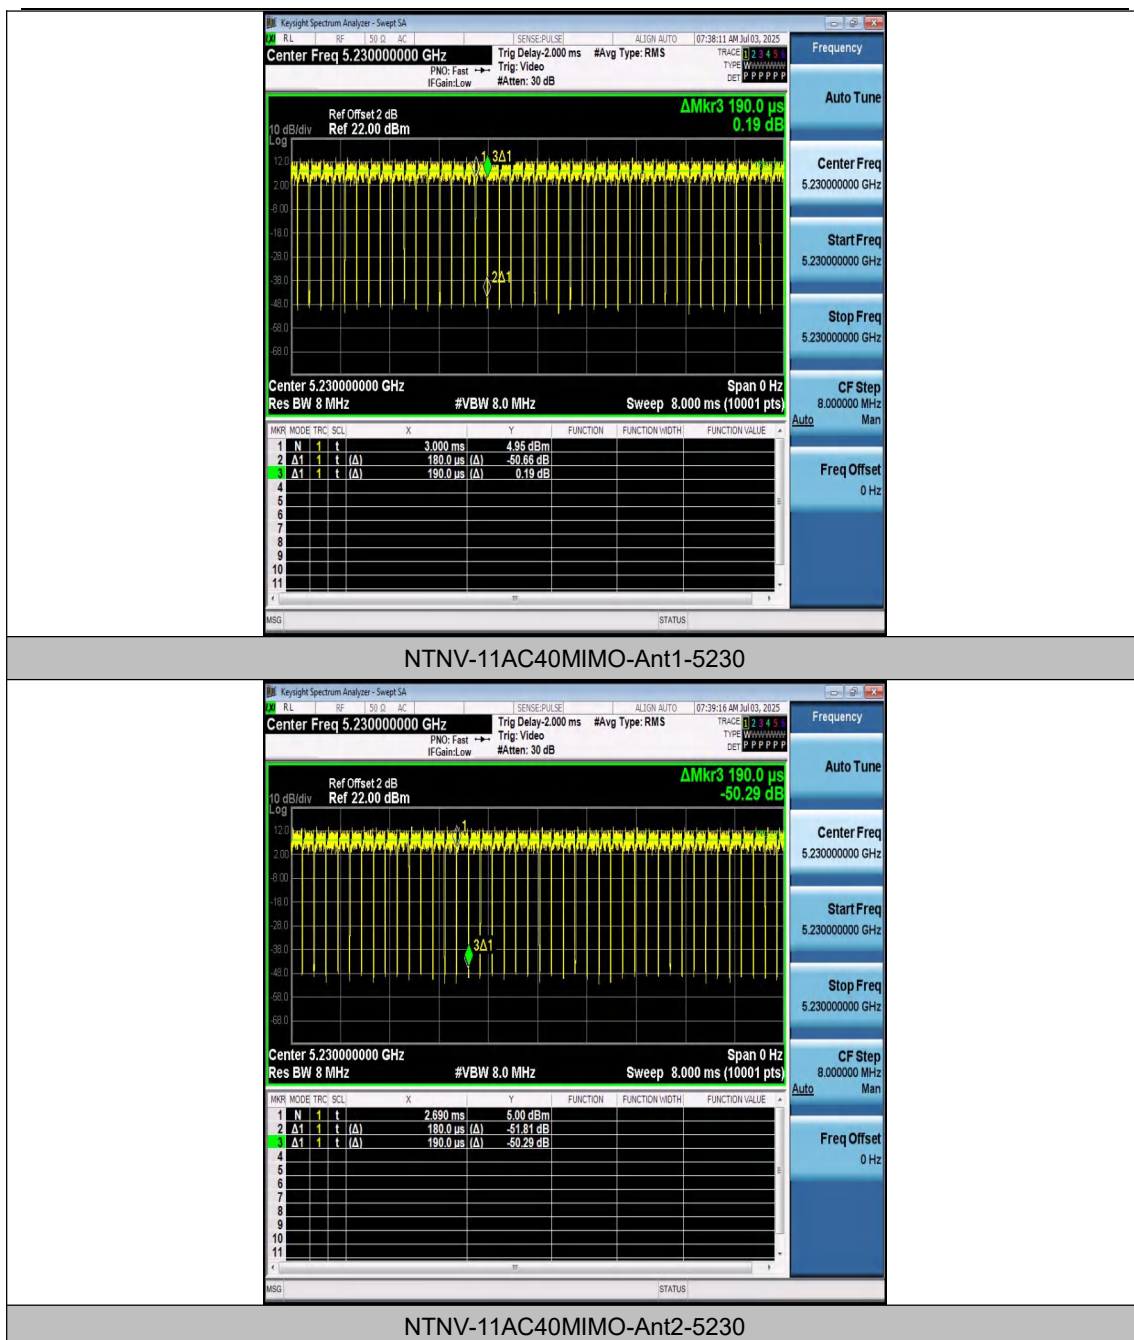

Shenzhen Anbotek Compliance Laboratory Limited

Any unauthorized modification, forgery, or falsification of this document constitutes a violation of law and is subject to legal penalties. If you have any questions, you may scan the QR code to download the report for verification or contact us via email.

Hotline: 400-003-0500 web: www.anbotek.com E-mail: service@anbotek.com

