

About Our Application

Our product application will irregularly schedule upgrade software, to compatible more mobile phone models and system editions.

Product Parameters

Work environment:0°C-45°C, relative humidity:15%-90%
Storage environment:-20°C-60°C, relative humidity:5%-95%
Power:20W
Input voltage/ current:12V/1.67A (MAX)
Battery operating voltage:7.4v
Battery capacity:3000mAh
Service duration:about 12 hours under after fully charged
Size:about (L) 104* (W) 64.5* (H) 40mm
Weight:about 1.58kg

Product Material

Fabric:48% nylon, 36% polyester fiber, 16% spandex
Filler:100% polyester fiber

Flame Rating

Mat:BS-5852-2
Control box:UL94 V-0

Safety Precautions

Warning	
Prohibited Users	Within the first 6 months of pregnancy
Cautious Users	If your body feels abnormal during use, stop using it immediately and consult a doctor.

Warning	
Cautious Users	Patients who are vulnerable to electromagnetic influences and patients with implanted medical devices in their bodies.
	Patients with severe heart disease.
	Massage parts with open trauma.
	Patients with fracture and acute bone pain.

Name and content of harmful substances in the product

Part name	Harmful substances					
	Pb	Hg	Cd	Cr6+	PBB	PBDE
Host	✖	○	○	○	○	○
Charger	✖	○	○	○	○	○
Charging line	✖	○	○	○	○	○

- "O" means that the content of the hazardous substance in all homogeneous materials of the component below the limit specified in SJ / T11363-2006 standard.

- "✖" means that the content of the hazardous substance in a homogeneous material of the component exceeding the limit specified in SJ / T11363-2006.

- The reason why this product is marked with "✖" is that there are no alternative technologies or components available at this stage.

Product Warranty

01 Essential Information

If the product have any problem, please contact MindLax®customer service: support@mindlax.net

02 Limited Warranty

This limited warranty excludes all costs and damage resulting from:

- Non-hardware technical problems;
- Natural depletion, wear and tear, aging of consumable materials;

- Failure or damage caused by incorrect installation, operation or use in a working environment other than that specified by the product (e.g. temperature is too high, too low, too wet or dry, altitude is too high, voltage or current is unstable, etc.);

- Damage caused by accident, misuse, improper storage (rat damage, liquid infiltration, etc.);

- Damage to the normal operation of the product due to the use of self-made or non-public software;

- Failure or damage caused by unauthorized dismantling for repair or unauthorized modification or abuse.

03 Product and after-sales service commitment schedule

Product type	Warranty period	Service method
Sleeping Mat	12 months	Customer send to repair
Charger	12 months	Customer send to repair
Charging line	12 months	Customer send to repair
User Informations		
Product type		
Product model		

04 contact information

After-sale email address:support@mindlax.com


FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

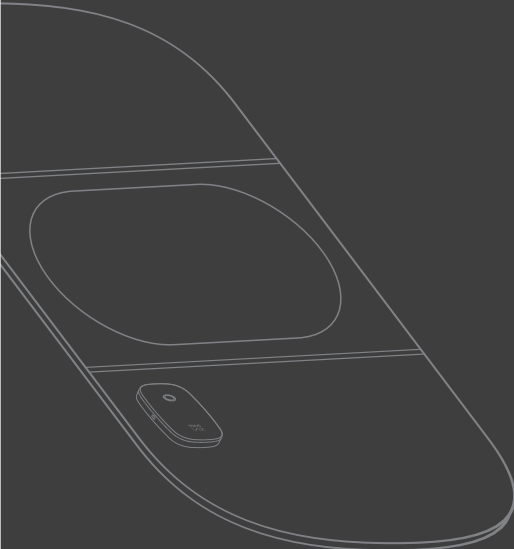


MindLax® Sleeping Mat (M2)
Manual



Preface

Dear customer,
Thank you for selecting MindLax®. In order to further understand our project, please read the manual carefully,we wish you to have a pleasant experience!

Packing List

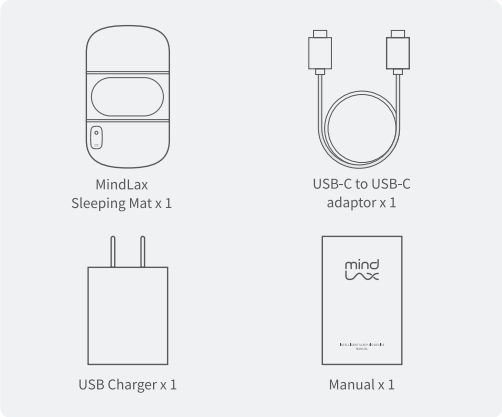

Product Display

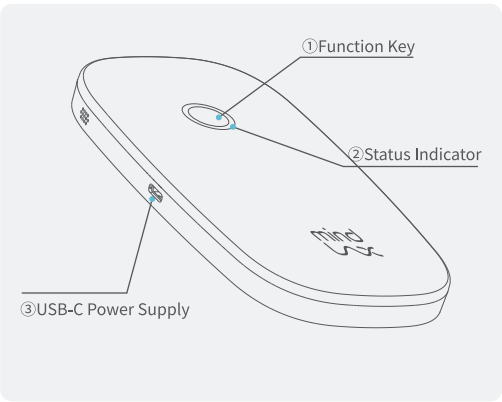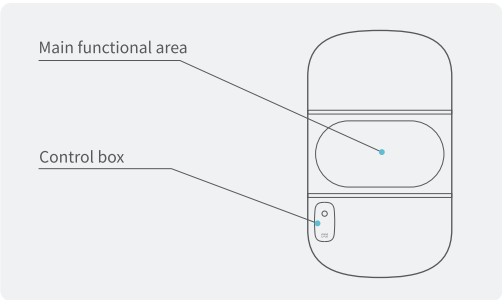

① Function Key <on-off key/ rouse key>

Power on:Long press the button for 3 second to start up.
Shut down:Long press the button for 3 second to shut down.
Rouse:Click the button, indicator lamp will extinguish after light up for 3 second.

② Status Indicator

Power on:Green, light twinkle for three times.
Shut down:Green, Light twinkle for three times then off.
Rouse:Green, light twinkle for three times.
Bluetooth connection succeeded:Green, light twinkle for three times.
Battery low:When battery is lower than 30%, red light will twinkle.
Charging: Green light twinkle, under power on state.
Full charge:Green light continuously light on, light will extinguish after pull out the charging line.

③ USB-C Power Supply

iPhone ios Instructions

01 Install "MindLax®"application


- If you are using it for the first time, please scan the QR code and install "MindLax®" application, or search "MindLax®" and install it in app store.




02 Connect your equipment

Before connecting, you must start MindLax® Sleeping Mat(M2).


- Find and open phone "Settings".




- Click Bluetooth.




- If Bluetooth is off, please turn on Bluetooth first.



- Find "MindLax®" in Bluetooth's device and connect the equipment.



- After connection succeeded, the equipment will appear in the list of the connection devices.



03 Start to use

- Find application "Mindlax®", click to open, according to the guiding in the application, to start using it.



Android Phone Instructions

01 Install "MindLax®"application


- If you are using it for the first time, please scan the QR code and install "MindLax®" application, or search "MindLax®" and install it in Google Play.




02 Connect your equipment

Before connecting, you must start MindLax® Sleeping Mat(M2).


- Find and open phone "Settings".




- Click Bluetooth.




- If Bluetooth is off, please turn on Bluetooth first.



- Find "MindLax®" in Bluetooth's device and connect the equipment.



- After connection succeeded, the equipment will appear in the list of the connection devices.



03 Start to use

- Find application "Mindlax®", click to open, according to the guiding in the application, to start using it.



www.mindlax.net

After-sale email address: support@mindlax.net

Made in China